





Photos of Test Setup

1 For GSM&WCDMA

Radiated Spurious Emissions

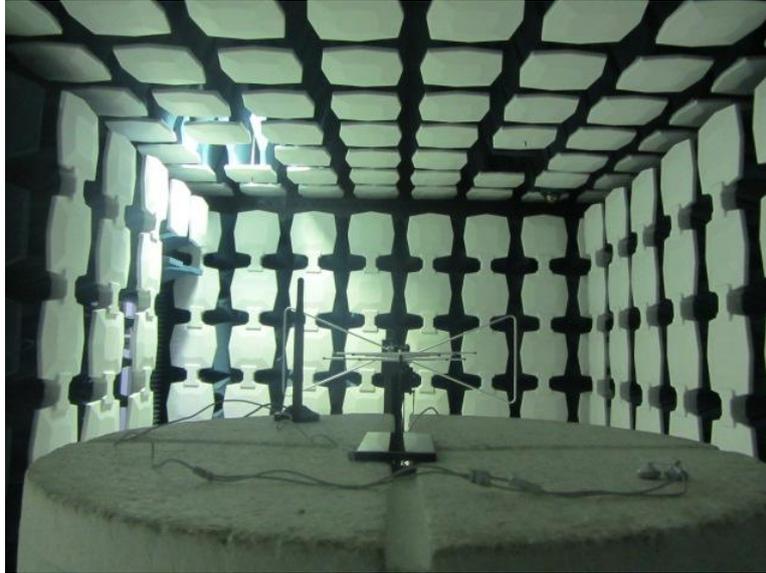


Radiated Spurious Emission (below 3GHz)

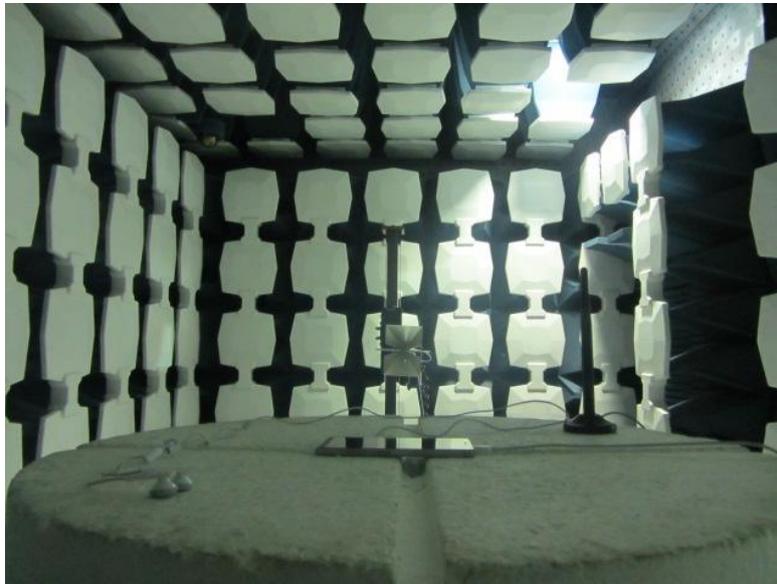


Radiated Spurious Emission (above 3GHz)

2 For Bluetooth


Radiated Spurious Emissions

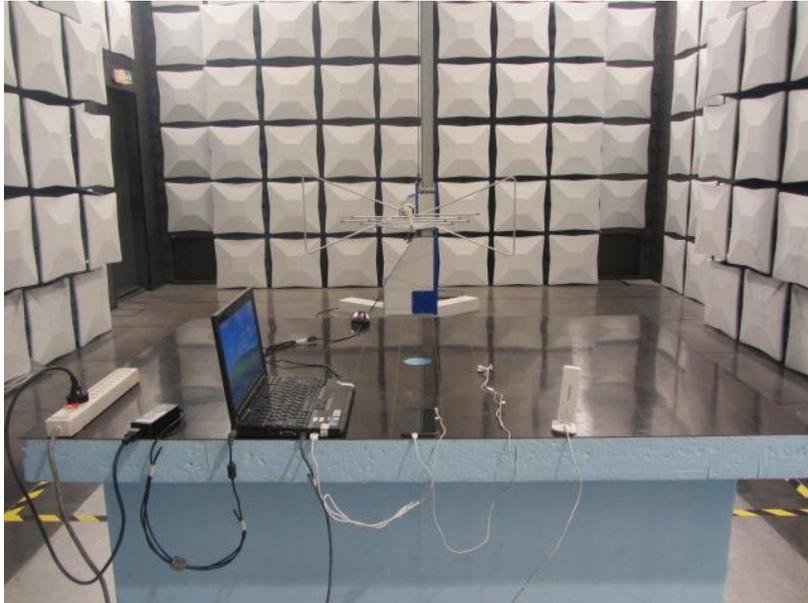

Radiated Spurious Emission (below 1GHz)

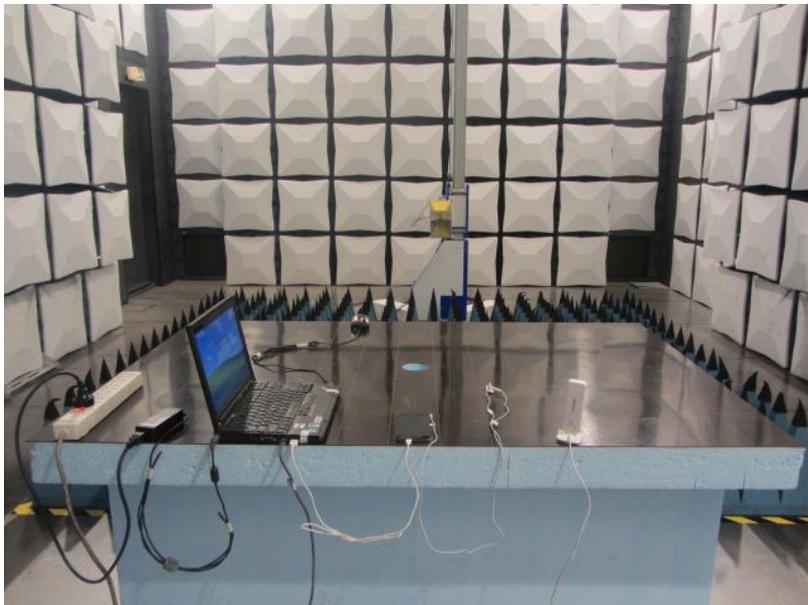


Radiated Spurious Emission (1GHz to 18GHz)

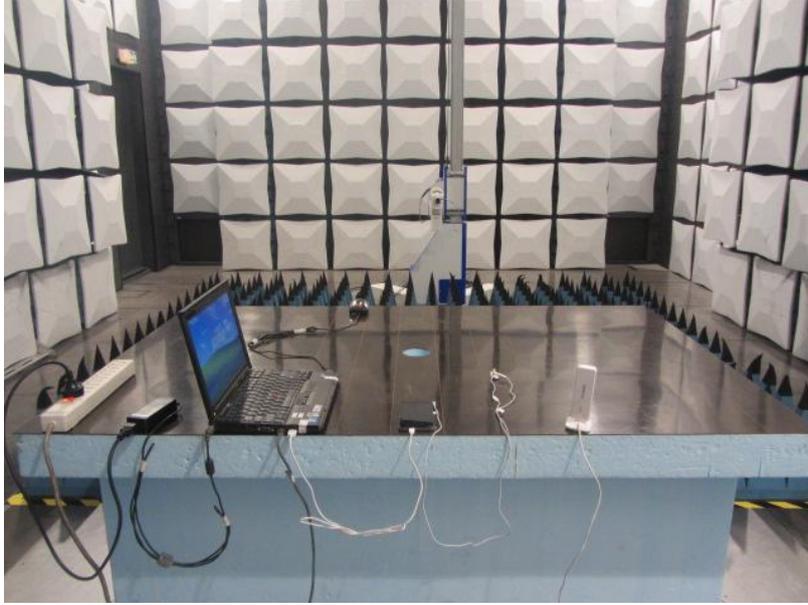

Radiated Spurious Emission (above 18GHz)


Conducted Emissions

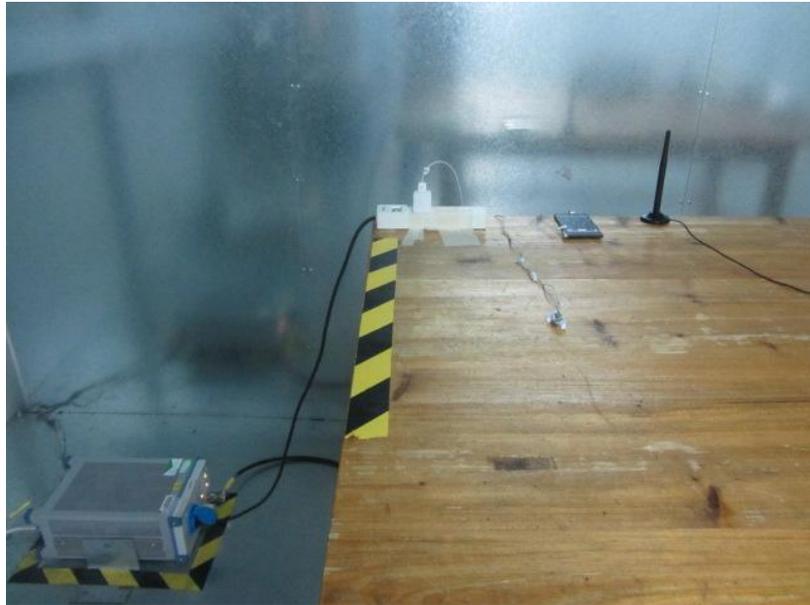


Conducted Emissions for AC Ports

3 For WLAN


Radiated Spurious Emissions

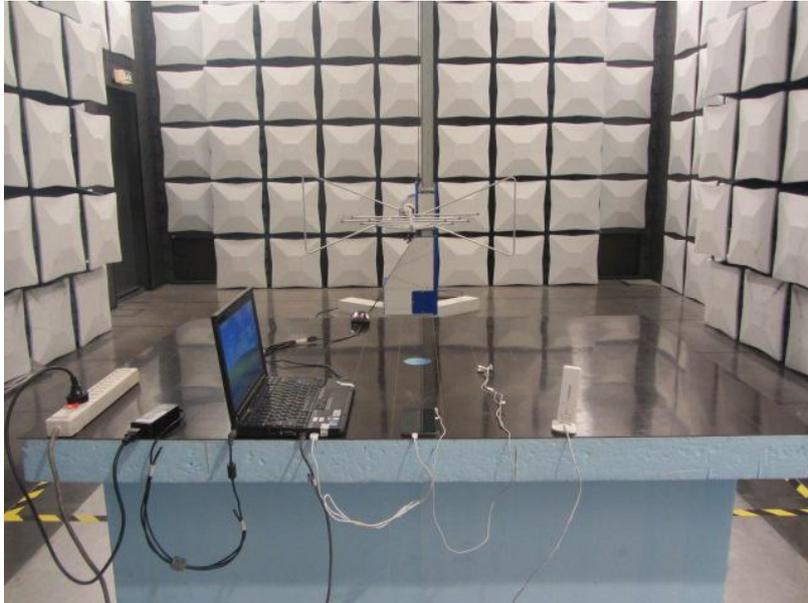

Radiated Spurious Emission (below 1GHz)

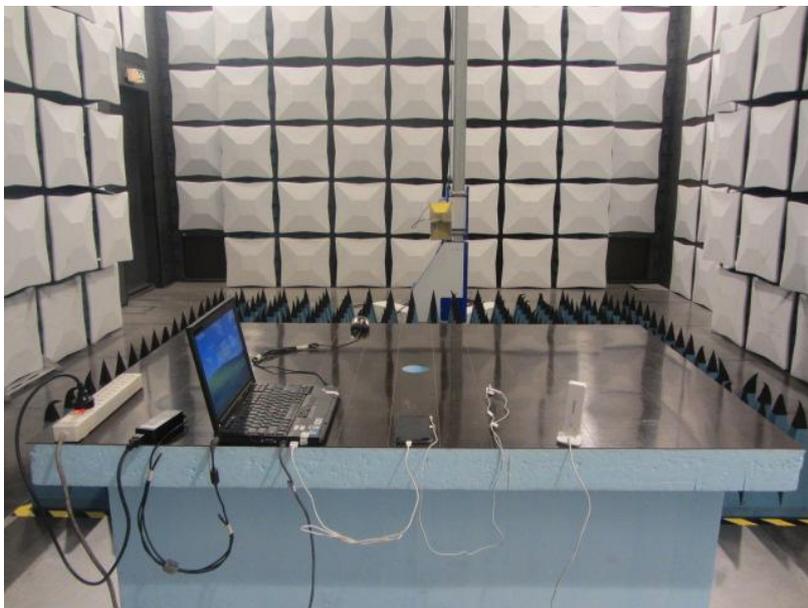

Radiated Spurious Emission (1GHz to 18GHz)

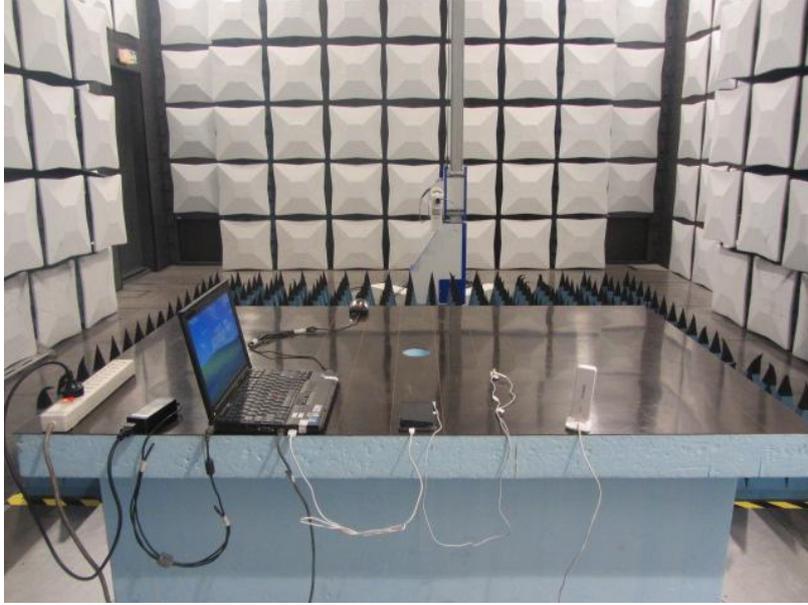


Radiated Spurious Emission (above 18GHz)

Conducted Emissions




Conducted Emissions for AC Ports

4 Receiver Spurious Emissions

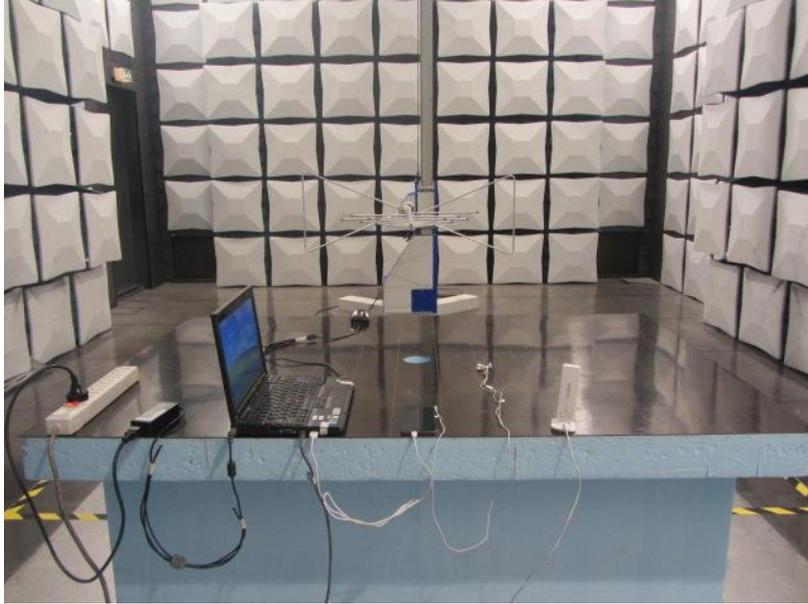

Receiver Spurious Emissions (30MHz-1GHz)

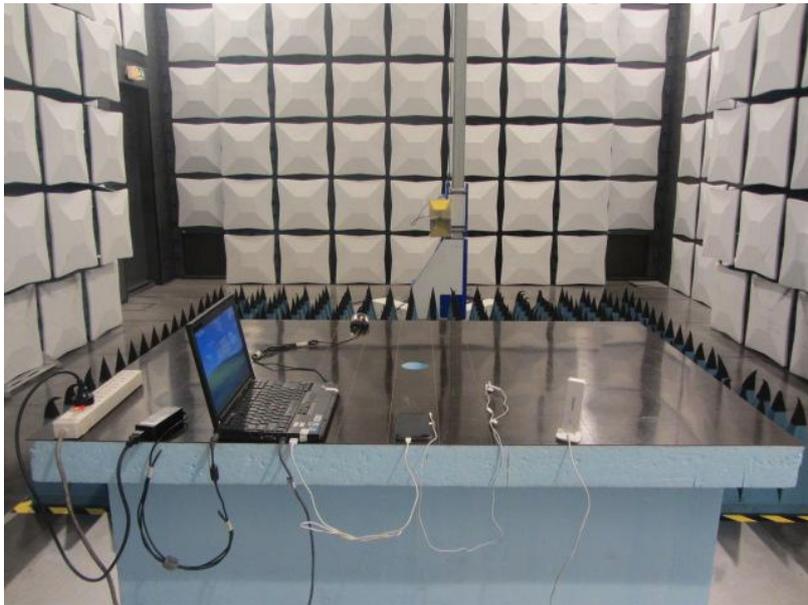

Receiver Spurious Emissions (above 1GHz)

END