



# Photos of Test Setup

## For GSM&WCDMA&LTE


### 1. Radiated Spurious Emissions

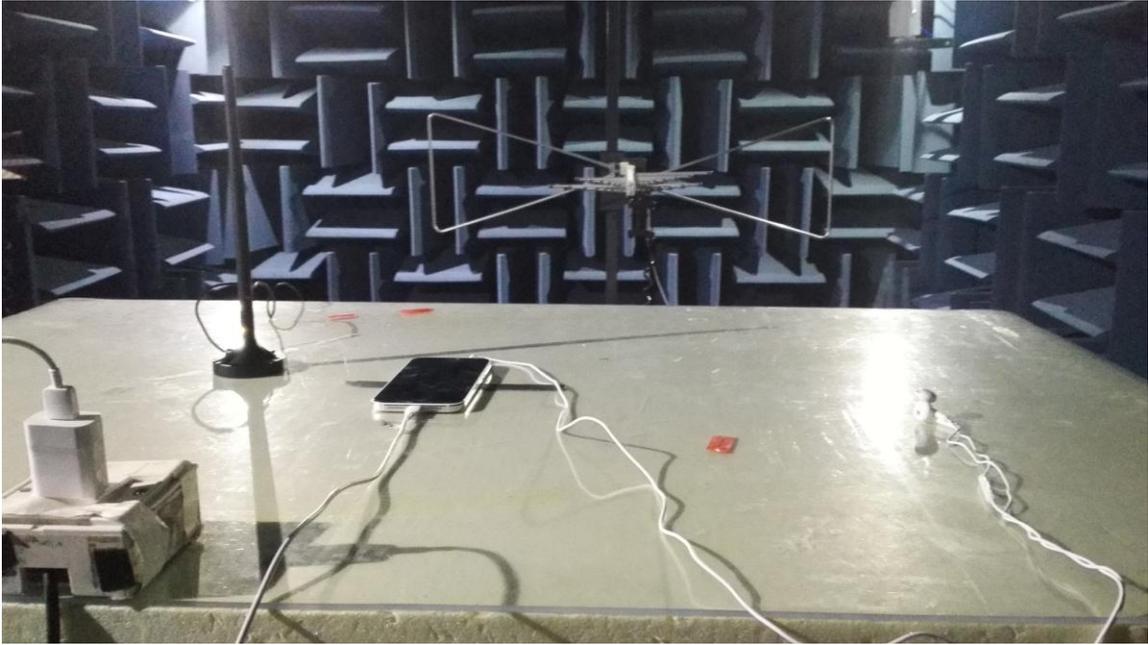

Radiated Spurious Emission (below 3GHz)

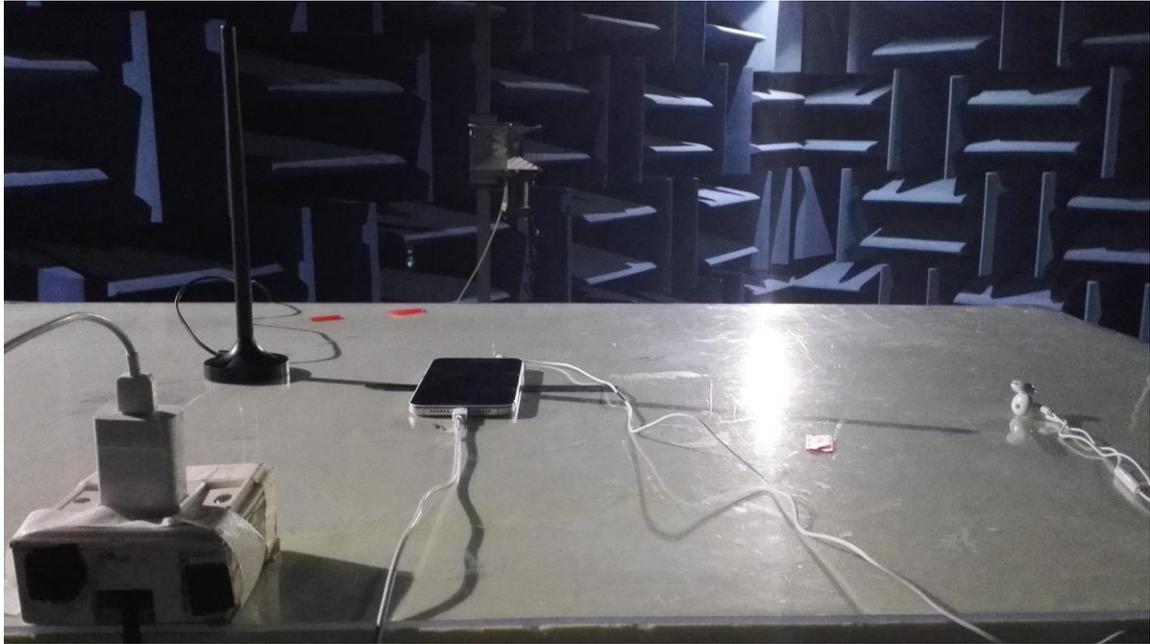

Radiated Spurious Emission (3GHz to18GHz)

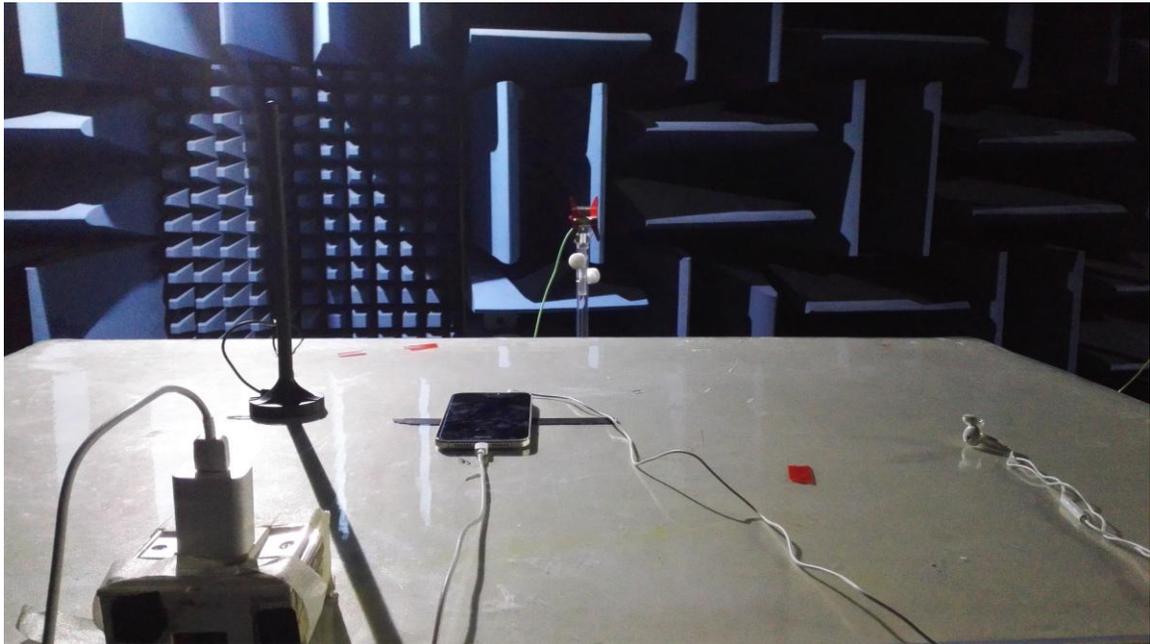


Radiated Spurious Emission (18GHz to26.5GHz)

## For Wlan/BT


### 2. Radiated Spurious Emissions



Radiated Spurious Emission (below 1GHz)

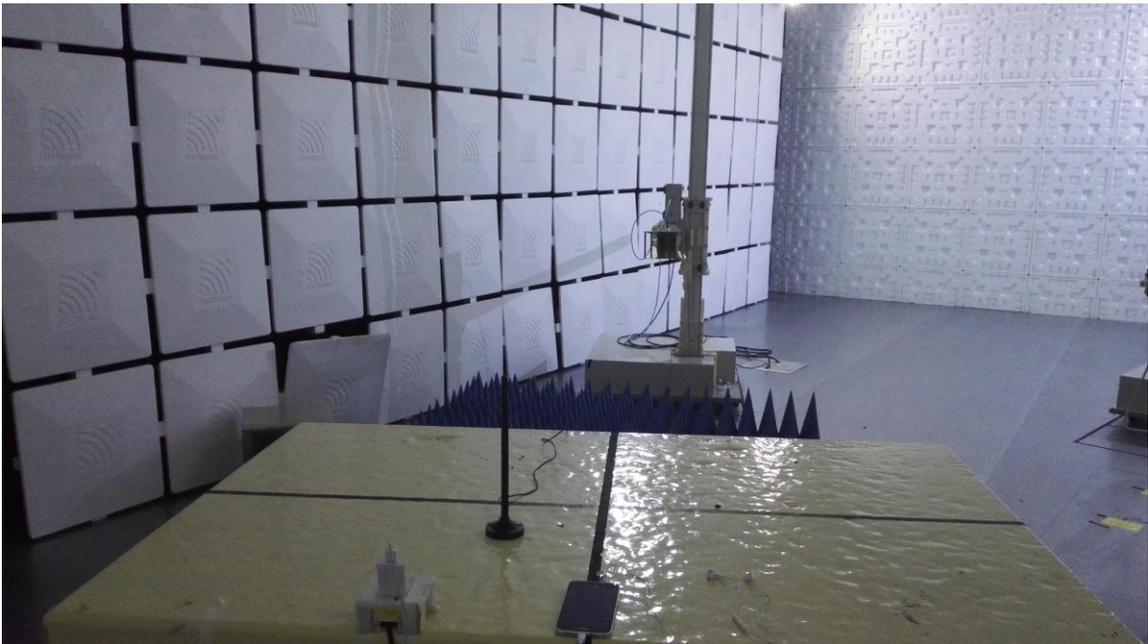


Radiated Spurious Emission (1GHz to18GHz)

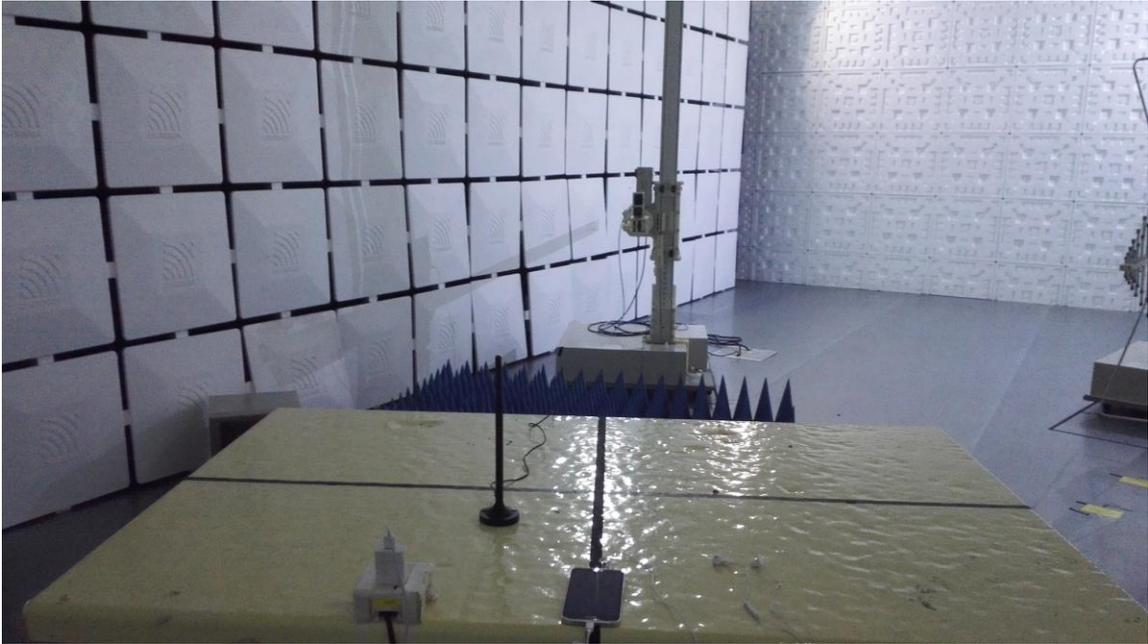


Radiated Spurious Emission (above 18GHz)

## For NFC


### 2. Radiated Spurious Emissions

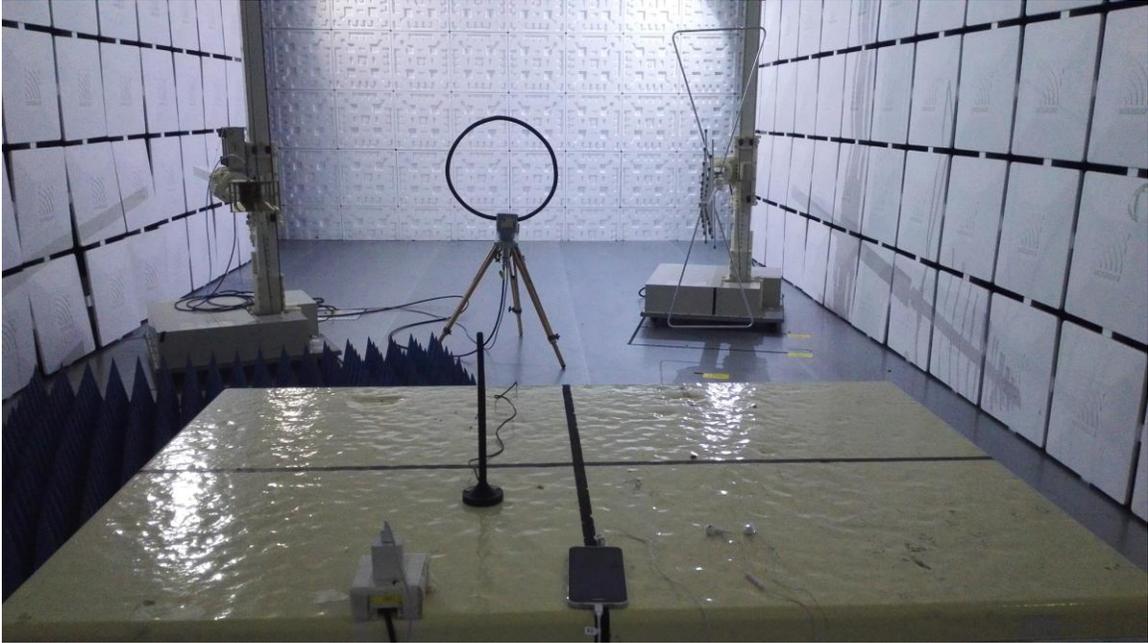

Radiated Spurious Emission (below 1GHz)

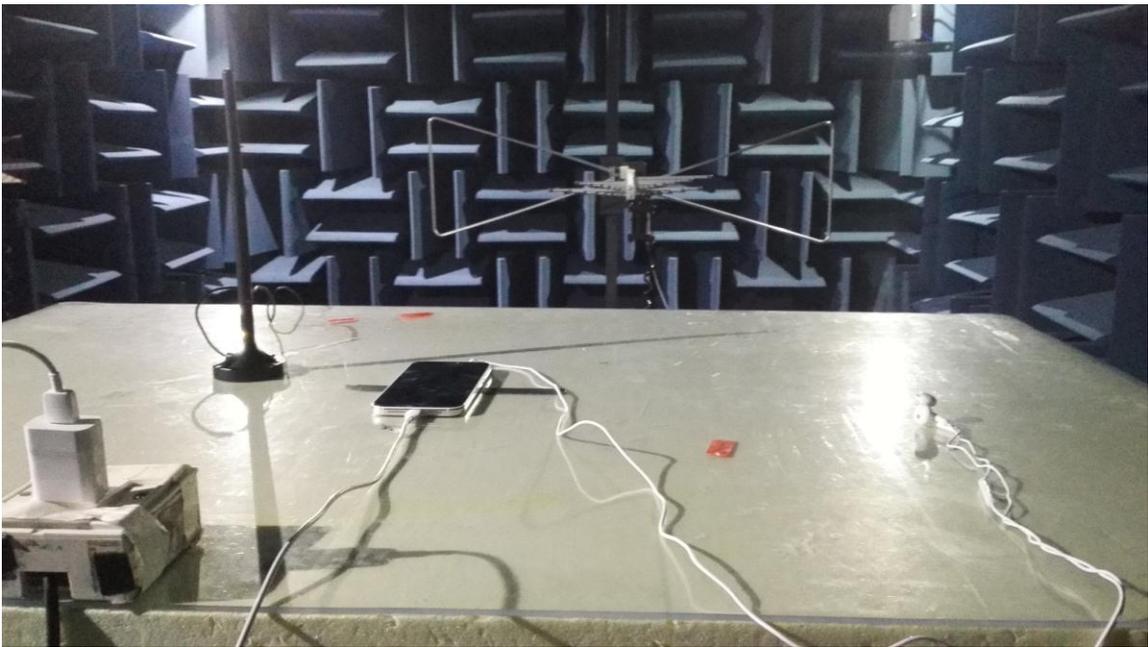


Radiated Spurious Emission (1GHz to18GHz)

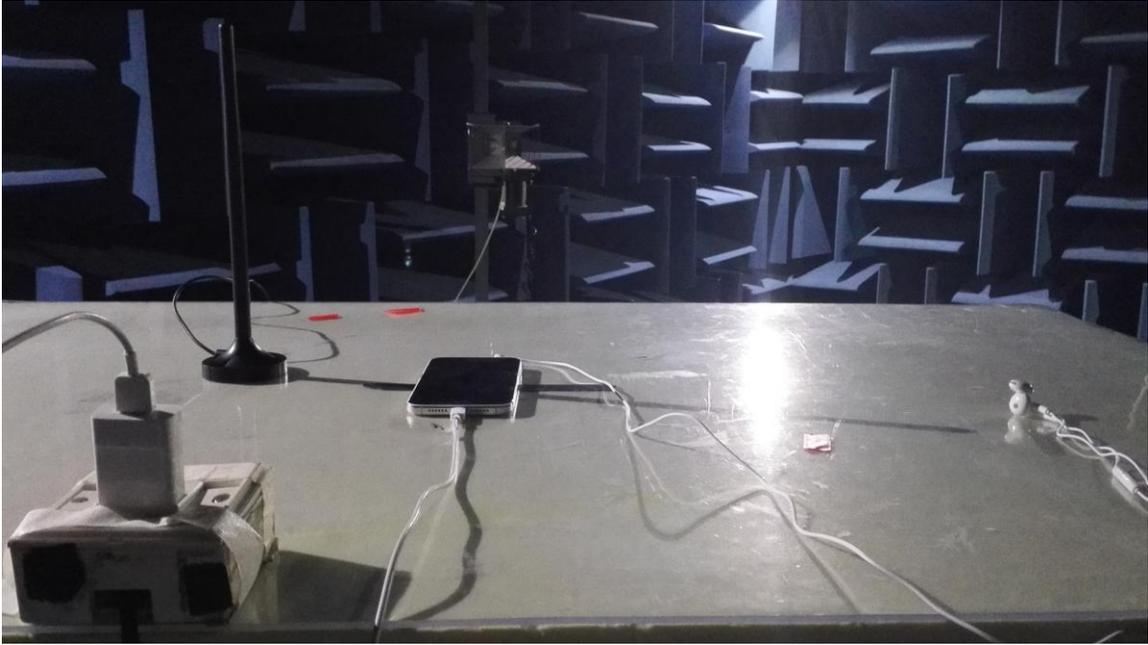

Radiated Spurious Emission (above 18GHz)

# Conducted Emissions

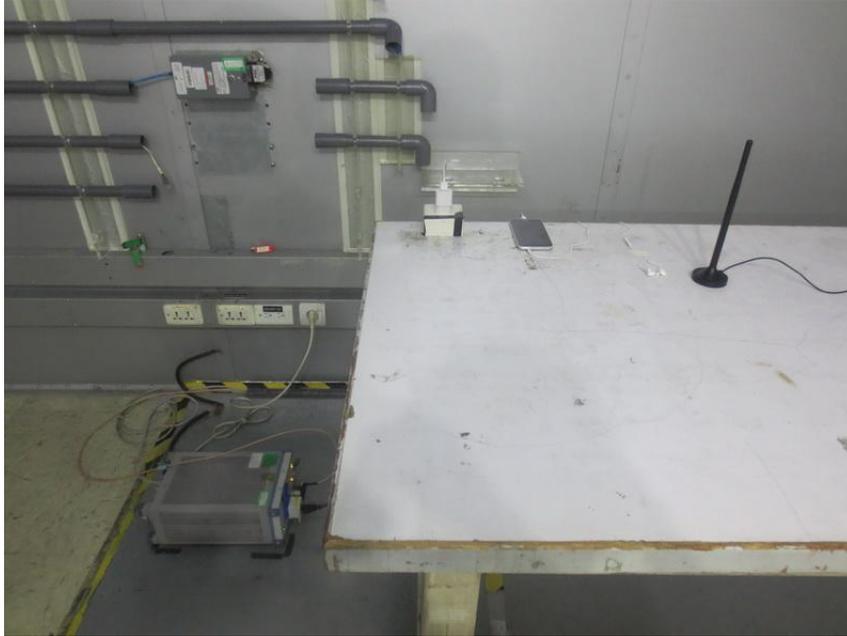

-----The END-----