



# Photos of Test Setups

## For GSM&WCDMA


### 1. Radiated Spurious Emissions



Radiated Spurious Emission (below 3GHz)




Radiated Spurious Emission (3GHz to18GHz)

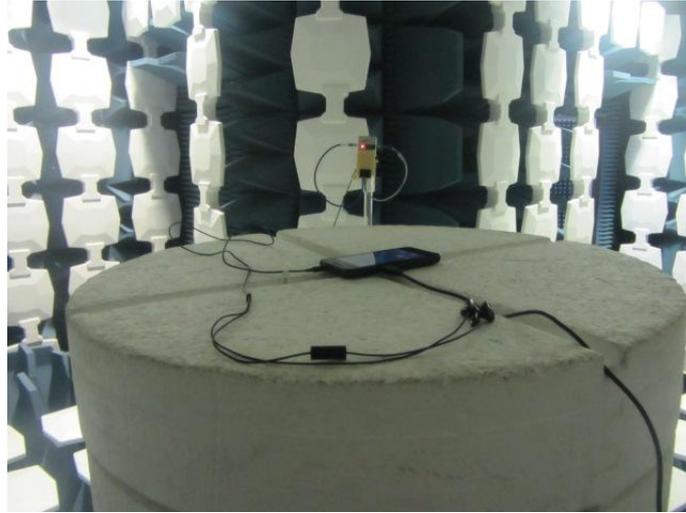


Radiated Spurious Emission (18GHz to26.5GHz)

## For Bluetooth

### 1. Radiated Spurious Emissions

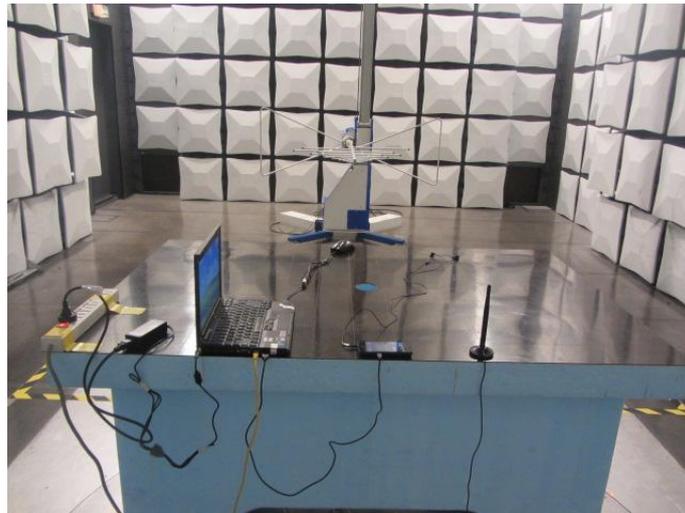

Radiated Spurious Emission (below 1GHz)

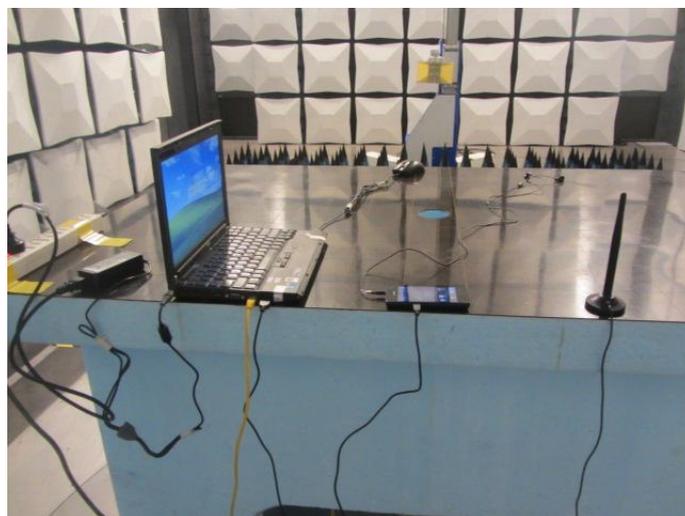

Radiated Spurious Emission (1GHz to18GHz)



Radiated Spurious Emission (above 18GHz)

---


## 2. Conducted Emissions




Conducted Emissions for AC Ports

## For WLAN

### 1. Radiated Spurious Emissions

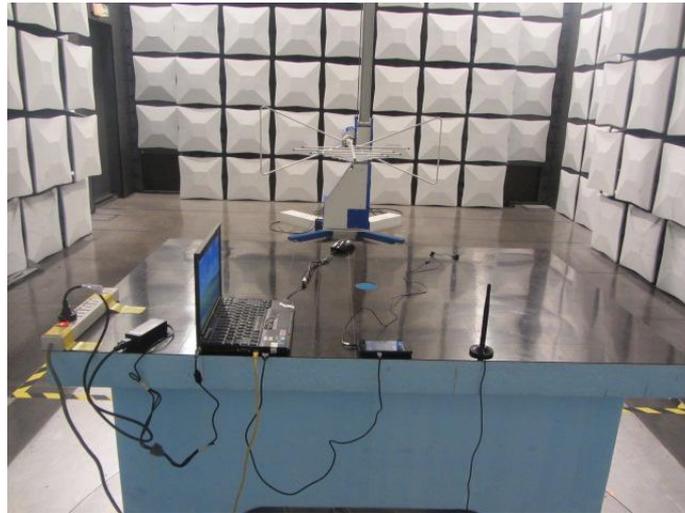

Radiated Spurious Emission (below 1GHz)

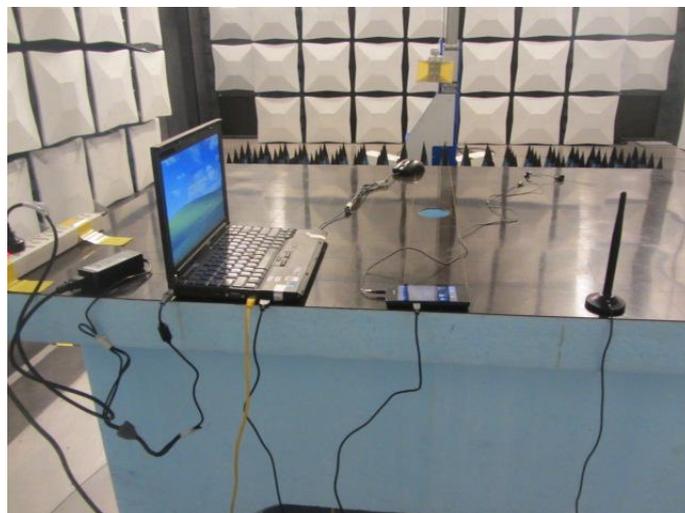

Radiated Spurious Emission (1GHz to 18GHz)




Radiated Spurious Emission (above 18GHz)

## 2. Conducted Emissions




Conducted Emissions for AC Ports

## Receiver Spurious Emissions (Radiated)

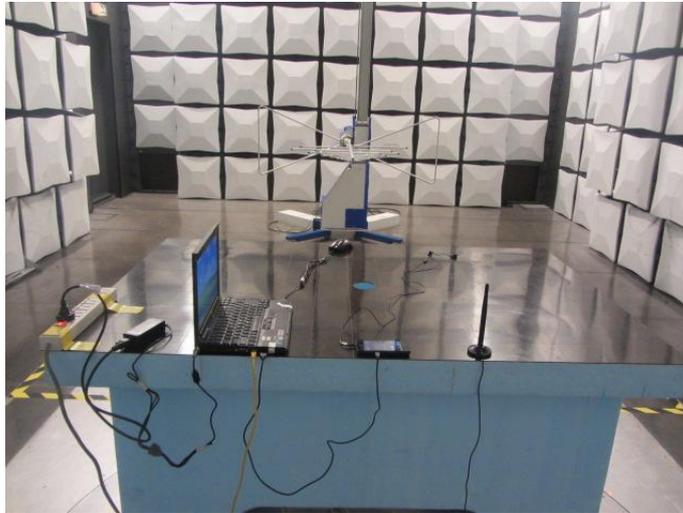

Receiver Spurious Emissions (30MHz-1GHz)

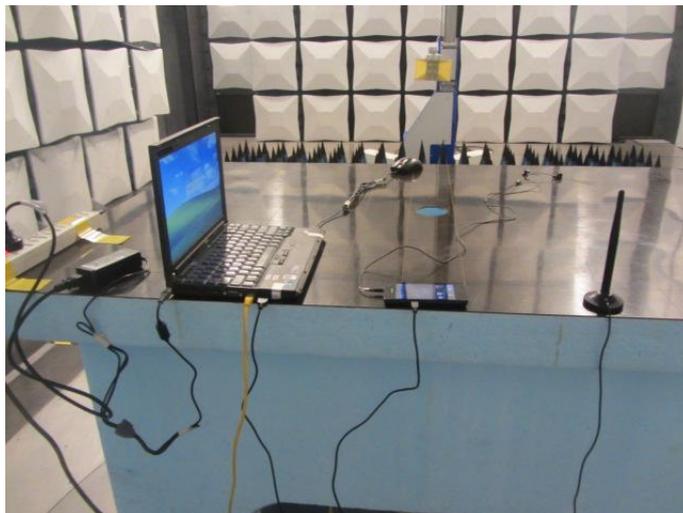

Receiver Spurious Emissions (above 1GHz)

END