



Photos of Test Setup



For GSM&WCDMA

1. Radiated Spurious Emissions



Radiated Spurious Emission (below 3GHz)



Radiated Spurious Emission (3GHz to18GHz)




Radiated Spurious Emission (18GHz to26.5GHz)




For BT & WIFI

1 Radiated Spurious Emissions

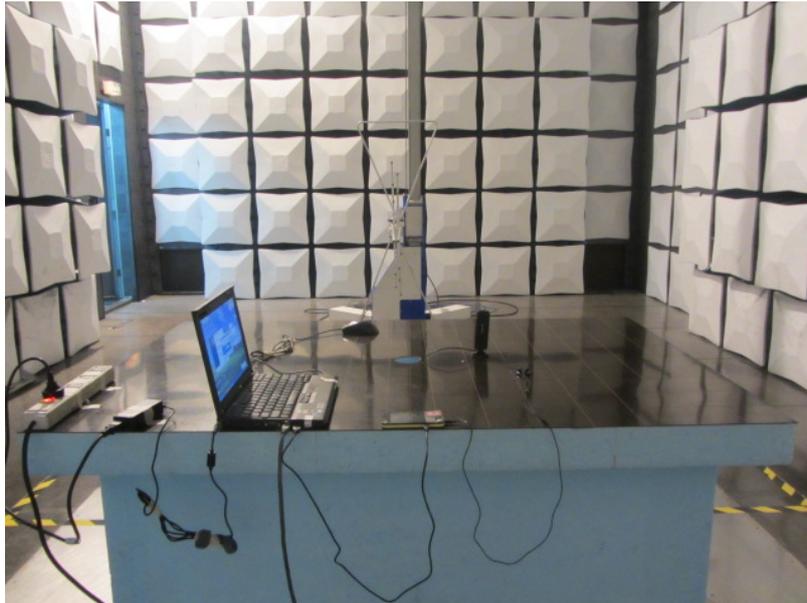

Radiated Spurious Emission (below 1GHz)

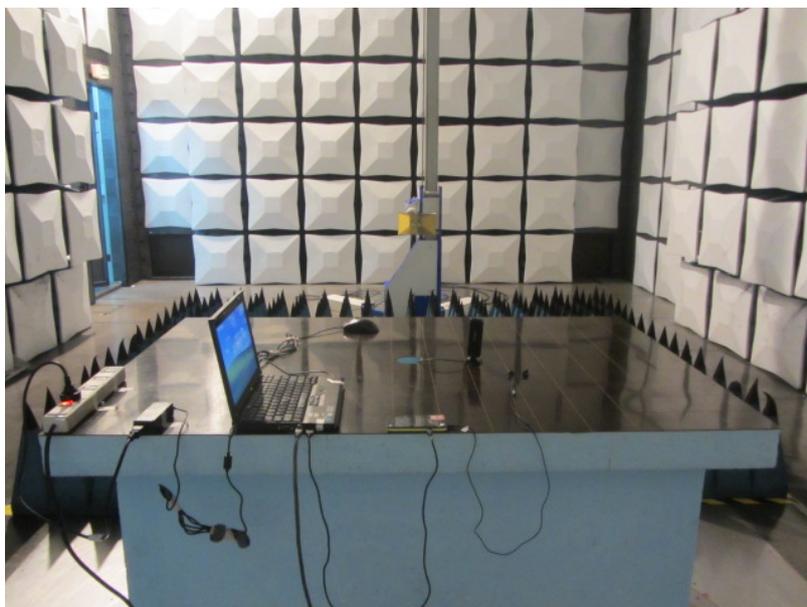





Radiated Spurious Emission (1GHz to18GHz)



Radiated Spurious Emission (above 18GHz)



2 Conducted Emissions

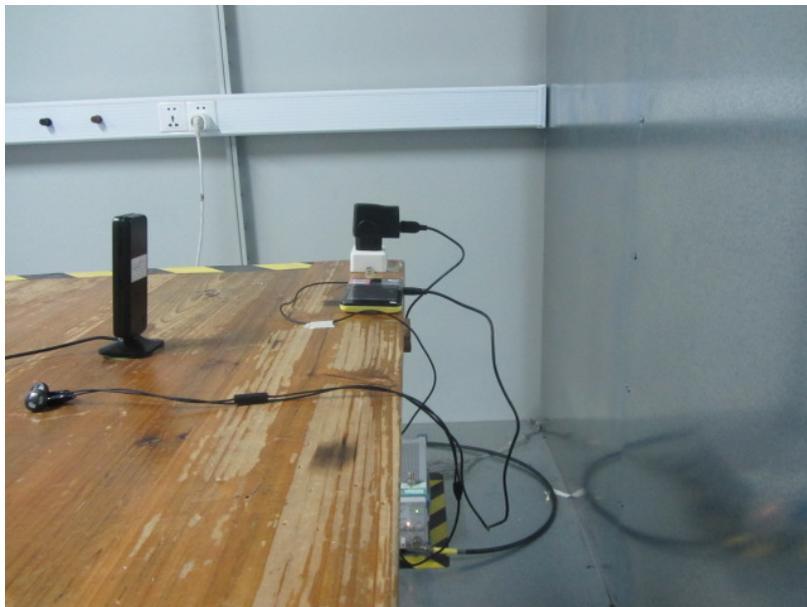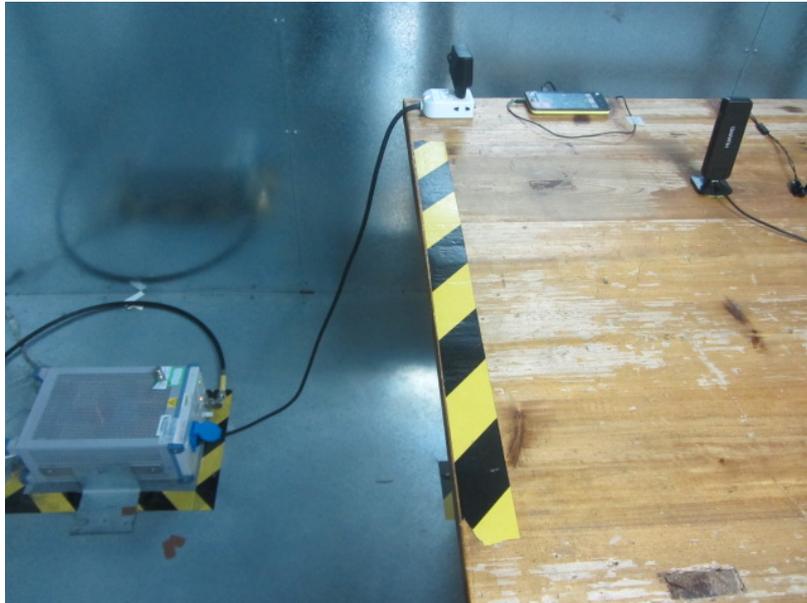

Conducted Emissions for AC Ports