




Electric Unicycle User Manual



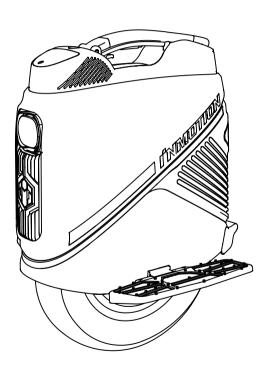


## **GETTING STARTED**

Thank you for choosing the INMOTION electric unicycle(hereinafter referred to as the unicycle)! This unicycle is an intelligent high-tech entertainment product. When you use the unicycle, there may be situations such as falling or collision that can cause injury and other risks. To reduce possible risks and ensure the personal and property safety of yourself and others, you have the responsibility and obligation to carefully read the user manual, fully understand all the warnings and precautions listed in this manual, and ensure that you can use it correctly. To obtain the latest feature/function information and safety guidance, please download the electronic version from the official website.

Important! Read carefully and keep for future reference.

Serial number (referred to as SN below) is a unique identifier for each product, which can be used for product warranty, maintenance, insurance claims, loss confirmation, and so on. The SN is a 16-character numeric code that can be found on the packaging box label, the body of the product, or in the device information section of the INMOTION App.

Get closer to your seller so he can refer you to an appropriate training organization.

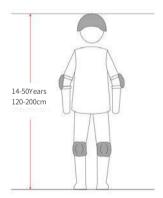


When riding an electric unicycle, please wear a helmet, knee pads, elbow pads, wrist guards and other protective gear throughout the journey to reduce the risk of injury.

All pictures in this manual are for reference only. Please refer to the actual product for accuracy.

## **PACKING LIST**


Please carefully check all components inside the packaging. If any components are missing, please consult your point of purchase.

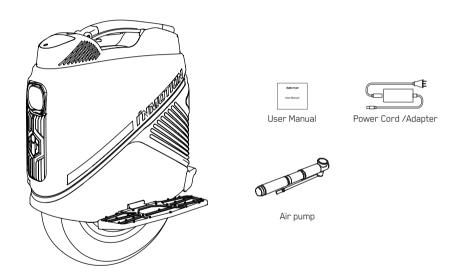



**WARNING:** Please keep the packaging box and packaging materials for at least 30 days for future use when transporting the electric unicycle.

# PRODUCT COMPOSITION

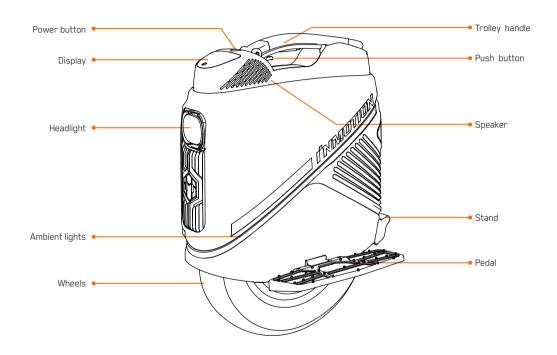

## PRODUCT FEATURES

**Power On/Off:** Long press the power button to turn on the device, long press the power button to turn off the device when it is on.

**Headlight:** Short press the power button to turn on/off the headlight when it is on; the headlight can be set to turn on/off automatically in the App.


Tail Light: flashing high when braking; tail light is always on when the headlight is on.

Anti-spin Button: Press and hold the anti-flying button, the vehicle will lose balance.

Touch Screen: Get the riding data in real time and set the vehicle parameters quickly.

#### Charging

The original charger is 84V — 4A. The blue light indicates the power status, the green light indicates a full charge, and the red light indicates the charging status, indicating that it is currently charging/charging complete. When both chargers are used simultaneously, the charging time will be reduced by 50%. (The maximum input for charging the entire vehicle is 4A.)

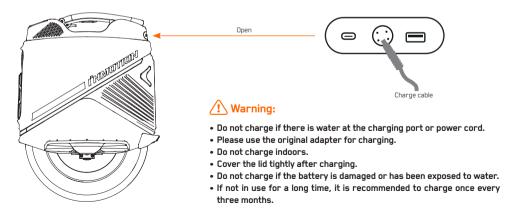

#### Air Spring

Before using this product, please inflate the built-in air spring; otherwise, it may damage the product.

Prior to inflation, unscrew the red cap at the bottom of the footrest's air spring, then use the dedicated inflator provided with the product for inflation. Refer to the table below for the recommended air pressure. It is advisable to check the air pressure every three months.


For instructions on how to check the air pressure of the top air spring after using it for a period of time, please scan the QR code to watch the video.

| Weight - Barometer |              |  |  |
|--------------------|--------------|--|--|
| Weight             | Air pressure |  |  |
| Under 60kg         | 80-120psi    |  |  |
| 60-70kg            | 120-130psi   |  |  |
| 70-80kg            | 130-150psi   |  |  |
| 80-90kg            | 150-180psi   |  |  |
| 90-100kg           | 180-200psi   |  |  |
| 100-130kg          | 200-220psi   |  |  |

Shock Absorption: Equipped with dual air spring shock absorption function.




Note: Before use, be sure to inflate the air springs following the inflation instructions.

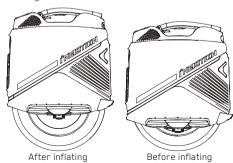



Scan to check out the how-to video

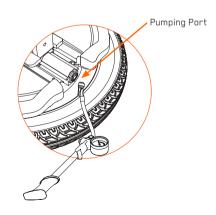


### **Trolley Handle**

Deploy the actuator by pressing the actuator switch underneath the actuator handle to unlock it; when the actuator is not in use, hold the actuator switch underneath the actuator handle to retract it.

eath the hold the

Trolley handle switch

# **DIMENSION**

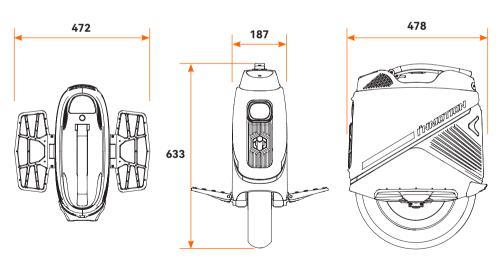

#### **Dashboard**



#### Display contents

**Speed unit:** Switch the display unit in the APP.

Battery level: The battery level bar and the direct number show the current battery level of the vehicle.

Lock: The APP account authenticated by the vehicle owner can lock the vehicle via APP.

**Bluetooth:** The icon lights up when Bluetooth is connected.

Error icon: The icon lights up when the vehicle is in fault, detailed fault information needs to connect to APP to view.

**Headlight Icon:** The icon lights up when the headlight is turned on.

# **PRODUCT PARAMETERS**

| Specification            | Item                          | Parameter  |  |
|--------------------------|-------------------------------|--|--|
| Basic Information        | Model                         | E25  |  |
|                          | Range(km)                     | 60   |  |
|                          | Charging time(h)              | 2.5h single charge   |  |
|                          | Rated power(KW)               | 1  |  |
|                          | Maximum power(KW)             | 2  |  |
|                          | Designed Maximum Speed(KM/H)  | 40   |  |
|                          | Maximum Climbing Angle(°)     | 30°  |  |
|                          | Damping stroke(mm)            | 60   |  |
| Body                     | Length*Width*Height(mm)       | 478*472*633  |  |
|                          | Net weight(kg)                | 24   |  |
|                          | Maximum Load(kg)              | 120  |  |
|                          | Waterproof Grade              | IP56   |  |
|                          | Rated Energy(Wh)              | 720  |  |
|                          | Battery pack waterproof grade | IP67   |  |
| Dettern Deel             | Rated Voltage(V)              | 72   |  |
| Battery Pack             | Intelligent BMS               | Over-charging, over-temperature, over-discharge, over-current, short-circuit, over-voltage and other protections |  |
|                          | Battery model                 | E25  |  |
| Motor                    | Motor Size                    | 10inch   |  |
|                          | Tire Size (Outer)             | 3.00-10  |  |
|                          | Factory Tire Pressure(BAR)    | 2.8BAR   |  |
|                          | Motor Waterproof Rating       | IPX6   |  |
| Charger                  | Charger Input (V)             | 84V  |  |
|                          | Charger Output (W)            | 84V <del></del> 4A   |  |
|                          | Charger model                 | AP-PF360CH08400040   |  |
| Peripheral Configuration | Charger Interface             | GX16-4   |  |
|                          | Number of charger ports       | 1  |  |

| Specification          | Item                       | Parameter                     |
|------------------------|----------------------------|-------------------------------|
| Lighting Configuration | Automatic headlights       | Yes                           |
|                        | LED Daytime Running Lights | 12W                           |
|                        | Illumination Lamps         | 1W                            |
|                        | Tail light-brake light     | Colorful strips on both sides |
| Requirements           | Ambient light              | 16-55                         |
|                        | Applicable height(cm)      | 120-200                       |
|                        | Operating Temperature(°C ) | -10-45                        |
|                        | Storage temperature(°C )   | -20-45                        |

[1]: Typical range is obtained at full charge, with a load of 90kg, ambient temperature of 25°C, and riding at speeds of 20 to 40 km/h on a flat, paved road. The range of the wheel is influenced by factors such as temperature, tire pressure, road conditions, and riding habits (such as rapid acceleration and braking).

[2]: fully charged, 90 kg payload, 25°C, no wind, at the flat road.

[3]: fully charged, 90 kg rider get the data through a large amount of tests.

## **INITIAL USE**

#### Before Use

Electric Unicycle is a high-tech recreation product. When you ride without following the operation specifications, it may lead to unpredictable injuries and property losses. The following will explain how to use Electric Unicycle and the precautions in details. Please read it carefully and use Electric Unicycle as required. Before using, please make sure that all parts of Electric Unicycle are not damaged and installed properly.

### **Warning:**

- Before using the Electric Unicycle, ensure that the battery is fully charged. It is recommended to charge it more than 80
  percent of capacity.
- Find a relatively open and flat area to practice riding, (at least 4m by 4m in area), both inside and outside. You need to
  be fully aware of the riding environment around you to ensure that you are not disturbed by obstacles such as cars,
  pedestrians, pets, bicycles, etc.
- You need a skilled assistant stood by. The assistant must be familiar with Electric Unicycle and all precautions and usage methods in this manual.
- Please do not ride the vehicle on slippery ground.
- Users are advised to wear comfortable, casual or sports clothing, and to wear flats and warm up to improve your flexibility.
- Be sure to wear a helmet and riding protective gear to avoid injury.

#### **Download INMOTION App**



Download the App in the following ways


- 1. Scan the QR code on the left
- 2. Search "INMOTION" in the Apple store or Google Play Store.
- 3. Visit www.inmotionworld.com/support/app



Electric Unicycle supports Bluetooth 5.0 BLE. The BLE ID is E25-XXXXXXXX, where XXXXXXXX is the last 8 digits of SN. Install the INMOTION App on your mobile device (iOS 12.1 and above or Android 7.0 and above supported) and follow the prompts to connect your Electric Unicycle.

For more functions, please visit the official website to download the latest version of INMOTION App user manual.

## **LEARNING TO RIDE**

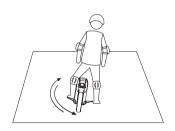

1. Step on the pedal with one foot, then swing back and forth.




2. Step on the pedal with one foot, keep your feet and body upright and gradually shift your weight up.




3. Step on the pedal with one foot, lift the other foot off the ground for 1-2 seconds and start gliding.



4. Step on the pedal with one foot, push back with the other foot and start aliding.

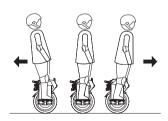

5. Step on pedals with both feet, use your weight to move forward and back.

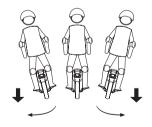

6. Press the pedals with feet by different force to make a turn.







Facebook group



Website

### **FCC STATEMENT:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the

## RF warning statement:

receiver is connected.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

☐ Consult the dealer or an experienced radio/TV technician for help.