

Trademark

Shenzhen OBDSTAR Technology Co., Ltd. (hereinafter referred to as "OBDSTAR") has registered trademarks in China and overseas countries. OBDSTAR® is a registered trademark of the Company. In addition, OBDSTAR insists on independent research and development and innovation, has obtained FCC ID, UKCA and CE certifications, and is a national high-tech company with independent intellectual property rights. Other products and company names mentioned in this product are trademarks respectively owned by other companies.

Copyright Information

Without the written consent of the Company, no company or individual shall copy or back up this manual in any form (electronic, mechanical, photocopying, recording or other forms).

Disclaimer

All information, specifications and illustrations in this manual are current as of publication date. OBDSTAR reserves the right to change it without prior notice. The contents of the manual have been carefully reviewed, but it is still difficult to guarantee the completeness and accuracy of the contents (including but not limited to product specifications, functions and illustrations).

The Company shall not be liable for any direct, indirect, special, incidental damages or any indirect economic damages (including but not limited to loss of profits).

NOTE: Before operating and maintaining the device, please read this manual carefully, especially the safety precautions.

Support

Website: <http://www.obdstar.com>

Whatsapp: +852 5419 5864

E-mail: service@obdstar.com

For users in other countries or regions other than China, please contact your local dealer for technical support.

Safety Information


For the safety of yourself and other people, and to avoid damage to the device and the vehicle, all personnel operating the device must read and follow the safety precautions mentioned in this manual.

Due to the variety of procedures, tools, components and techniques used in vehicle maintenance, the different ways of operation by staff, and the wide variety of diagnostic applications and vehicles tested by the device, this manual cannot predict every situation or provide safety advice that covers all scenarios. It is the responsibility of the automotive service technician to have a thorough understanding of the system being tested and to utilize appropriate service methods and test procedures in a reasonable manner. When testing, you must use appropriate operating methods, so as not to place yourself and others in the work area at risk, or damage the device being used or the vehicle being tested.

Before using the device, please refer to and follow the safety information and applicable test procedures provided by the vehicle or device manufacturer. Please read, understand and obey all the safety information and tips in the manual, and use the device according to the instructions in this manual.

Safety Instructions

The safety information stated here covers all situations that the Company is aware of. The Company cannot know, anticipate, or advise on all possible hazards. The operator must ensure that the maintenance operations performed under any circumstances will not cause harm to personal safety.

 **DANGER:** While the engine is running, keep the service area well ventilated, or properly connect the engine to the building's exhaust system. Carbon monoxide produced by the engine can cause slow reaction and even serious personal injury or death.

Safety Warnings

- Always perform vehicle diagnostics in a safe environment.
- Keep the diagnostic tool dry and clean, and keep it away from gasoline, water and oily items. If necessary, clean the surface of the device with a clean cloth dampened with mild detergent.
- Do not place the diagnostic scanner on the vehicle power distribution box, as strong electromagnetic interference may cause damage to the device.
- Please keep this product away from magnetic devices, as radiation from magnetic devices will erase the information stored in this product.
- Do not use this product in places with high temperature and flammable gas (such as at a gas station).
- Do not use the device during a thunderstorm to avoid lightning strikes or other injuries.
- Never operate the diagnostic scanner while driving, as distraction may cause an accident.
- Wear ANSI-compliant safety goggles.
- Keep clothing, hair, hands, tools, testers, etc. away from running or hot engine parts.
- As vehicle emissions are bodily harmful, diagnosis must be performed in a well-ventilated place.
- Before starting the engine, make sure to apply the parking brake, use a barrier to block the front wheels, and put the shift lever in neutral (manual transmission) or park (automatic transmission), so as not to suddenly move forward and injure people when the engine is started.
- Exercise extreme care when working around ignition coils, distributor covers, ignition lines and ignition plugs. These components can generate high voltages when the engine is running.
- Equip special fire extinguishers for gasoline, chemicals and electrical fires in the work area.
- Do not connect or disconnect the diagnostic tool when the ignition switch is on or the engine is running.

- When disassembling and installing the programmable read-only memory (PROM), the operator should wear a grounding metal strap, wrap one end of it around the wrist, and clamp the other end on the vehicle body to avoid ECU circuit failure caused by static electricity.
- When servicing the vehicle, please refer to the instructions in the service manual, and operate in strict accordance with the diagnostic procedures and precautions. Failure to do so may result in personal injury or damage to the diagnostic device.
- To avoid damage to the scan tool or the generation of erroneous data, please ensure that the vehicle's battery is sufficiently charged and that the connection to the vehicle's diagnostic socket is clean and secure.
- Radio waves generated by this device may affect the normal operation of implantable medical devices or personal medical devices such as pacemakers, cochlear implants, hearing aids. If you are using these medical devices, consult their manufacturers for restrictions on the use of this device.
- In medical and healthcare settings where the use of wireless devices is expressly prohibited, please follow the location's regulations and turn off the device.
- The wireless device may interfere with the aircraft's flight system, please comply with the relevant provisions of the airline. When the use of wireless devices is prohibited, please turn off this device.
- This device and its accessories may contain small parts, please keep them out of the reach of children. Prevent children from unintentionally damaging this device and its accessories, or swallowing small parts that may cause suffocation or other hazards.

Table of Contents

1 Manual Overview	1
1.1 Manual Basics	1
1.1.1 Bold and Square Brackets	1
1.1.2 Jargon	1
1.1.3 Tips and Notes	1
2 Product Profile	1
2.1 Intelligent Diagnostic Scanner	2
2.1.1 Interfaces and Functions	2
2.1.2 Power Supply	3
2.1.3 Test Main Cable	3
2.1.4 Accessories	4
2.1.5 Specifications	4
3 How to Use This Device	5
3.1 Powering On	5
3.2 DP Menu	6
3.3 Screen Locator and Buttons	7
3.4 Powering Off	8
3.5 Reboot	8
4 Diagnostic Operations	9
4.1 Establishing Vehicle Communications	9
4.1.1 Connecting to the Vehicle	9
4.1.2 Communication Failure Prompts	10
4.2 Diagnostic Procedure	10
5 Personal Center	10
5.1 User Registration	10
5.2 User Login	12
5.3 My Info	13
5.4 Recharge CREDIT	15
5.5 Authorization Center	16
5.6 Order History	17
6 Upgrade	17
7 Data Management	19
7.1 My Data	20
7.2 DataStream Playback	20
7.3 Model Uninstallation	21
7.4 Diagnostic Reports	22
7.5 Picture Viewer	23
7.6 File Management	23
8 Support	24
8.1 Manual	24
8.2 FAQ	25
8.3 Log Upload	25

8.4 TeamViewer	26
8.5 Providing Feedback on Exceptions	27
8.6 OBDSTAR APP	27
9 Settings	28
9.1 VCI Info	28
9.2 Languages	29
9.3 Units	29
9.4 Workshop	30
9.5 Network Testing	30
9.6 Clearing Cache	31
9.7 System Settings	32
9.8 Voltage Calibration	32
9.9 About	33
10 Other Apps	34
10.1 WLAN	34
10.1.1 Activating WLAN	34
10.1.2 Connecting to WLAN	34
10.2 Browser	34
10.2.1 Opening the Browser	34
10.2.2 Browsing Webpages	34
10.2.3 Zooming In/Out	35
10.2.4 Saving Your Favorite Webpage to Bookmarks	35
10.2.5 Creating New Pages	35
10.2.6 Customizing Browser Settings	35
10.3 Calculator	35
10.4 Gallery	35
10.5 Clock	36
10.5.1 Alarm	36
10.5.2 Timer	36
10.5.3 Stopwatch	37
10.5.4 Custom Settings	37
10.6 ES File Explorer	37
10.6.1 How to Transfer Files Using a USB Flash Drive	37
10.7 OTA (Over-the-Air Technology)	39
10.8 Display	39
10.8.1 Brightness	39
10.9 Setting a Screen Lock	40
10.10 Application Management	40
10.10.1 Viewing Installed Applications	40
10.10.2 Viewing the Running Applications	40
10.11 Languages & Input Methods	41
10.11.1 Setting the Language	41
10.11.2 Setting the Input Method	41
10.12 Setting the Date & Time	41

10.13 Restoring Factory Settings	41
10.14 Storage	41
11 Scanner Care	42
12 Usage of the Battery and the Charger	42
13 Order Notification	43
14 Customer Service Center	43
15 Warranty	43

1 Manual Overview

This manual contains instructions for using the device.

Some of the diagrams shown in the manual may include all the modules and optional devices in the system you use. You can contact your dealer or local sales representative for information and to purchase other optional modules and accessories.

1.1 Manual Basics

Here are some basics about the contents of this manual.

1.1.1 Bold and Square Brackets

In the body of the manual, bold and square brackets emphasis is used to highlight selectable items, such as buttons and menu options.

For example:

Tap **[OK]**.

1.1.2 Jargon

The term "select" means to highlight a button or menu item and tap it to confirm the selection.

1.1.3 Tips and Notes

This manual uses the following messages.

Tips:

Tips provide helpful information such as additional usage instructions, tips, and advice.

Notes:

Notes remind you to avoid (avert) situations to prevent damage to the diagnostic tool or the vehicle.

2 Product Profile

This product is a new Android-based vehicle trouble diagnostic device developed for Internet applications. With OBDSTAR's advanced diagnosis technology in its blood, it has the advantage of wide vehicle coverage, diverse functions and accurate test data. Communicating through the OBD connector, the smart mobile terminal realized fault

diagnosis for all vehicle models and systems.

In addition, taking advantage of mobile Internet applications, this device shares the resources, support, etc. of all our products.

2.1 Intelligent Diagnostic Scanner

2.1.1 Interfaces and Functions

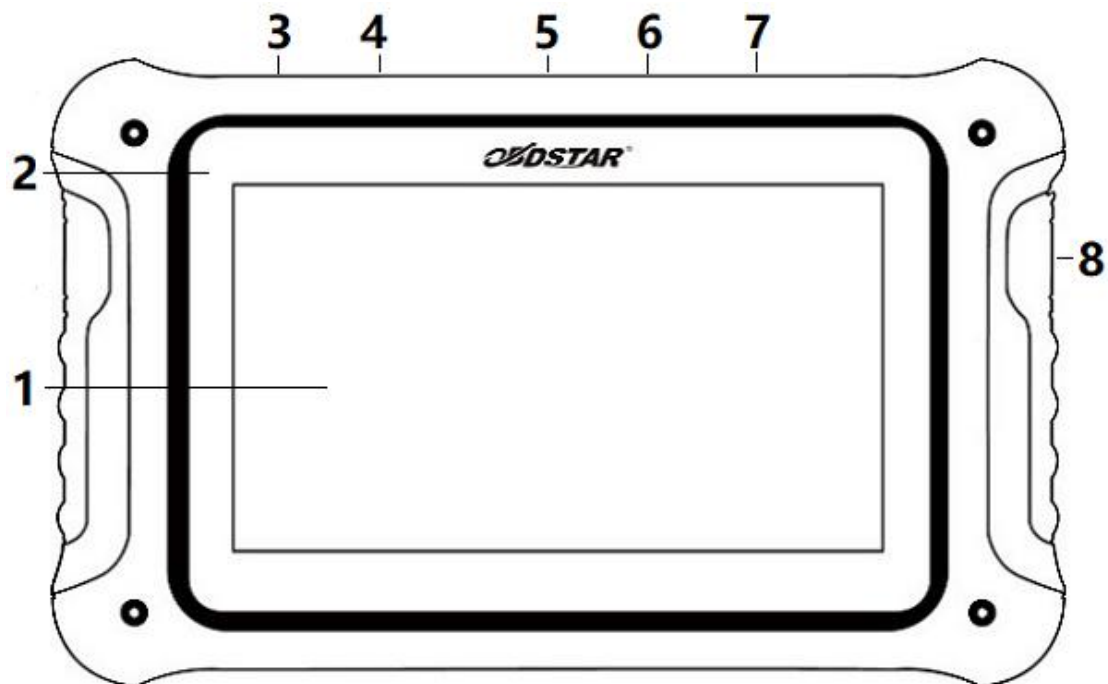


Fig. 2.1.1-1 Front View of the Device

- 1 – 7" LED Capacitive Touch Screen
- 2 - Power Indicator Light
- 3 - DC Charging Port
- 4 - USB Port
- 5 - Port for the Diagnostic Main Cable Connector
- 6 - Type-C Port
- 7 - ON/OFF Button - Long press to turn on/off the tablet; briefly press to lock/unlock the screen.
- 8 - TF Card Slot

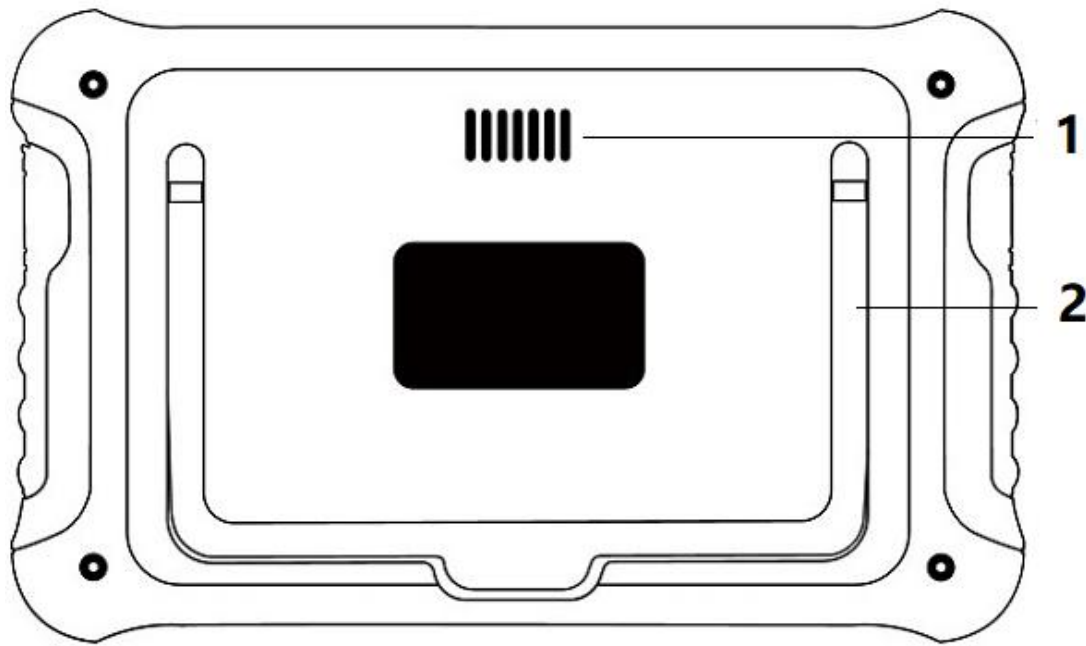


Fig. 2.1.1-2 Rear View of the Device

1 - Speaker


2 - Foldable Stand - Deploy it from the back of the tablet for stable placement and hands-free screen viewing.

2.1.2 Power Supply

The smart diagnostic scanner can be powered by:


- a) an internal rechargeable battery
- b) 24 VDC
- c) vehicle power

The intelligent diagnostic scan tool can be powered by the internal rechargeable battery. When the battery is fully charged, it can support 4.5-hour-long on-screen data viewing. The device can be powered from a wall outlet using the DC power connector. The DC power connector supplies the internal battery pack. And the tablet can be powered through a direct connection to the cigarette lighter or other available power port on the vehicle.

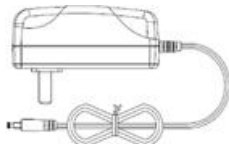

2.1.3 Test Main Cable

It is used to build the connection between the diagnostic scanner and the vehicle to be tested.

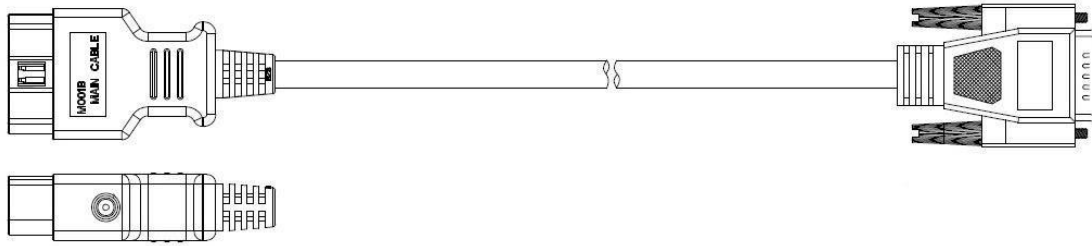

Note: The main cable varies by product configuration. The above illustrations are for reference only.

2.1.4 Accessories

Accessories vary with product configuration. Some features require specific accessories. Please contact our customer service department or an authorized dealer for details or to place an order.

2.1.5 Specifications

Operating System	Android 5.1
CPU	RK3128 Quad-Core, ARM Cortex A7@1.2Ghz
Battery	3.7 V, 3700 mAh Rechargeable Lithium Battery; Battery Life: 4 to 5 hours
Expansion Memory Card	Supports 32 GB Micro SD (TF) Card
RAM	1 GB
Storage	16 GB
Screen Size	7 inches
LCD Resolution	1024 × 600
Touchscreen Type	Capacitive
Camera	Not Equipped
Wi-Fi	Supports Dual Wi-Fi for Wireless Internet
Working Temperature	-20 °C – 55 °C (-4 °F – 131 °F)

Storage Temperature	-20 °C – 70 °C (-4 °F – 158 °F)
Weight	About 1.3 kg
Dimensions (L×W×H)	243 mm × 148 mm × 36 mm

3 How to Use This Device

Before using this device, please ensure that the built-in battery is fully charged or connected to a DC power supply (see the power supply paragraphs for details).

3.1 Powering On

Press the Lock/Power button on the top right of the device for three seconds to power it on. After the startup animation and welcome interface are displayed, a Disclaimer window will automatically pop up. Scroll down to the end of the pop-up dialog box and read the Disclaimer thoroughly. After that, **[Accept]** this Disclaimer, the system will show DP menu; otherwise, select **[Reject]** and go to the Android system homepage.

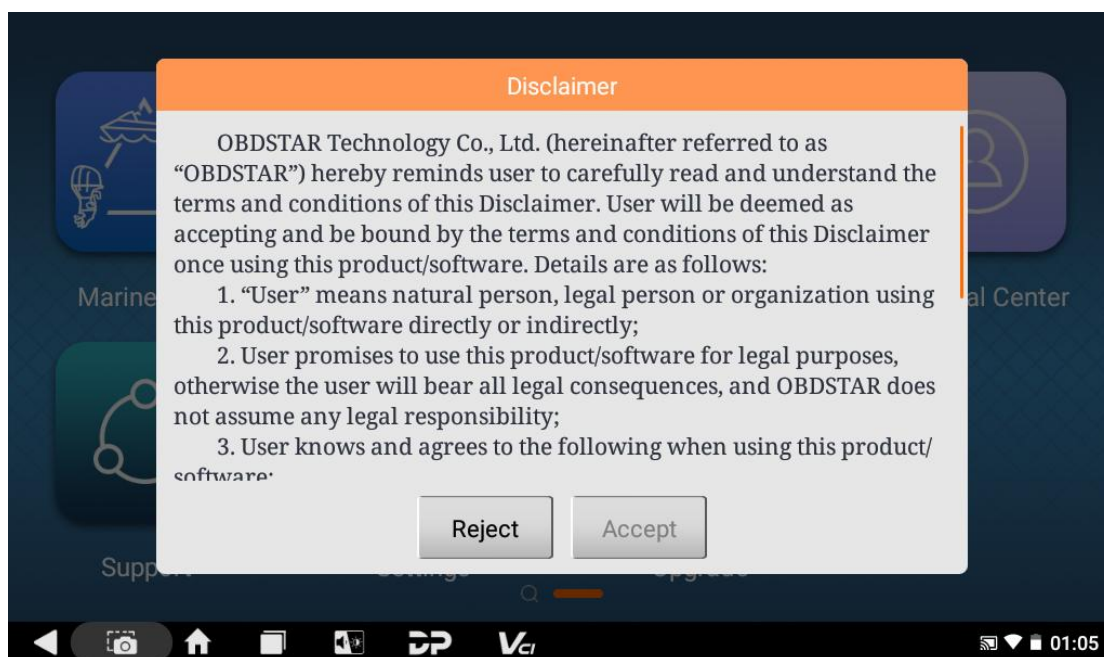


Fig. 3.1-1 DP Apps Disclaimer

3.2 DP Menu

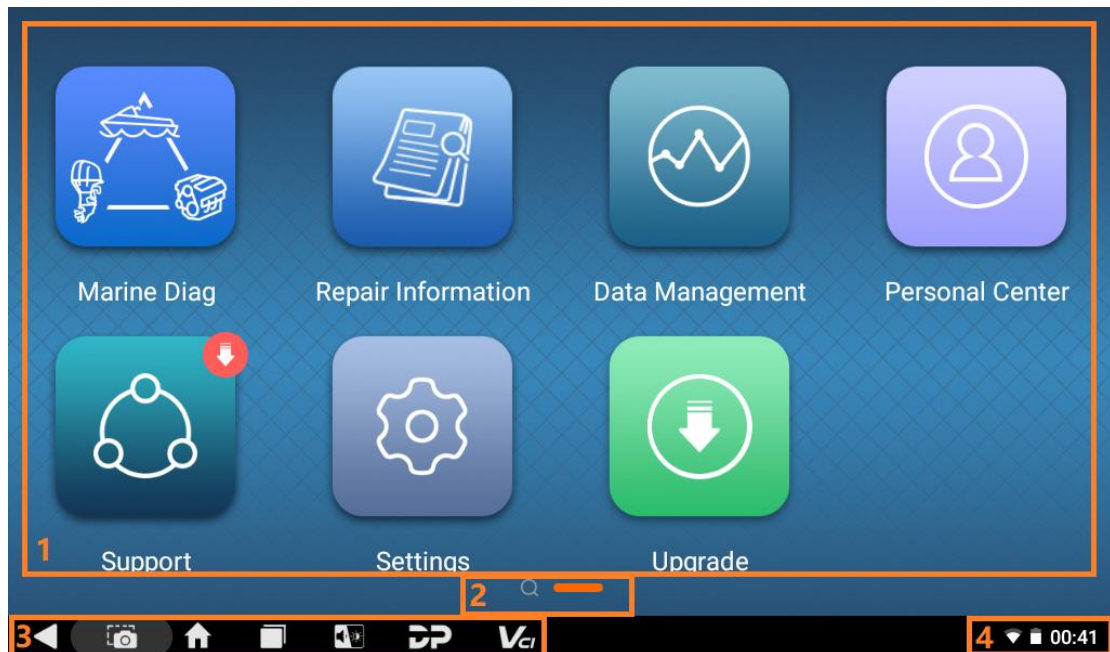


Fig. 3.1-2 DP Apps Menu

- 1 - Application menu
- 2 - Screen locator
- 3 - Navigation buttons
- 4 - Bluetooth, WLAN, Battery and System Time

Tip: In order to protect system information security and reduce power consumption, the screen will be locked and the system enters hibernation when the device is not used for a long time. You can modify this setting in the Display option of the system settings menu.

All operations of the intelligent diagnostic device are performed via the touch screen. Diagnostics are primarily guided by menu selection, so the user proceeds through a series of question/option selections to perform diagnostic actions or data searches. The following chapters will describe operations on specific applications.

Users can choose to run different apps through the DP menu. The table below provides a brief description of the DP apps. Please use a stylus or your fingertip to select and tap for application running.

Note: Below is a **non**-exhaustive list of our software. Subject to the actual downloaded software.

Table 3.2 DP Apps


App Name	Icon	Description
Marine DIAG		It is used for marine diagnosis.








Repair Information		It is used to search data.
Data Management		It is used to check recorded data, diagnostic report and other data, and to uninstall models.
Personal Center		It is used for checking personal account information, token information, etc.
Support		It is used to check product manual and FAQs, as well as to upload logs, to give feedbacks on exceptions and to perform remote assist.
Settings		It operates language switching, unit system switching, workshop information editing, cache clearing, etc.
Upgrade		It is used for diagnostic software update.

3.3 Screen Locator and Buttons

The following table describes the operating functions of the navigation buttons located at the bottom of the screen:

Table 3.3 Screen Locator and Buttons

Name	Icon	Description
Screen Locator		It indicates the location of the screen you

		are viewing (in orange). You can swipe left or right on the screen to flip through the front or rear pages. On the leftmost page, you can quickly search for diagnostic software.
Back		It is used to return to the previous interface or exit the application.
Screenshot		By tapping it, you can take a screenshot and save the image to the gallery.
Home		Tap it to go back to the main interface of Android System.
Recently Used Apps		Tap it to view cascading windows of the running apps. You can select the desired window to open it, or drag your desired window to the right to close the corresponding app.
Volume & Brightness		The brightness & volume adjusting window will pop up upon tapping on it.
DP		Tap it to return to the menu page of DP apps.
VCI		It is used to open the setting management interface and check VCI information.

3.4 Powering Off

All vehicle communications must be terminated before switching off the smart diagnostic device. A forced shutdown while communicating with the vehicle's systems may result in problems with the electronic control modules in some vehicles, so please exit the diagnostic application before shutting down.

How to power off?

- Press and hold the **[Lock/Power]** button for 2-3 seconds.
- After selecting **[Power off]**, the system will shut down in a few seconds.

3.5 Reboot

- Press and hold the **[Lock/Power]** button for 2-3 seconds.
- After selecting **[Reboot]**, the system will reboot in a few seconds.

4 Diagnostic Operations

The diagnostic program establishes a data connection with the vehicle's ECU via the diagnostic main cable, and can read ECU information, view fault codes, check real-time data, and perform actuation tests. Diagnostic applications can access the ECUs (Electronic Control Units) of multiple vehicle control systems such as engine, transmission, anti-lock braking system (ABS), etc.

4.1 Establishing Vehicle Communications

- a) Attach the diagnostic main cable (Some functions require appropriate adapters or other accessories. Please refer to software operating instructions for detailed operations) to the vehicle's diagnostic socket for power supply and communication.
- b) Ready to diagnose and service the vehicle.

4.1.1 Connecting to the Vehicle

Based on the different configurations of the vehicle, methods for connecting the intelligent diagnostic tool to the vehicle's diagnostic socket are divided into the following two types:

- a) Vehicles compatible with the OBD II management system communicate and are powered with 12 V through a standard SAE J1962 diagnostic socket.
- b) Vehicles that are not compatible with the OBD II management system communicate through a non-standard diagnostic socket and in some cases, power is supplied by connecting to either the smart diagnostic device's power adapter or the vehicle's battery.

◆Connecting to an OBD II Vehicle

Connecting to an OBD II vehicle only requires the use of the test main cable, no other connectors are required.

Connection method:

- a) Connect the male connector of the diagnostic main cable to the smart scanner and tighten the captive screw.
- b) Attach the 16-pin connector of the test main cable to the vehicle's diagnostic socket. For the location of the socket, you can refer to the Help in the diagnostic software.

◆Connecting to a Non-OBD II Vehicle

Connecting to a non-OBD II vehicle requires a combination of the test main cable and a vehicle-specific adapter.

Non-OBD II vehicle connections can have the following two connection scenarios:

- a) The diagnostic interface connection provides communication and power.
- b) The diagnostic interface supports communication only, and power must be supplied by connecting to either the smart diagnostic device's power adapter or, preferably, the vehicle's battery.

Connection method:

- a) Connect the male connector of the diagnostic main cable to the smart scanner and tighten the captive screw.
- b) Use a vehicle-specific diagnostic connector and connect its 16-pin female connector to the male connector of the test main cable.
- c) Connect the other end of the dedicated diagnostic connector to the vehicle's diagnostic socket.

4.1.2 Communication Failure Prompts

If the intelligent diagnostic tool cannot establish normal communication, the screen will prompt you with a communication failure message and provide corresponding inspection instructions. Possible causes of this issue are as follows:

- a. The ignition is not turned on.
- b. The main cable is not well connected.
- c. Faulty vehicle, data cable, or connector wiring.
- d. The battery is exhausted.
- e. The vehicle is not equipped with the selected system.

4.2 Diagnostic Procedure

Connect the diagnostic scanner to the vehicle via the test main cable -> Register (see Personal Center section for details) -> Log in (see Personal Center section for details) -> Download/Upgrade diagnostic software -> Select the function and the model -> Execute the diagnosis -> Complete the diagnostics and exit.

NOTE: Before exiting or closing diagnostic applications, you must first exit the diagnostic operation interface and terminate all communications between the smart device and the vehicle. As communication interruption may cause damage to the vehicle's ECU, it is necessary to ensure that the test main cable is well connected with the smart device and the vehicle in the process of diagnostic communication, and ensure that you have exited all diagnostic communications before disconnecting the diagnosis main cable or turning off the device.

5 Personal Center

This module is used to set up and manage account details and to check dealer's information.


5.1 User Registration

When the user gets a brand new diagnostic scanner, he/she needs to register an account in

the Personal Center before logging in the Upgrade app to download software.


Registration procedure:

Tap on the **[Personal Center]** icon in the DP menu, then the login interface will be shown.

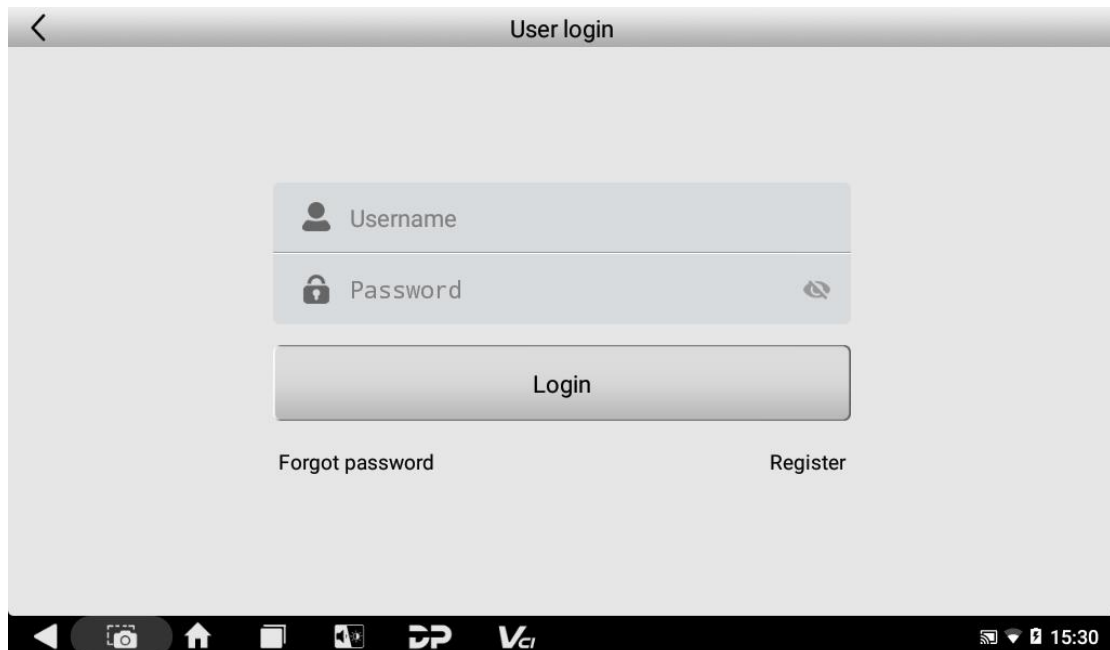

The screenshot shows the 'User login' screen. At the top, there is a back arrow and the title 'User login'. Below this, there are two input fields: 'Username' with a person icon and 'Password' with a lock icon and a toggle for visibility. A 'Login' button is positioned below these fields. At the bottom, there are two links: 'Forgot password' on the left and 'Register' on the right. The bottom status bar shows navigation icons, the DP and VCI logos, and the time 15:30.

If you are a new user, select the **[Register]** button in the lower right corner and proceed to the user registration interface.

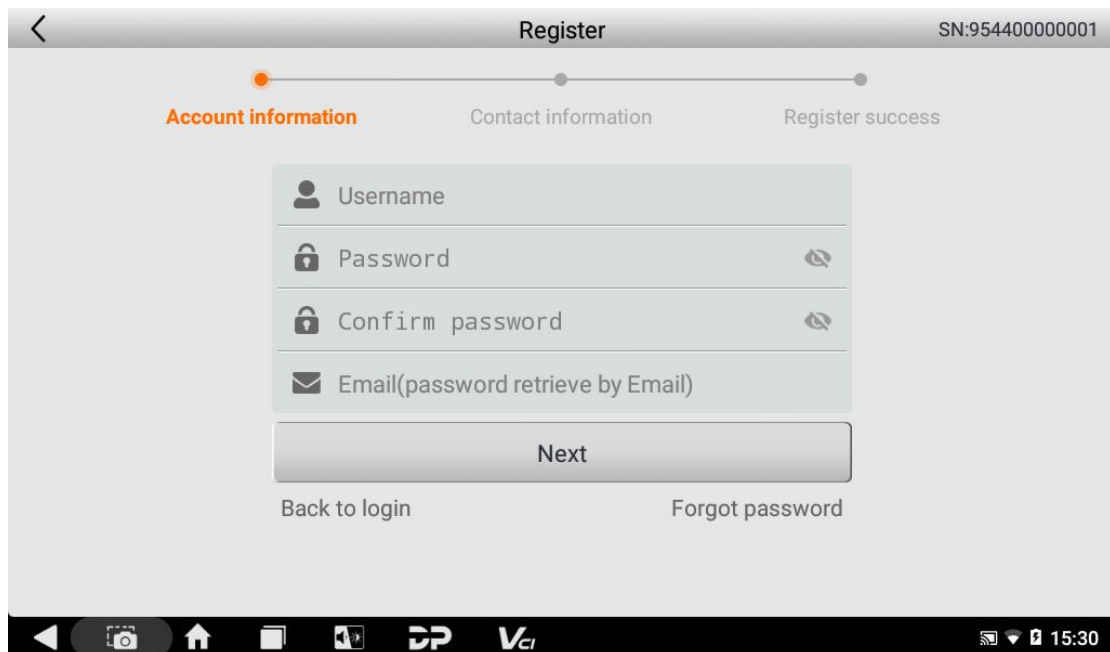

The screenshot shows the 'Register' screen. At the top, there is a back arrow, the title 'Register', and a serial number 'SN:954400000001'. Below the title is a progress bar with three steps: 'Account information' (active), 'Contact information', and 'Register success'. The 'Account information' section contains four input fields: 'Username' (person icon), 'Password' (lock icon), 'Confirm password' (lock icon), and 'Email(password retrieve by Email)' (envelope icon). A 'Next' button is below these fields. At the bottom, there are two links: 'Back to login' on the left and 'Forgot password' on the right. The bottom status bar shows navigation icons, the DP and VCI logos, and the time 15:30.

Register SN:954499990015

Account information Contact information Register success

Username

Password

Confirm password

Email(password retrieve by Email)

Next

Back to login Forgot password

Register SN:954499990015

Account information Contact information Register success

Registered successfully!


Welcome to use OBDSTAR service!

Login now!


Fill in the information in each field. After that, you will be prompted with “Registered successfully!” Tap **[Login now!]**.

5.2 User Login

If you have already registered as a member, simply fill in your username and password, then tap **[Login]**.

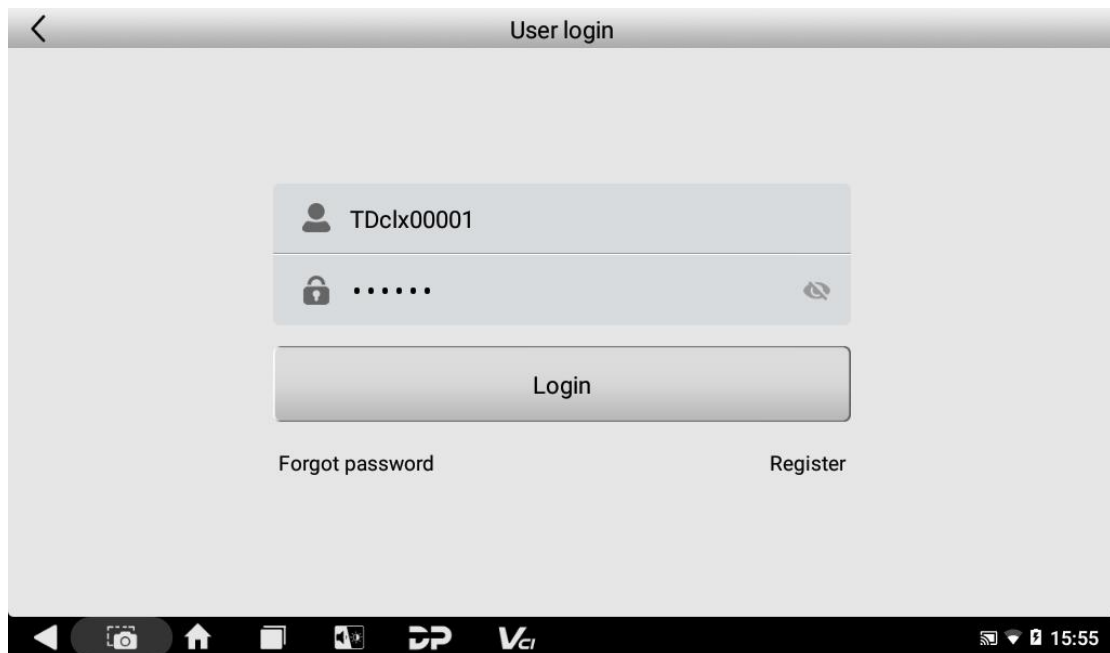


If you forget your password, you can select **[Forgot password]**, then fill in the necessary information in the Password Recover popup window, and you will be able to log in with your new password.

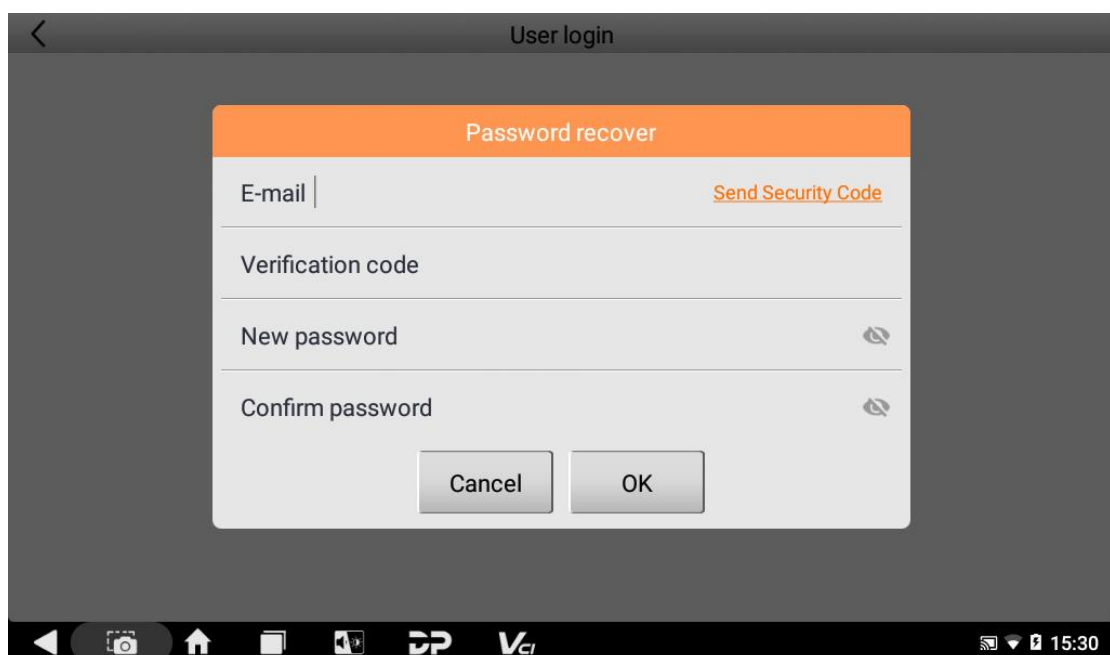


5.3 My Info


If you have already registered, your personal information will be displayed in the My Info interface where you can modify your information and password.

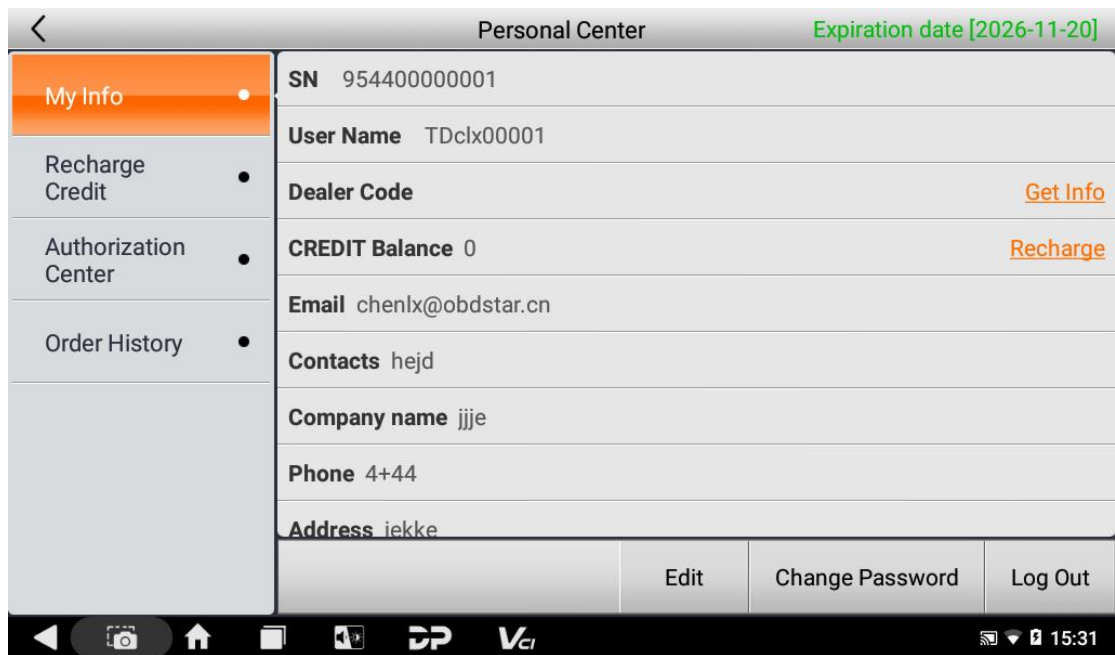


You can check dealer contact info by tapping on the **[Show Info]** link in the Dealer Code column.

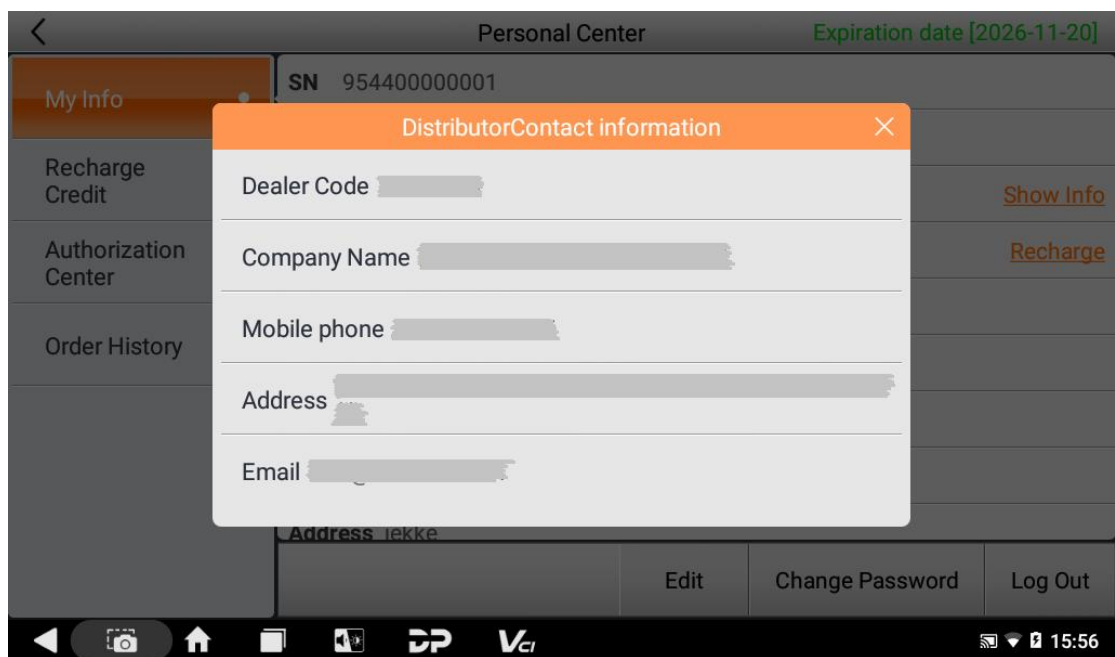

By tapping **[Edit]** in the lower part of the My Info page, you can edit your personal information.

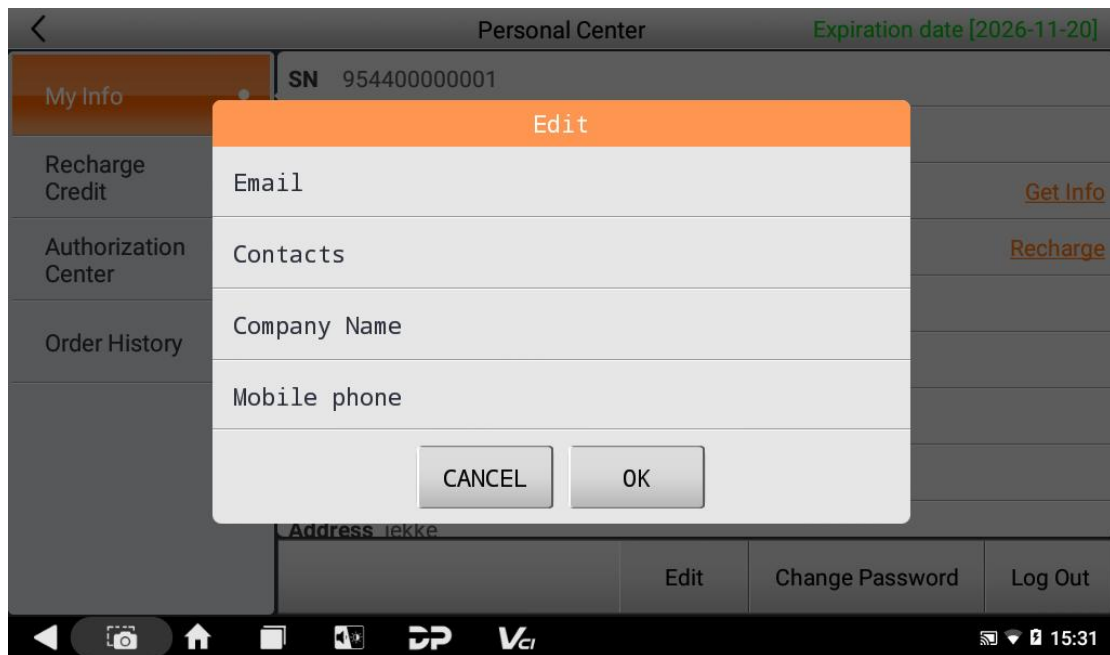


You can tap **[Change Password]** to change your passcode.

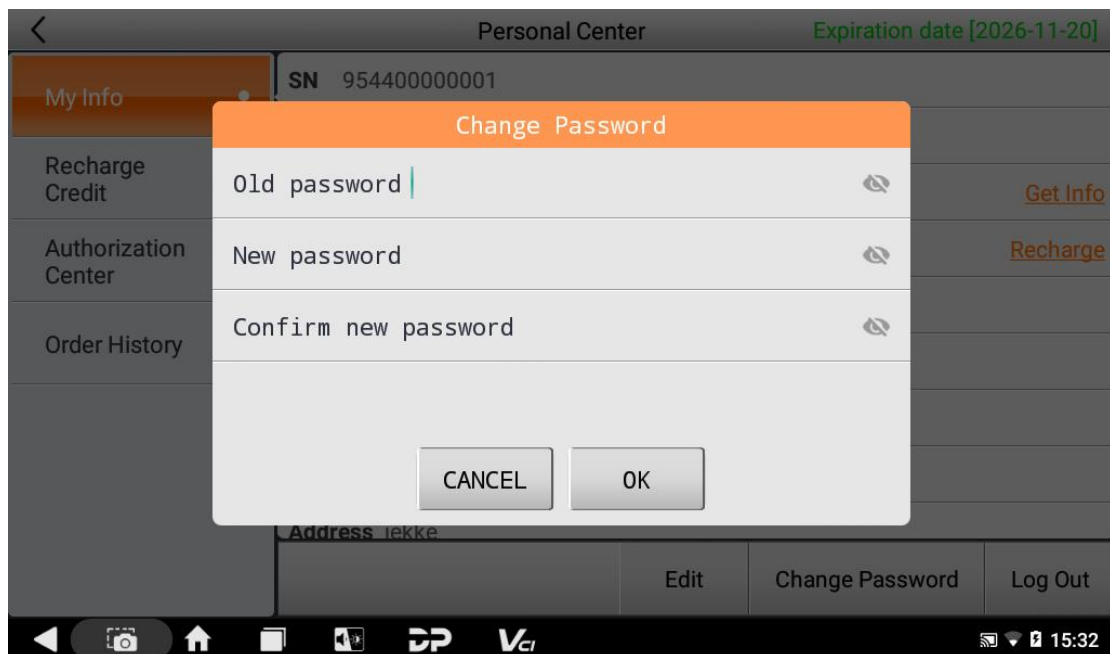


5.4 Recharge CREDIT


The Recharge CREDIT tab displays contact information through which you can contact the Company for recharge.

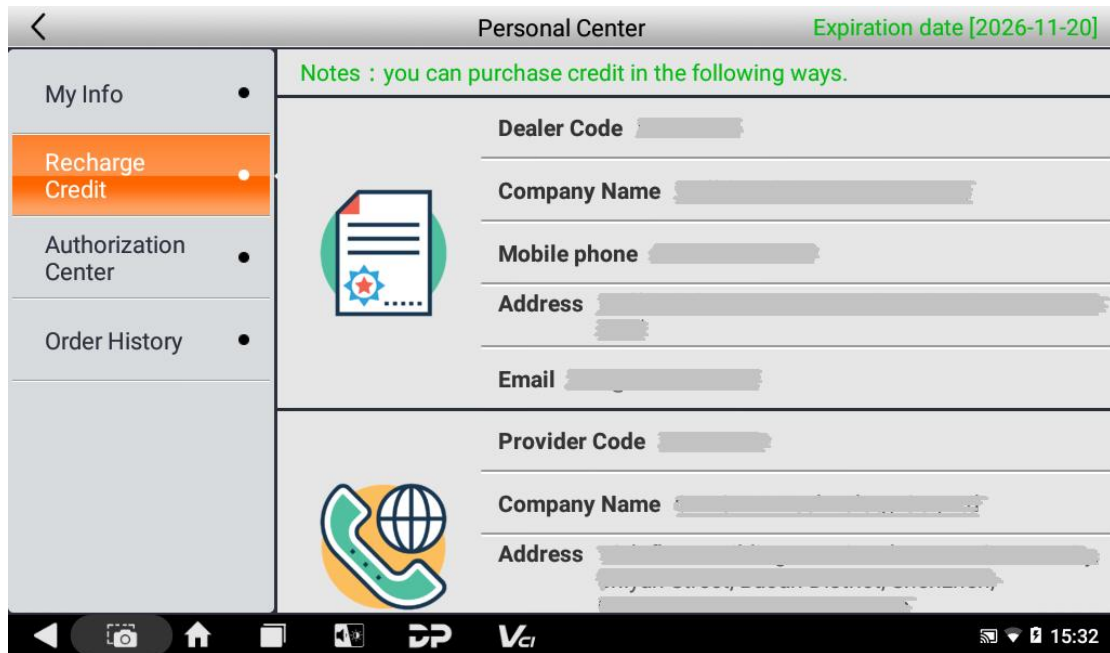

5.5 Authorization Center


This access for annual subscription and configuration upgrade has been cancelled. You can contact your dealer for details.

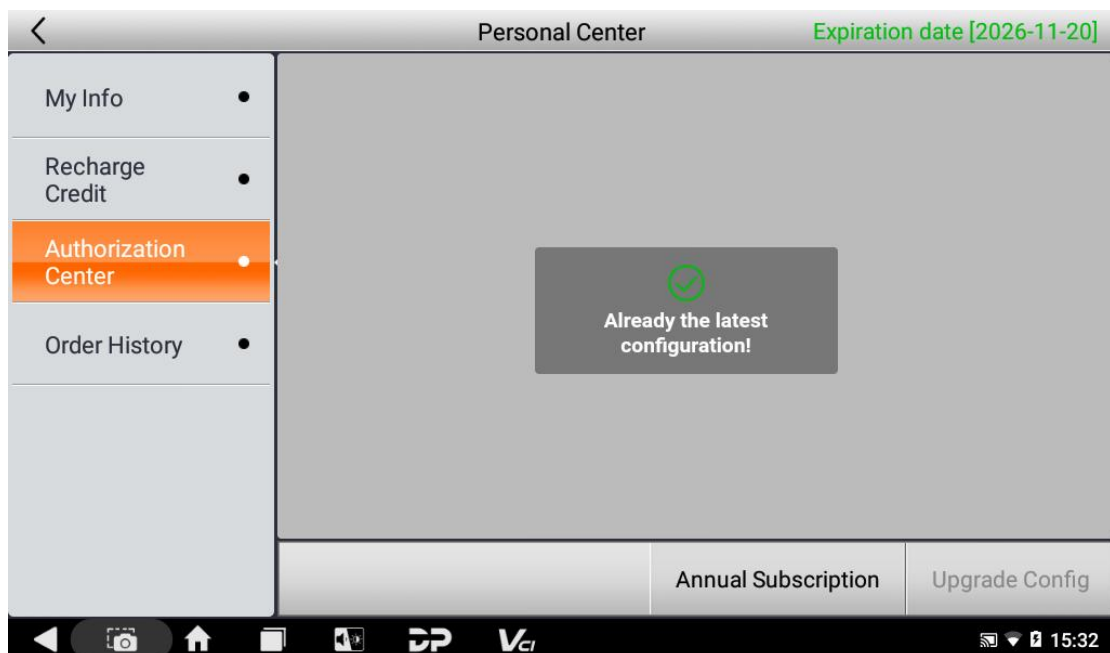

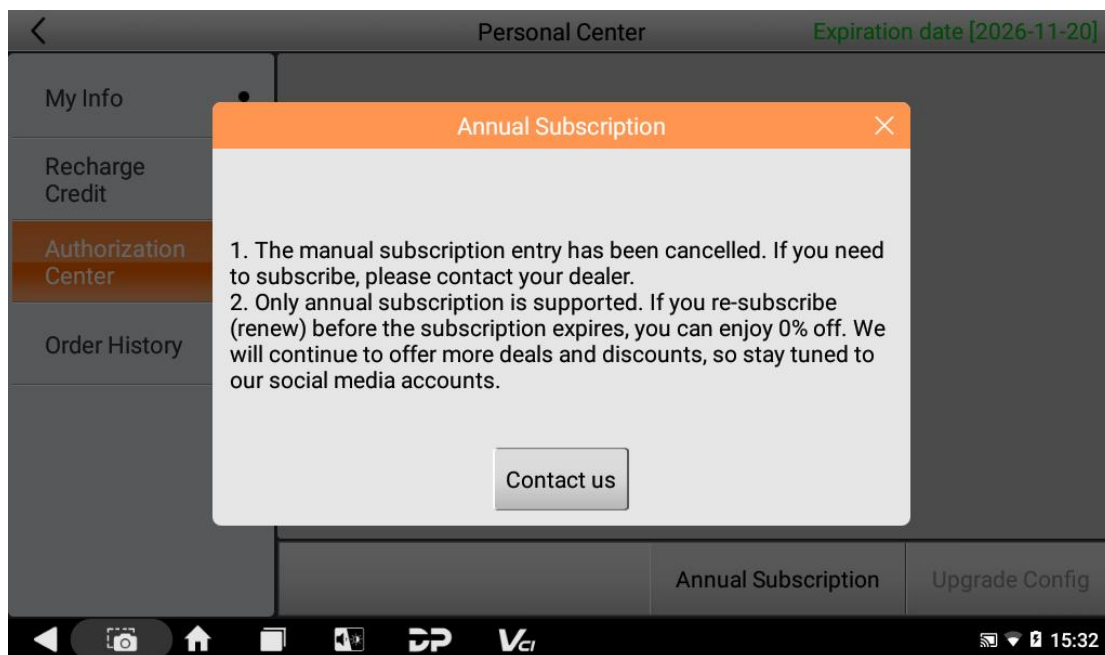

5.6 Order History

Select [Order history] to view your order records.

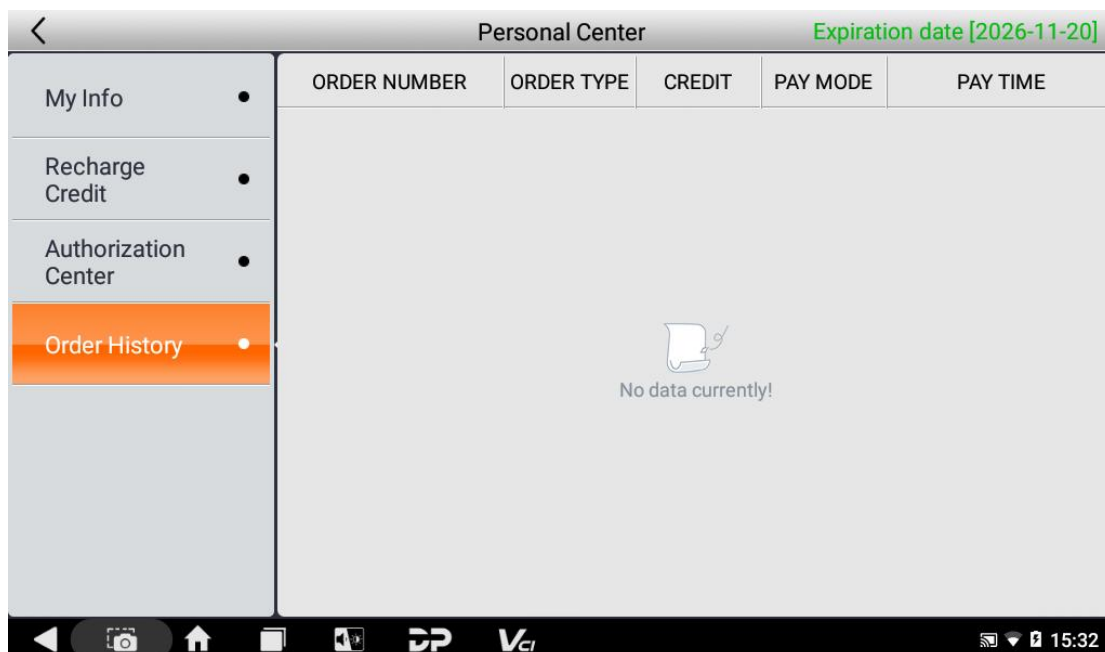




6 Upgrade


Users can download the basic data required for diagnosis, vehicle diagnostic software, data package, etc. in this function module.


NOTE: Software shown in the illustrations here is for reference only.

Procedure:

- a) Please log in (please refer to the user registration/login process in the Personal Center section for details) before using Upgrade. After opening the upgrade main page, you can see all upgradable software. All items are checked for upgrade by default. If you want to deselect certain software, you can tap the orange check box  in front of the selected software. Gray checkboxes with a tick  indicate software that must be upgraded and cannot be deselected. If you only want to upgrade all or some of the software in the Favorites (a collection of software you frequently use), tap the button **[Favorites]** in the lower left corner to select and tick the relevant software. After selecting all the software that needs to be upgraded, tap the download button  in the lower right corner to start downloading. In addition, when you want to quickly locate your target software in the long upgrade list, you can use the search box in the upper right corner and just enter keywords or letters.

Upgrade 					
	Software name	Current version	Downloadable	Size(10/10)	Content
	BASIC DATA-SOFTWARE	—	—	—	
	DIAG-MARINE-AIQIDI	—	33.00	1.32 MB	
	DIAG-MARINE-CATERPILLAR	—	33.00	10.57 MB	
	DIAG-MARINE-CFMOTO	—	33.00	1.85 MB	
	DIAG-MARINE-CRUSADER	—	33.00	1.25 MB	
	DIAG-MARINE-CUMMINS	—	33.00	3.65 MB	
	DIAG-MARINE-CUMMINS MERCUISER DIESEL	—	33.00	1.62 MB	
	DIAG-MARINE-DAEDONG	—	33.00	1.67 MB	
All Favorites					

- b) The last column on the main page of the Upgrade is the upgrade content. You can tap the icon button  corresponding to the relevant software to view what's new to the current software version (The picture below shows an example of upgrade details).

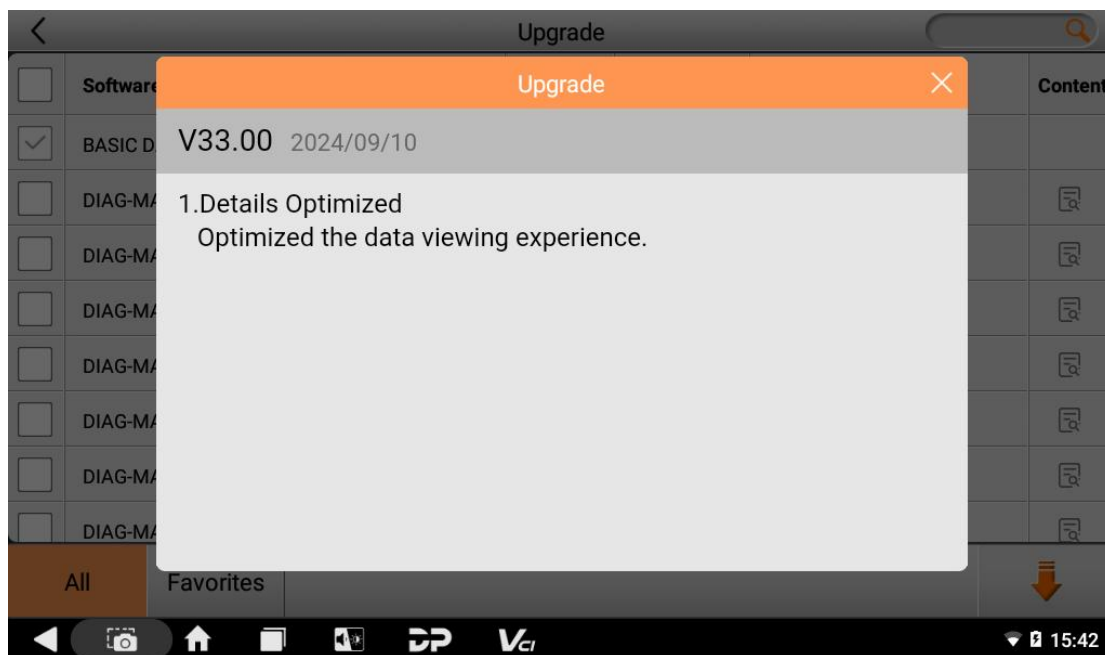


- c) If you tap the upgrade arrow button in the lower right corner again during the progress of the upgrade, the lower part of the screen will prompt “Downloading. Please try again after download finished.” (See an example in the below image.) And the upgraded software will display a green dot indicating completed downloads.

Upgrade					
<input type="checkbox"/>	Software name	Current version	Downloadable	Size(1/2)	Content
<input checked="" type="checkbox"/>	DIAG-MARINE-AIQIDI	—	33.00	✓	
<input checked="" type="checkbox"/>	DIAG-MARINE-CATERPILLAR	—	33.00	11.64 MB(2/3) 567.37 KB/s	
<input type="checkbox"/>	DIAG-MARINE-CFMOTO	—	33.00	1.85 MB	
<input type="checkbox"/>	DIAG-MARINE-CRUSADER	—	33.00	1.25 MB	
<input type="checkbox"/>	DIAG-MARINE-CUMMINS	—	33.00	3.65 MB	
<input type="checkbox"/>	DIAG-MARINE-CUMMINS MERCUISER DIESEL	—	33.00	1.62 MB	
<input type="checkbox"/>	DIAG-MARINE-DAEDONG	—	33.00	1.67 MB	
<input type="checkbox"/>	DIAG-MARINE-DAF MARINE	Downloading, please try again after download finished		1.69 MB	


7 Data Management

The user can select **[Data Management]** in the DP main interface to view its function menu (see the figure below), which includes My Data, DataStream Playback, Uninstall Model, Diagnose Report, Picture Viewer, and File Management.

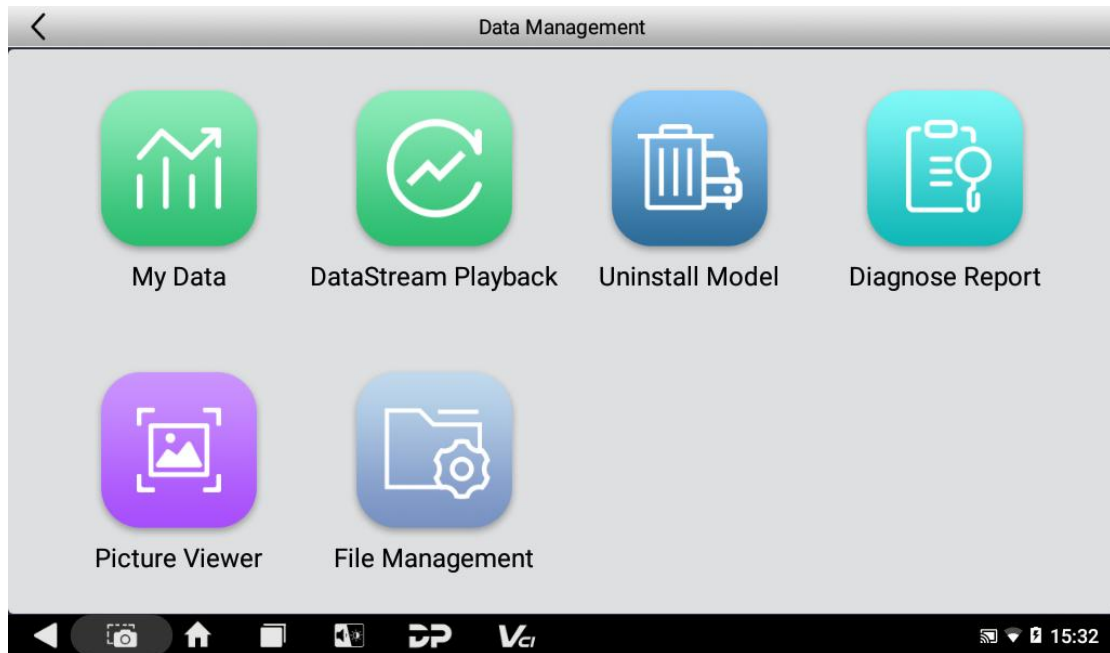

7.1 My Data

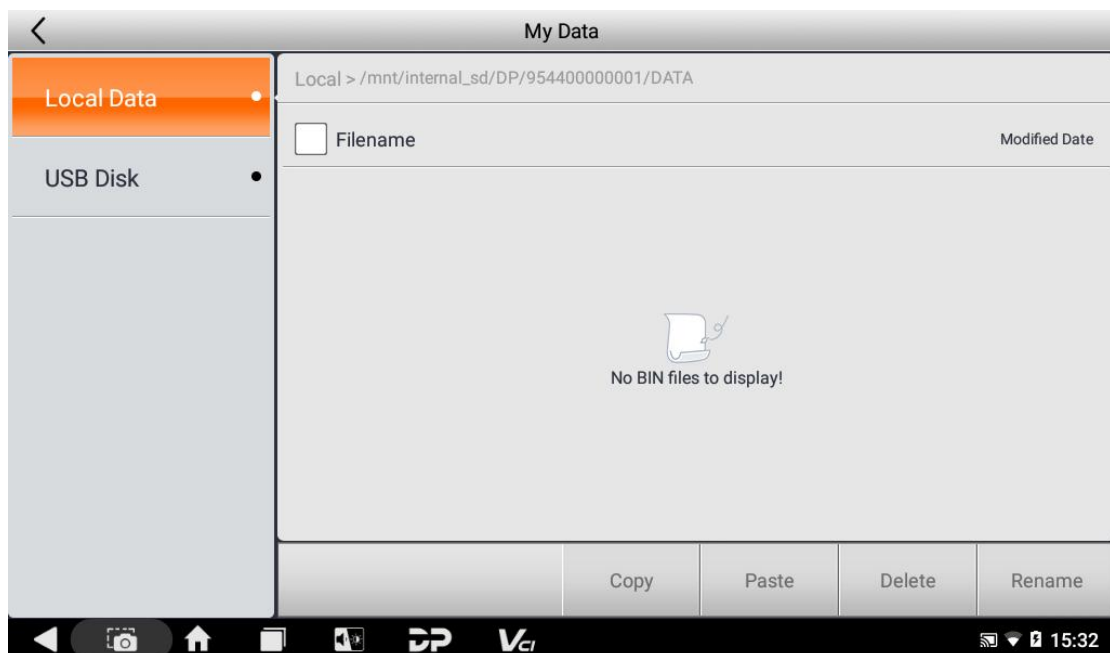

The user can view, copy, paste, delete, and rename data files (such as backed up ECU flash files and USB disk files) through this function.



7.2 DataStream Playback


- The user can check the real-time data recorded during diagnosis, including those recorded actively by the user and those triggered by data streams.
- The data videos are sorted by recording date on the left side of the page, and below

each date is the number of videos for that day.

- c) Each video has a time stamp and file path (including model name), the user can enter the name in the search box in the upper right corner for quick search.
- d) If you want to delete items, you can firstly tap on the edit icon  in the upper right corner, secondly check the desired item and tap the delete icon , and finally tap [Ok] in the popup box for confirmation.




7.3 Model Uninstallation


- a) Tap on the **[Uninstall Model]** icon in the main page of the Data Management.
- b) The list on the left is classified by DP function. Different products are equipped with different DP functions.
- c) The user can enter the name in the search box in the upper right corner for quick search.
- d) Tap the model icon or the check box in the lower right corner of the desired model, then tap the delete icon  in the upper right corner of the screen to delete. After the uninstallation is done, tap the back button to return to the previous menu.

NOTE: Software shown in the picture below is for reference only.




7.4 Diagnostic Reports

- Tap on the icon of Diagnose Report in the main page of the Data Management.
- The data is sorted according to the generation time of the diagnostic report by default, and the user can choose to sort by VIN.
- The search box in the upper right corner can help with quick searches by date or time.
- Tap **[Enter]** can check the details of the diagnostic report, and tap the back button on the upper/lower left to return to the previous menu.
- Deleting reports: Firstly, tap the delete button  in the upper right corner. Secondly, select the desired report and tap the delete button again. Finally, tap **[Ok]** in the popup box to confirm your operation and complete the procedure.

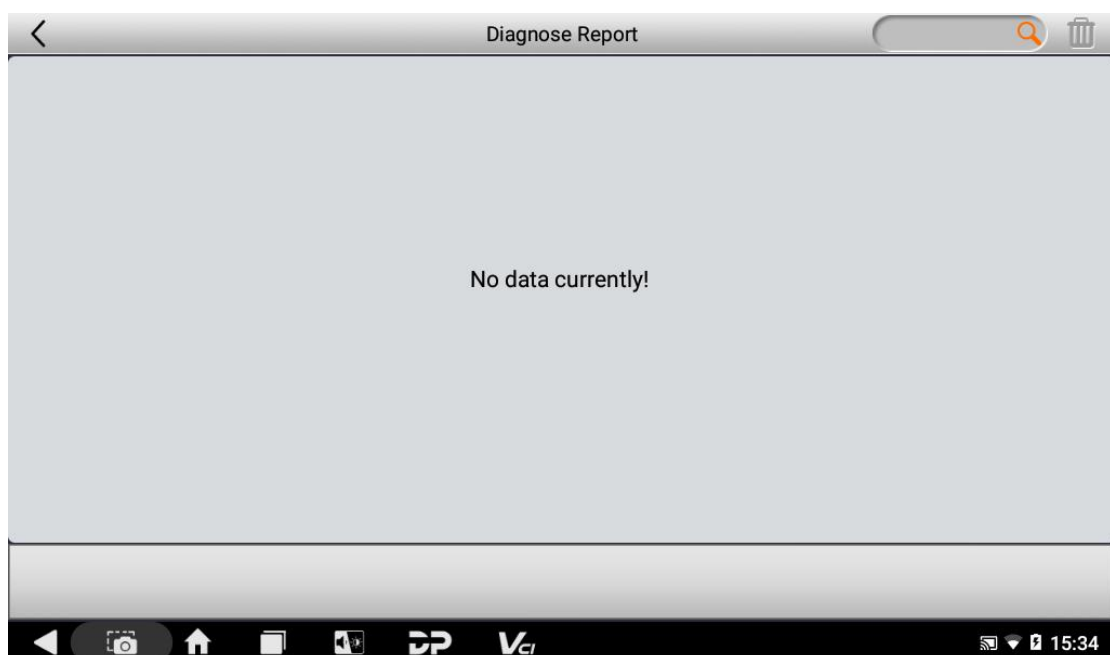


7.5 Picture Viewer

- Tap **[Picture Viewer]** in the main page of the Data Management. (Below is an effect image of the main page of the Picture Viewer).
- This page contains the screenshots took by the user.

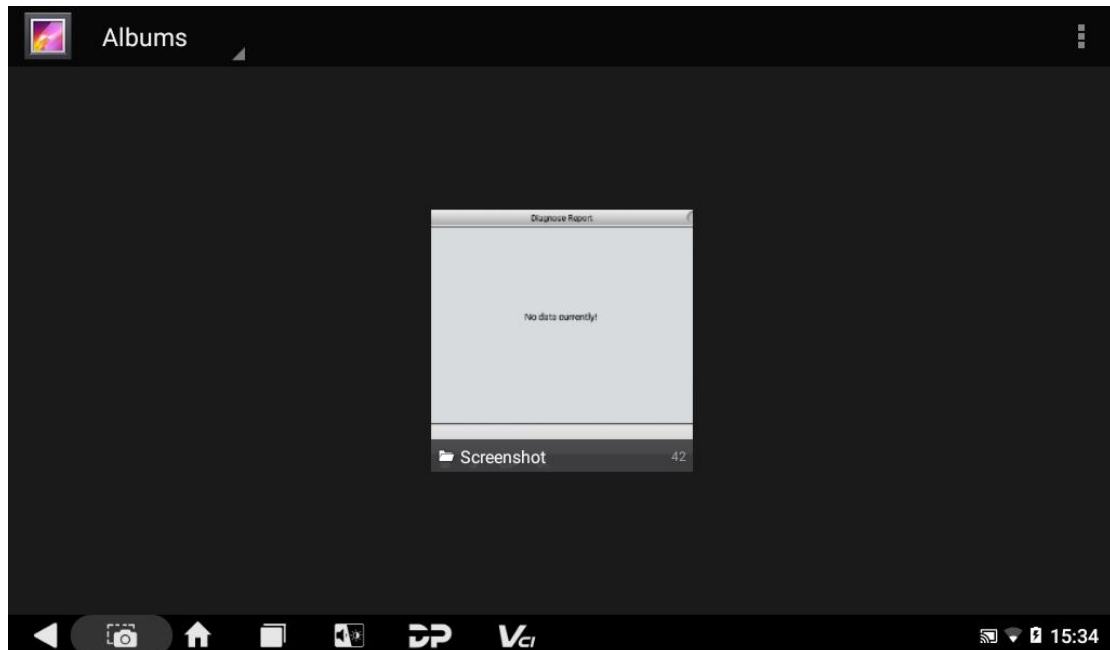


7.6 File Management

Users can manage U disk files, backed-up ECU reprogramming files and other files through this function.

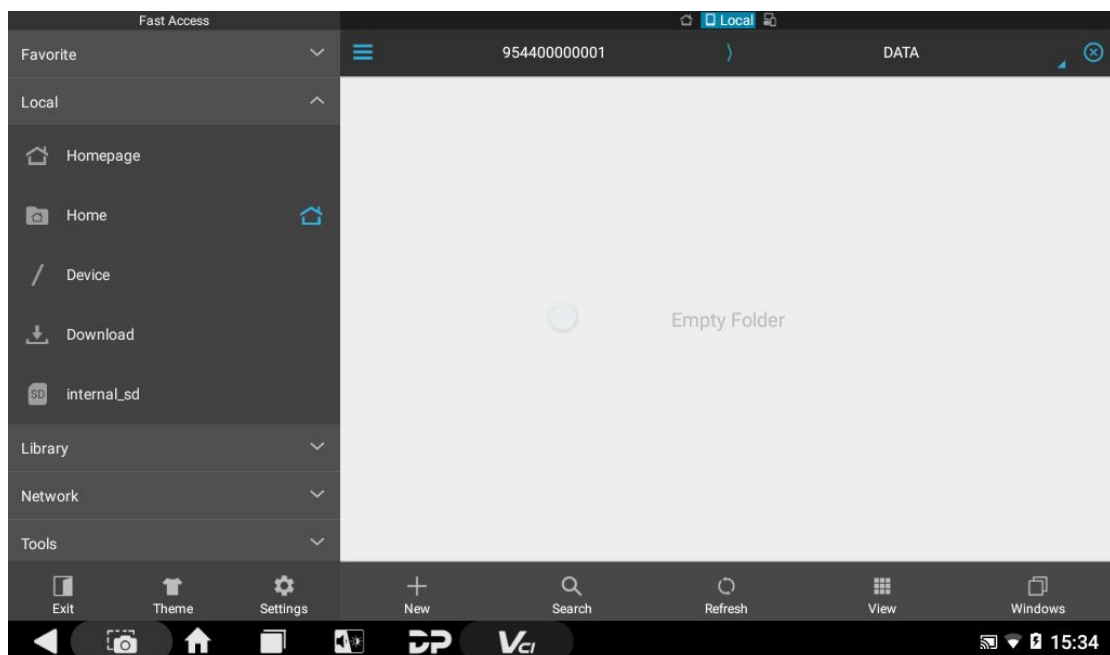


8 Support

The sub-modules of this function module are Manual, FAQ, Log Upload, Team Viewer, Abnormal Feedback, and OBDSTAR APP.

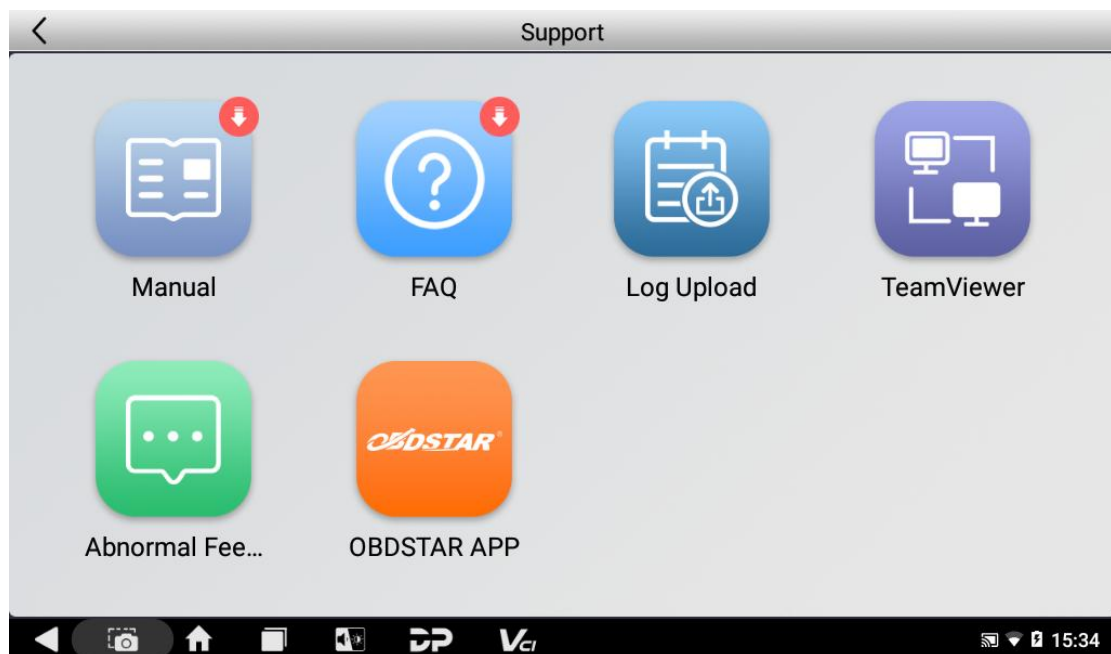


8.1 Manual

For the first time use, the user can see a download prompt after tapping **[Manual]** on the Support main page. Download to view the content.

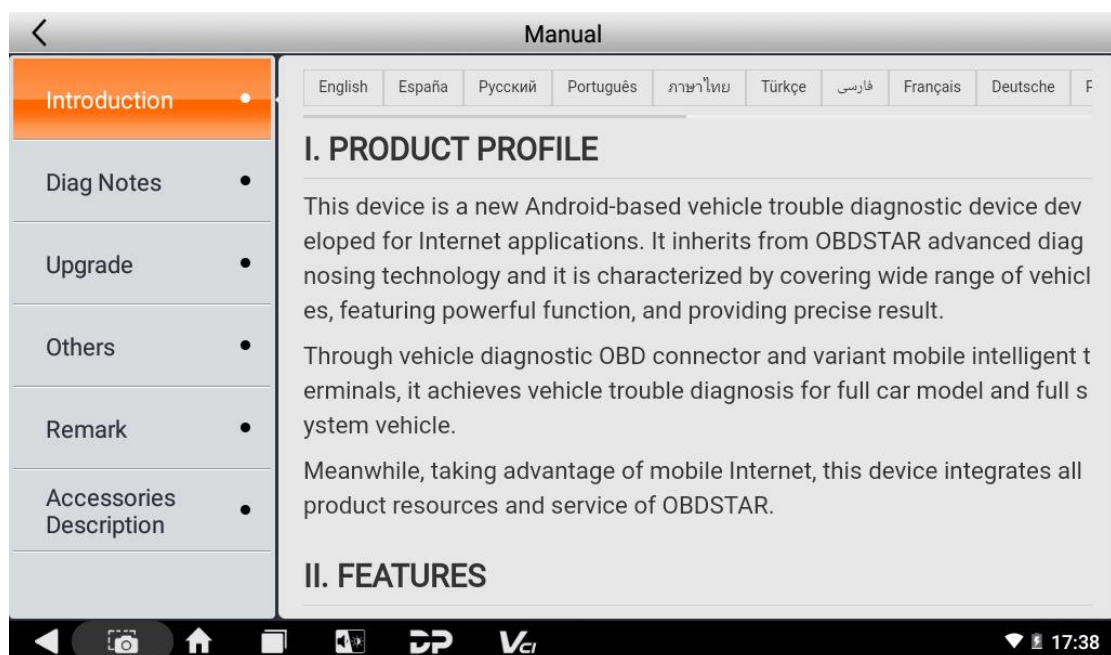


8.2 FAQ

For the first time use, the user can see a download prompt after selecting **[FAQ]** on the Support main page. Download to see the content of FAQ.

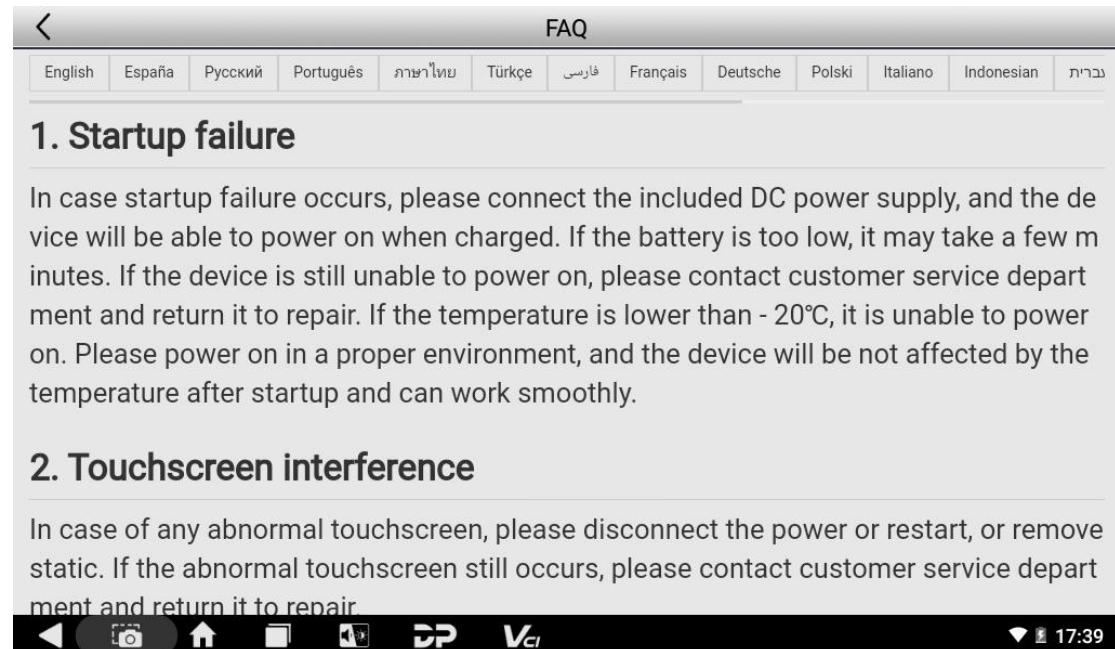


8.3 Log Upload

After selecting the **[Log Upload]** on the Support main page, the user can see the screen shown in the figure below. Tap **[Upload]** to upload your log.

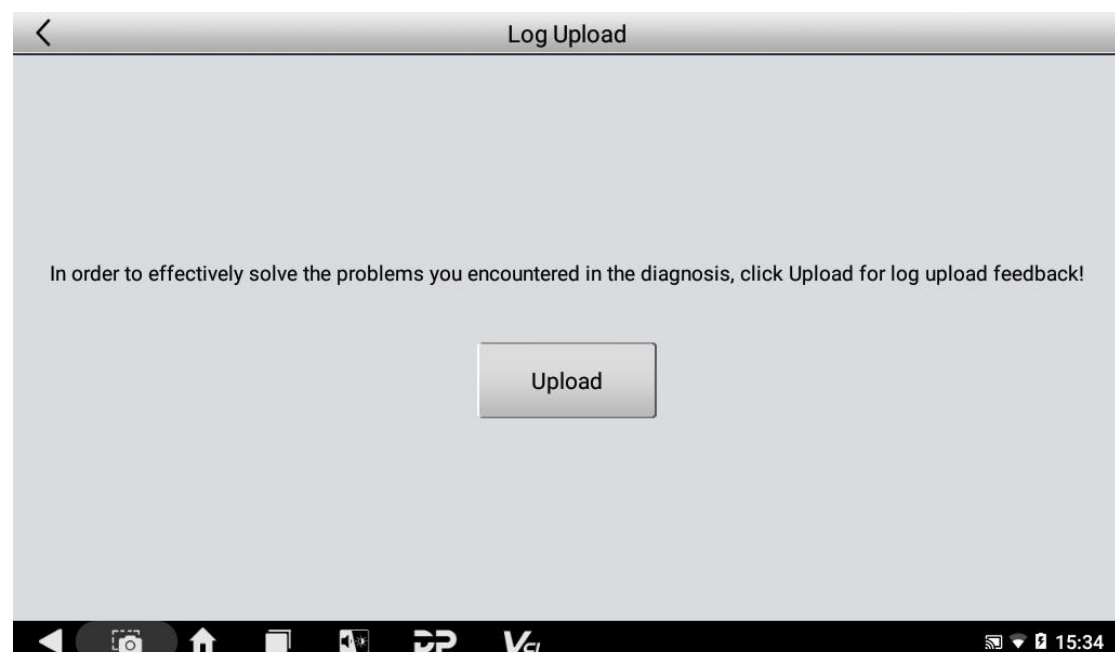


8.4 TeamViewer

For the first time use, the user can see Policy and Agreement page after tapping on **[TeamViewer]** on the Support page.

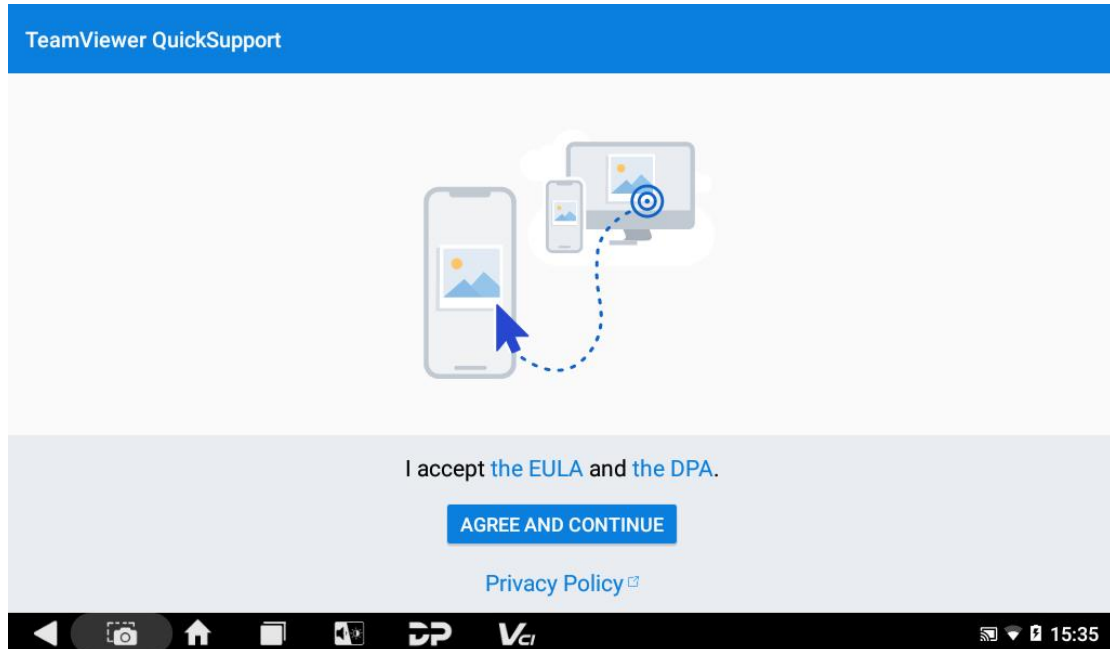

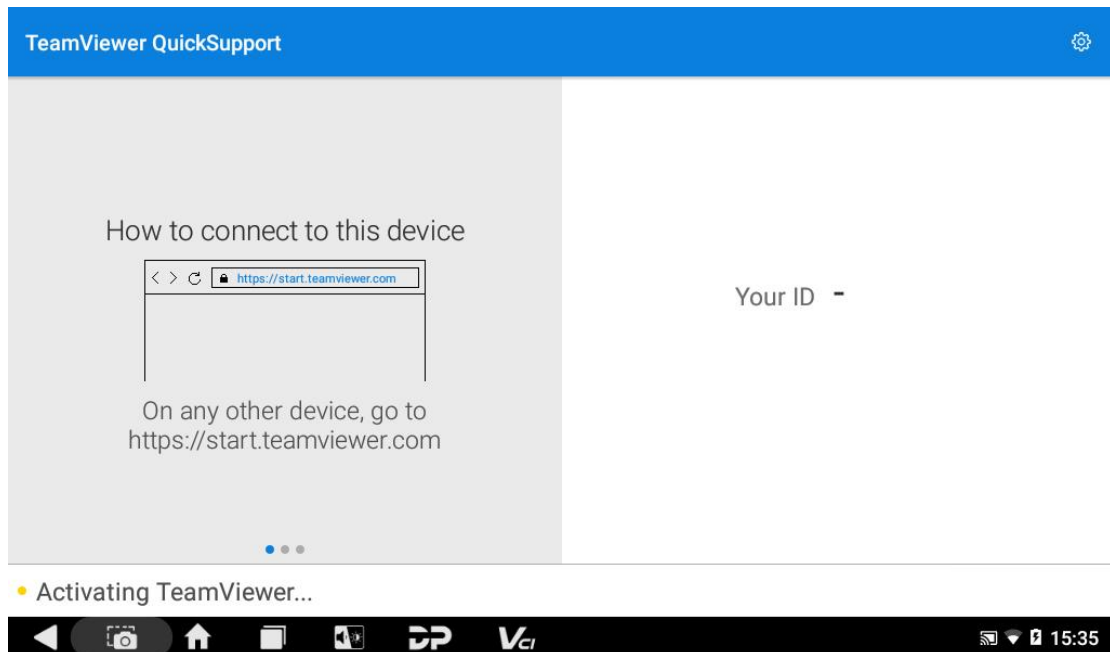


After you fully read the EULA, the DPA and the Privacy Policy, tap the **[AGREE AND CONTINUE]** button, then follow the instructions and you will eventually see a screen showing your ID. Inform the other party of "Your ID", then the other party can apply to connect to this tablet, and the remote assistance can get started after you agree.



8.5 Providing Feedback on Exceptions


After you select **[Abnormal Feedback]** on the Support main page, you can see the page as shown below.

- a) This feedback record is divided into two categories, "Feedback" and "Pending". "Feedback" is the record that the user has uploaded to the server by tapping **[OK]** after completing the data editing, while "Pending" is the record that the user has tapped the **[Save]** button to save locally but has not uploaded.
- b) If there are many records, you can use the search box in the upper right corner to quickly locate them by title (red text) or vehicle name (such as OBDII).
- c) The button  in the upper right corner is used for editing. Tap this button, select the desired record, and then tap button  to complete the deleting operation.
- d) In the main page of "Abnormal Feedback", tap the back button (the one in the upper left corner or the one in the lower left) to return to the previous menu.

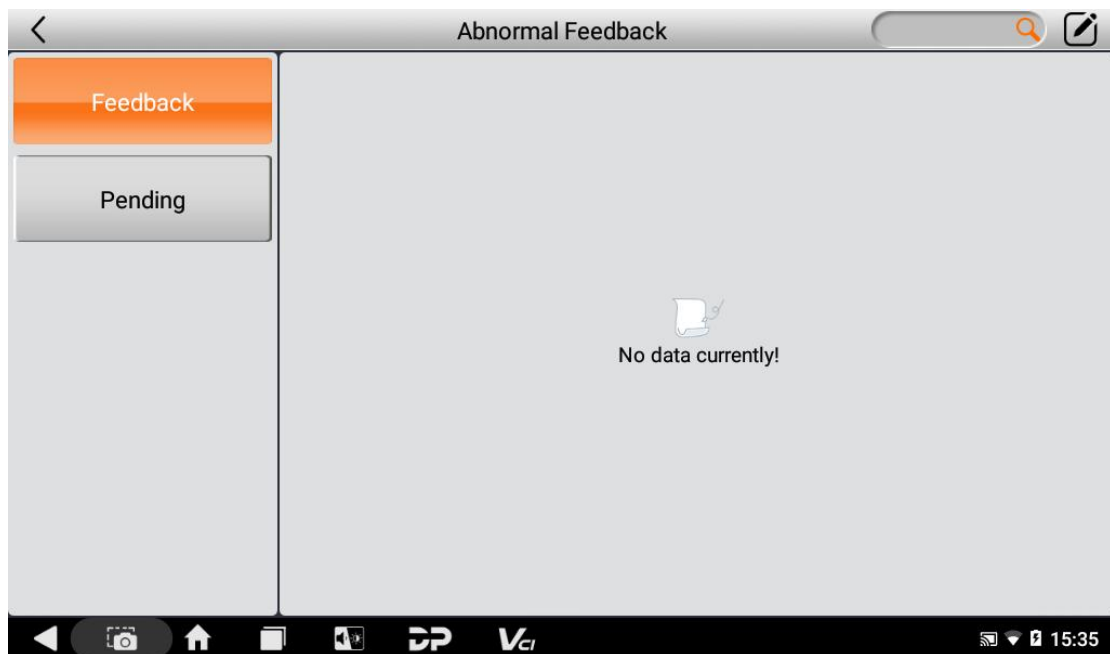

8.6 OBDSTAR APP

After you select **[OBDSTAR APP]**, a QR code will pop up. Scan the QR with your cellphone, then you can download OBDSTAR app to enjoy OBDSTAR's service on your mobile.

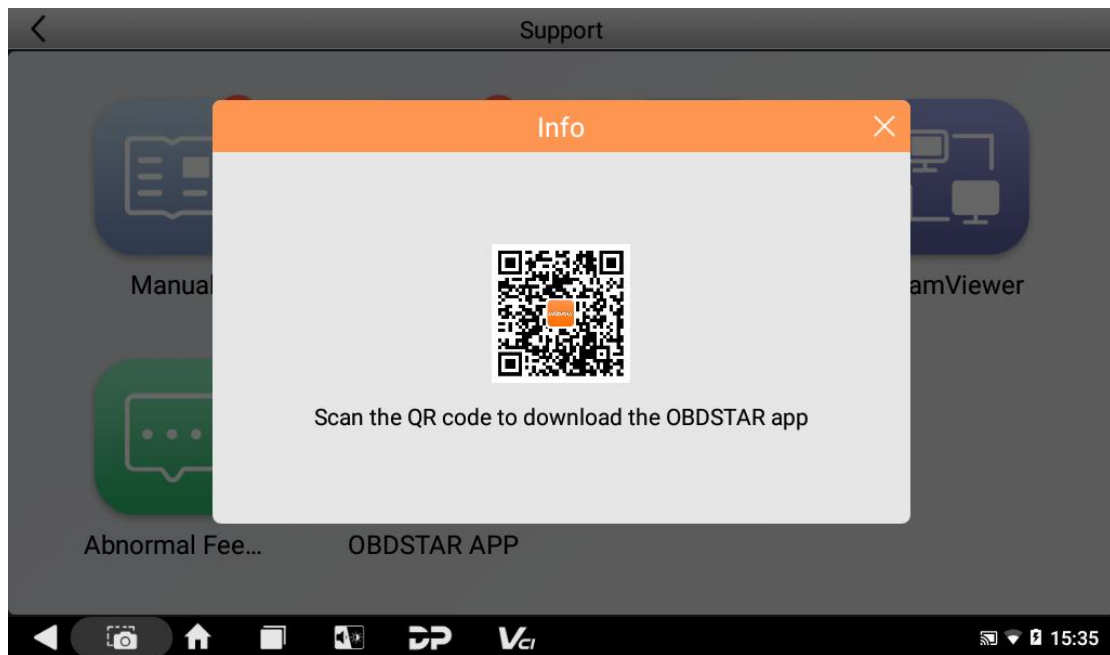

9 Settings


This function module contains VCI Info, Languages, Units, Workshop, Network Test, Clear cache, System Settings, DC Calibrate, and About.

9.1 VCI Info

The user can see the page as shown in the figure below after tapping **[Settings]** on the DP page.


- a) VCI information contains serial number (SN), firmware version, hardware version, software version, and device QR code.
- b) This QR code can be used when binding this device with OBDSTAR APP.

Note: This QR code can only be displayed when the device is connected to the Internet.

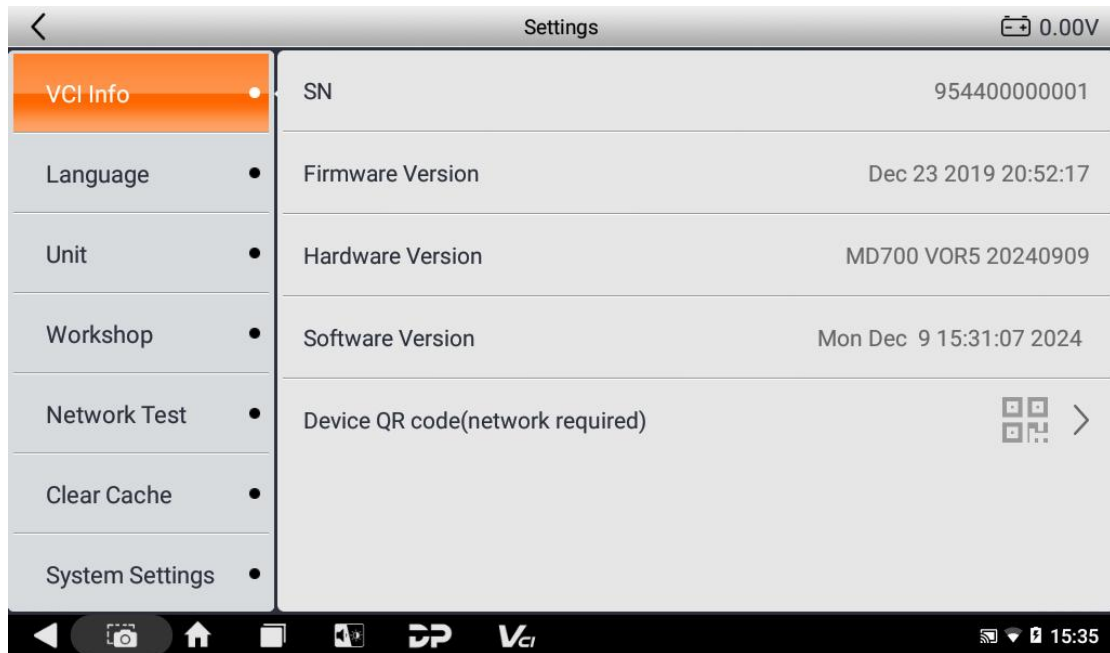

9.2 Languages


After tapping **[Language]** on the Settings page, the user can see all languages supported by the system as shown in the below picture. You can switch system language display via this menu.

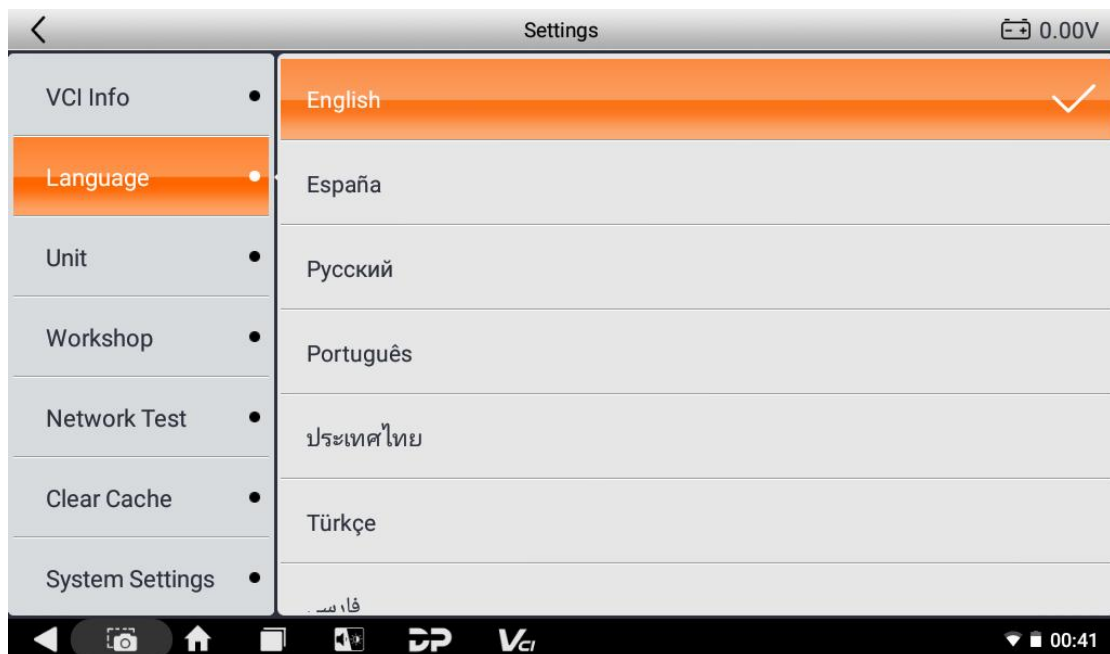

9.3 Units

After tapping **[Unit]** on the Settings page, the user can see the page as illustrated below. You

can select the **[Metric]** or **[English]** units on this page, and the units displayed in all functions will follow your selection.

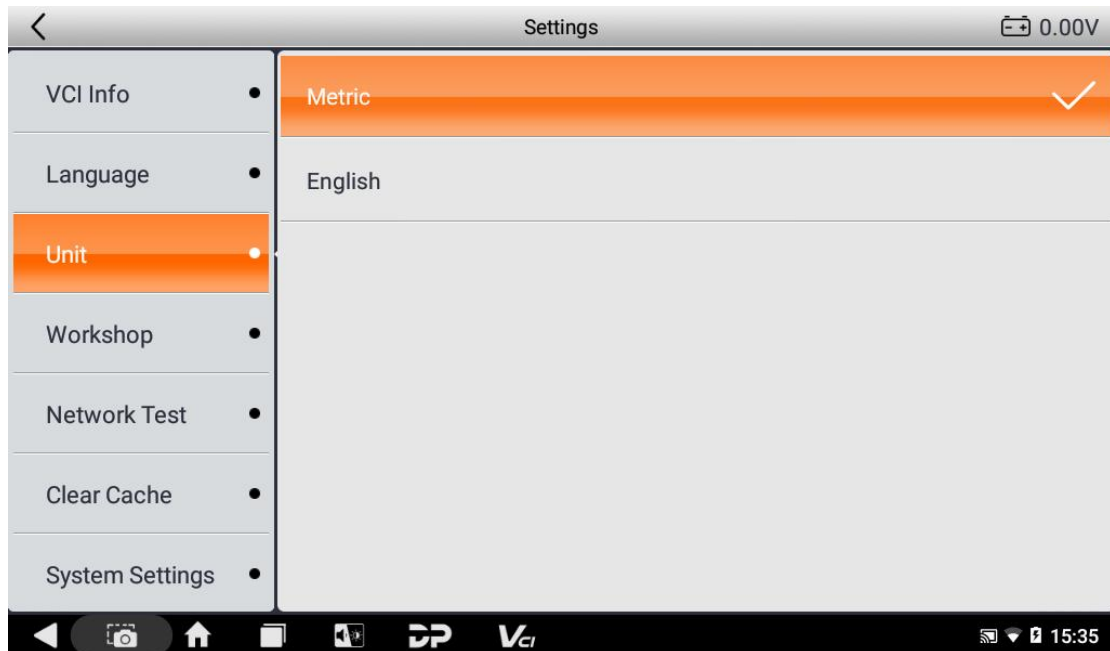


9.4 Workshop

After tapping **[Workshop]** on the Settings menu, you can set the information of your garage.




9.5 Network Testing

Select **[Network Test]** on the Settings page, and confirm the prompt info to start the test.

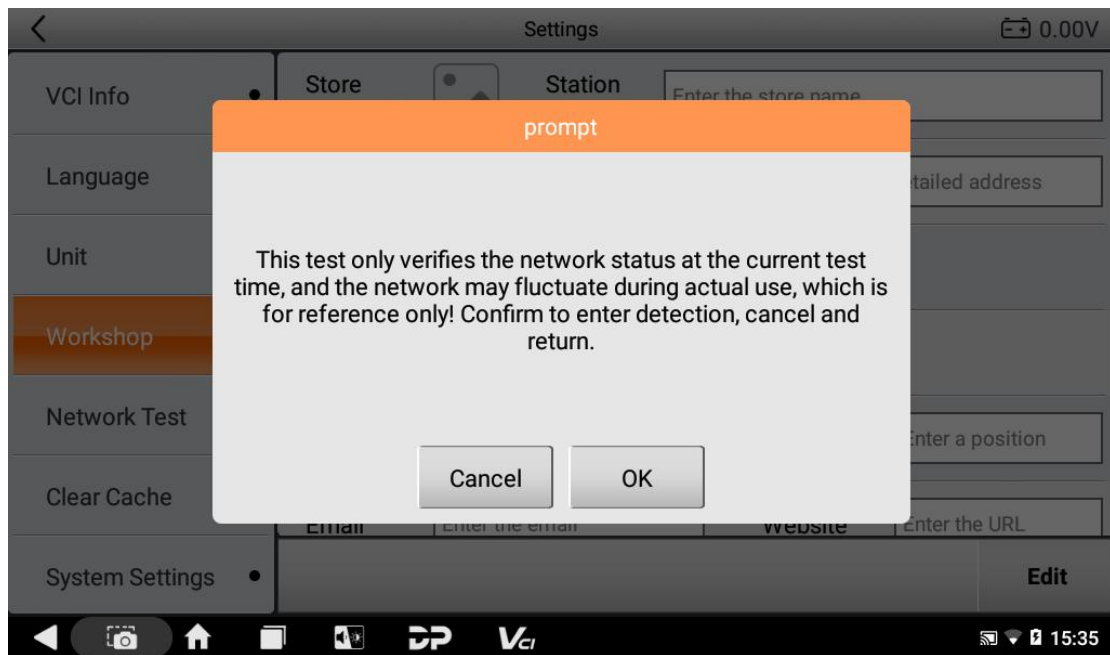


The items to be detected includes network connection status, DNS resolution status, server 1 status, and server 2 status. If the item being tested is normal, you will get below results.

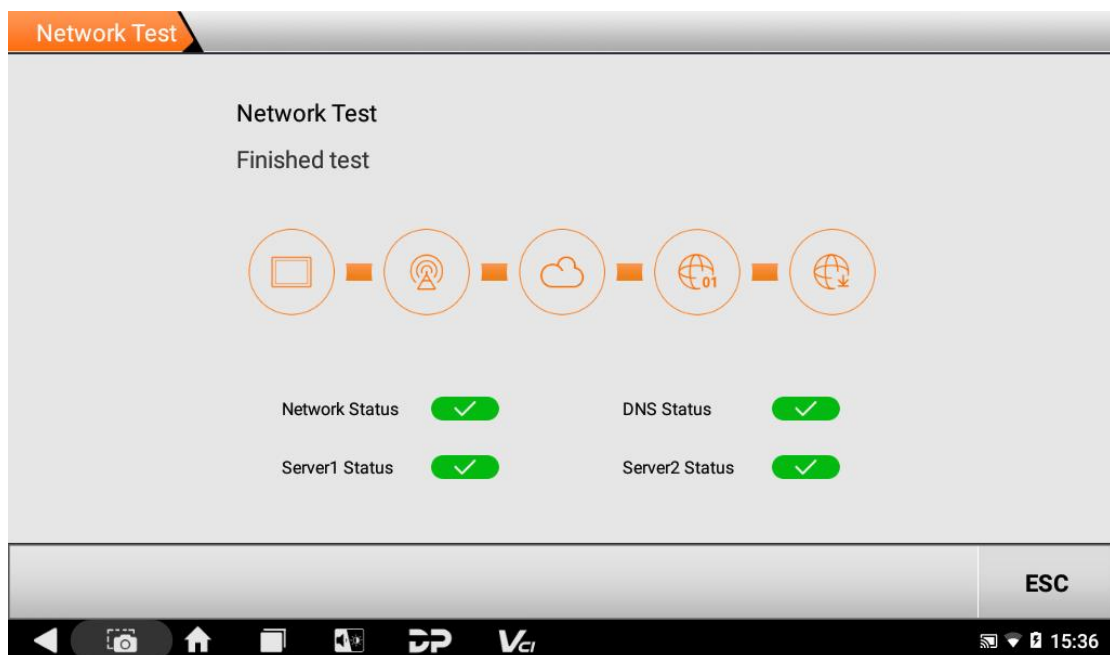


9.6 Clearing Cache

By tapping **[Clear Cache]** on Settings main menu, the user can see the screen as shown in the following picture. When your device is frozen due to insufficient space, you can try tapping **[Clear Cache]** to solve the problem.

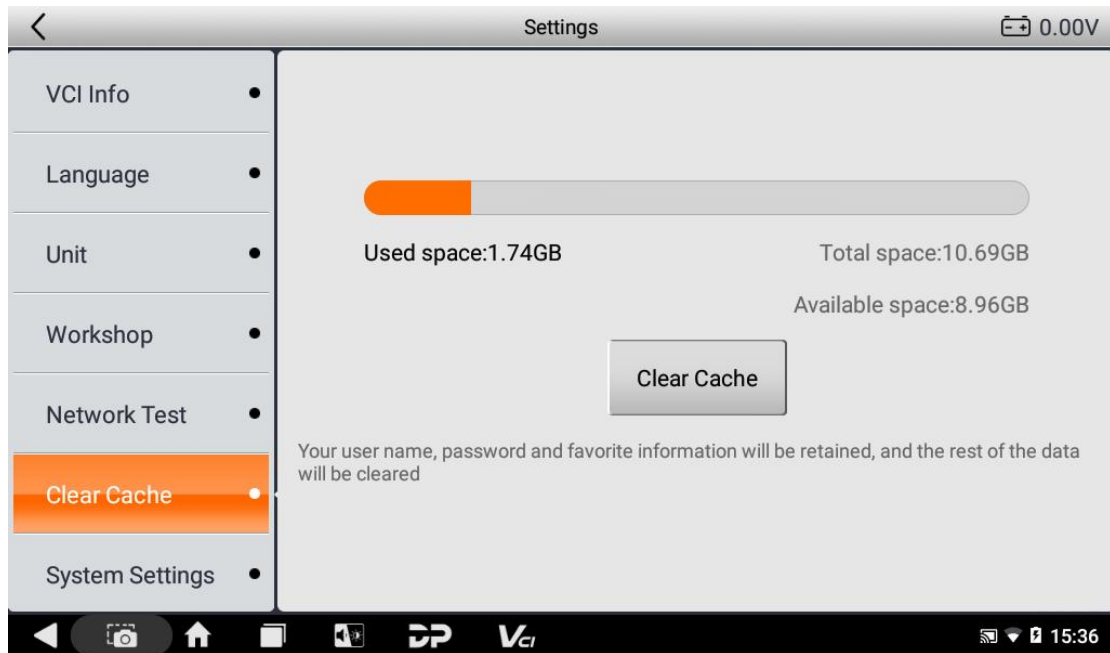


9.7 System Settings

After tapping **[System Settings]** on Settings main page, you can set network connection and other system settings.

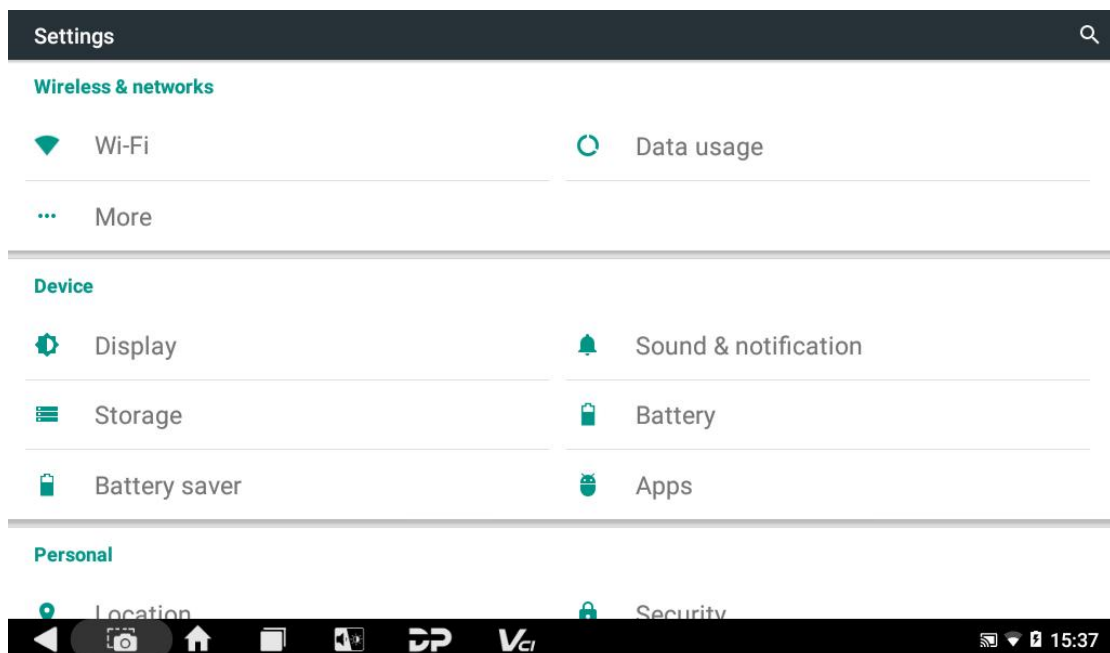


9.8 Voltage Calibration

In cases where there is a significant discrepancy observed during vehicle voltage acquisition, manual calibration is possible in the DC Calibrate tab.

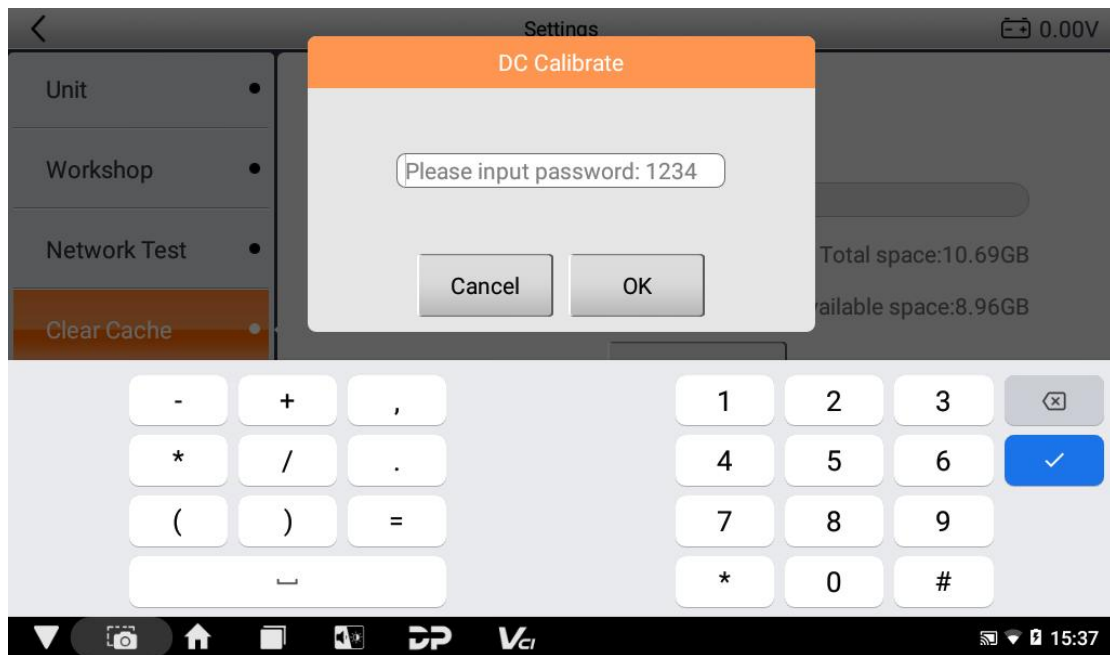

9.9 About

After tapping **[About]** on Settings main page, you can see the ECU information and Disclaimer.

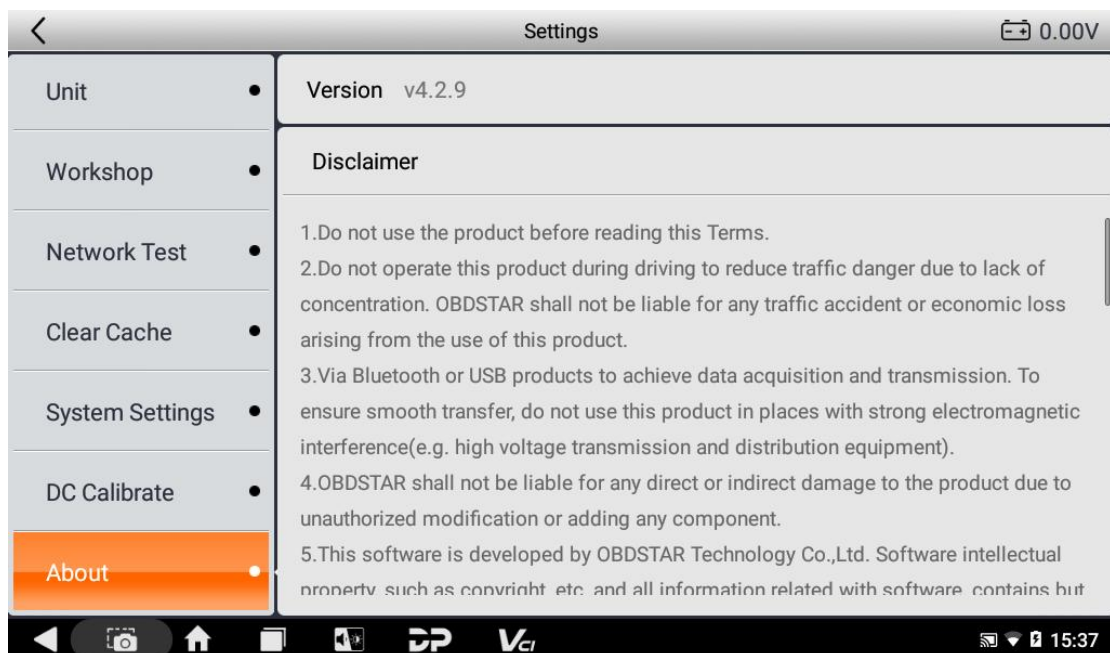

10 Other Apps

10.1 WLAN

You can connect to WLAN (Wireless Local Area Network) to surf the Internet and download software.

10.1.1 Activating WLAN

- a) On the desktop, select **[Settings]** > **[Wi-Fi]**.
- b) Tap the toggle switch. If the switch turns green, it indicates that Wi-Fi is activated.

10.1.2 Connecting to WLAN

The system will automatically detect and show available networks. Select the desired network and input the password, then you can surf the Internet.

10.2 Browser

After connecting to the Internet, you can use the browser.


10.2.1 Opening the Browser

Go to main menu screen, tap the browser. You can choose the desired homepage or input the website address to browse.

10.2.2 Browsing Webpages

- a) After opening the browser, tap the address input field (see below), enter the web address you would like to visit.



Tip: For non-fist-time visits, you can tap  , then you can switch to "BOOKMARKS", "HISTORY" or "SAVED PAGES" according to your needs to directly select sites you have visited before.


- b) Once the page is open, slide your finger on the screen to view the content.

10.2.3 Zooming In/Out

You can zoom in and out of the page in the following ways:


- a) Tap the screen twice quickly to zoom in on the page and twice again to zoom out.
- b) Concentrate two fingers on the area you want to adjust, then spread your fingers apart to zoom in or pinch them together to zoom out.

10.2.4 Saving Your Favorite Webpage to Bookmarks


- a) While browsing a webpage, tap  to save the current page to bookmarks.
- b) Edit a label for the bookmark (you can keep the default label).
- c) Tap **[OK]** to save your bookmark.

10.2.5 Creating New Pages

The browser allows you to open multiple web pages and you can toggle between these pages.

- a) While browsing a webpage, tap  to create a new tab.
- b) You can visit another website in the new tab.

10.2.6 Customizing Browser Settings

Open the browser, tap on , select **[Settings]** from the menu, and then you can check or modify your browser settings, which contains General, Privacy & security, Accessibility, Advanced, Bandwidth management, and Labs.

10.3 Calculator

You can use the calculator to perform basic algorithms for addition, subtraction, multiplication, and division, as well as functional algorithms such as sin, cos, tan, ln, and log.

10.4 Gallery

The Gallery application automatically searches for photos and videos stored on the SD card





and categorizes them in the corresponding data folders.

Tap the gallery icon on the desktop, select an album, and then tap the screen again to enter full screen. Swipe right to view the previous photo and left to view the next.

10.5 Clock







Expand the hidden menu at the bottom of the desktop, tap the clock icon. Its functions include: alarm, clock, timer, stop watch, settings, etc.

10.5.1 Alarm

- a) Select  ALARM in the main menu of the Clock.
- b) Select  to add an alarm.
- c) Set the alarm time in the popup window. Then, tap **[OK]** to save the set time.
- d) In the corresponding time column, check Repeat and select days. All is selected by default. Days to repeat the alarm will be circled in white, whereas days when the alarm is ignored will appear with the original blue background. In addition, you can set a ringtone and a label for the alarm in question, or just delete the set alarm. Tap  to hide details and save your alarm. The bar button after each alarm time indicates the status of the alarm, with red for active and white for inactive.
- e) Tap the arrow button after the time to be deleted to expand the hidden information, then tap  to delete.






Tip: After deleting a set time, you can undo the deletion by selecting the **[Undo]** option on the right in the pop-up menu.

10.5.2 Timer


- a) Select  TIMER in the main menu of the Clock.
- b) Use the numeric keypad on the right to input the time (e.g., enter 123 for a timer of 1 minute and 23 seconds).
- c) Tap  to start the countdown, or tap  to pause.
- d) What's more, you can select  to add a new timer, or select  to reset the current timer or select  to delete it.

Tip: An alarm will go off when the time is up.

10.5.3 Stopwatch

- a) Select  STOPWATCH in the main menu of the Clock.
- b) Tap  to start the count, or tap  to pause.
- c) Tap the  button. The right side of the screen will record the second-round stopwatch timing, and each subsequent tap on this button will start a new round of timing (third round, fourth round, etc.), continuing in this manner. Meanwhile, the left side will continue to count from the moment the start button was tapped.
- d) Tapping  can reset the stopwatch.

10.5.4 Custom Settings


- a) Select  in the main menu of the Clock, then select **[Settings]** in the dropdown box.
- b) Clock Settings: Allows you to set the time display style (digital or analog), show seconds, use home clock, apply the home time zone, and change the date and time.
- c) Alarm Settings: Allows you to set how long the alarms will go off, set snooze length, set volume and so on.

10.6 ES File Explorer


With this application, you can manage the on-device files and send files to a computer via a U drive.

10.6.1 How to Transfer Files Using a USB Flash Drive


- a) Insert the USB flash drive into the USB port of the device.
- b) Expand the hidden menu at the bottom of the desktop, and open **[ES File Explorer]**. In the left side menu, select **[Local] > [Homepage]**. You can see "internal_sd" and "external_sd" in the middle of the screen.

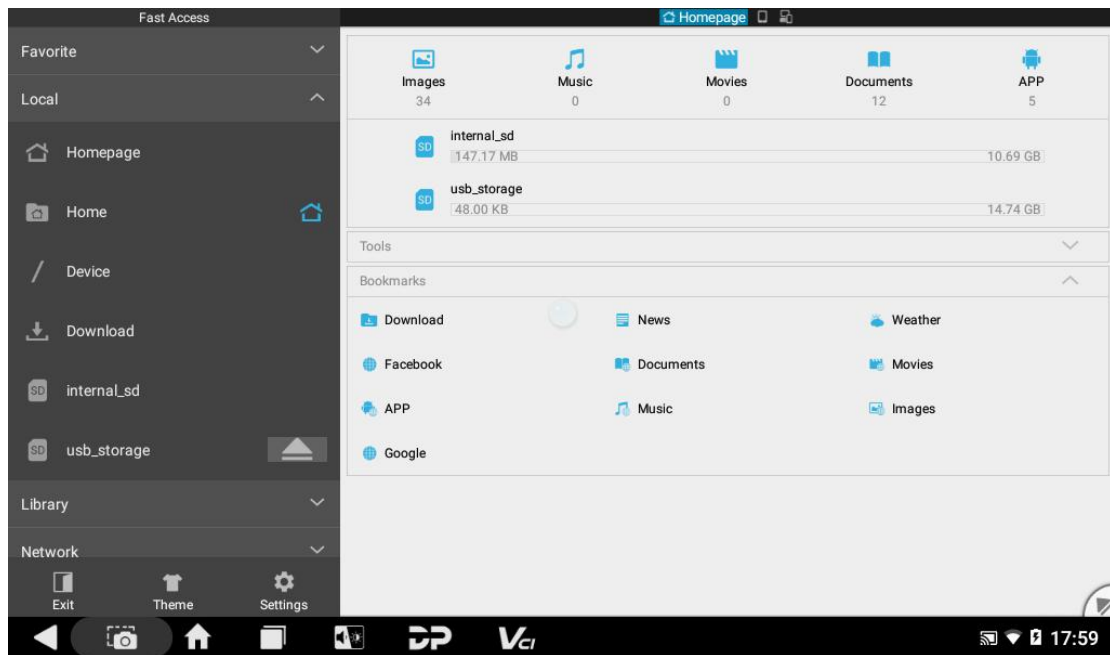

- c) Open **[internal_sd]**, select any folder (or open the folder to select files) and hold. A check box will appear under each folder (or file), and function buttons such as copy, cut, delete and rename will appear at the bottom. Select the folder (or file) you would like to transfer, the box in the lower right corner of the selected folder will be marked with a tick and turn blue, then tap **[Copy]**.

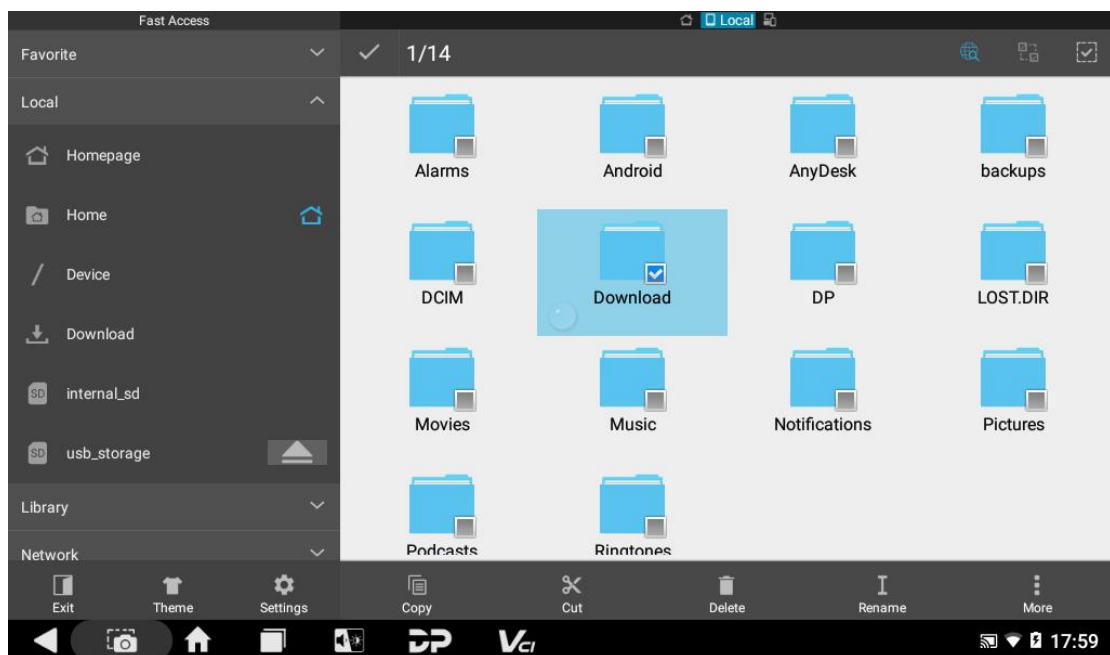

- d) Return to the Homepage tab, and select **[external_sd]**, then all folders in your USB drive will be displayed (See an example below). **[Paste]** the copied folder (or file) to the desired location.

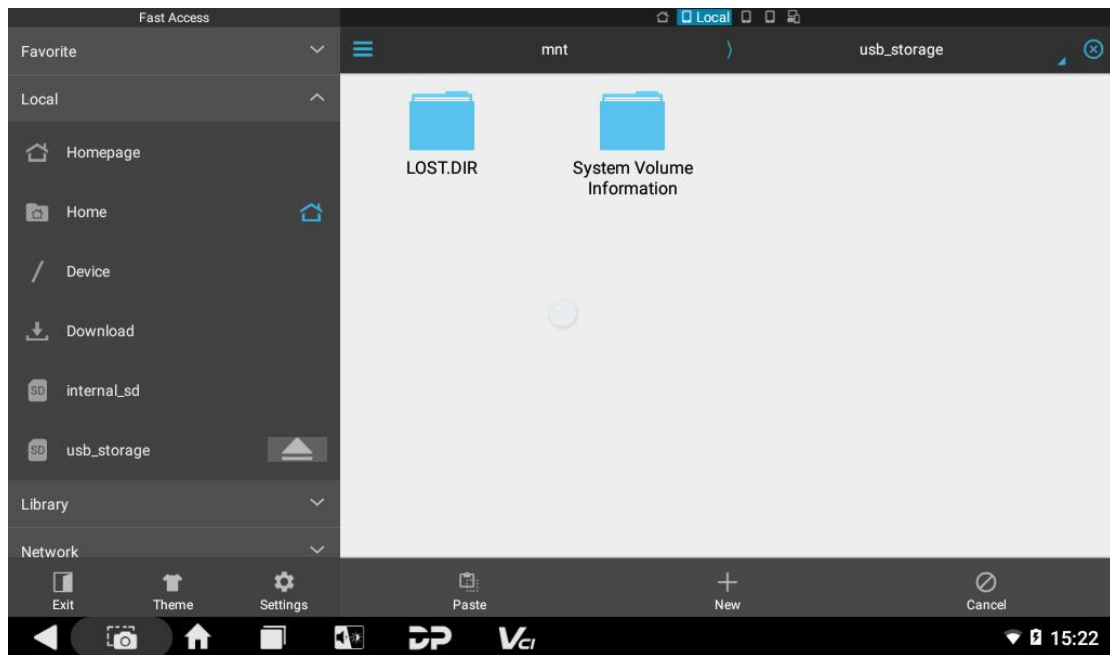

- e) After everything is done, just pull out the USB flash drive.

10.7 OTA (Over-the-Air Technology)

If a new system version is available, your Android system can be updated via the Internet.

Procedure:

- Select the Settings icon on the desktop. Alternatively, slide your finger down to expand the notification shade, then tap the gear icon to open the system settings interface.
- Scroll the settings menu to the bottom, tap **[System updates]**, then tap **[Check for Update]**, and the system will automatically check for version updates.

10.8 Display

10.8.1 Brightness

- Go to the home main menu, tap **[Settings] > [Display] > [Brightness level]**. Alternatively, you can directly tap the volume and brightness shortcut icon located at the bottom of the screen.
- Drag the slider on the brightness bar to the left to decrease screen brightness, or drag it to the right to increase screen brightness.

10.9 Setting a Screen Lock

You can set up a screen lock pattern, which requires you to draw the pattern correctly on the screen in order to unlock your device.



- a) Go to the home main menu, tap **[Settings] > [Security] > [Screen Lock]**.
- b) There are five settings for screen lock: None, Swipe, Pattern, PIN, and Password. If you choose pattern, follow the on-screen instructions step by step to set your screen lock pattern.

10.10 Application Management

10.10.1 Viewing Installed Applications

- a) Go to the home main menu, tap **[Settings] > [Apps]** to open the downloaded application list.

The following operations can be done:

- Tap the desired application to view its information.
 - Tap  and select **[Sort by size]** from the pull-down menu, the applications will be displayed in size order automatically.
 - Tap  and select **[Reset app preferences]** from the pull-down menu, a confirmation dialog box will appear on the screen, tap **[Reset apps]** to proceed or tap **[Cancel]** to abort the operation.
- b) Select an application, you can perform "FORCE STOP", "UNINSTALL", "DISABLE" and other operations.

10.10.2 Viewing the Running Applications

- a) Go to the home main menu, tap **[Settings] > [Apps]**. Scroll the screen from left to right to show the RUNNING tab.
- b) The following operations can be done:
 - View the currently running applications.
 - Select any app to manage it or stop its service.

10.11 Languages & Input Methods

10.11.1 Setting the Language

- a) Go to the home main menu, tap **[Settings]** > **[Languages & input]** > **[Languages]**.
- b) Choose your desired language.

10.11.2 Setting the Input Method

The default setting is to use Gboard multilingual typing.

10.12 Setting the Date & Time

This device is preset to use the network-provided date, time and time zone.

Note: If the setting is to use network-provided time & time zone, you will not be able to set date, time and time zone.

- a) Go to the home main menu, tap **[Settings]** > **[Date & time]**.
- b) Turn off the 'Automatic date & time' setting, and then set the date and time manually. Remember to tap **[OK]** to save your settings.
- c) Switch off "Automatic time zone", then set your time zone manually.
- d) Select or deselect "Use 24-hour format" to switch between 12-hour format and 24-hour format.

10.13 Restoring Factory Settings

Restoring factory settings deletes all data, including downloaded applications, and restores this product to its factory state.

NOTE: Be sure to back up important data on this product before restoring factory settings.

- a) Go to the home main menu, tap **[Settings]** > **[Backup & reset]** > **[Factory data reset]**.
- b) Follow the instructions on the screen to proceed.

10.14 Storage

Go to the home main menu, and tap **[Settings]** > **[Storage]** to check the storage status of the device. Content downloaded in the browser will be saved in the Downloads.

11 Scanner Care

- Keep this device and its accessories dry. Do not use a microwave oven or other external heating equipment to dry it.
- Do not subject the device and its accessories to strong shocks or vibrations, as this can damage the device and its accessories or cause the battery to overheat and potentially explode.
- Do not expose the device or its accessories to excessively high or low temperatures, otherwise it may result in malfunction, fire or explosion of the device, battery and charger. When the temperature is below 0 °C, the battery performance will be limited.
- Do not use potent chemicals, cleaning agents or strong detergent to clean this device or its accessories. Before cleaning and maintenance, please turn off the device and disconnect the charger.
- Do not disassemble the device and its accessories, otherwise the device and the accessories will not be covered by our warranty.
- If the device hits a hard object or the device is subjected to strong external impact and the screen is partially broken, do not touch or try to remove the broken part, and please stop using it immediately and contact the designated service station in time.

12 Usage of the Battery and the Charger

- When charging is complete, disconnect the device and unplug the charger from the power outlet.
- Do not let metal conductors touch both terminals of the battery or its endpoints to prevent short circuits and overheating, which can cause burns and other injuries.
- Do not place the battery or device near heating equipment, such as a microwave oven, oven or radiator.
- If your device is powered by a power adapter, the altitude at which the product is used is determined by the matching adapter. For use of this product in tropical environments, please keep the ambient temperature at 0 °C ~40 °C. If the device is powered by the battery, please use it under the ambient temperature of -10 °C ~ 40 °C. Do not use this device outside the above temperature ranges. Too high or too low a temperature can cause malfunction.

Batteries may explode when overheated.

- Do not disassemble or modify the battery to prevent the battery from leaking, overheating, igniting or bursting.
- If the battery leaks, do not expose your skin or eyes to the leaked liquid; if the leakage gets on your skin or in your eyes, rinse immediately with clean water and go to a hospital.
- If the charger's cable is damaged, please stop using it to avoid electric shock or fire.
- Do not throw the battery into a fire, as this can cause it to catch fire or explode.

- Please observe local ordinances regarding the disposal of your device, batteries and accessories, and support recycling initiatives. Do not dispose of these items as ordinary household waste.

13 Order Notification

Replaceable parts and optional accessories can be ordered directly from the Company's authorized distributors. Please specify the following when ordering:

- Order quantity
- Serial number
- Part name

14 Customer Service Center

If you encounter any problem during the operation, please contact us on Whatsapp at: +852 5419 5864.

When the device needs repair, please send it, together with the purchase invoice and problem descriptions, to OBDSTAR Technology Co., Ltd.. If the device is covered under warranty, the Company will provide free maintenance; if the device is outside the scope of the warranty, the Company will charge for repairs and return shipping.

OBDSTAR Technology Co., Ltd. After-Sales Service Address:

Floor 2, Block B3, Junfeng Industrial Park, Chongqing Road, Peace Community, Fuhai Subdistrict, Bao'an District, Shenzhen, 51800, China

15 Warranty

One-Year Limited Warranty

Shenzhen OBDSTAR Technology Co., Ltd. (hereinafter referred to as "OBDSTAR") promises to the original retail buyer of this product that within one year from the date of delivery, if, under normal use, this product or any part thereof proves to be defective in material or workmanship resulting in device failure, the Company will, upon proof of purchase, repair or replace the product at no charge to you, depending on the circumstances, either with a new product or a modified part.

OBDSTAR shall not be liable for incidental or consequential damage caused by misuse, improper operation or improper installation of the device. Some countries or states do not allow limitations on the duration of implied warranties, so the above limitations may not apply to you.

The following are not warranted under this limited warranty under any circumstances:

1. Any product damaged due to abnormal use or unusual conditions, accidents, mishandling, human negligence, unauthorized alterations, improper use, improper installation or maintenance, or improper storage.
2. Products whose mechanical or electronic serial numbers have been removed, altered or damaged.
3. Damage caused by exposure to high temperatures or extreme environmental conditions.
4. Damage caused by connecting to or using accessories or other products not approved or authorized by the Company.
5. Defects in the appearance of the product, ornaments, or decorative or structural items such as frames and non-operating parts.
6. Products damaged by external causes such as fire, mud, sand, leaking batteries, blown fuses, theft, or misuse of any power source.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.