



VR All-in-one user manual

The instructions in the picture for reference only, in kind prevail

Please read the instructions first

- Please refer to this manual before using VR to ensure safe and proper use.
- Some languages or content may not be available for certain areas or networks.
- Read and follow all of the VR settings and operating instructions. Before starting the virtual reality experience, Should be adjusted according to the individual circumstances of each user, and use the configuration software (if available) to calibrate the non-compliance of this directive may increase the risk of discomfort.

Matters needing attention

Do not drop the charger or device, or cause a collision.

Do not disassemble, refit or repair the device, any changes or modifications to the device, the manufacturer will not warranty.

Do not allow the conductor connector contact device, such as liquid, dust, metal filings and pencil.

Do not bite or suck devices, children or animals will choke due to swallowing small parts.

Please use the manufacturer approved batteries, chargers, accessories and supplies, will not be responsible for the safety of the user's use of non - original parts or accessories.

A contact conductor may cause short circuit or corrosion at the

Please read the instructions first

connector and cause an explosion, fire, or damage to the device.

If the device is broken or damaged, do not continue to use, broken glass may hurt your hands and face.

When cleaning device, please note the following items

- Please use a clean soft cloth or cotton wipe brush device and its lens.
- Do not use chemicals or cleaning agents. Otherwise, it may cause the casing to fade or corrode.

Special population

If you are pregnant, elderly or suffer from binocular vision abnormalities, mental illness, poor heart condition or other serious diseases, we recommend that you consult a doctor

Please read the instructions first

before using VR .

Children under 13 should not use VR. Children (at least 13 years old) using VR should be supervised by adults. Pay attention to the following symptoms, limit the time of children using VR and make sure that children take rests during using. Pleas avoid prolonged use.

Packing/package



Check the following items in the packing box:

- VR、USB adapter、micro USB cable, headphone, headband, main strap and User' s Manual.
- The provided items and available accessories may vary depending on your region or service provider.
- The provided items are designed for this device only, and may be incompatible with other devices.
- The appearance and specifications are subject to change without notice.
- Use only factory approved accessories; use of unapproved accessories may cause performance problems and failures, which are not covered by the warranty.




- Whether the accessories are available depend on the manufacturer.

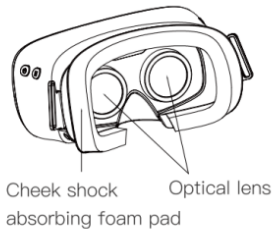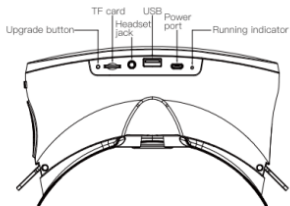

Structure Diagram

Getting Started



Function buttons

| Button | Function |
|---|--|
|  Power button | <ul style="list-style-type: none">• Press and hold for three seconds to turn on the device• In display interface, press it to enter sleeping state, and press it again to wake up• Press and hold for three seconds to turn off the device |
|  Nibiru | <ul style="list-style-type: none">• Call out system menu• Call out brightness adjustment• Call out application close |
|  Back | <ul style="list-style-type: none">• Press to return to previous page |


| Button | Function |
|--|---|
|  <p data-bbox="236 360 401 461">The direction/ OK key</p> | <ul data-bbox="440 344 951 474" style="list-style-type: none">• Touch / light to confirm the middle area• Slide / gently press up and down key |
|  <p data-bbox="236 554 353 619">Volume control</p> | <ul data-bbox="440 574 958 598" style="list-style-type: none">• Light according to adjust the volume. |

Wearing VR

- When you are wearing glasses, do not wear VR. Doing so may lead to facial injuries. If you need vision correction lenses, it is recommended that you wear contact lenses when using VR.
- Keep the lens clean and prevent scratches. If the lens is dirty or fogged, clean with lens cleaning cloth.
- If your face sweats when you are wearing VR, foam pad may become dirty or degrade. When wearing VR, please make sure that your face is clean and dry.


Getting Started

1. Place the main strap properly with the ring at the top. Then, pass both end of the main strap through the ring in VR and fix with Velcro firmly.

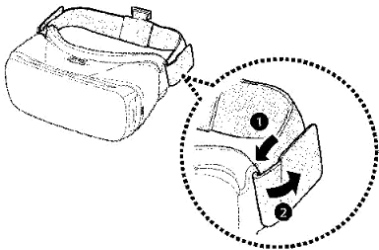


Getting Started

2. Buckle the hook to the top of front frame of VR, and pull up until it is firmly locked.

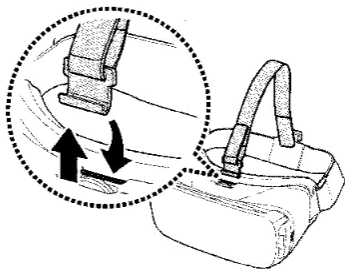

Getting Started


3. Slide the end of the headband through the ring in the main strap, and fix with Velcro firmly.

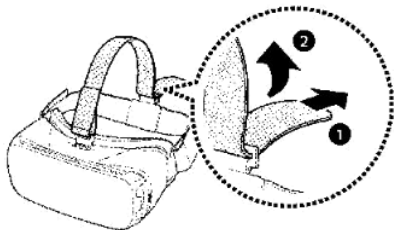

Getting Started

4. Fix VR to your head with strap, and wear it on the face comfortably.

5. Adjust the length of the top headband and the main strap.

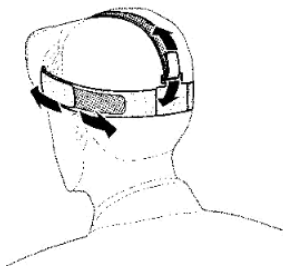

Operating instruction



The touch-pad does not work when not wearing VR.

Operation for confirmation:

Move your head then let the cursor aimed at the menu that you need, next, please click OK.



Moving:


To move to the next item, swipe forward on the touch-pad/ according to the right direction.



To move to the previous item, swipe backwards on the touch-pad/ gently press the left arrow key



To move to the next item, swipe downwards on the touch-pad/gently press the direction key.

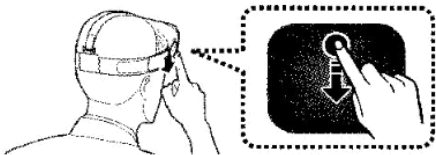

To move to the previous item, swipe upwards on the touch-pad/light on the direction key.






Some applications may not support upward or downward swiping.

Touch-pad, Back button and Nibiru button on Mobile All-in-one are universal

1. Press the Back button on Home page to exit the application; in the secondary page, press the Back button to return to previous page.
2. Press Nibiru button to call out system menu, including brightness adjusting and close button.
3. Some applications and pages may not support page adjustment operation with touch-pad of the Mobile All-in-one.

Playback page and menu page operation mode

1. In Playback page, turn head perspective downwards to show the playback progress bar;
2. The playback page has six function options and the progress bar, i.e. switch pause and playback mode, switch loop mode, adjust brightness and volume, adjust video playback progress, enter menu page, and return to the list page.
3. In Playback page, press the Back button of Mobile All-in-one to return to previous page.

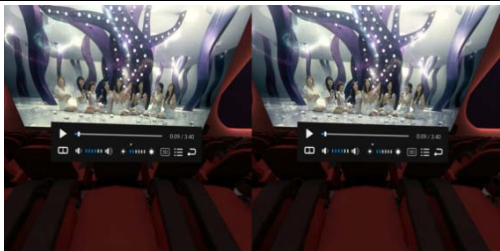


Application:

Install the application:

1. Enter the application market to choose application then download it, the system will automatically install the APK after downloading

2. By PC or TF card, copy APK into the machine. Enter the file manager->APK option->to choose application that you need. System will automatically install it.

Delete the application:

On local page, select the bottom row of the icon “” to be red, then checked the application that need to be uninstalled, click the upper right corner of the "x" on the application, then you can delete the application software.

Set the language:

If you want to change language, please touch setting->common->language, then select the language you want to set.

Simple troubleshooting

1. The image on the screen are moving randomly

Make the machine restart, put the all-in-one lens placed in a flat on the table until entering the system calibration, then it can be picked up.

2. Unable to boot

Please check whether it has run out of power or not.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.