



1. Duty Cycle (all mode Pre-Test, Only the following data is recorded)

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	Ant1	100	0	0
NVNT	n20	5180	Ant1	100	0	0
NVNT	ac20	5180	Ant1	100	0	0


Report

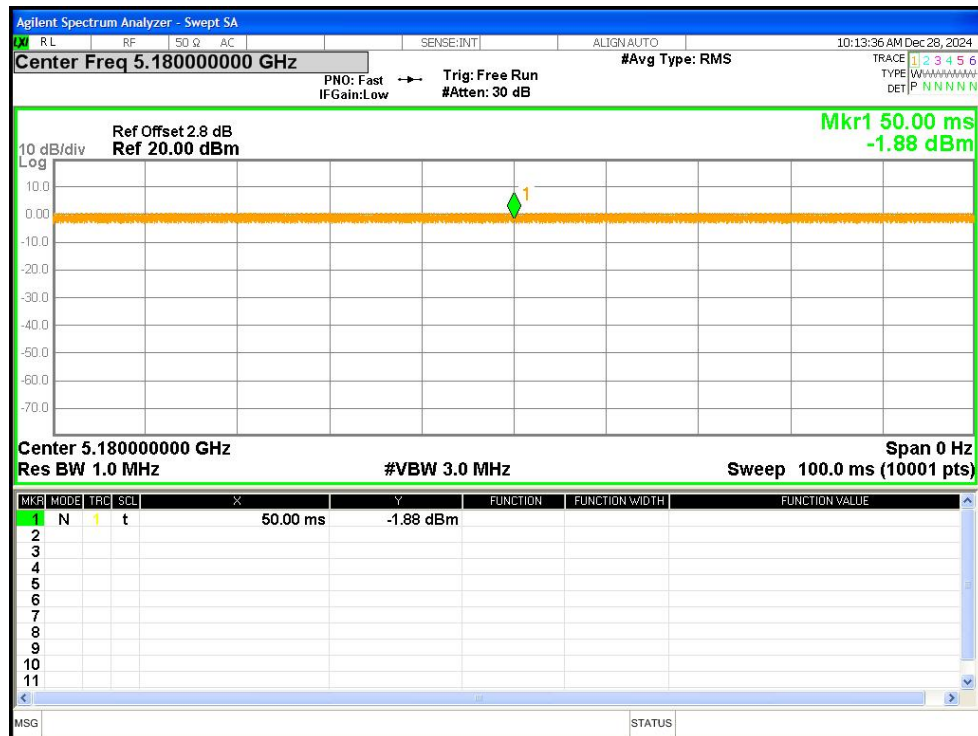

Duty Cycle NVNT a 5180MHz Ant1

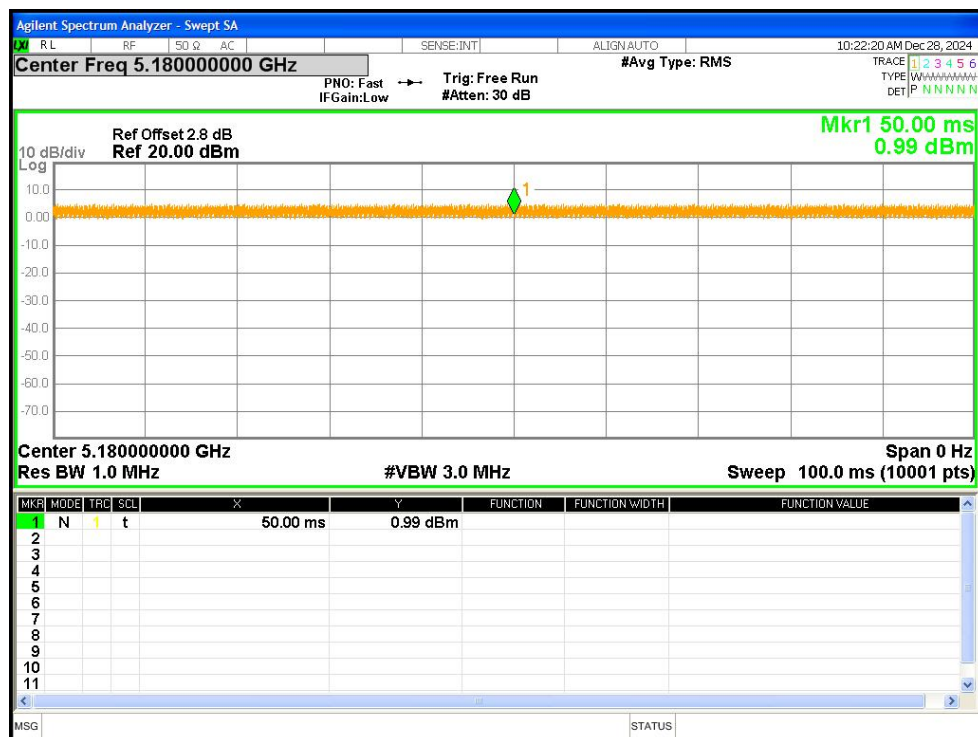

Duty Cycle NVNT n20 5180MHz Ant1

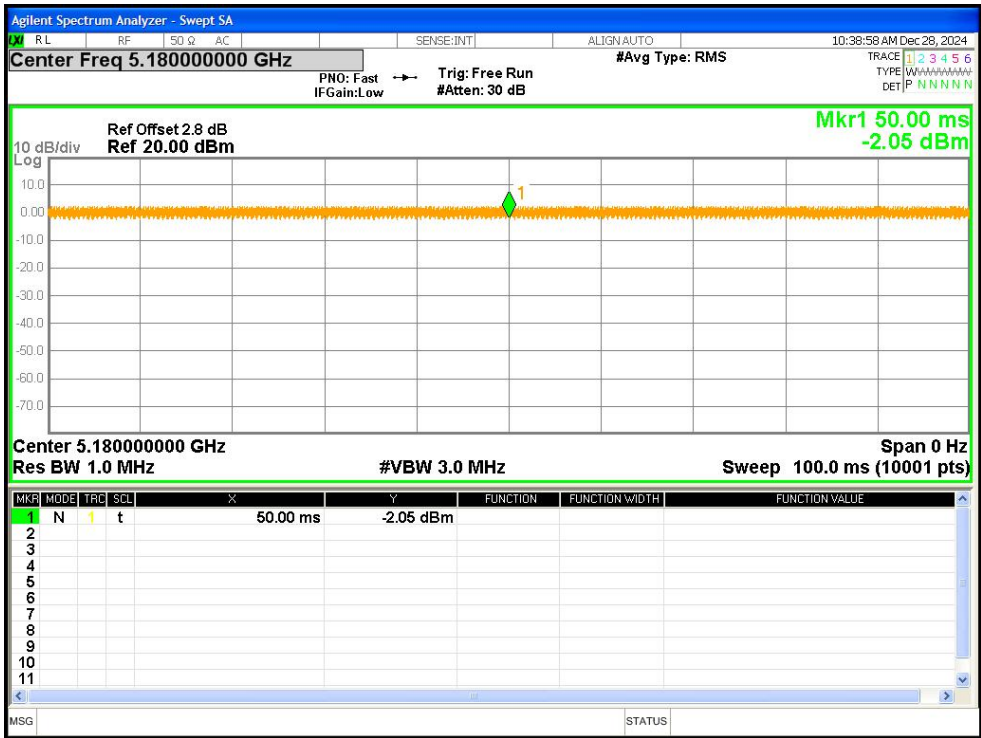

Duty Cycle NVNT ac20 5180MHz Ant1


2. Maximum Conducted Output Power

Condition	Mode	Frequency (MHz)	Antenna	Conducted Power (dBm)	Duty Factor (dB)	Total Power (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	11.95	0	11.95	24	Pass
NVNT	a	5200	Ant1	12.12	0	12.12	24	Pass
NVNT	a	5240	Ant1	12.39	0	12.39	24	Pass
NVNT	a	5260	Ant1	12.48	0	12.48	24	Pass
NVNT	a	5280	Ant1	12.56	0	12.56	24	Pass
NVNT	a	5320	Ant1	12.96	0	12.96	24	Pass
NVNT	a	5500	Ant1	12.54	0	12.54	24	Pass
NVNT	a	5600	Ant1	14.36	0	14.36	24	Pass
NVNT	a	5700	Ant1	15.23	0	15.23	24	Pass
NVNT	a	5745	Ant1	12.99	0	12.99	30	Pass
NVNT	a	5755	Ant1	8.97	0	8.97	30	Pass
NVNT	a	5785	Ant1	13.21	0	13.21	30	Pass
NVNT	a	5825	Ant1	12.51	0	12.51	30	Pass
NVNT	n20	5180	Ant1	11.68	0	11.68	24	Pass
NVNT	n20	5200	Ant1	11.9	0	11.9	24	Pass
NVNT	n20	5240	Ant1	12.22	0	12.22	24	Pass
NVNT	n20	5260	Ant1	11.53	0	11.53	24	Pass
NVNT	n20	5280	Ant1	11.89	0	11.89	24	Pass
NVNT	n20	5320	Ant1	12.2	0	12.2	24	Pass
NVNT	n20	5500	Ant1	12.77	0	12.77	24	Pass
NVNT	n20	5600	Ant1	14.5	0	14.5	24	Pass
NVNT	n20	5700	Ant1	13.55	0	13.55	24	Pass
NVNT	n20	5745	Ant1	12.43	0	12.43	30	Pass
NVNT	n20	5785	Ant1	12.47	0	12.47	30	Pass
NVNT	n20	5825	Ant1	12.49	0	12.49	30	Pass
NVNT	n40	5190	Ant1	12.25	0	12.25	24	Pass
NVNT	n40	5230	Ant1	12.2	0	12.2	24	Pass
NVNT	n40	5270	Ant1	10.69	0	10.69	24	Pass
NVNT	n40	5310	Ant1	10.78	0	10.78	24	Pass
NVNT	n40	5510	Ant1	12.05	0	12.05	24	Pass
NVNT	n40	5590	Ant1	13.31	0	13.31	24	Pass
NVNT	n40	5670	Ant1	13.98	0	13.98	24	Pass
NVNT	n40	5755	Ant1	12.62	0	12.62	30	Pass
NVNT	n40	5795	Ant1	12.72	0	12.72	30	Pass
NVNT	ac20	5180	Ant1	11.93	0	11.93	24	Pass
NVNT	ac20	5200	Ant1	12.02	0	12.02	24	Pass
NVNT	ac20	5240	Ant1	11.81	0	11.81	24	Pass
NVNT	ac20	5260	Ant1	11.29	0	11.29	24	Pass
NVNT	ac20	5280	Ant1	11.11	0	11.11	24	Pass


Report

NVNT	ac20	5320	Ant1	11.85	0	11.85	24	Pass
NVNT	ac20	5500	Ant1	12.3	0	12.3	24	Pass
NVNT	ac20	5600	Ant1	13.72	0	13.72	24	Pass
NVNT	ac20	5700	Ant1	14.57	0	14.57	24	Pass
NVNT	ac20	5745	Ant1	12.65	0	12.65	30	Pass
NVNT	ac20	5785	Ant1	12.46	0	12.46	30	Pass
NVNT	ac20	5825	Ant1	12.8	0	12.8	30	Pass
NVNT	ac40	5190	Ant1	12.03	0	12.03	24	Pass
NVNT	ac40	5230	Ant1	12.17	0	12.17	24	Pass
NVNT	ac40	5270	Ant1	11.8	0	11.8	24	Pass
NVNT	ac40	5310	Ant1	12.56	0	12.56	24	Pass
NVNT	ac40	5510	Ant1	11.27	0	11.27	24	Pass
NVNT	ac40	5590	Ant1	13.51	0	13.51	24	Pass
NVNT	ac40	5670	Ant1	13.1	0	13.1	24	Pass
NVNT	ac40	5755	Ant1	12.79	0	12.79	30	Pass
NVNT	ac40	5795	Ant1	12.9	0	12.9	30	Pass
NVNT	ac80	5210	Ant1	11.91	0	11.91	24	Pass
NVNT	ac80	5290	Ant1	10.31	0	10.31	24	Pass
NVNT	ac80	5530	Ant1	11.83	0	11.83	24	Pass
NVNT	ac80	5610	Ant1	11.56	0	11.56	24	Pass
NVNT	ac80	5775	Ant1	11	0	11	30	Pass

Report

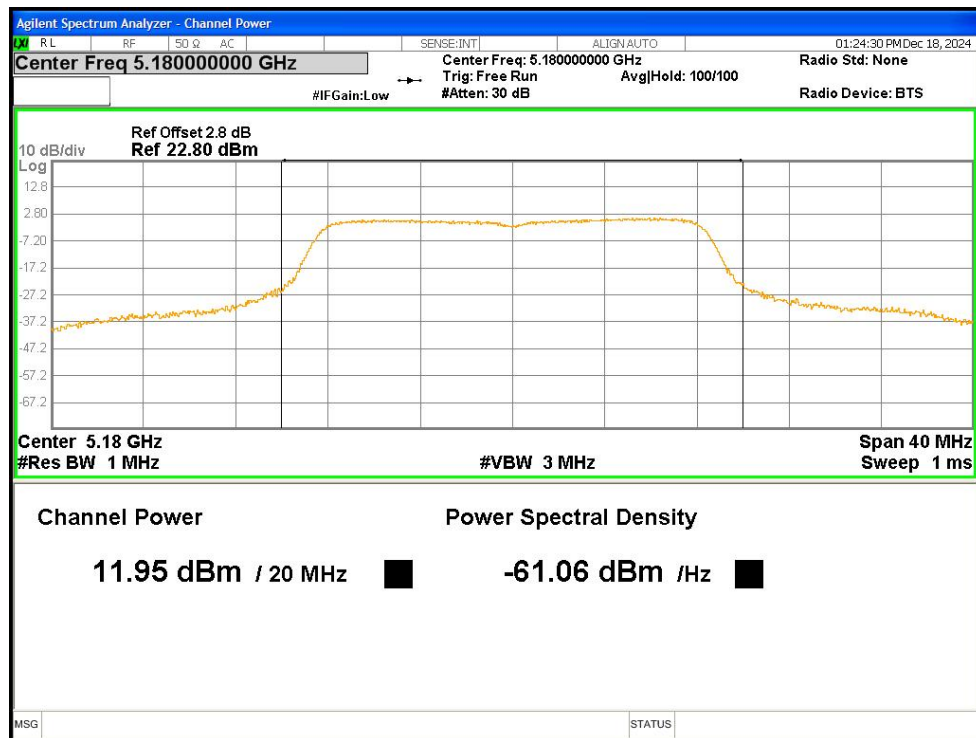


Power NVNT a 5180MHz Ant1

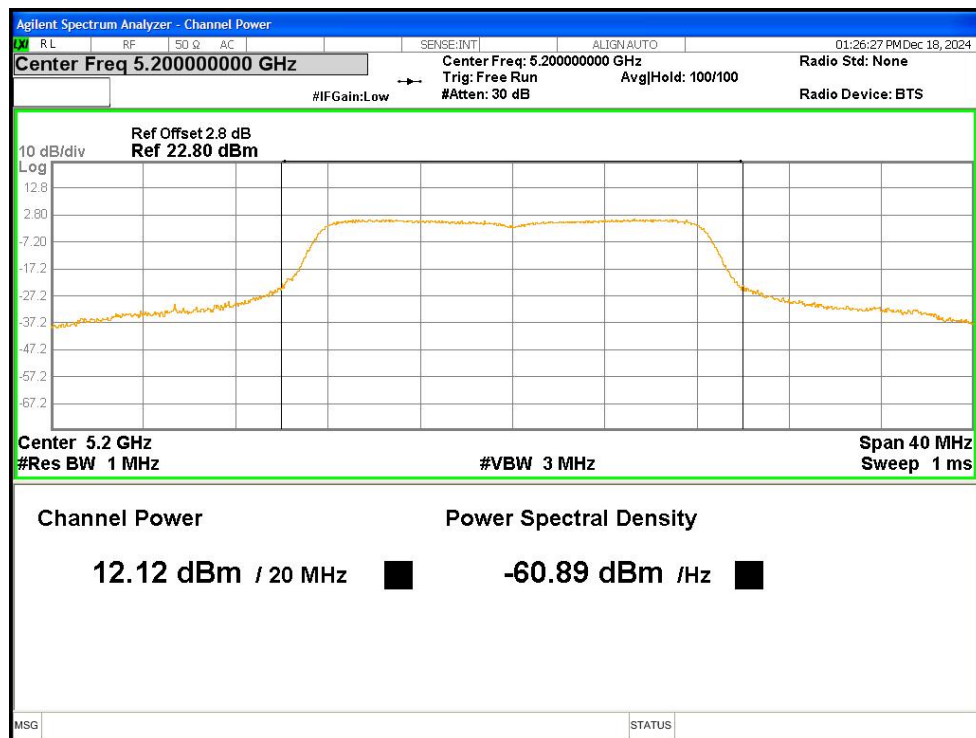


Power NVNT a 5200MHz Ant1

Report

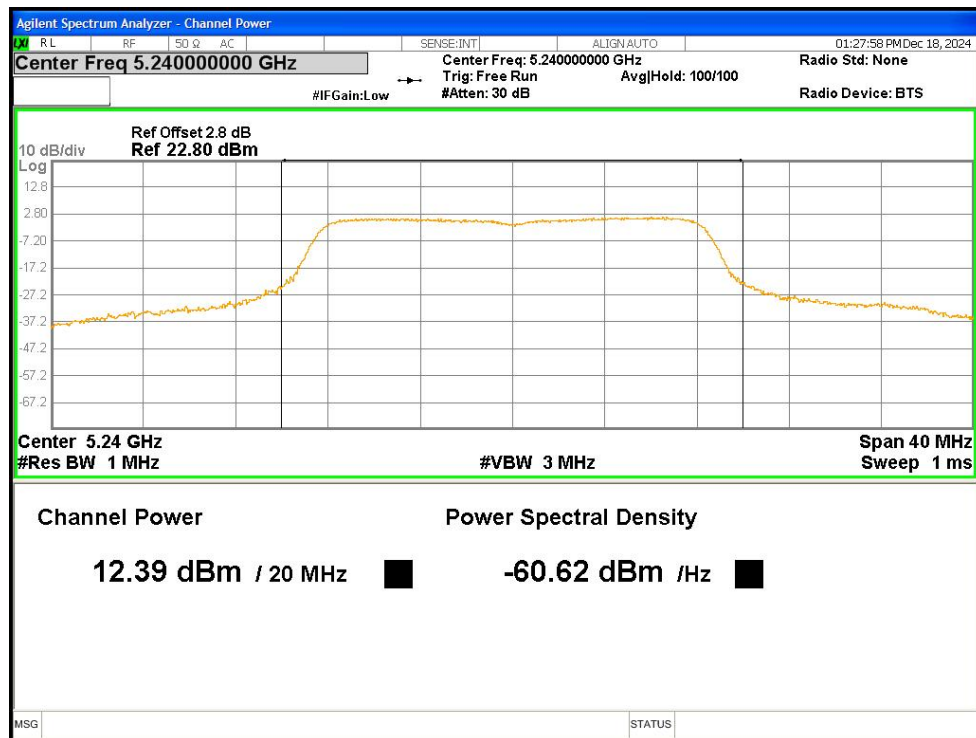


Power NVNT a 5240MHz Ant1

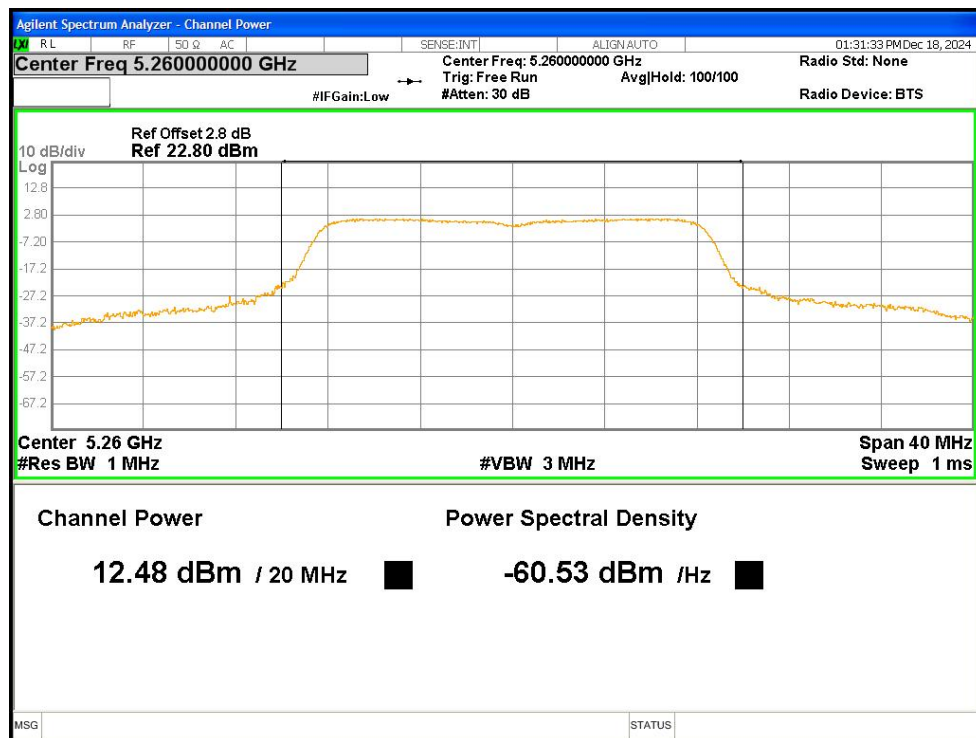


Power NVNT a 5260MHz Ant1

Report

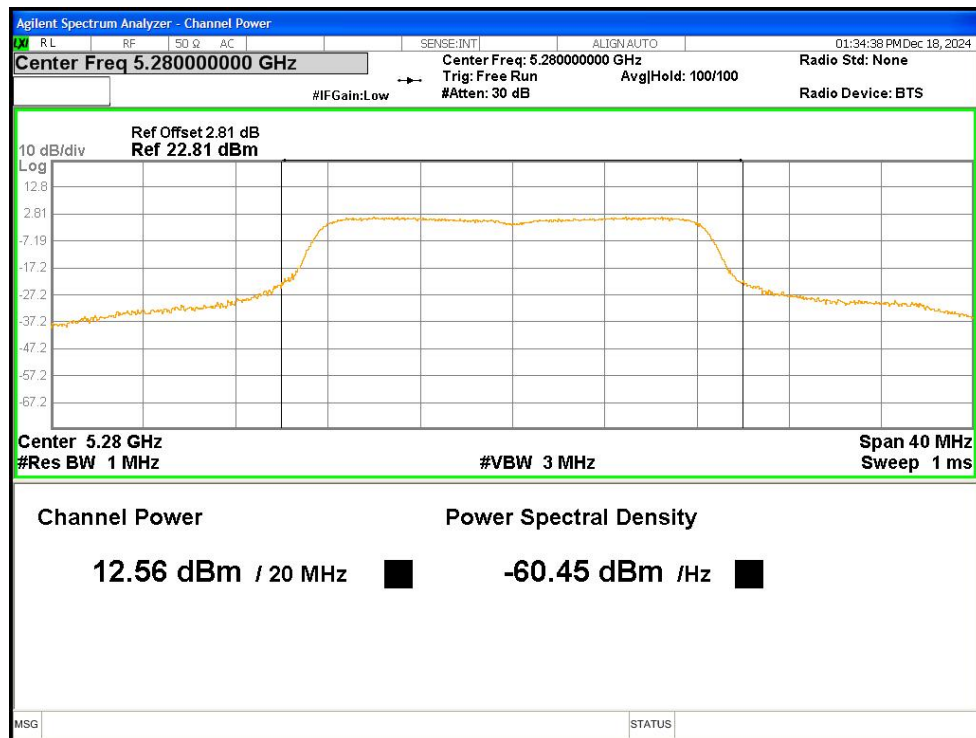


Power NVNT a 5280MHz Ant1

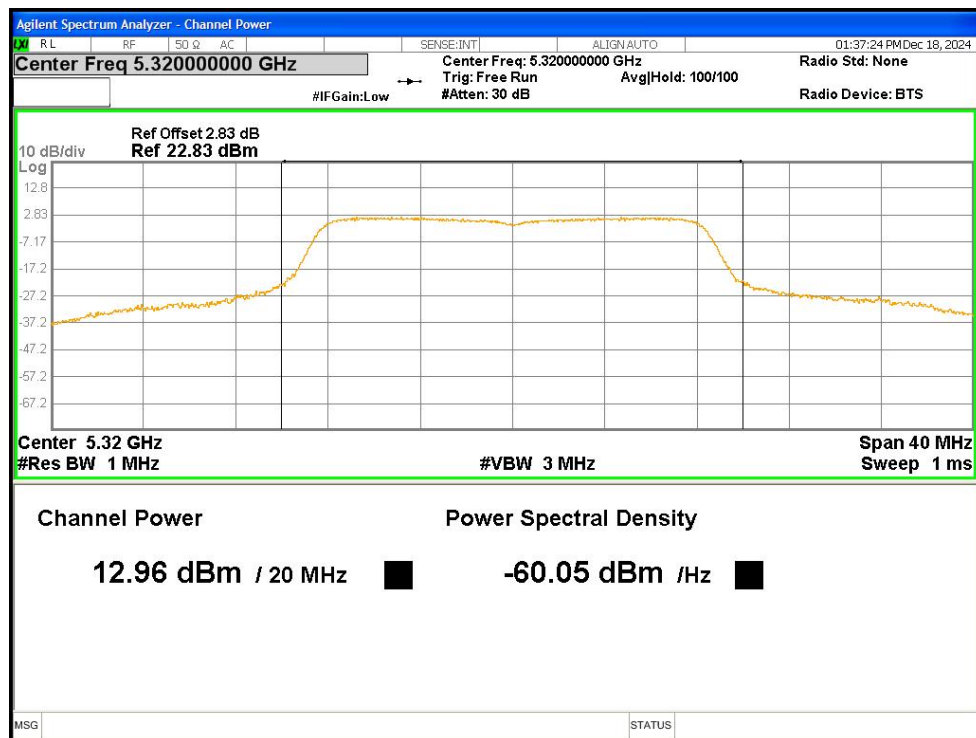


Power NVNT a 5320MHz Ant1

Report

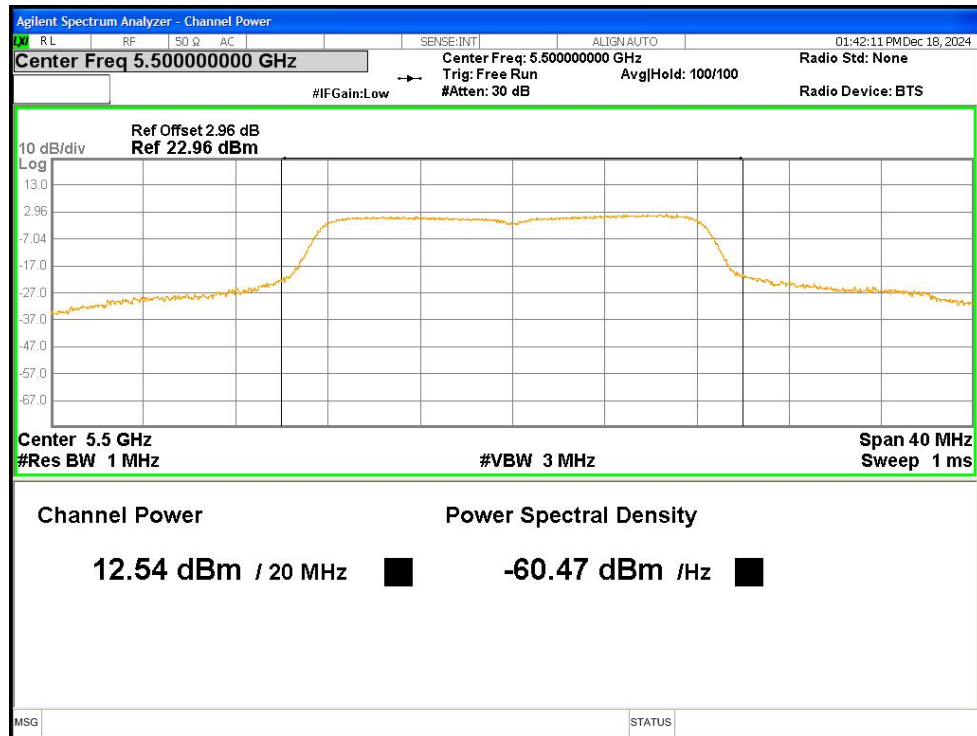


Power NVNT a 5500MHz Ant1

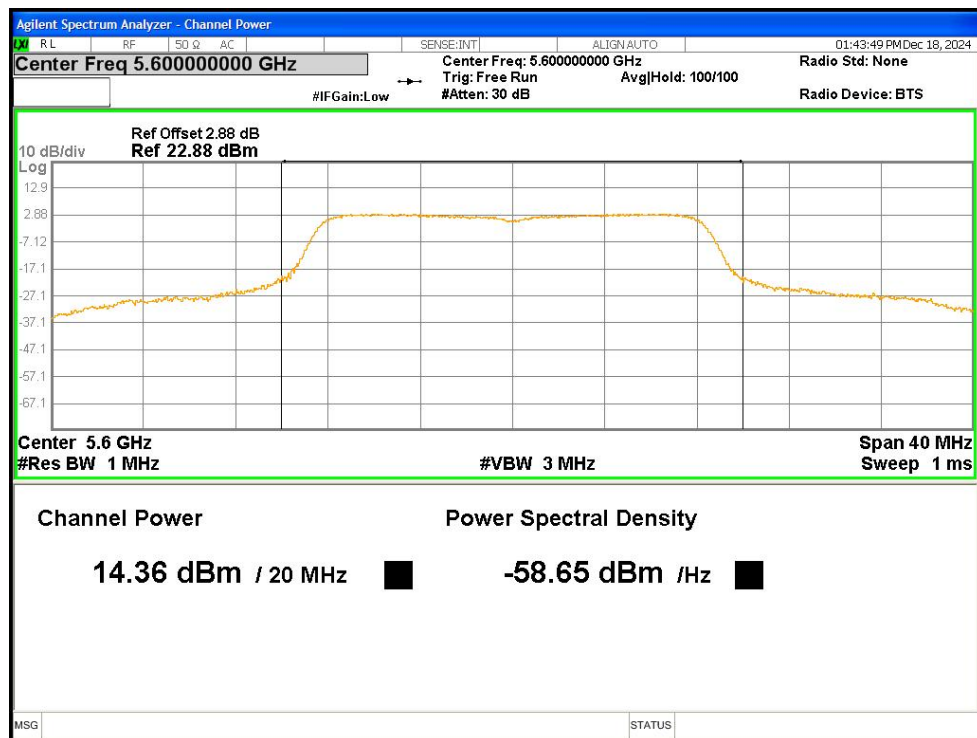


Power NVNT a 5600MHz Ant1

Report

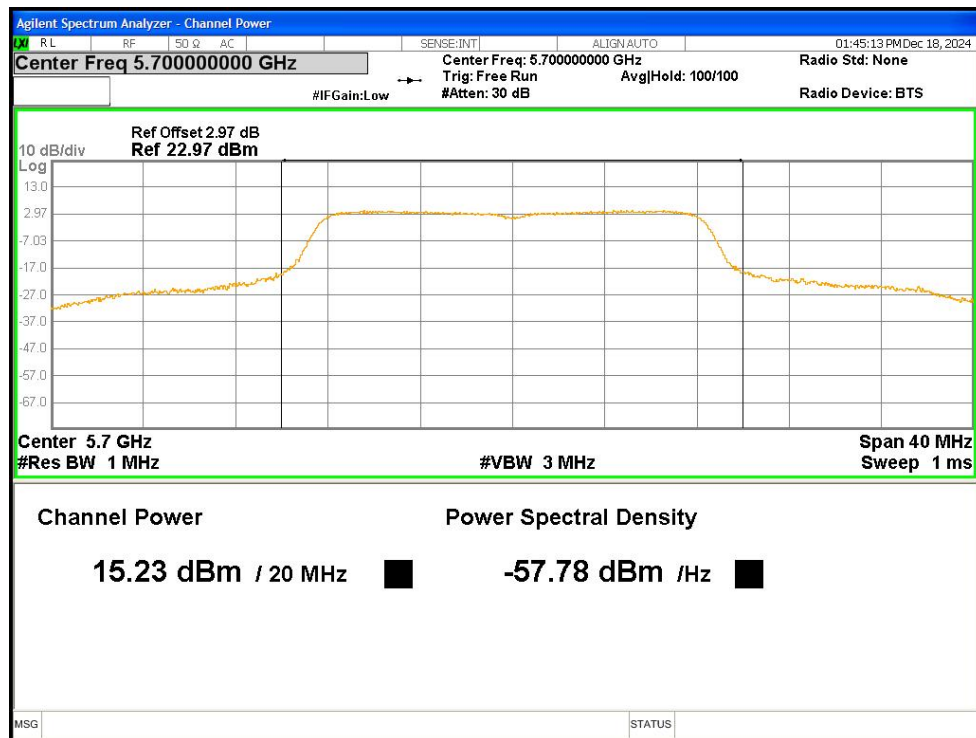


Power NVNT a 5700MHz Ant1

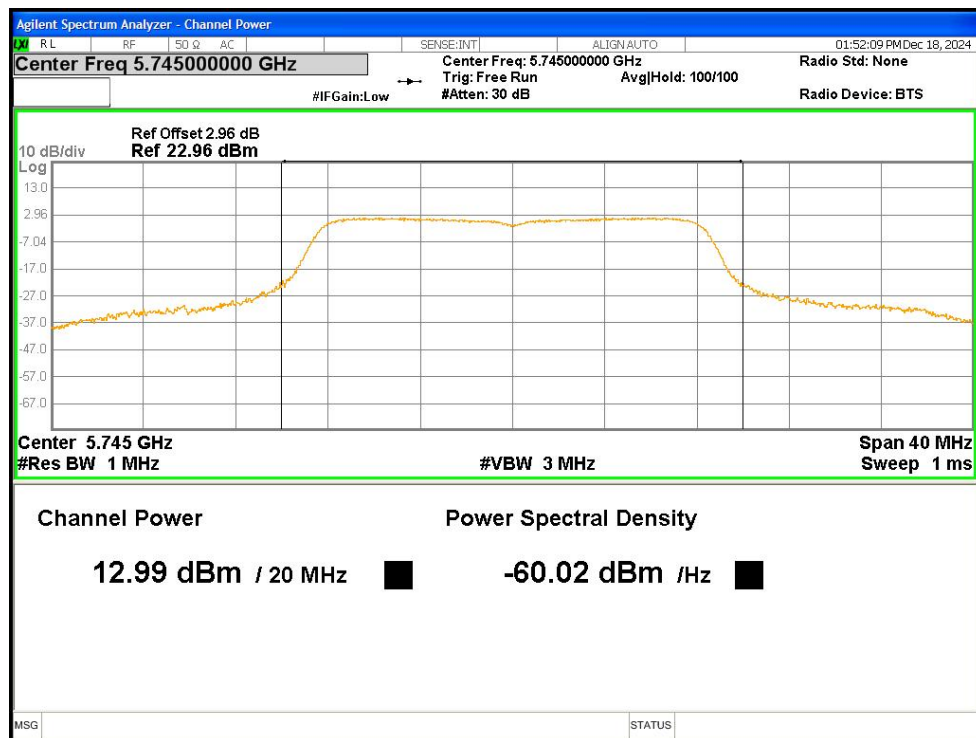


Power NVNT a 5745MHz Ant1

Report

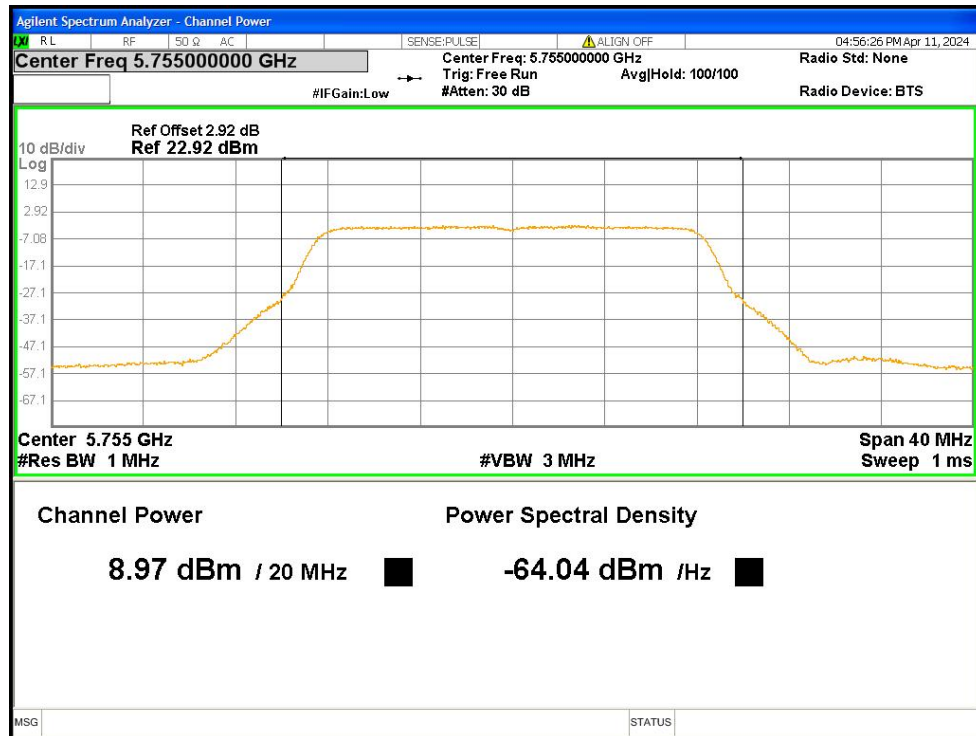


Power NVNT a 5755MHz Ant1

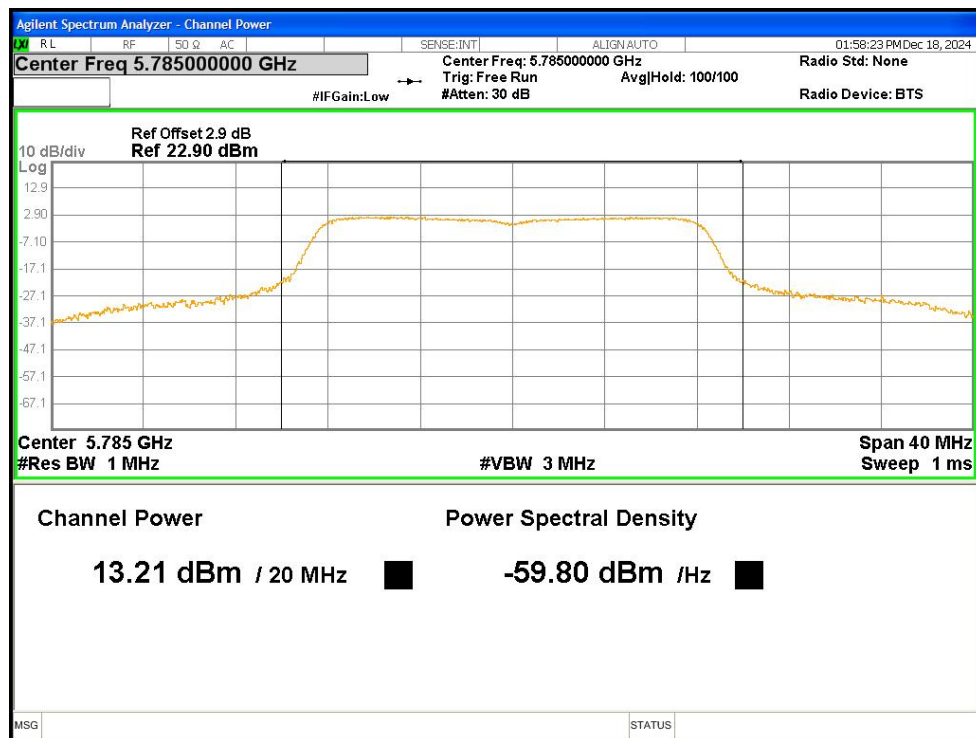


Power NVNT a 5785MHz Ant1

Report

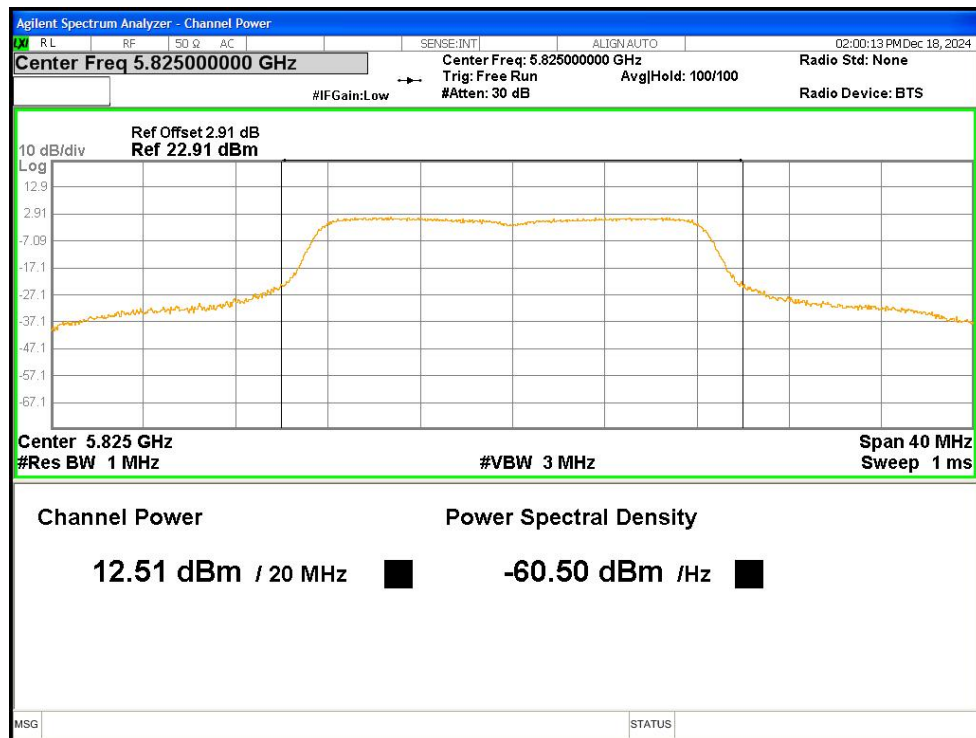


Power NVNT a 5825MHz Ant1

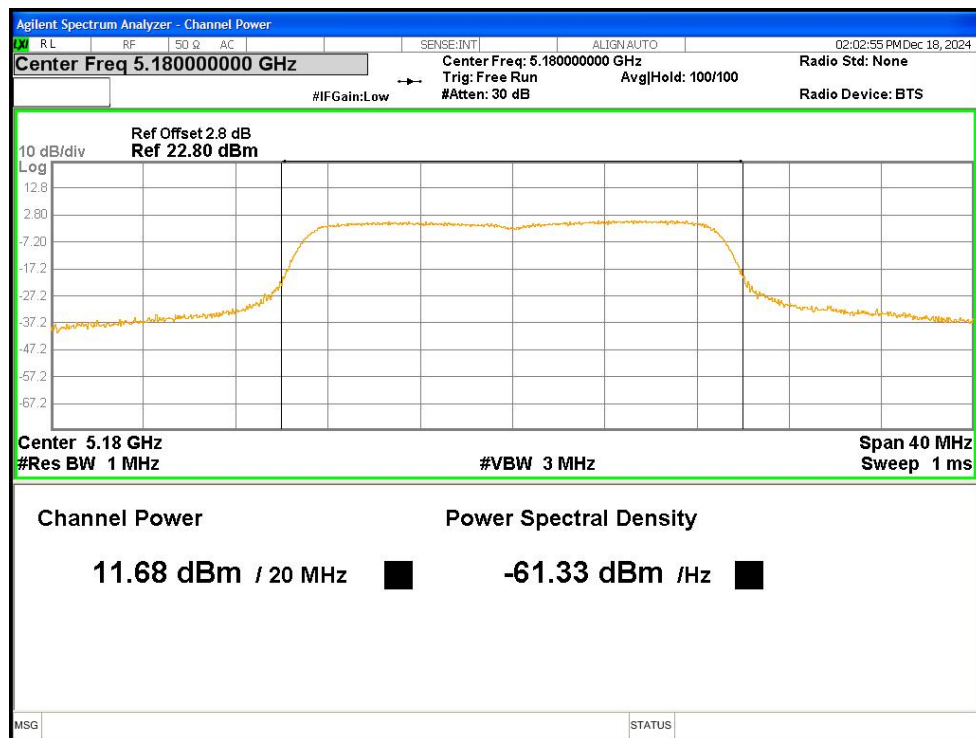


Power NVNT n20 5180MHz Ant1

Report

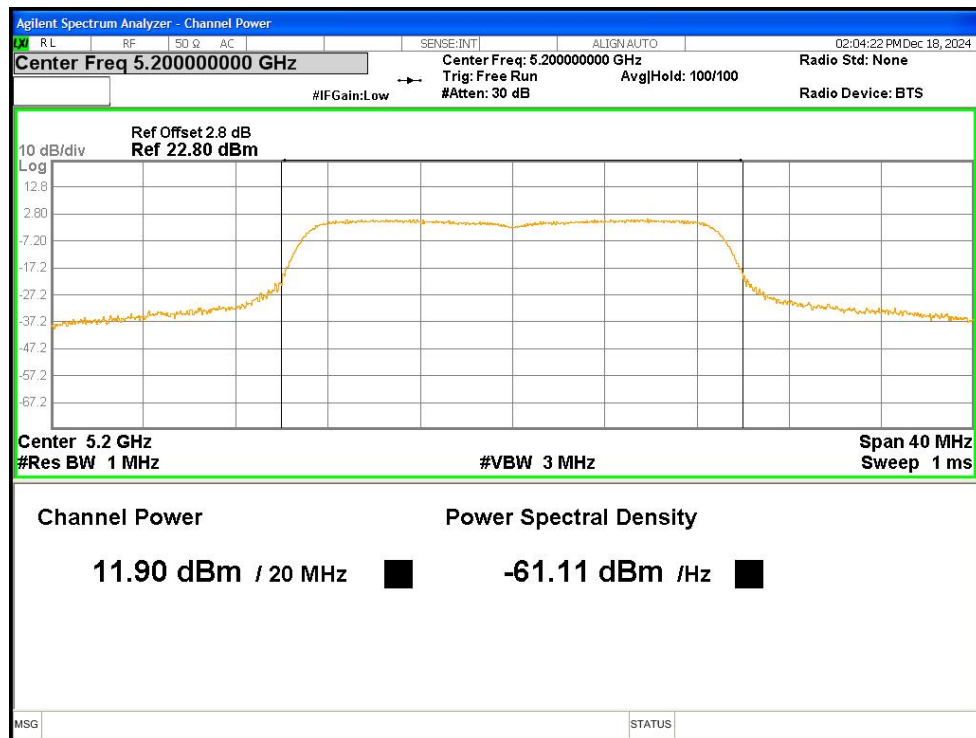


Power NVNT n20 5200MHz Ant1

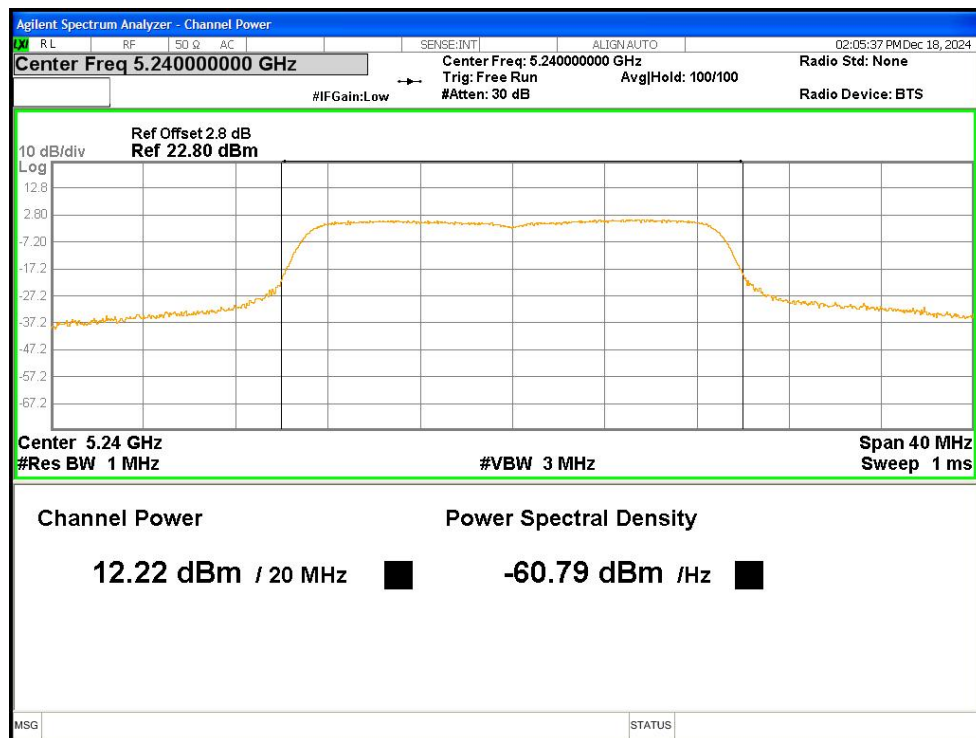


Power NVNT n20 5240MHz Ant1


Report

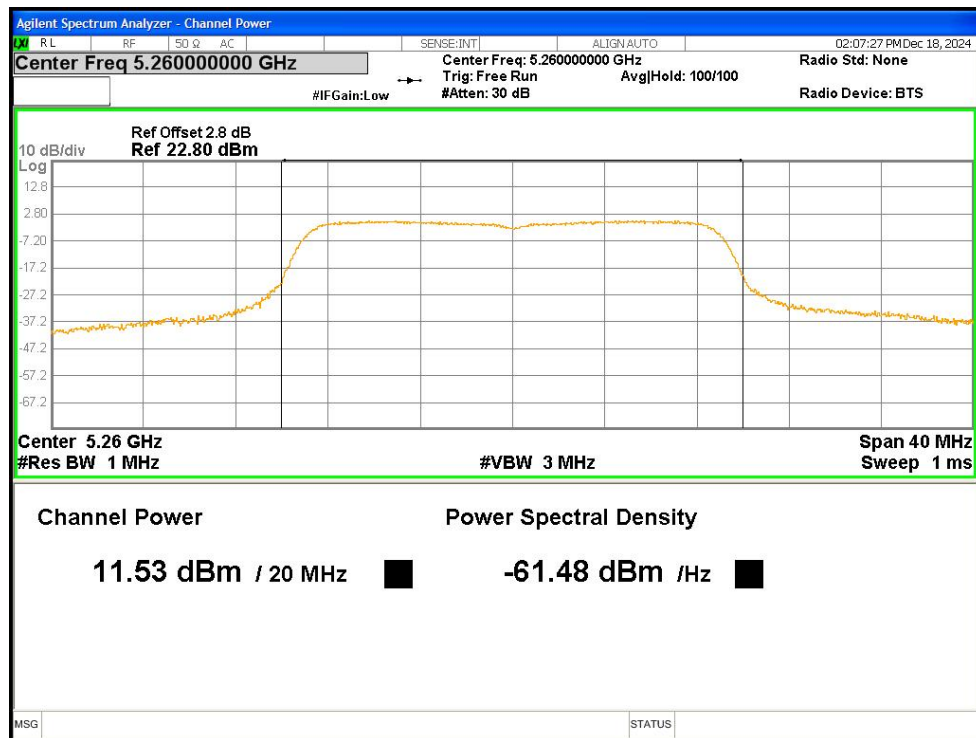


Power NVNT n20 5260MHz Ant1

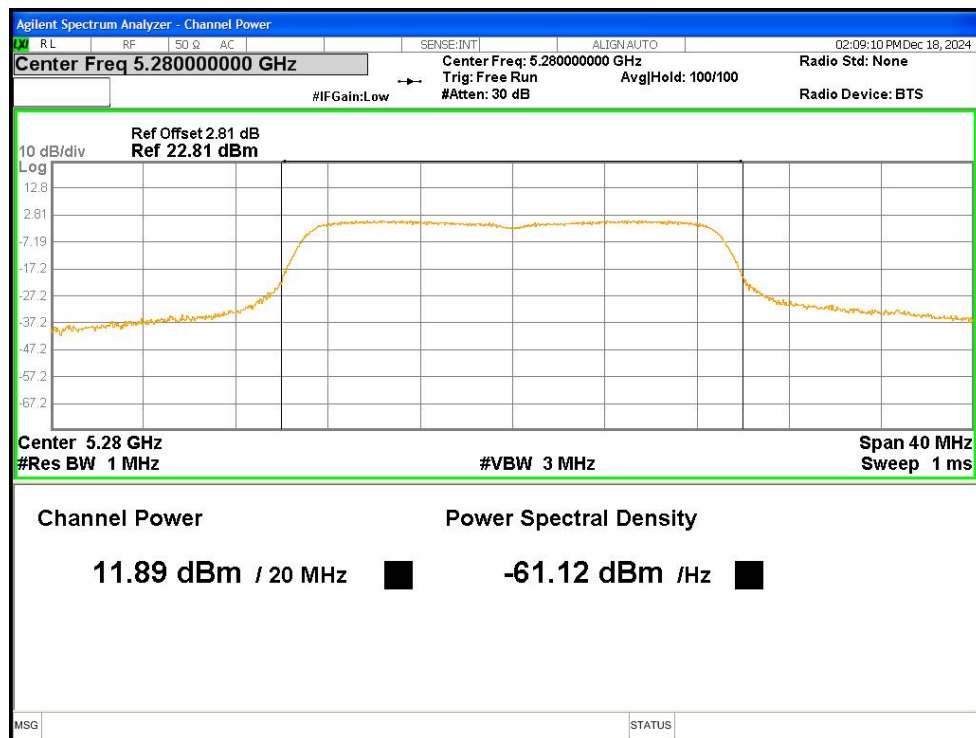

Power NVNT n20 5280MHz Ant1

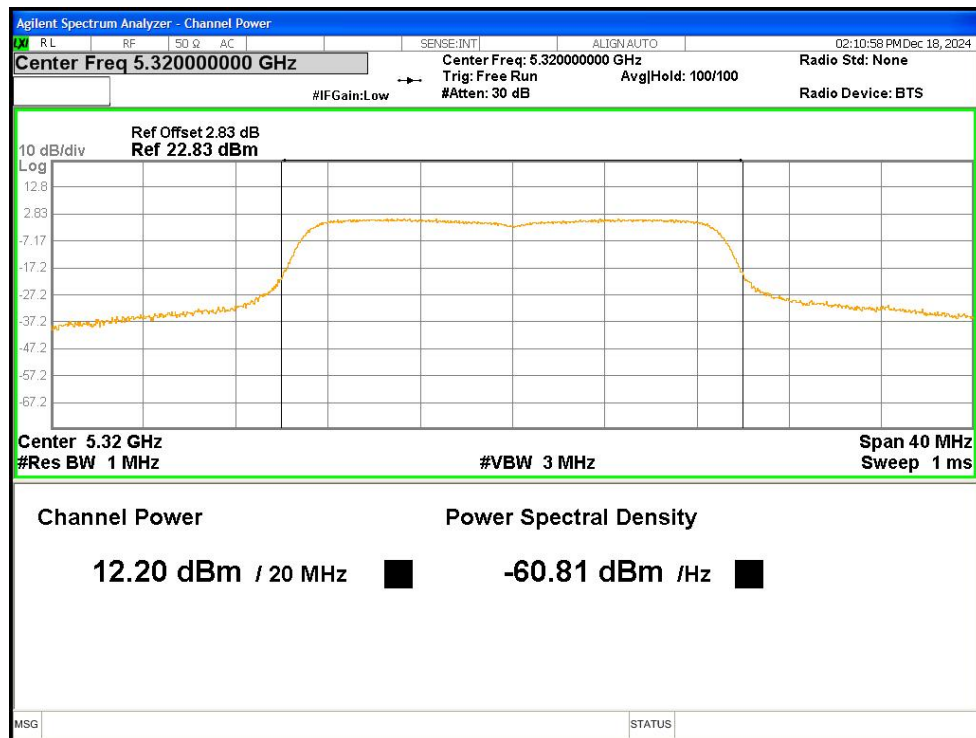


Power NVNT n20 5320MHz Ant1

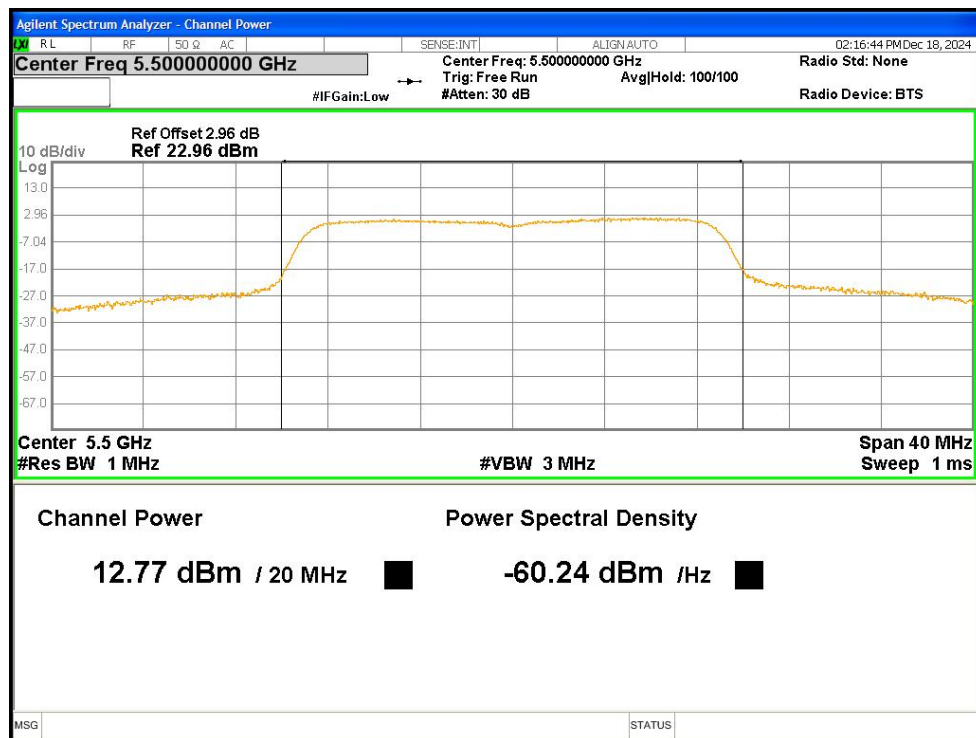


Power NVNT n20 5500MHz Ant1

Report

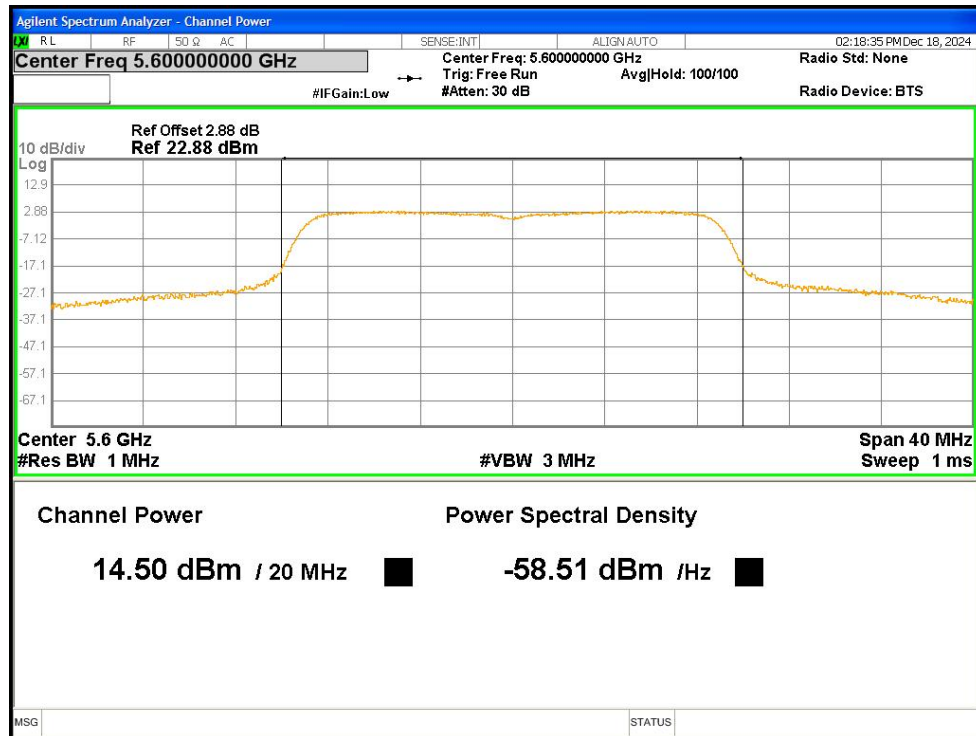


Power NVNT n20 5600MHz Ant1

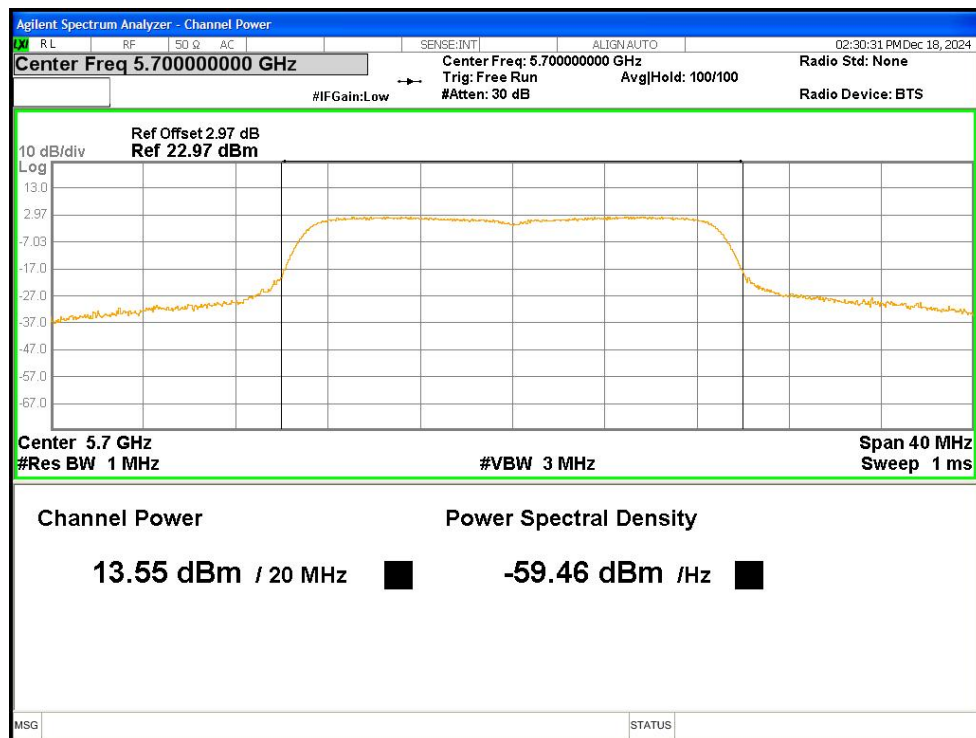


Power NVNT n20 5700MHz Ant1

Report

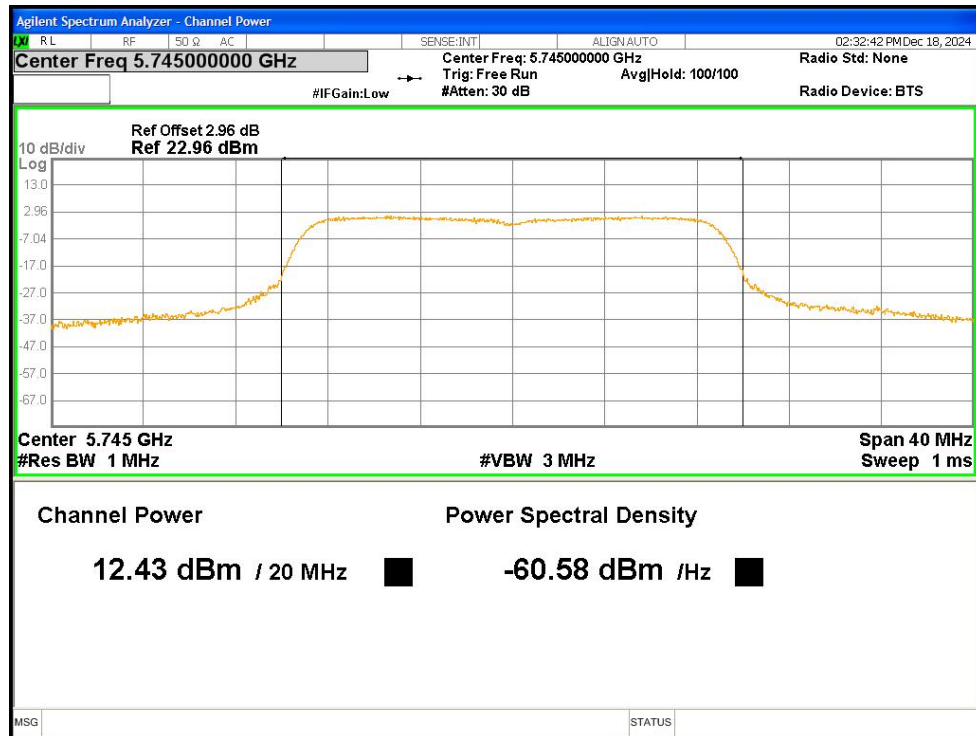


Power NVNT n20 5745MHz Ant1

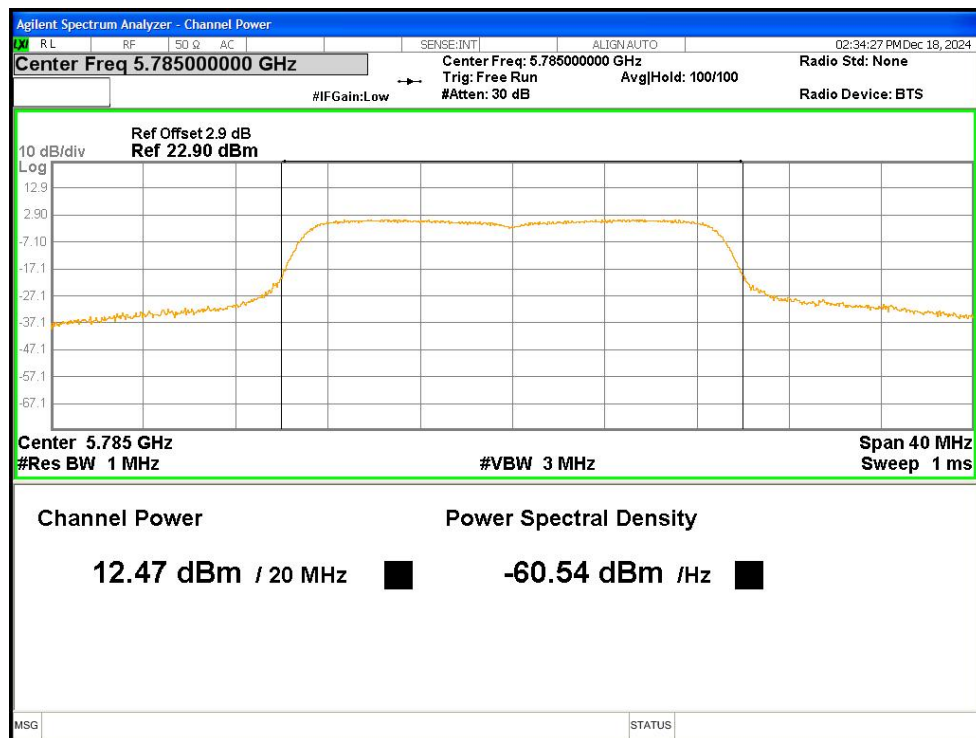


Power NVNT n20 5785MHz Ant1

Report

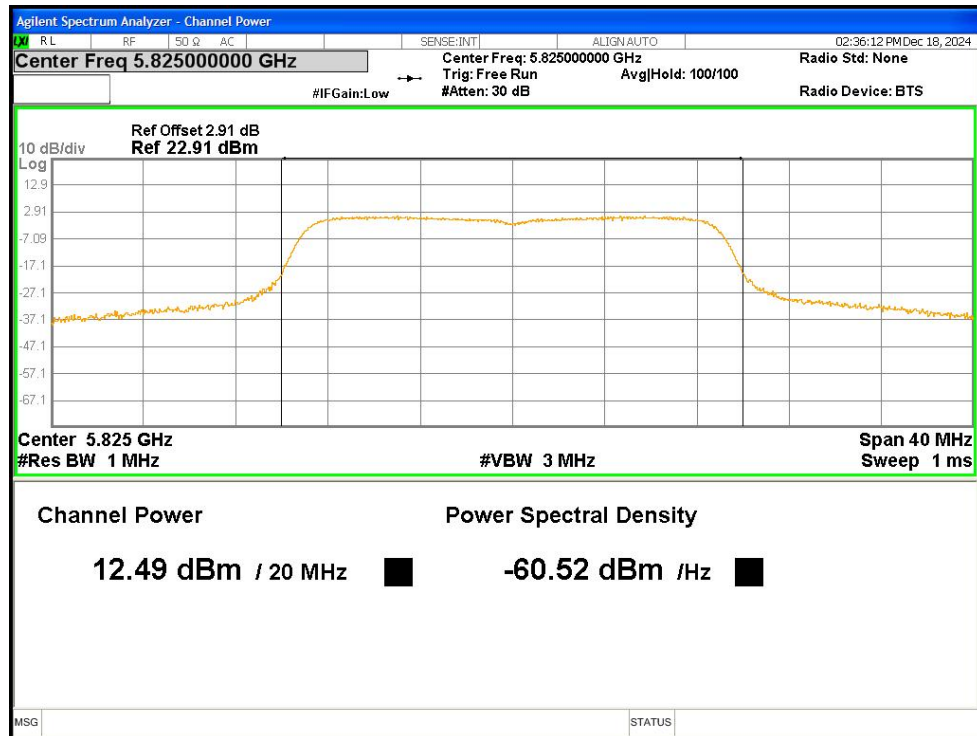


Power NVNT n20 5825MHz Ant1

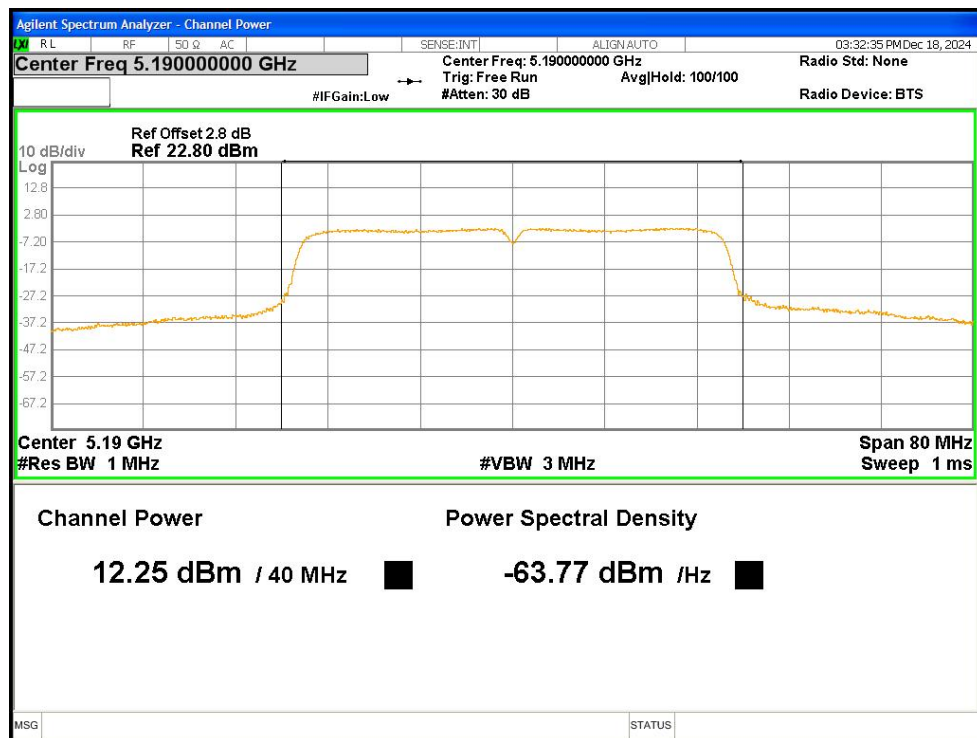


Power NVNT n40 5190MHz Ant1

Report

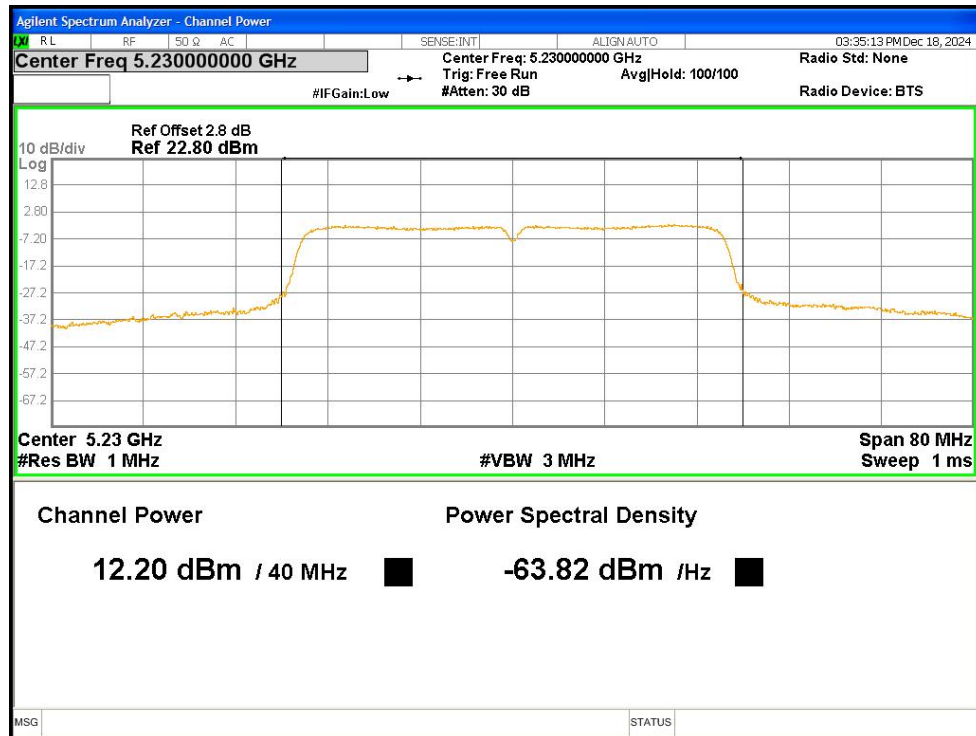


Power NVNT n40 5230MHz Ant1

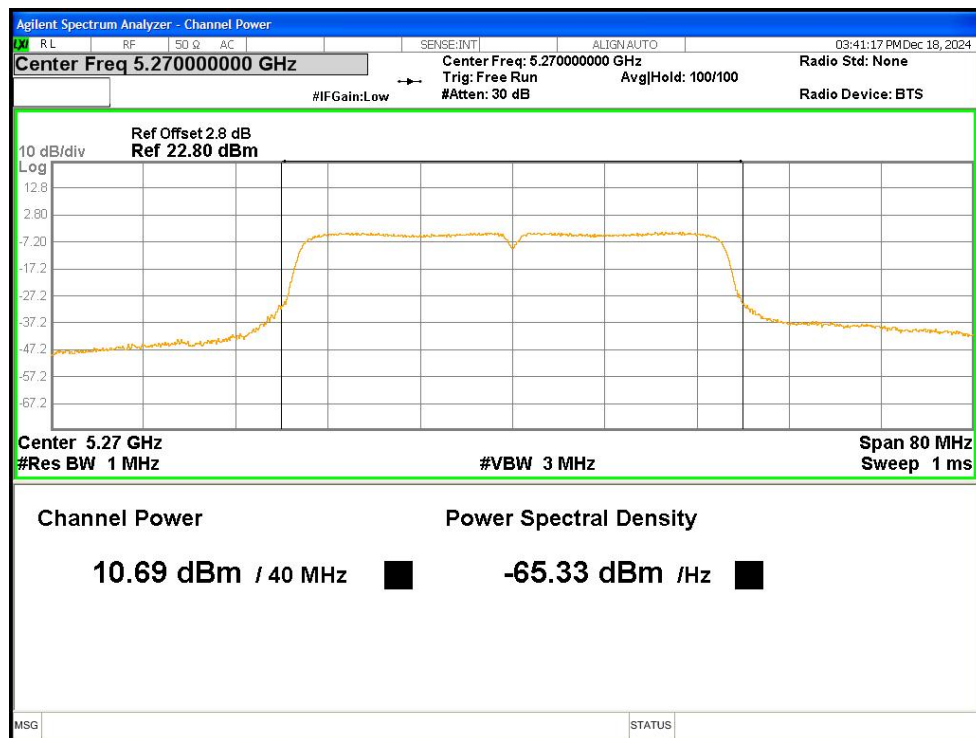


Power NVNT n40 5270MHz Ant1

Report

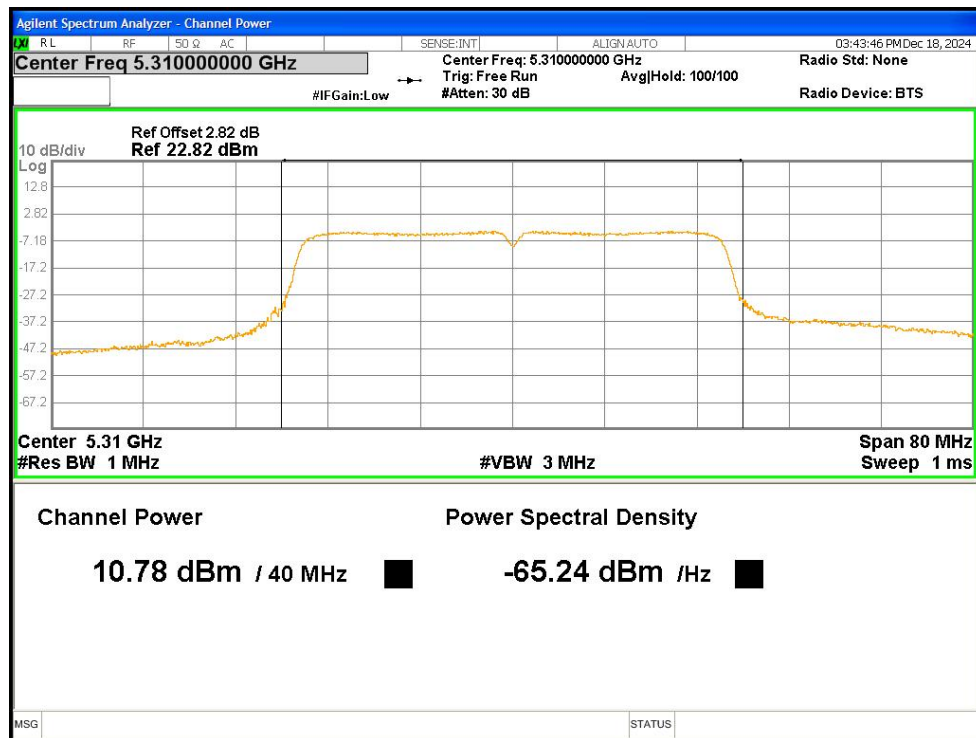


Power NVNT n40 5310MHz Ant1

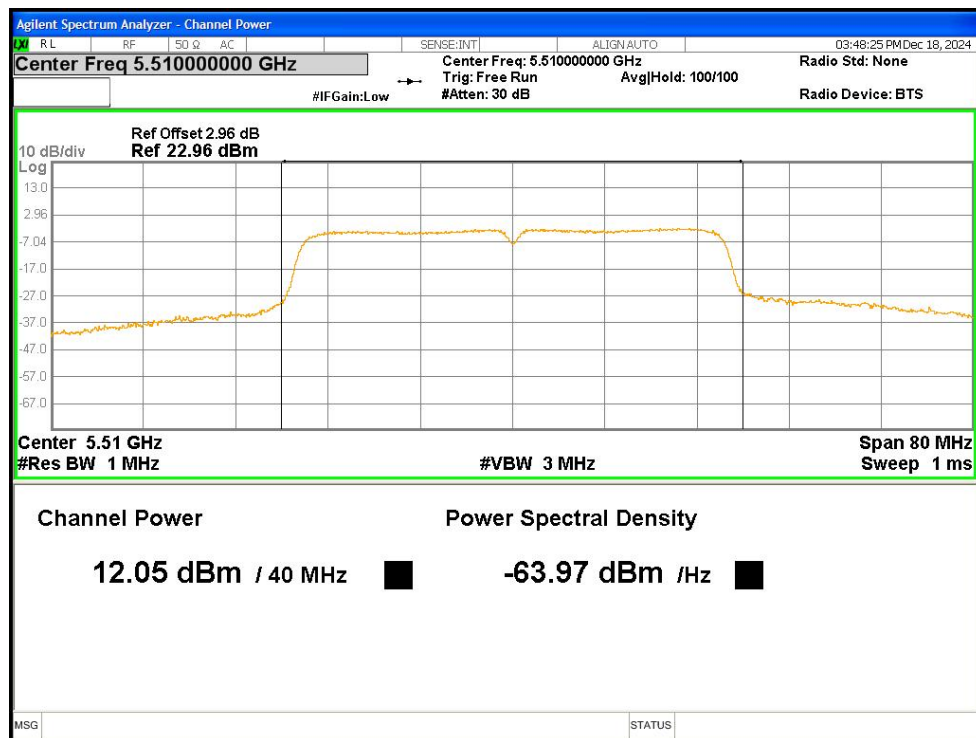


Power NVNT n40 5510MHz Ant1

Report

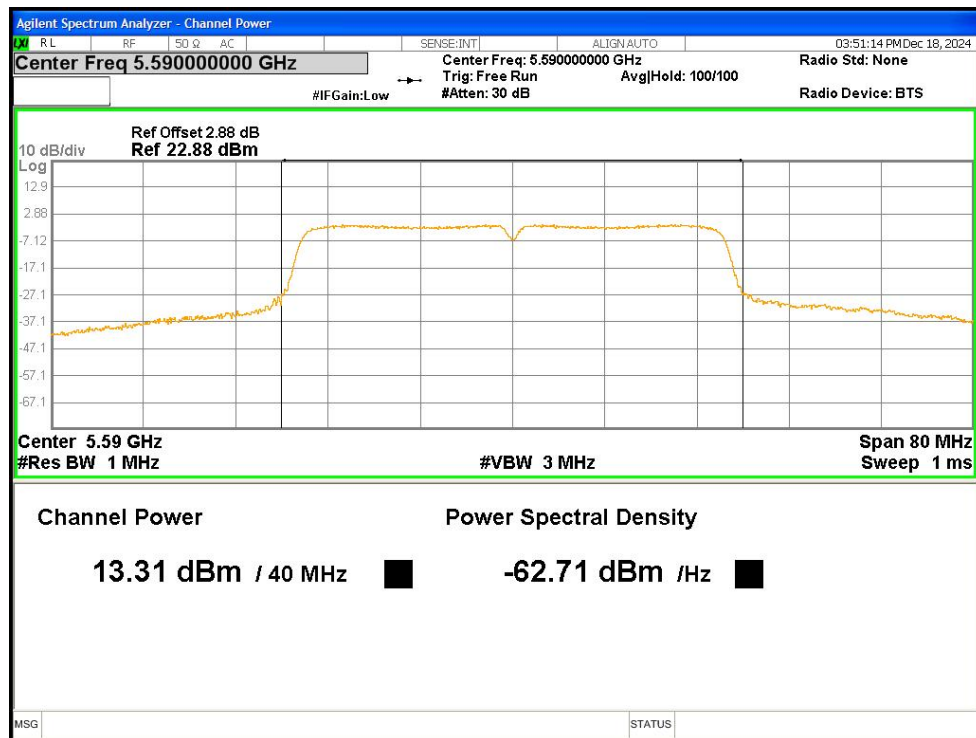


Power NVNT n40 5590MHz Ant1

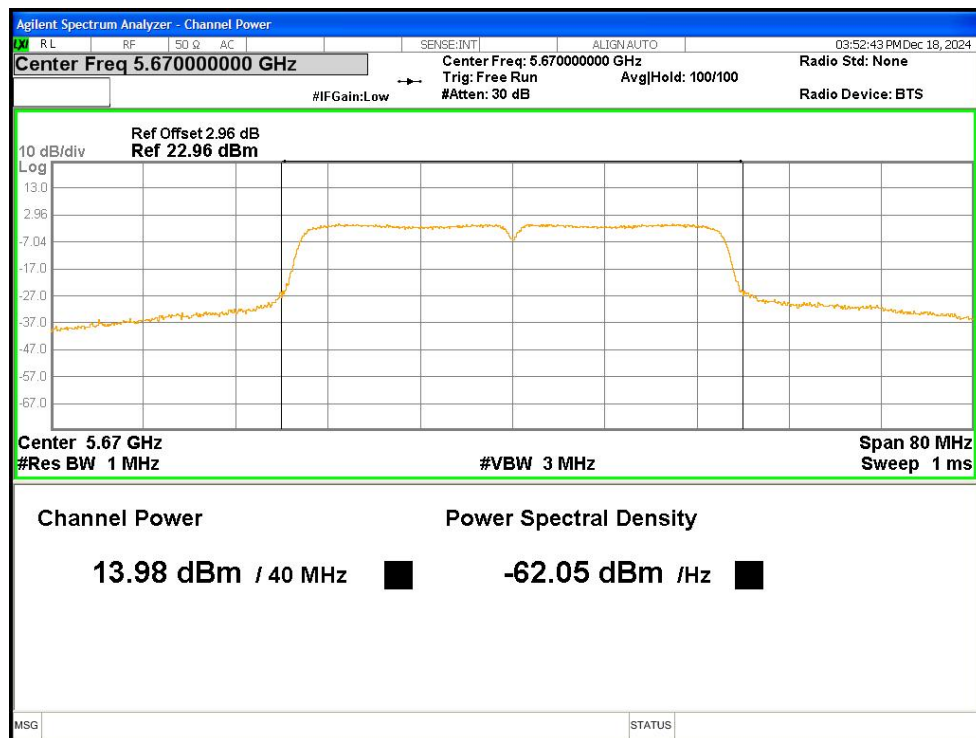


Power NVNT n40 5670MHz Ant1


Report

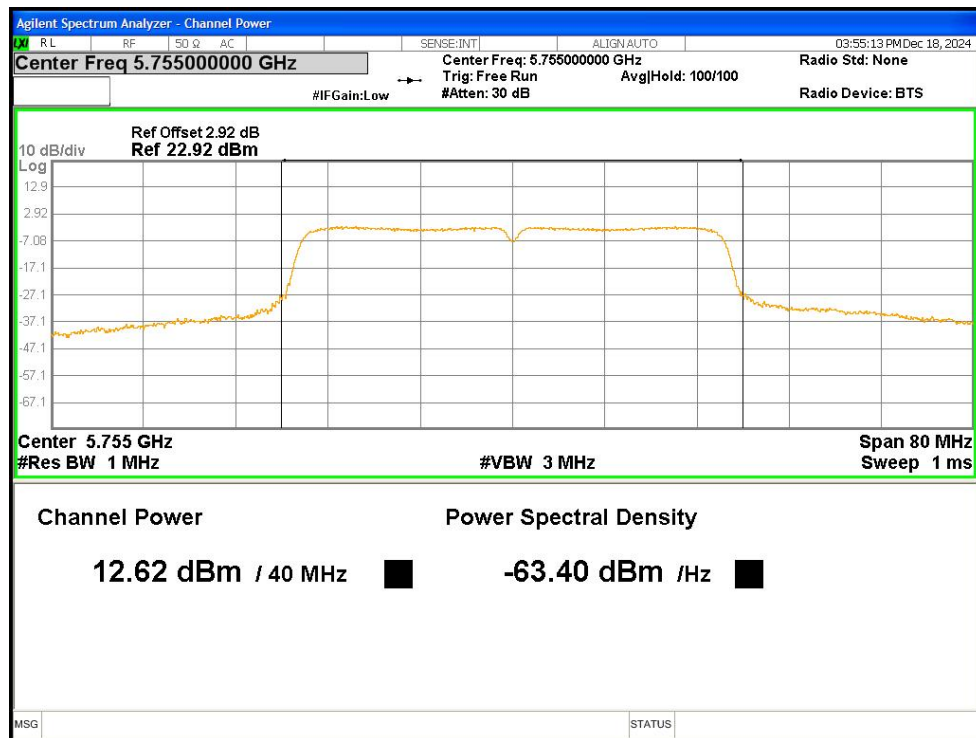


Power NVNT n40 5755MHz Ant1

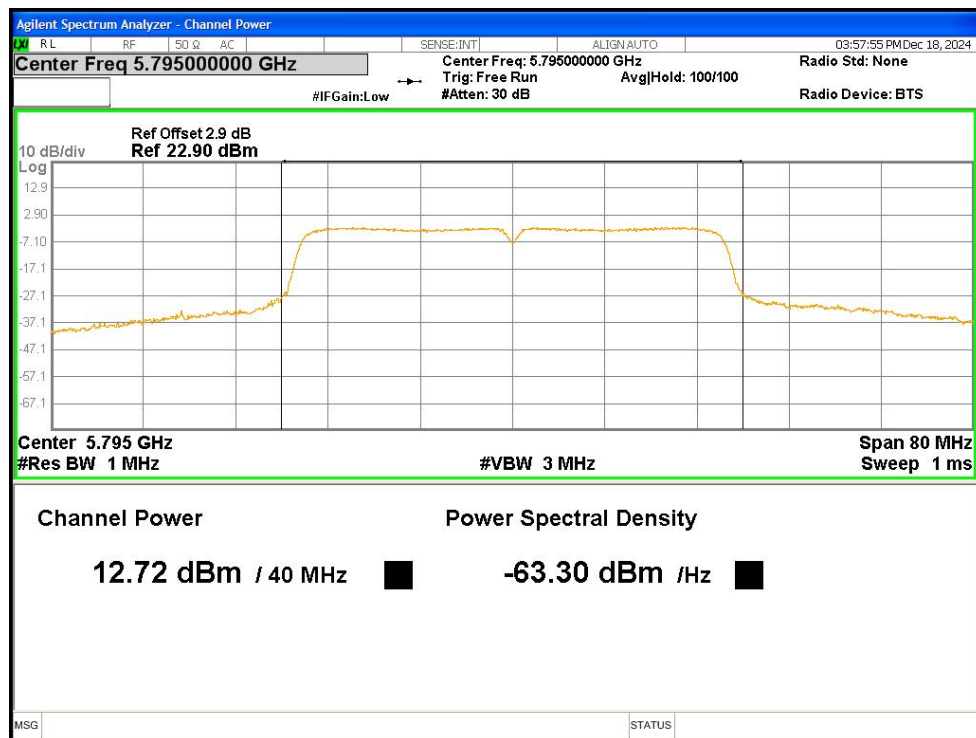

Power NVNT n40 5795MHz Ant1

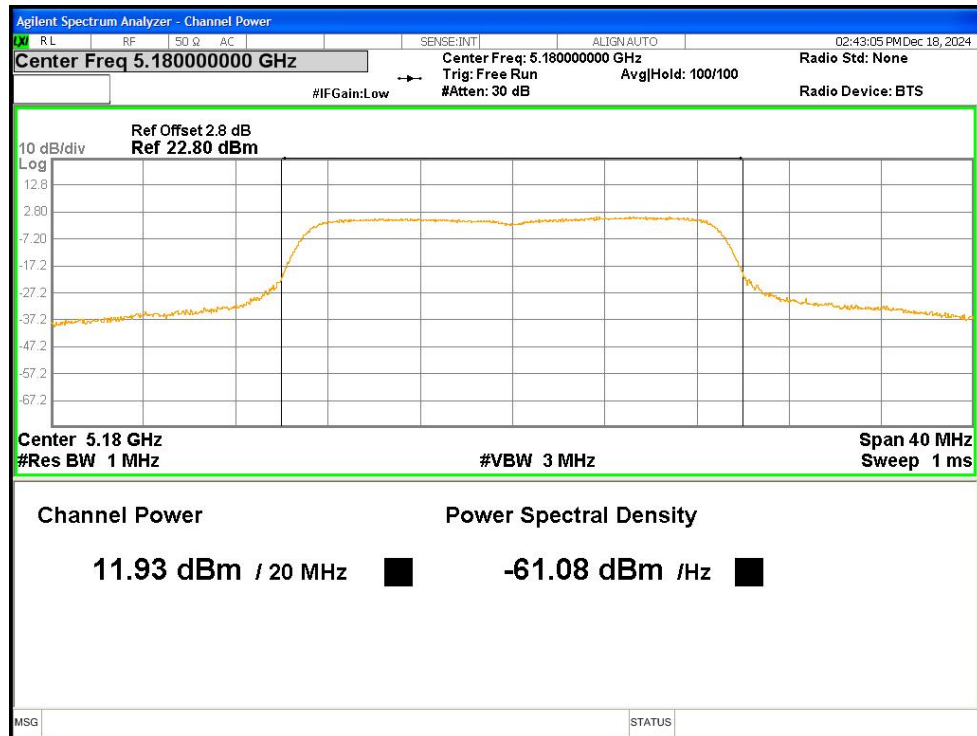


Power NVNT ac20 5180MHz Ant1

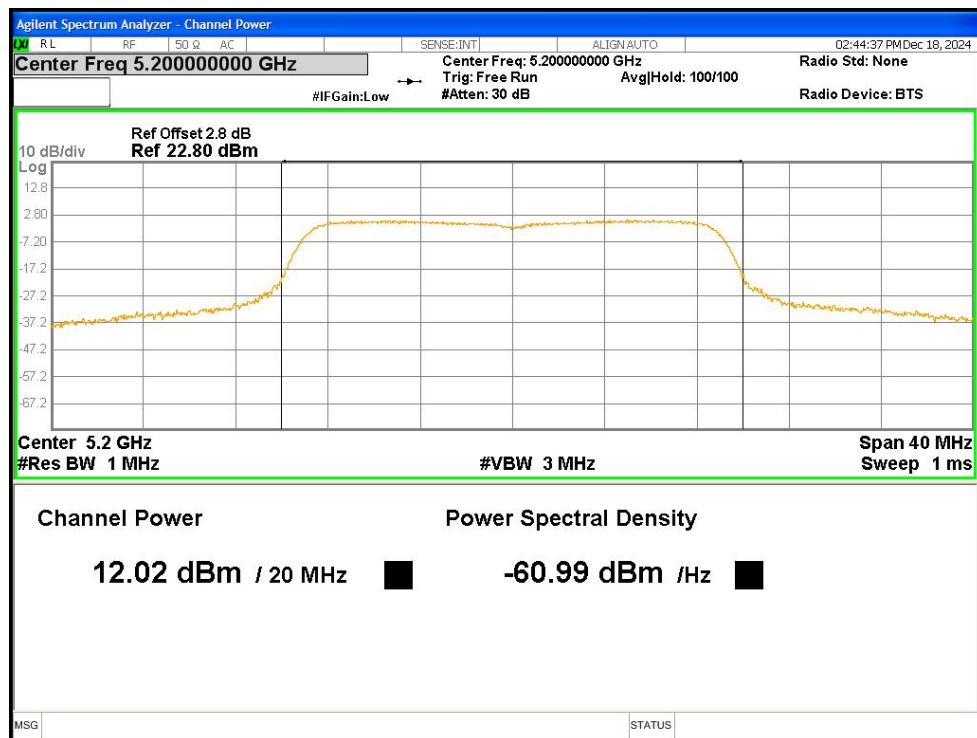


Power NVNT ac20 5200MHz Ant1

Report

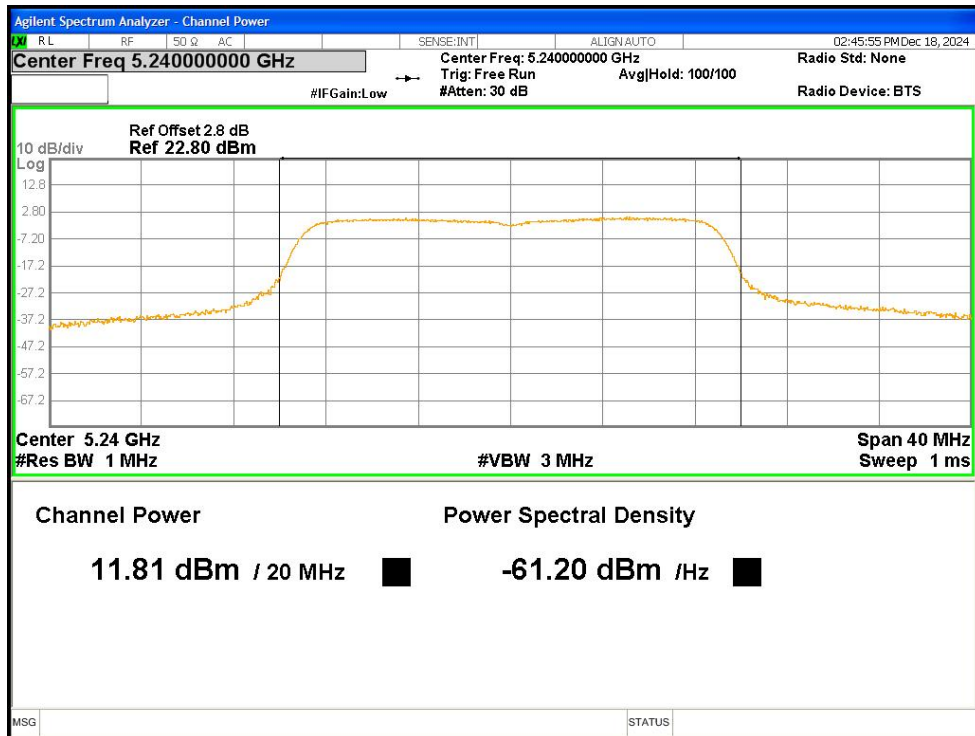


Power NVNT ac20 5240MHz Ant1

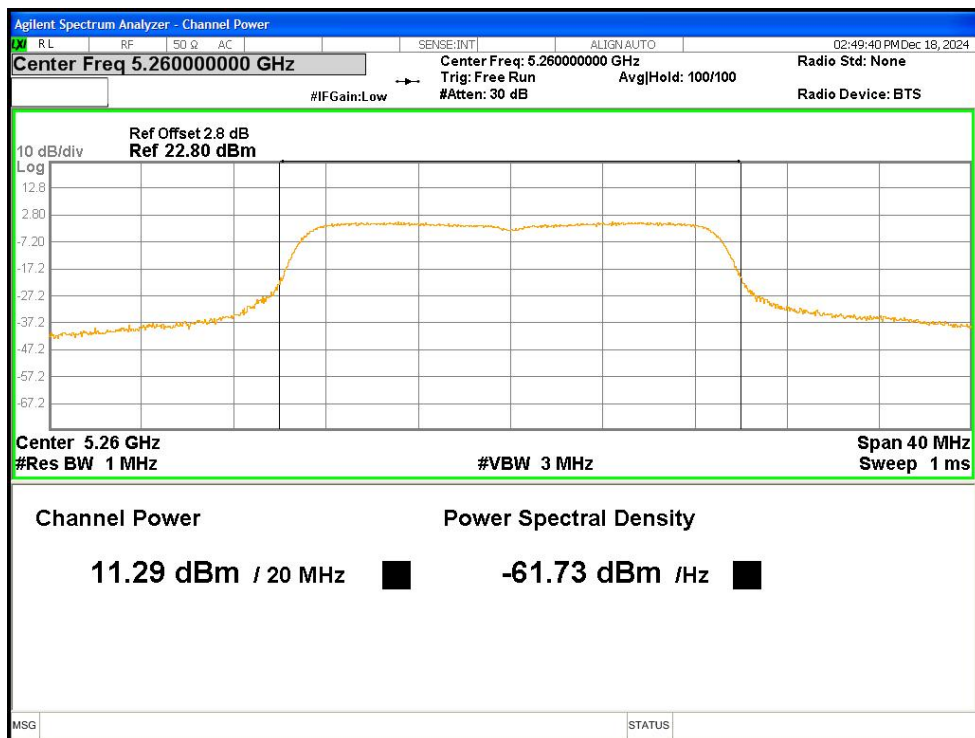


Power NVNT ac20 5260MHz Ant1

Report

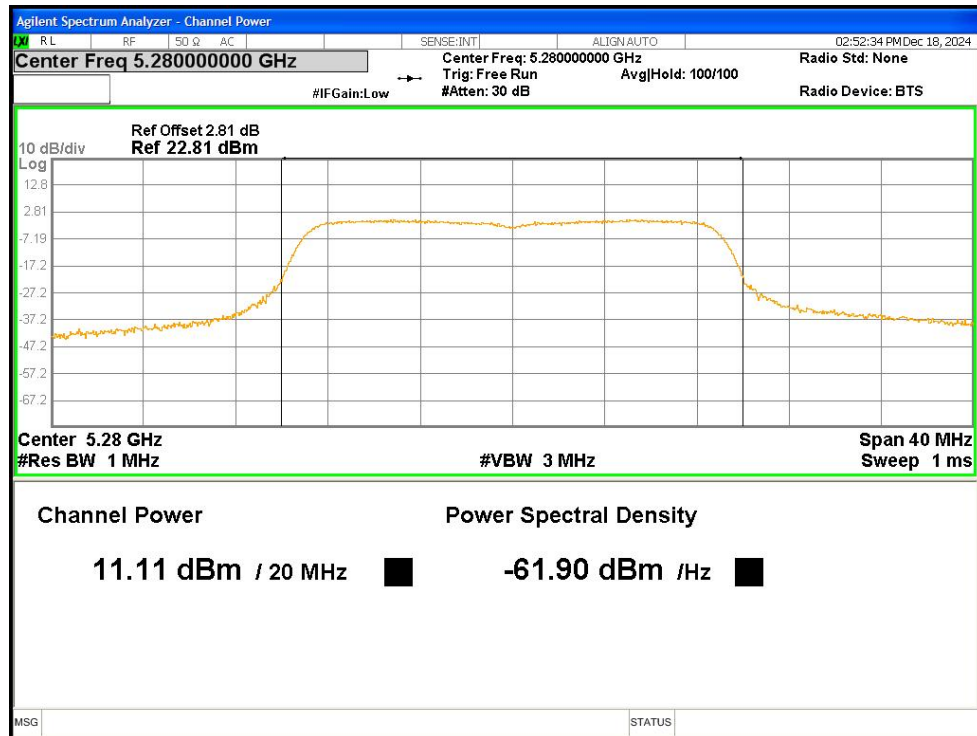

Power NVNT ac20 5280MHz Ant1

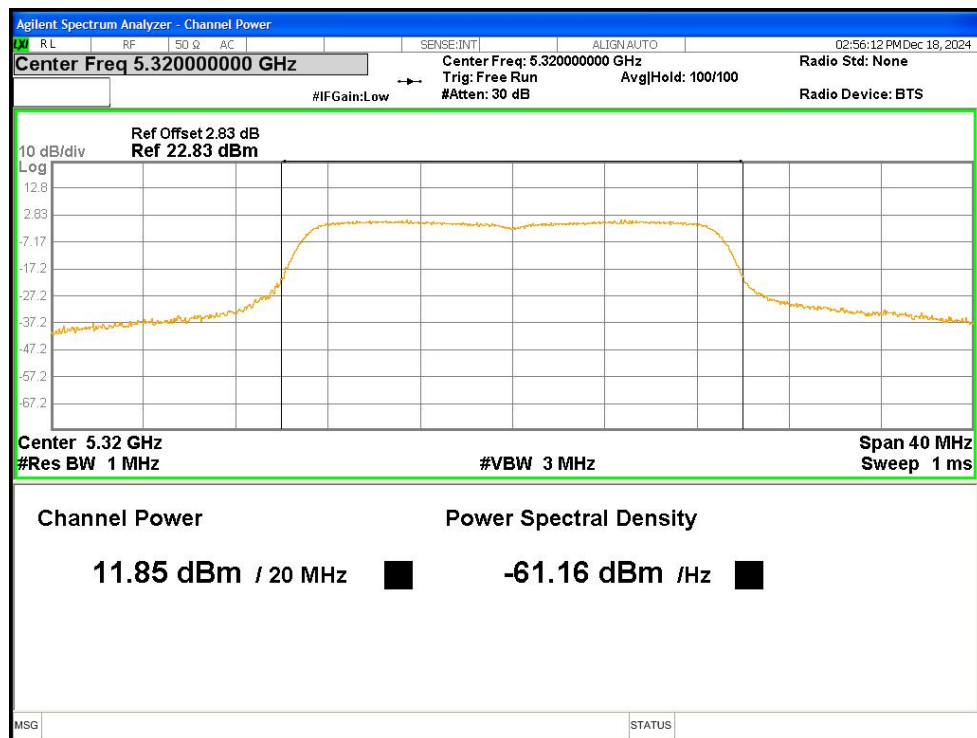

Power NVNT ac20 5320MHz Ant1