




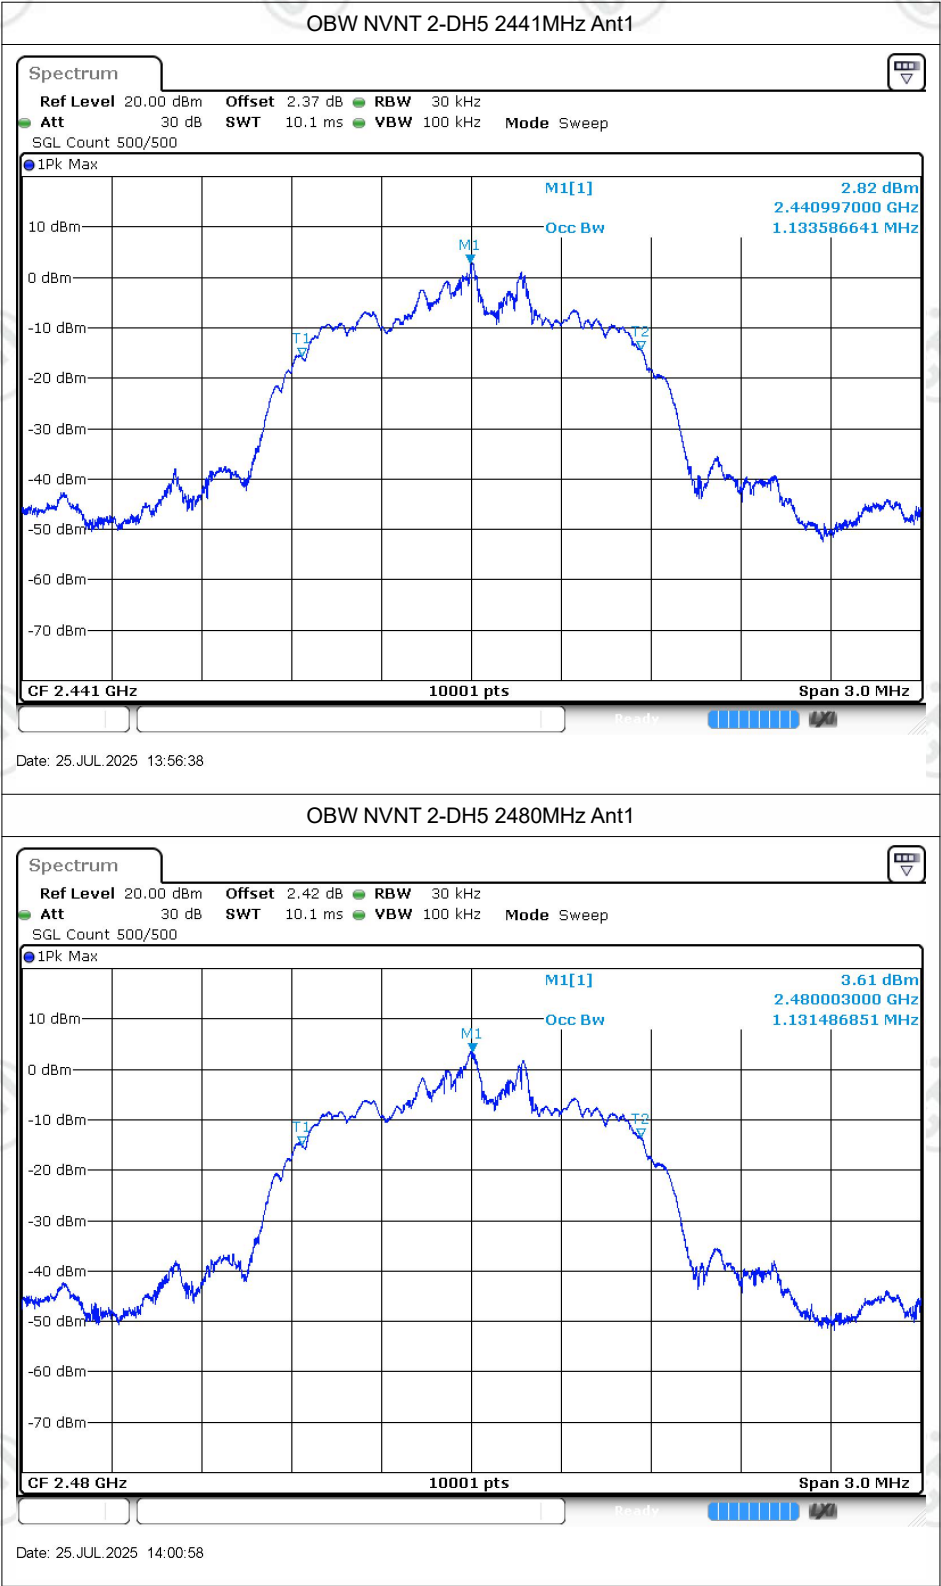


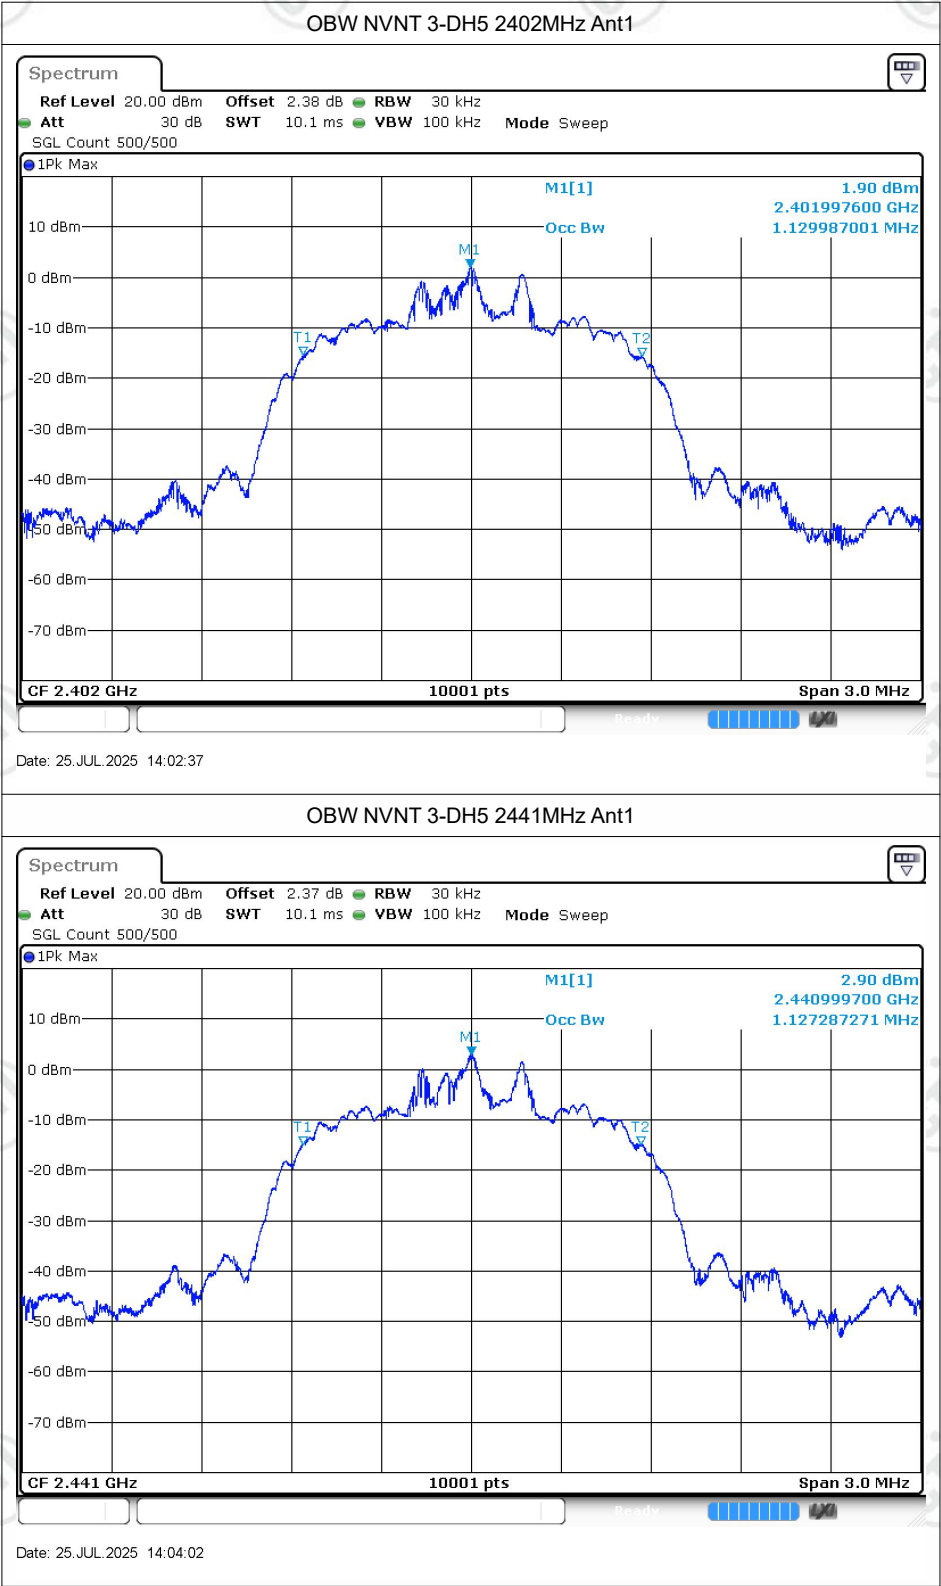


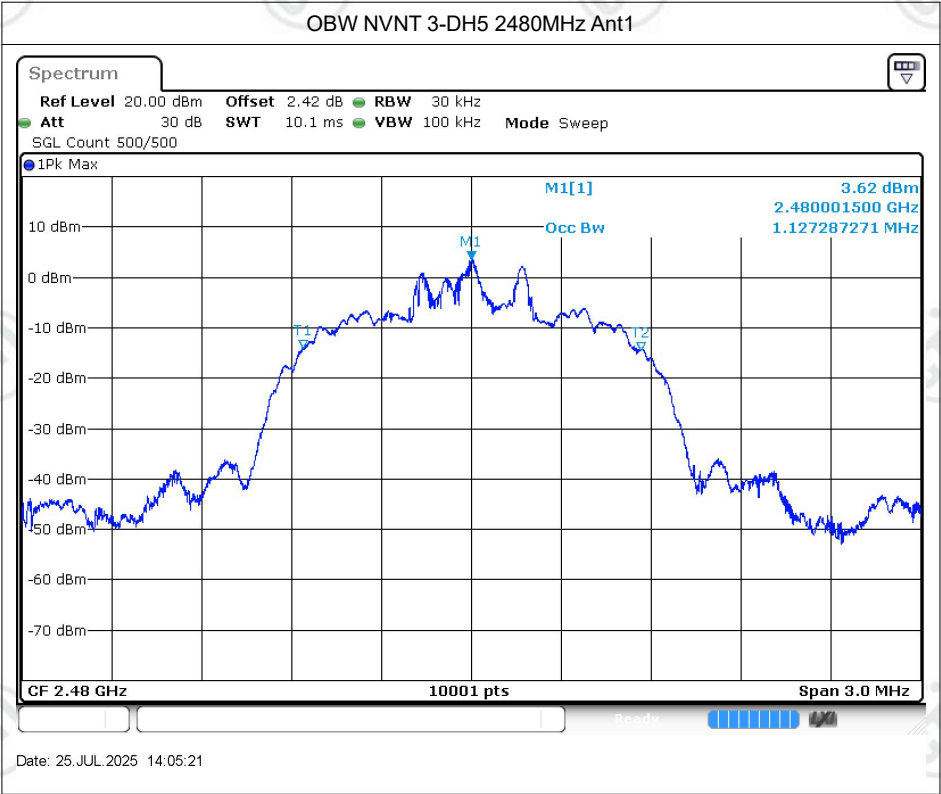



Carrier Frequencies Separation


Condition	Mode	Antenna	Hopping Freq1 (MHz)	Hopping Freq2 (MHz)	HFS (MHz)	Limit (MHz)	Verdict
NVNT	1-DH5	Ant1	2401.972	2403.17	1.198	0.625	Pass
NVNT	1-DH5	Ant1	2441	2441.982	0.982	0.624	Pass
NVNT	1-DH5	Ant1	2479.004	2479.97	0.966	0.625	Pass
NVNT	2-DH5	Ant1	2401.98	2402.986	1.006	0.785	Pass
NVNT	2-DH5	Ant1	2440.984	2441.992	1.008	0.785	Pass
NVNT	2-DH5	Ant1	2479.018	2480.004	0.986	0.785	Pass
NVNT	3-DH5	Ant1	2401.99	2402.946	0.956	0.793	Pass
NVNT	3-DH5	Ant1	2440.986	2441.992	1.006	0.792	Pass
NVNT	3-DH5	Ant1	2479.008	2479.944	0.936	0.792	Pass

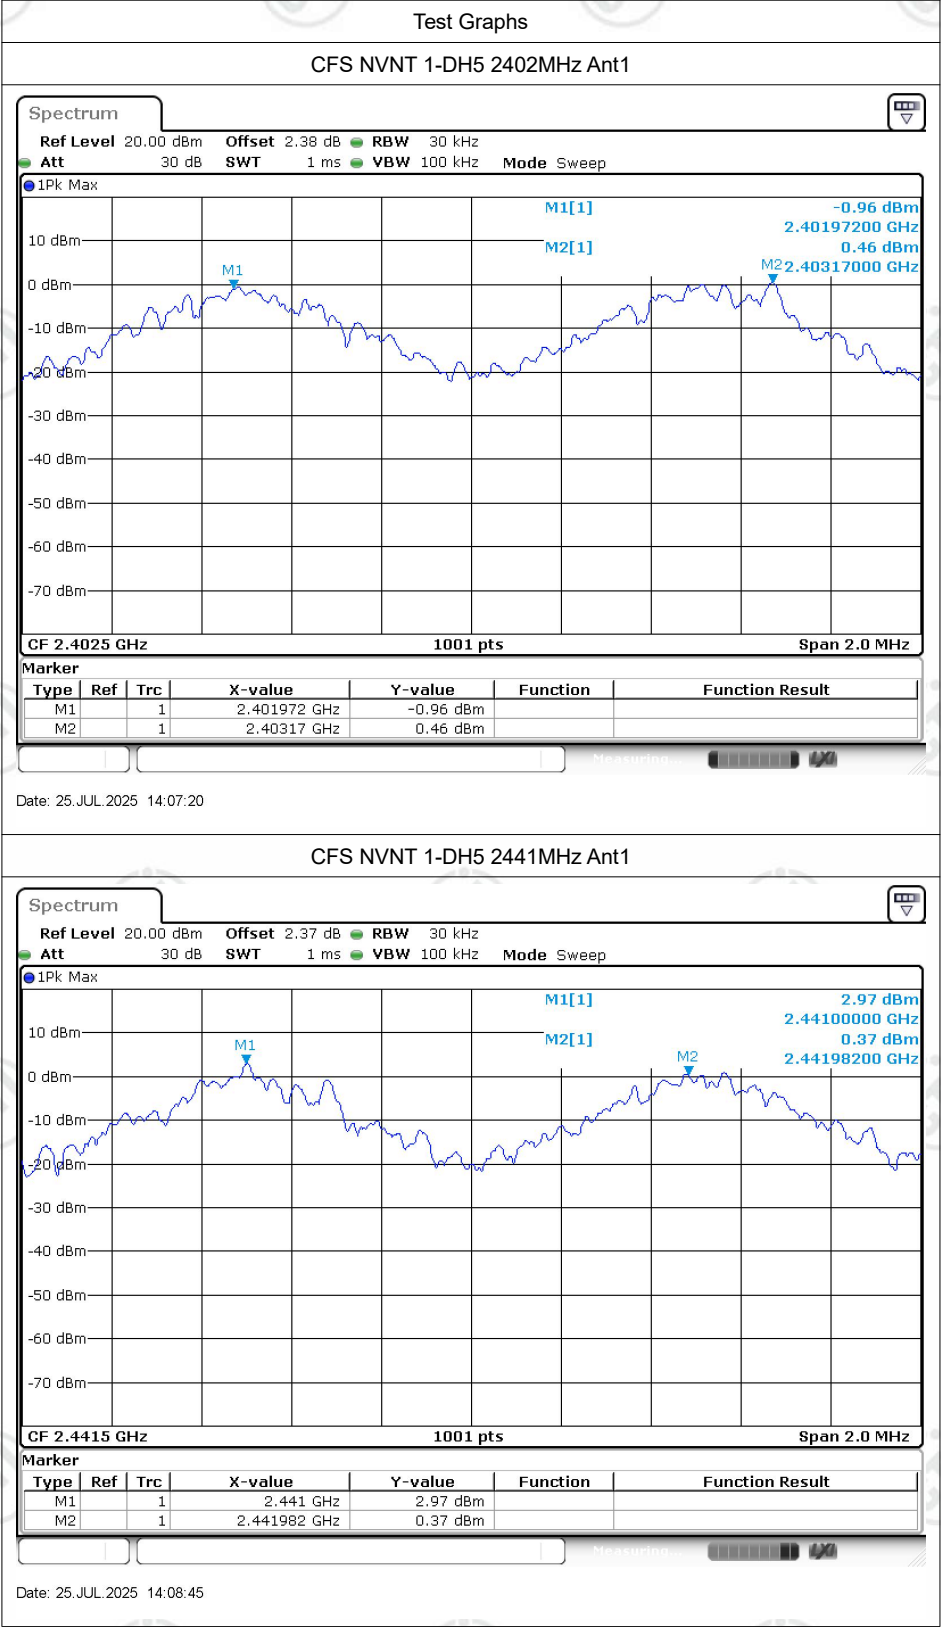

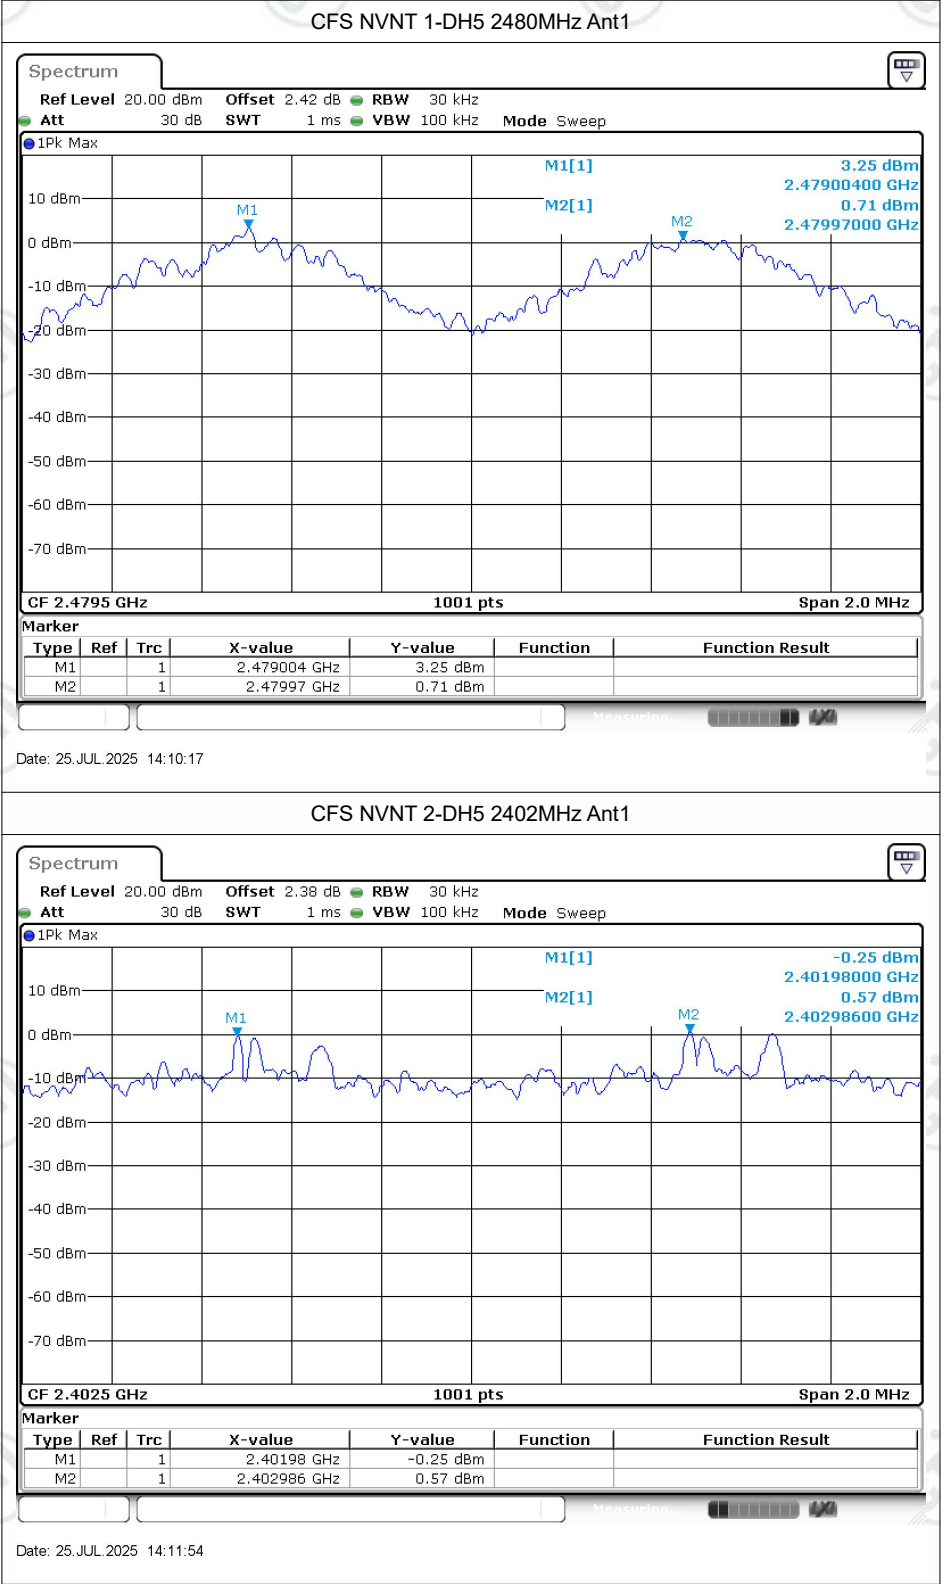

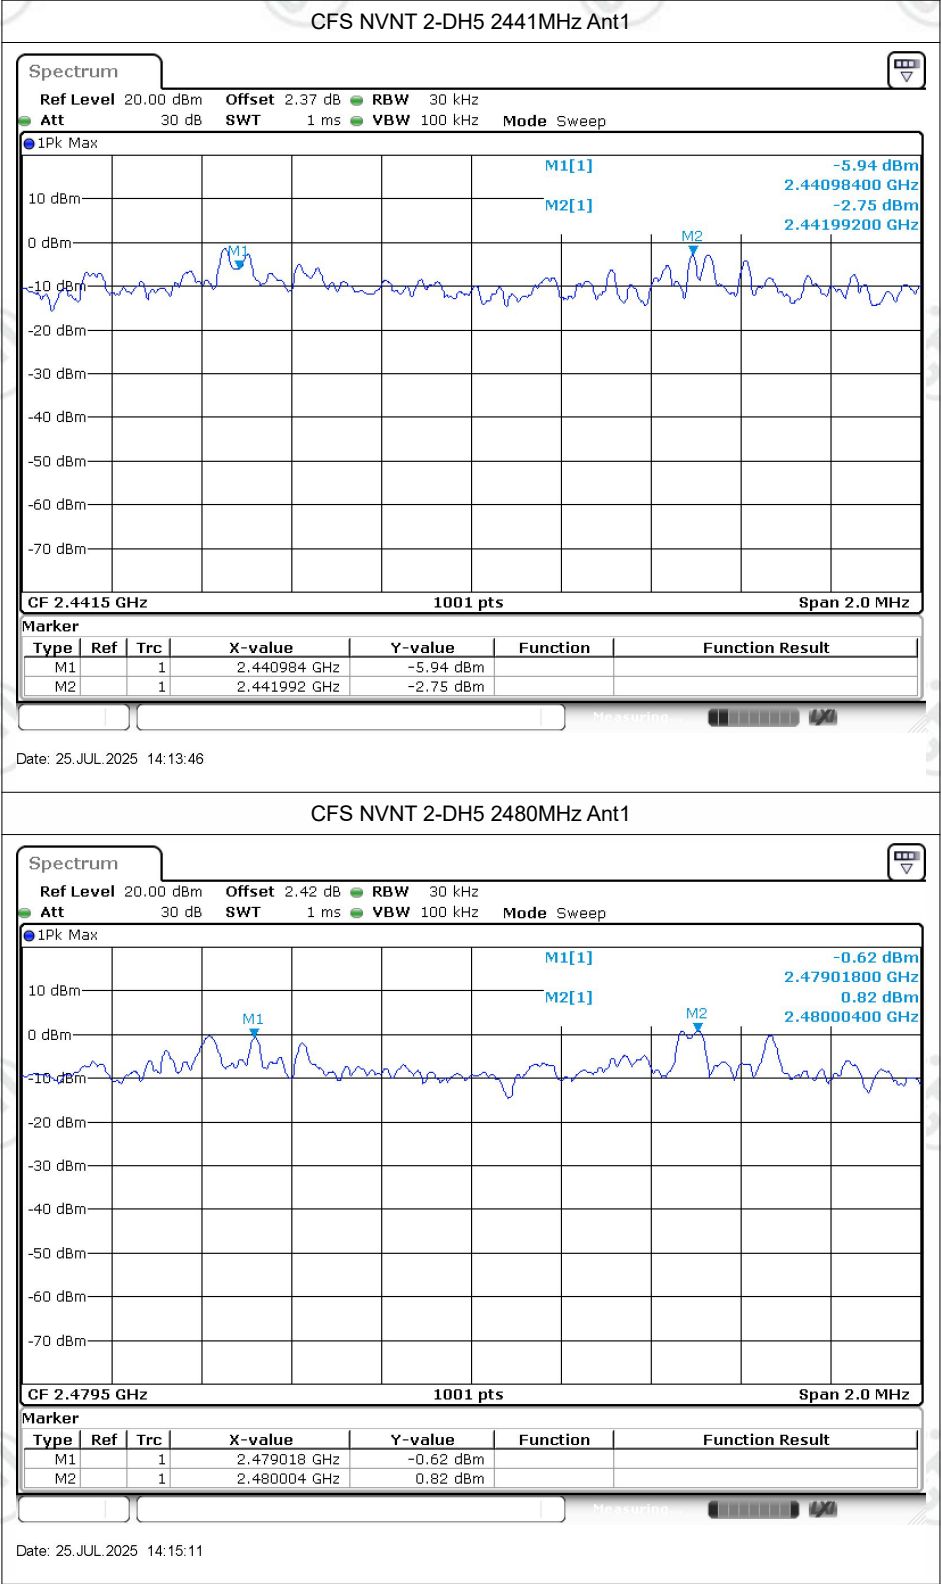

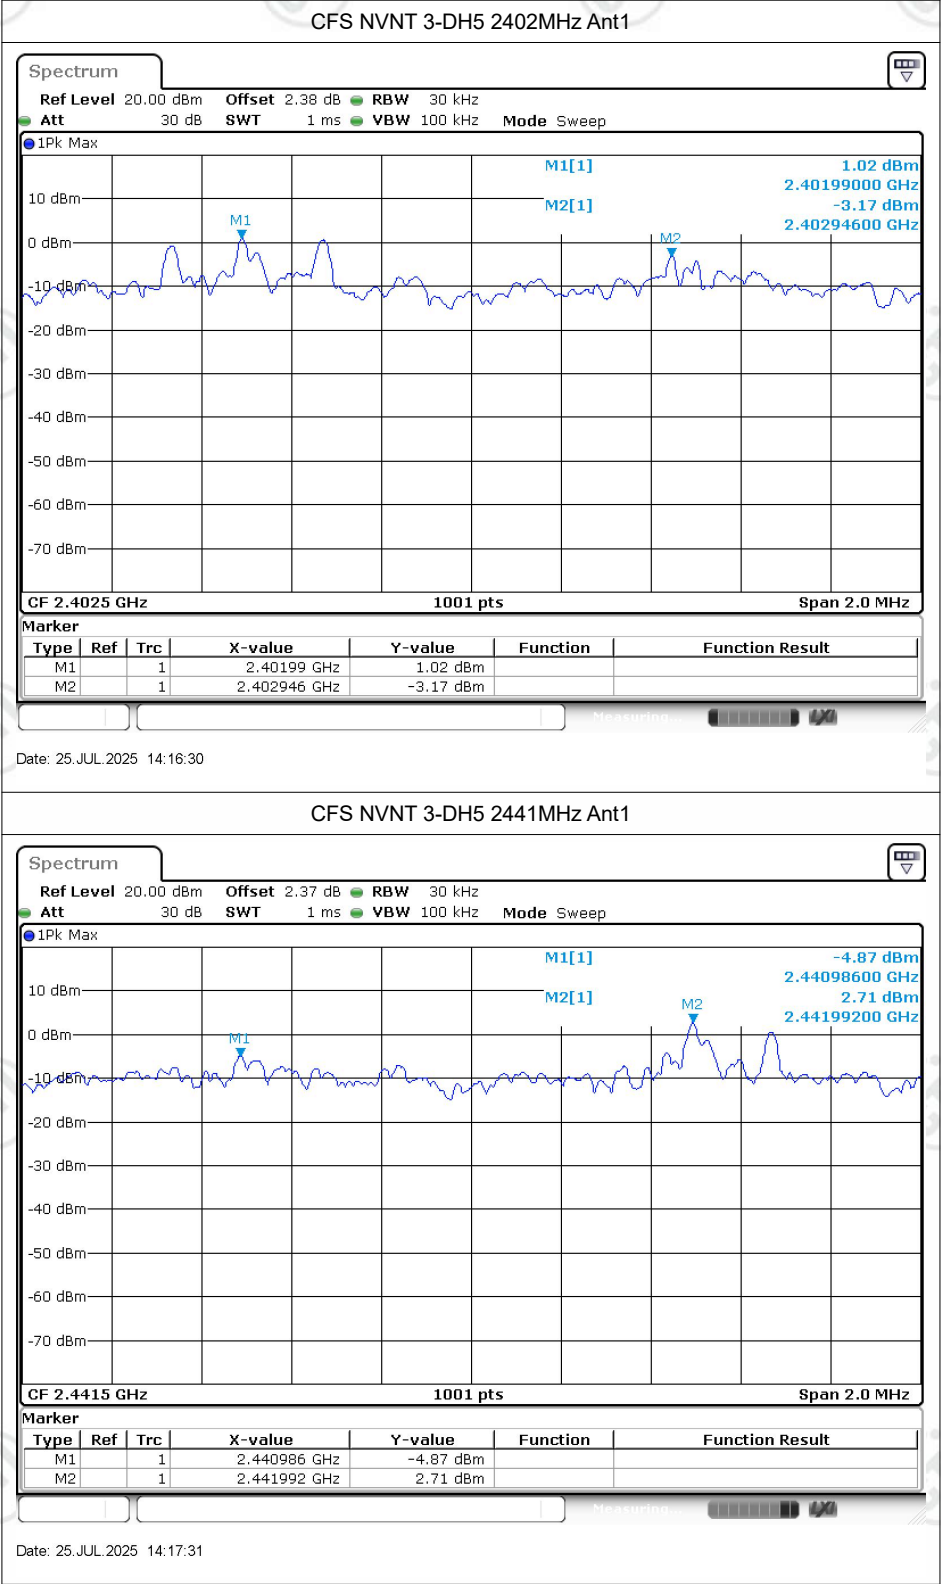

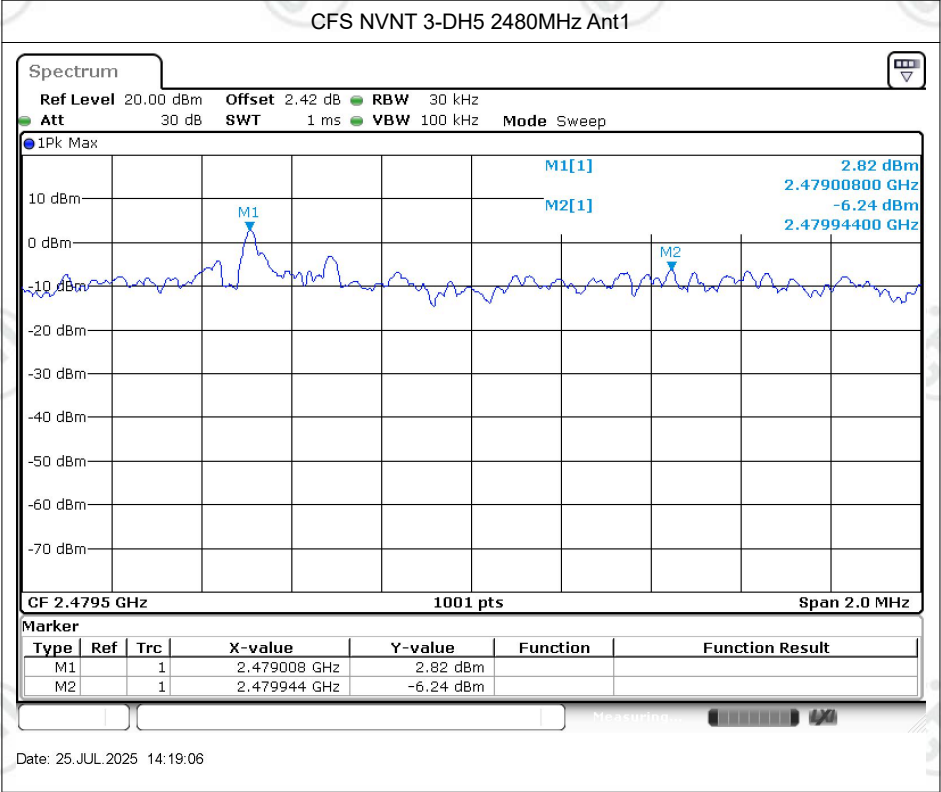

Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Hopping Mode	Max Value (dBc)	Limit (dBc)	Verdict
NVNT	1-DH5	2402	Ant1	No-Hopping	-59.05	-20	Pass
NVNT	1-DH5	2480	Ant1	No-Hopping	-57.23	-20	Pass
NVNT	2-DH5	2402	Ant1	No-Hopping	-56.38	-20	Pass
NVNT	2-DH5	2480	Ant1	No-Hopping	-59.69	-20	Pass
NVNT	3-DH5	2402	Ant1	No-Hopping	-57.71	-20	Pass
NVNT	3-DH5	2480	Ant1	No-Hopping	-60.64	-20	Pass

