



Appendix A. Test Result of AC Power Line Conducted Emission

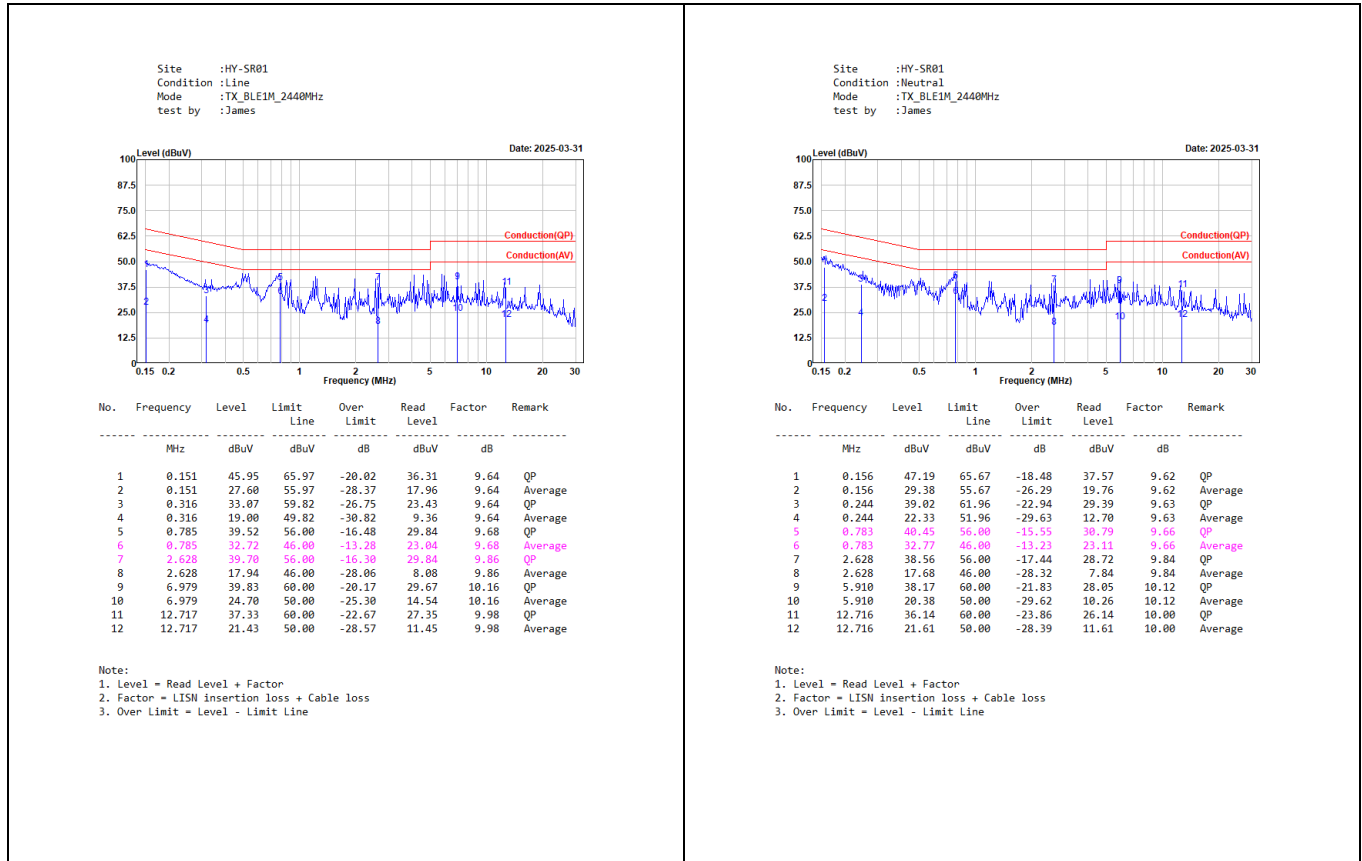


Charge Mode

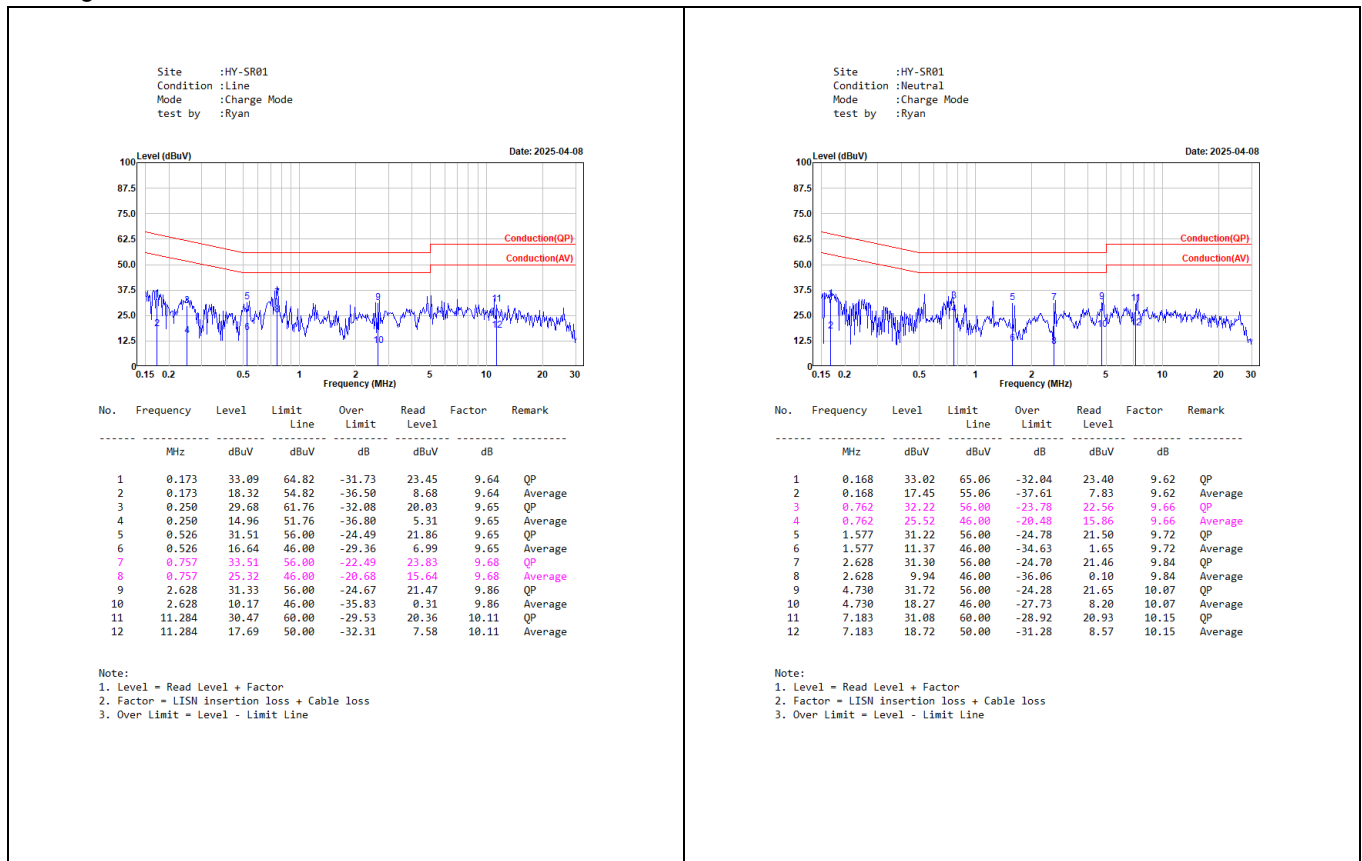

Appendix B. Test Result of 6dB Bandwidth

Modulation	Frequency (MHz)	6dB Bandwidth (MHz)	Limit (MHz)	Result
		Ant. 1		
GFSK (1Mbps)	2402	0.65	0.50	Pass
	2440	0.65	0.50	Pass
	2480	0.65	0.50	Pass

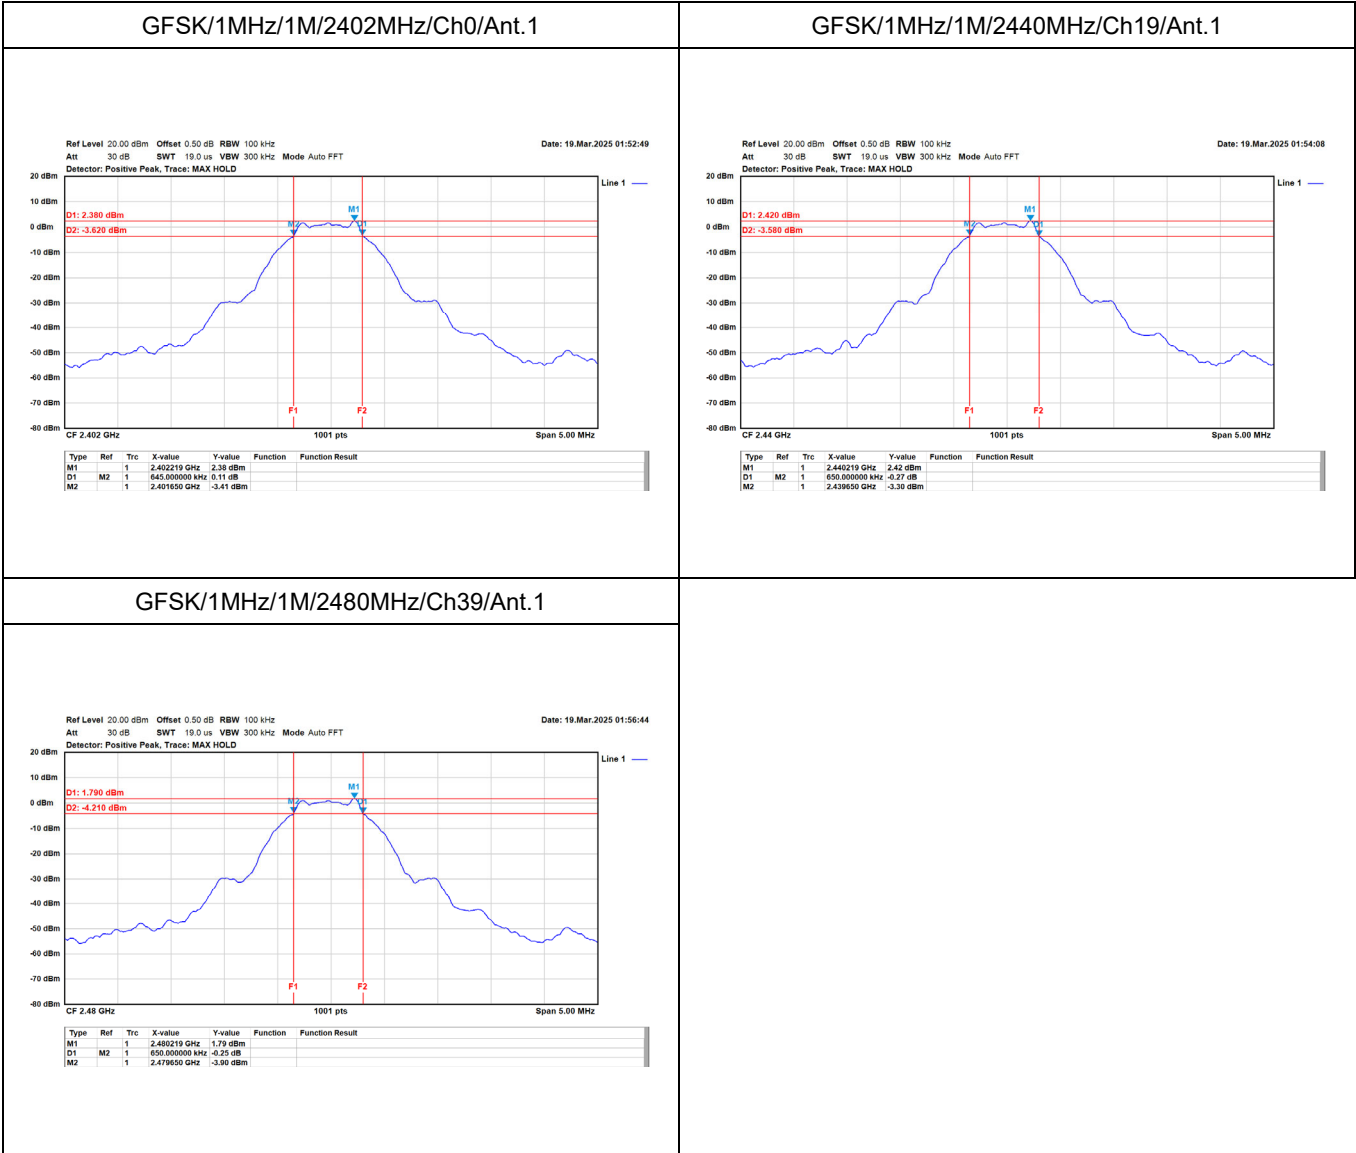


Appendix C. Test Result of Maximum Peak Conducted Output Power

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)	Limit (dBm)	Result
		Ant. 1		
GFSK (1Mbps)	2402	4.30	30.00	Pass
	2440	4.22	30.00	Pass
	2480	3.62	30.00	Pass


Appendix D. Test Result of Power Spectral Density


Modulation	Frequency (MHz)	Power Spectral Density (dBm / 3kHz)	Limit (dBm / 3kHz)	Result
		Ant. 1		
GFSK (1Mbps)	2402	-13.85	8.00	Pass
	2440	-13.92	8.00	Pass
	2480	-14.59	8.00	Pass

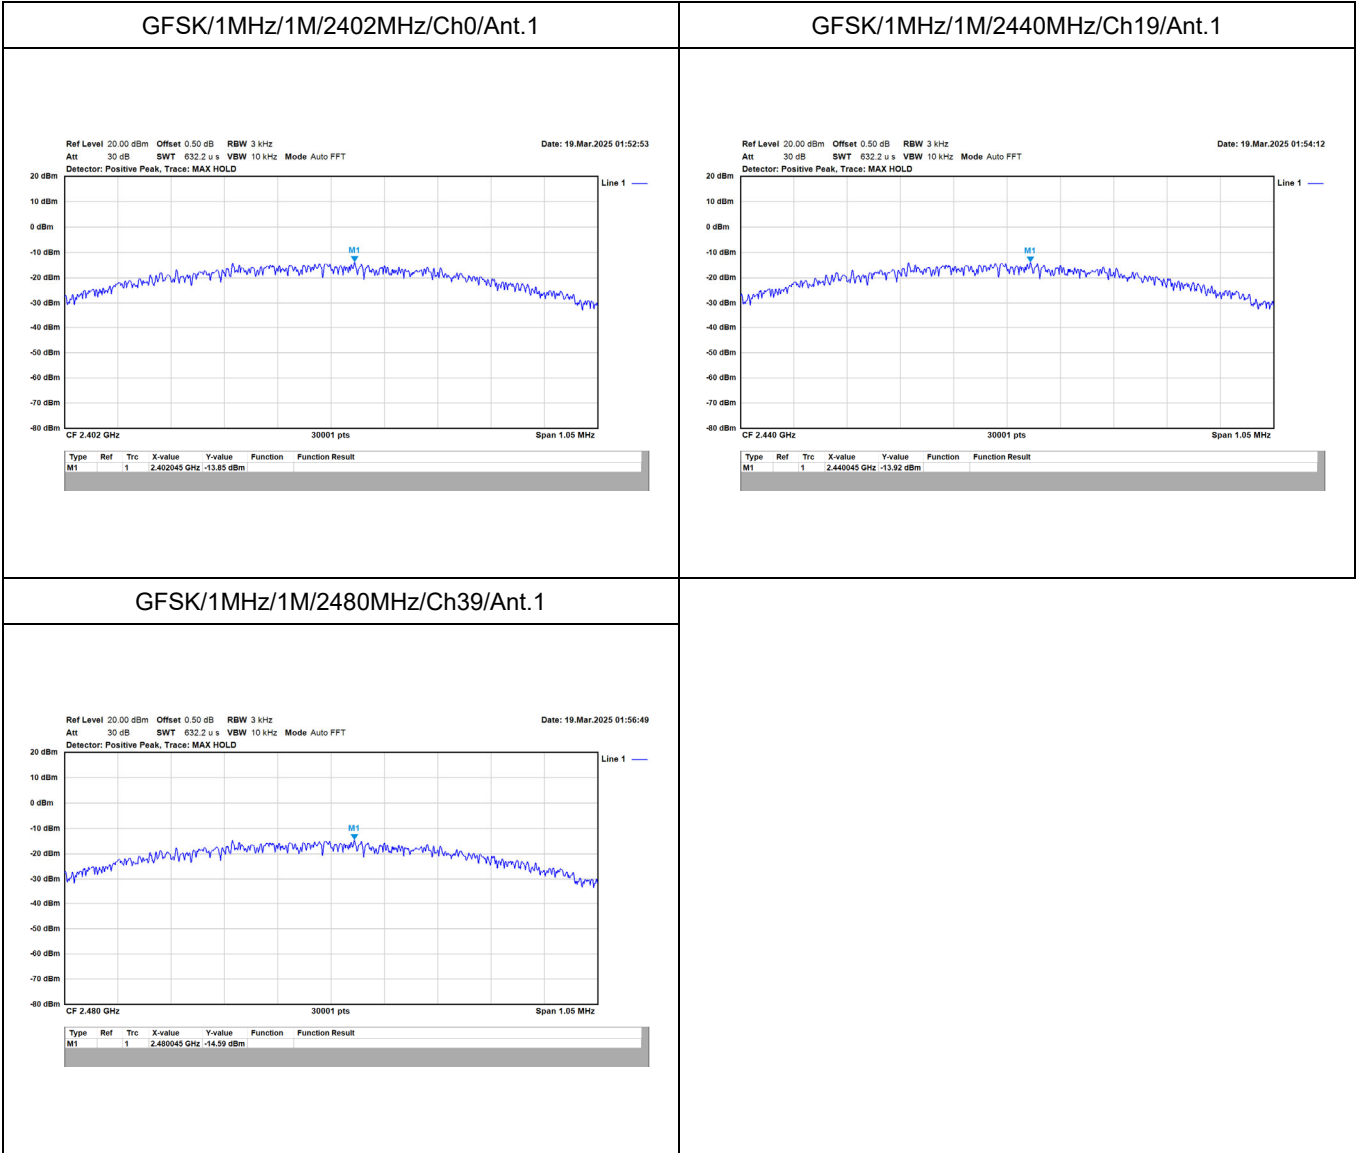

Appendix E. Test Result of Antenna Port Conducted Emission


Modulation	Measurement Level Δ (dB)	Result
GFSK (1 Mbps)	> 20	PASS

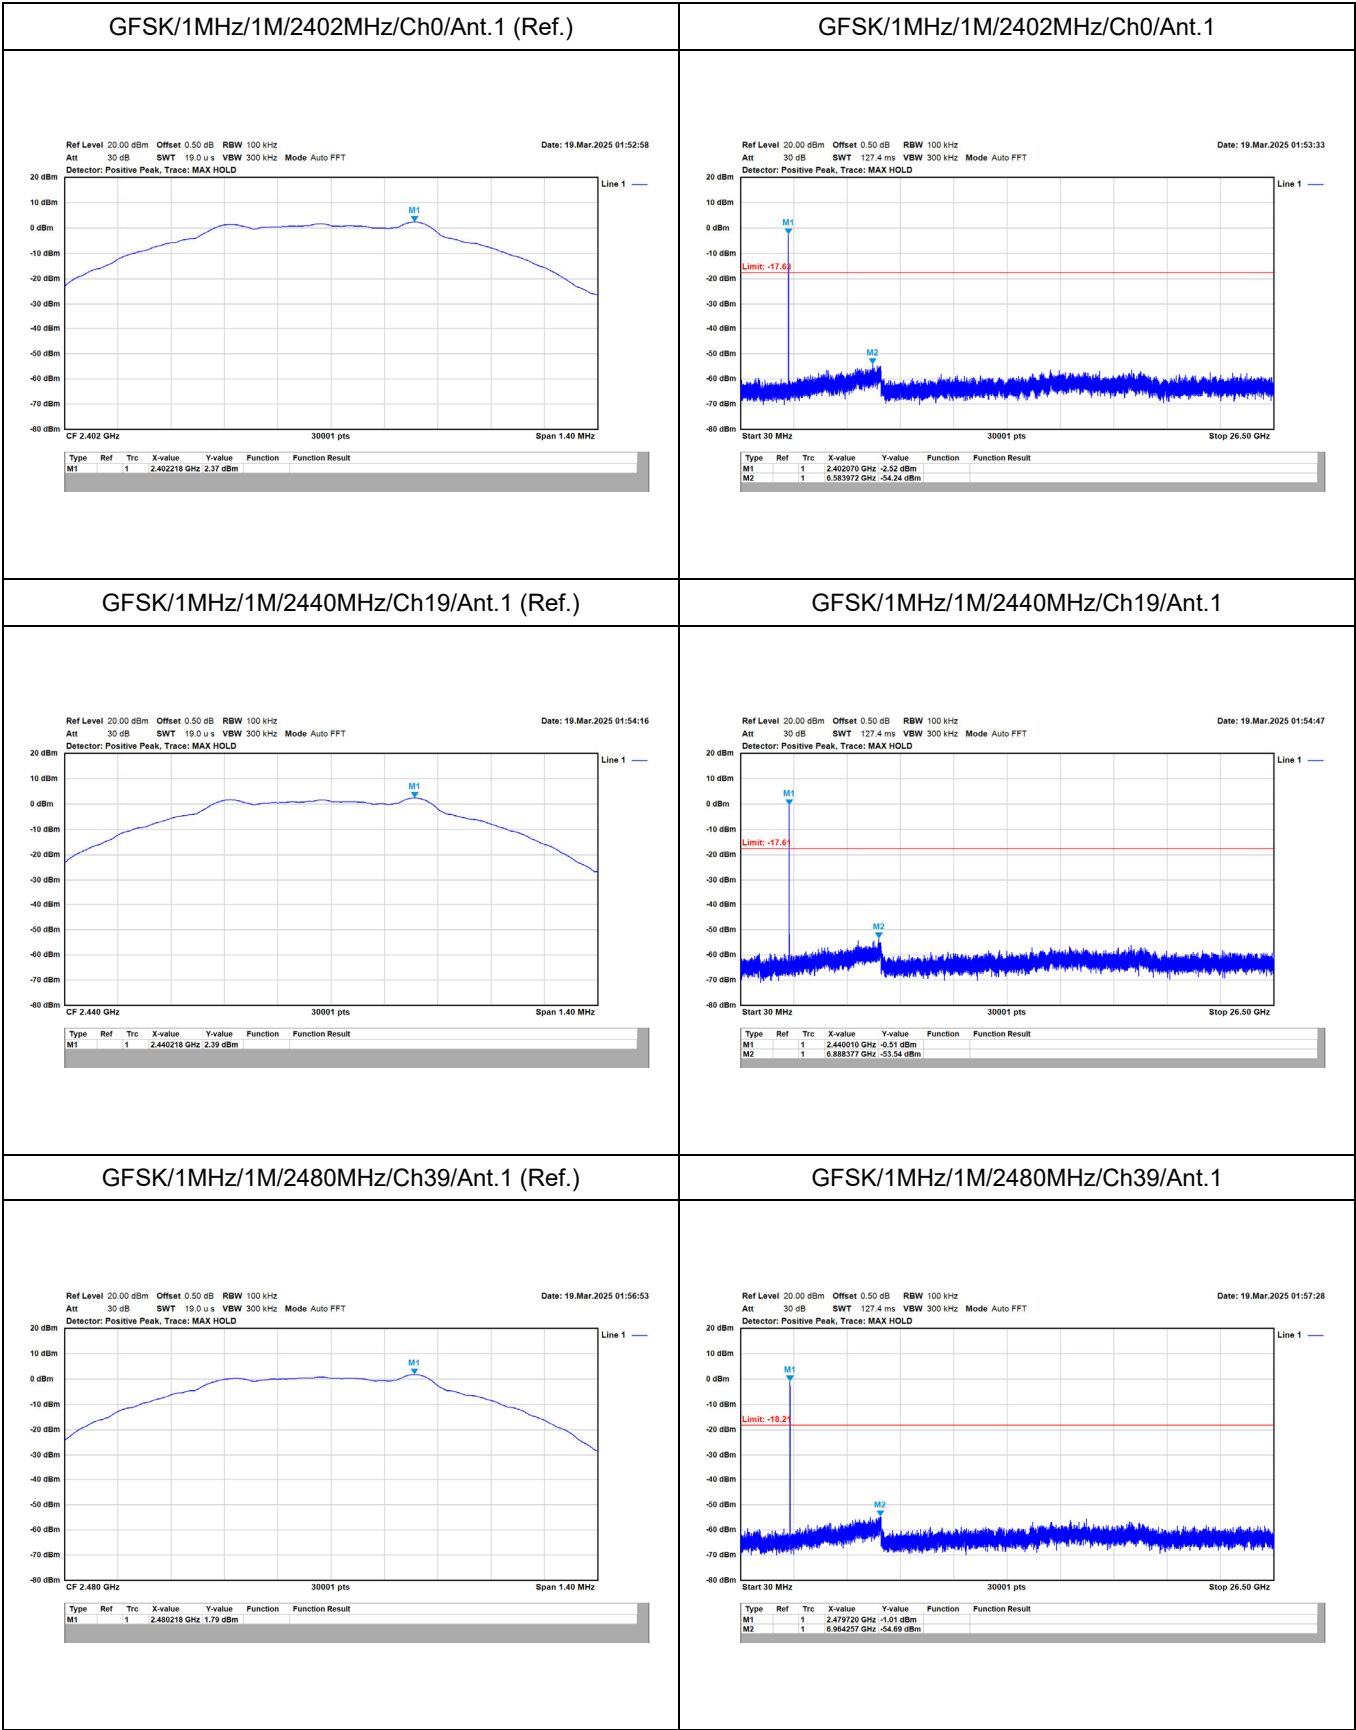

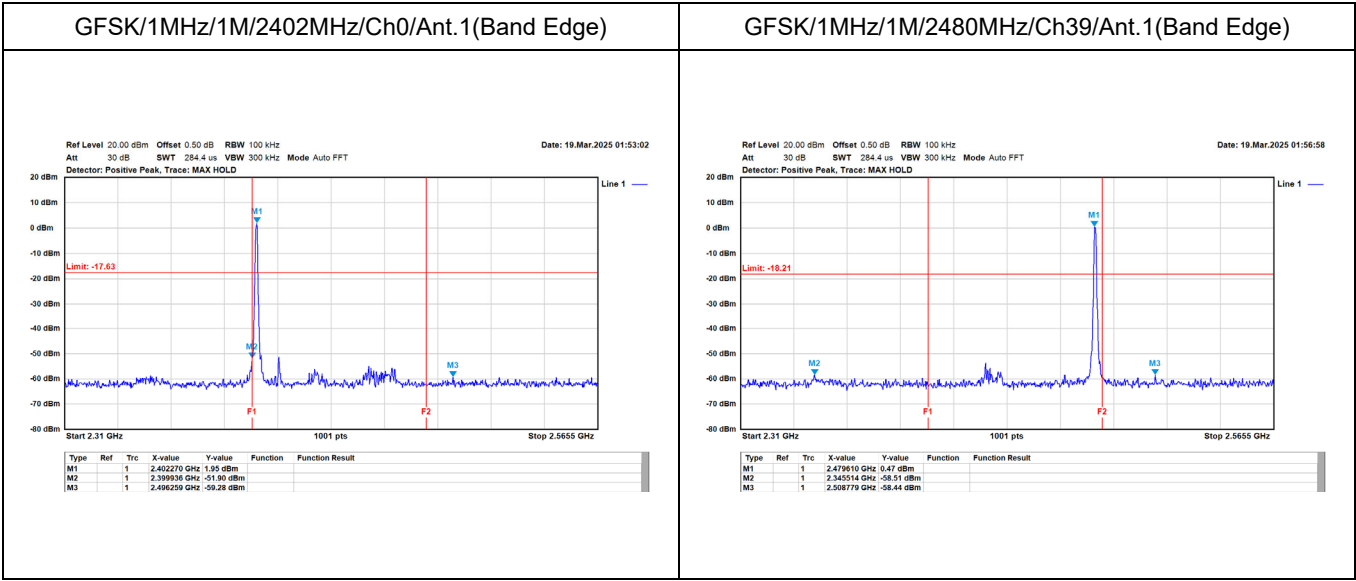

Appendix F. Test Result of Radiated Emission

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_BLE1M_2402MHz
Test by :Caster

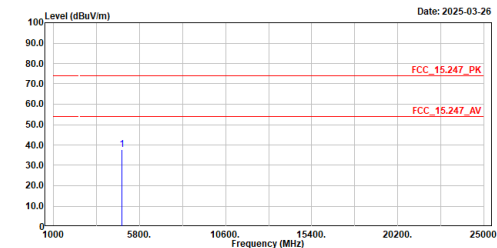


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4804.000	37.90	74.00	-36.10	45.16	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_BLE1M_2402MHz
Test by :Caster

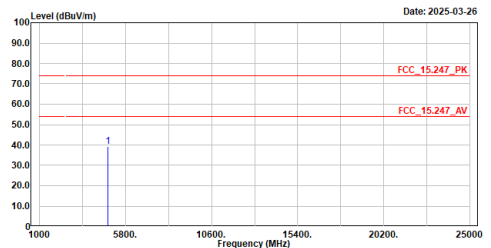


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4804.000	39.14	74.00	-34.86	46.40	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_BLE1M_2440MHz
Test by :Caster

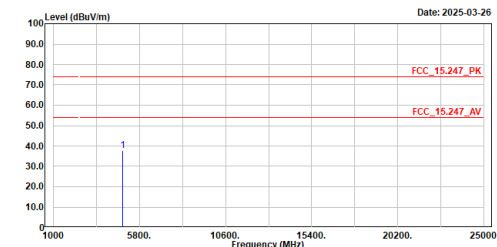


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4880.000	37.86	74.00	-36.14	44.76	-6.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_BLE1M_2440MHz
Test by :Caster

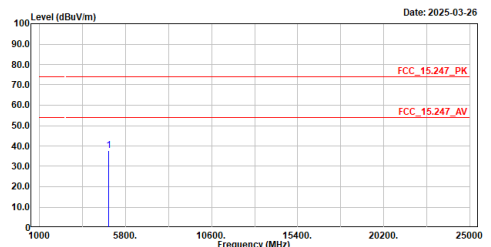


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4880.000	37.79	74.00	-36.21	44.69	-6.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_BLE1M_2480MHz
Test by :Caster

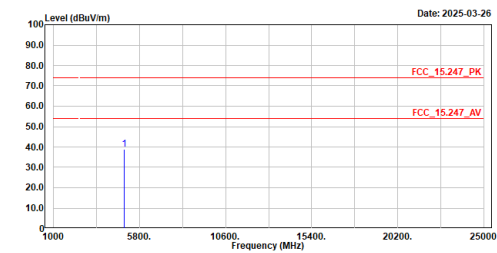


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4960.000	38.94	74.00	-35.06	45.55	-6.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_BLE1M_2480MHz
Test by :Caster

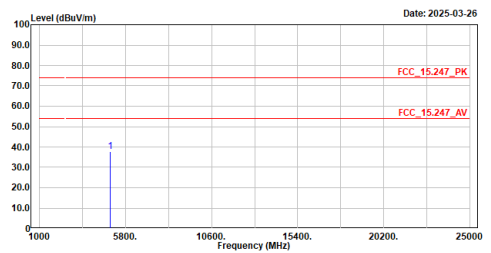


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4960.000	37.75	74.00	-36.25	44.36	-6.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_BLE1M_2440MHz
Test by :Caster

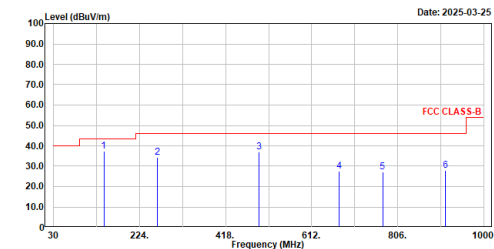


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	143.490	37.37	43.50	-6.13	62.14	-24.77	QP
2	263.770	34.17	46.00	-11.83	59.15	-24.98	QP
3	492.690	37.17	46.00	-8.83	56.01	-18.84	QP
4	674.000	27.58	46.00	-18.42	43.04	-15.46	QP
5	772.050	27.08	46.00	-18.92	40.50	-13.42	QP
6	912.700	28.08	46.00	-17.92	40.18	-12.10	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_BLE1M_2440MHz
Test by :Caster

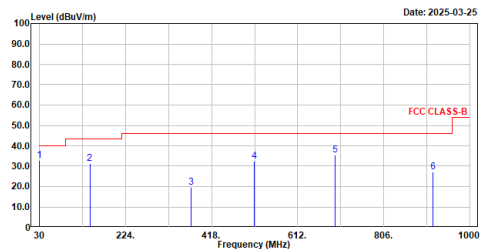


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	30.000	32.72	40.00	-7.28	58.25	-25.53	QP
2	143.490	31.47	43.50	-12.03	56.24	-24.77	QP
3	372.410	19.44	46.00	-26.56	41.20	-21.76	QP
4	515.000	32.27	46.00	-13.73	50.60	-18.33	QP
5	696.390	35.62	46.00	-10.38	50.33	-14.71	QP
6	917.550	27.18	46.00	-18.82	39.16	-11.98	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Charge Mode

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :Charge mode
Test by :Caster

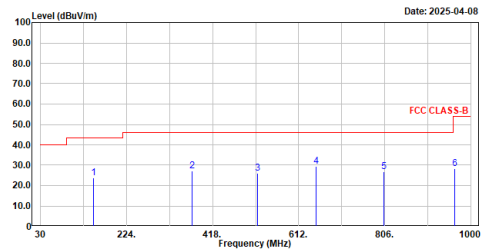


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
		dBuV/m		dB	dBuV	dB/m	
1	150.280	23.93	43.50	-19.57	48.44	-24.51	QP
2	372.410	27.14	46.00	-18.86	48.90	-21.76	QP
3	518.880	26.23	46.00	-19.77	44.53	-18.30	QP
4	651.770	29.28	46.00	-16.72	44.83	-15.55	QP
5	804.060	26.90	46.00	-19.10	40.10	-13.20	QP
6	963.140	28.14	54.00	-25.86	39.62	-11.48	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :Charge mode
Test by :Caster

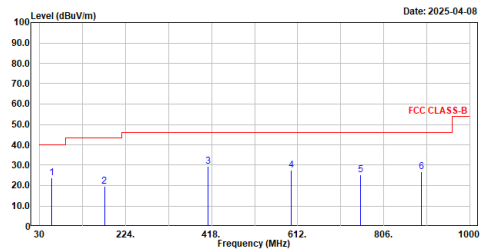


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
		dBuV/m		dB	dBuV	dB/m	
1	57.160	23.94	40.00	-16.06	48.46	-24.52	QP
2	176.470	19.70	43.50	-23.80	45.36	-25.66	QP
3	409.270	29.59	46.00	-16.41	50.26	-20.67	QP
4	597.450	27.59	46.00	-18.41	43.75	-16.16	QP
5	754.590	25.16	46.00	-20.84	38.96	-13.80	QP
6	891.360	26.61	46.00	-19.39	39.06	-12.45	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_BLE1M_2402MHz
Test by :Caster

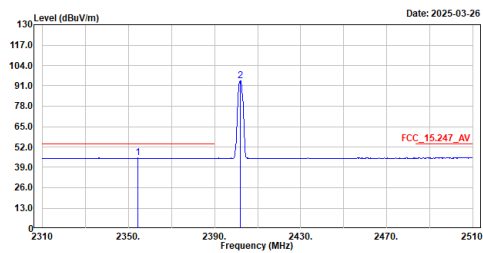


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2354.400	45.01	54.00	-8.99	14.67	30.34	Average
2	2402.000	94.28	-----	-----	64.00	30.28	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_BLE1M_2402MHz
Test by :Caster

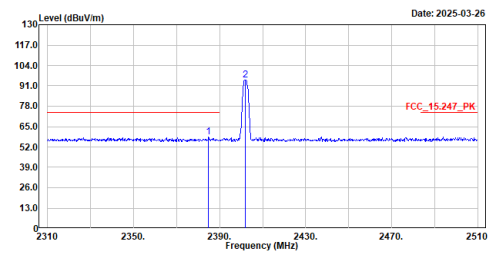


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2384.800	58.20	74.00	-15.80	27.83	30.37	Peak
2	2401.800	94.91	-----	-----	64.63	30.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_BLE1M_2402MHz
Test by :Caster

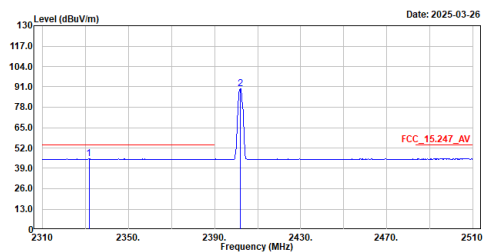


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2331.600	45.00	54.00	-9.00	14.60	30.40	Average
2	2402.000	89.75	-----	-----	59.47	30.28	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_BLE1M_2402MHz
Test by :Caster

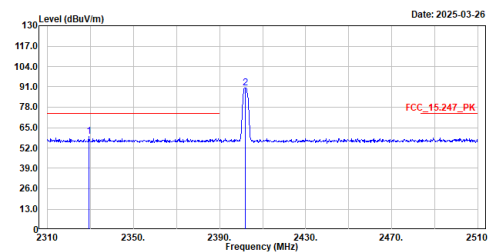


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2329.400	59.54	74.00	-14.46	29.13	30.41	Peak
2	2402.000	90.40	-----	-----	60.12	30.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_BLE1M_2480MHz
Test by :Caster

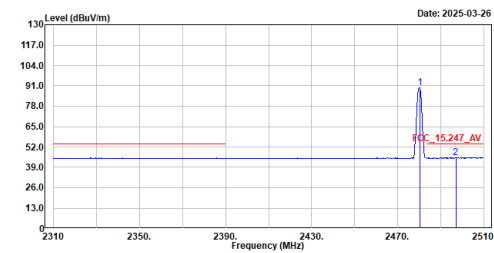


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	2480.200	89.71	-----	-----	59.45	30.26	Average
2	2497.000	45.07	54.00	-8.93	14.70	30.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_BLE1M_2480MHz
Test by :Caster

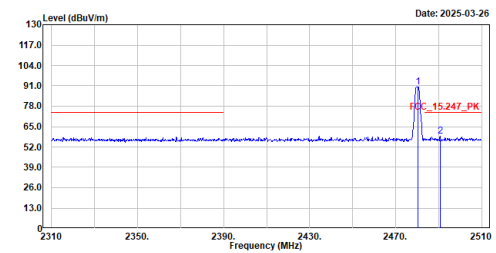


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	2480.200	90.50	-----	-----	60.24	30.26	Peak
2	2490.600	58.95	74.00	-15.05	28.58	30.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_BLE1M_2480MHz
Test by :Caster

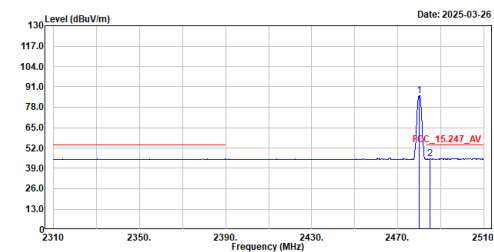


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	2480.000	85.21	-----	-----	54.95	30.26	Average
2	2485.000	45.10	54.00	-8.90	14.79	30.31	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_BLE1M_2480MHz
Test by :Caster

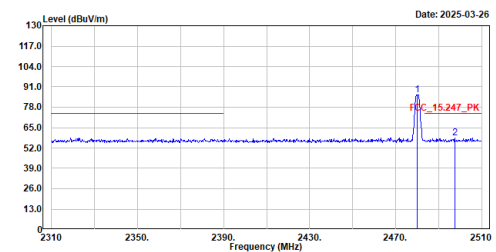

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	2480.000	85.90	-----	-----	55.64	30.26	Peak
2	2497.400	58.17	74.00	-15.83	27.80	30.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.