

Instruction Manual

BLE Alarm Cube

Extra Loud Alarm Sound






[For iPod, iPhone and iPad User]

Main Unit

Location of Control

1. Snooze button / LED indicator
2. Alarm
3. Pair
4. Reset
5. Battery Compartment
6. Battery door

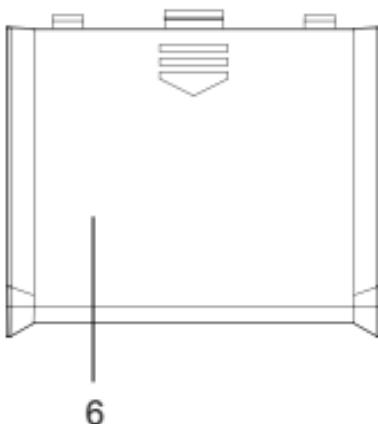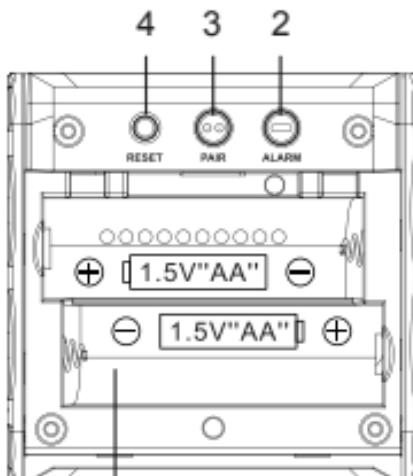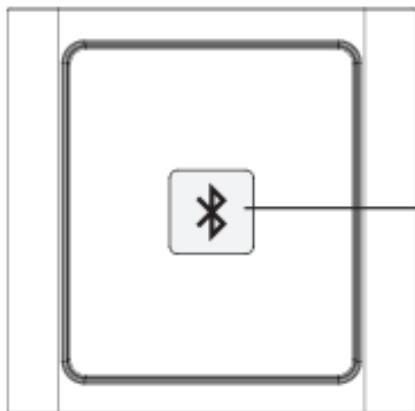

Features

Thank you for purchasing the Alarm Cube. This product is designed as a Alarm Cube by working with your iPad, iPhone, iPod or other iOS devices.



- Support iOS version 7 or above;
- Support Bluetooth version 4.0.
- Set wake up buzzer alarm with snooze function, up to 10 alarms.
- Take full control of the Alarm Cube with i-device app via Bluetooth Low Energy.
- Selectable alarm tone pattern and volume to different alarms.
- Set count down timer.
- Monitor the battery status of the Alarm Cube and have battery warning if it is at low level.

Before you start using it

- Please make sure to read the instruction manual carefully.
- Following and respecting the instructions in your manual will prevent damage to your instrument and loss of your statutory rights arising from defects due to incorrect use.
- We shall not be liable for any damage occurring as a result of non-following of these instructions. Likewise, we take no responsibility for any incorrect readings and for any consequences which may result from them.
- Please take particular note of the safety advice!
- Please keep this instruction manual for future reference.

Getting started

1. Install battery
 - 1.1 Open the battery compartment.
 - 1.2 Insert 2 x AA batteries in polarity (+) and (-) as indicated.
 - 1.3 Close the battery compartment.

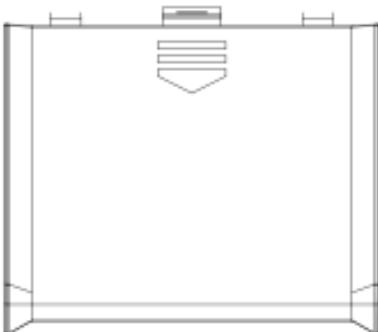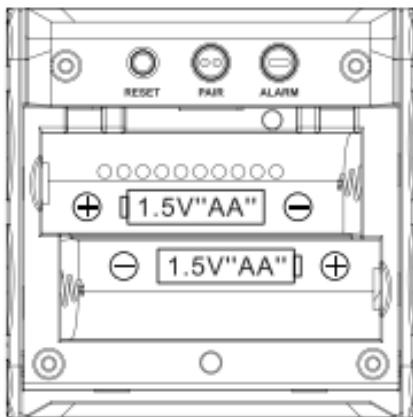


2. Install BleAlarm App on your idevice.
 - 2.1 Access app store and search for BleAlarm
 - 2.2 Select and install BleAlarm App on your idevice.





Pairing the Alarm Cube

3. Pair the Alarm Cube with BleAlarm app.
 - 3.1 Before running the BleAlarm app, make sure the Bluetooth is turned ON at your i-device.
 - 3.2 After you tap the app icon  , the 'Nearby Devices' screen appears. You need to pair the Alarm Cube device before you enter the main app screen.

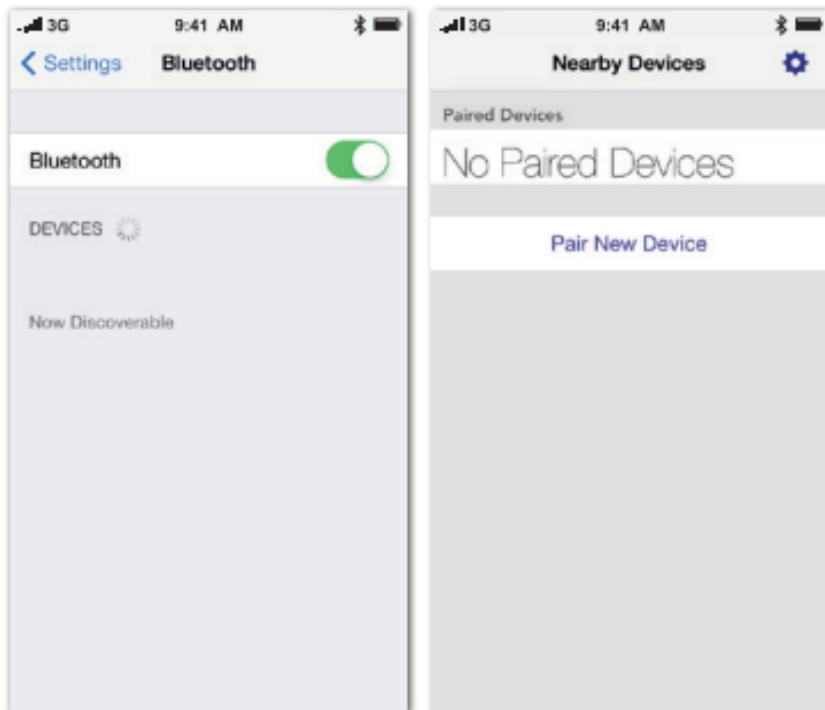

Pairing the Alarm Cube

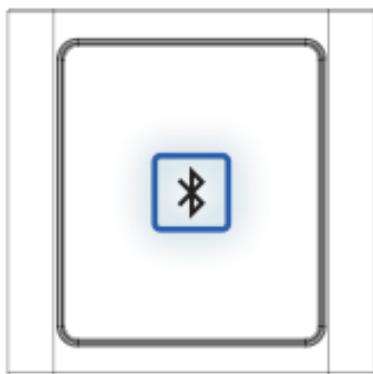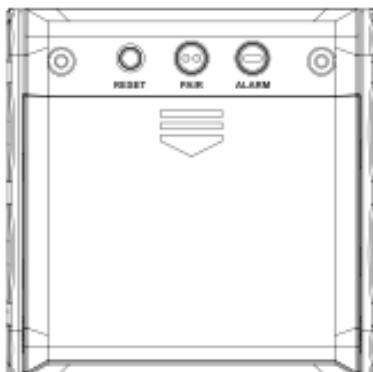


3.3 Tap "Pair New Device" to search for nearby devices.

3.4 Press and hold the [PAIR] button on the Alarm Cube device for 5 seconds. You can find that the flashing LED will turn from red to blue.

3.5 The new Alarm Cube will be displayed on App and is ready for pairing. Tap the "New Alarm Cube" will start the pairing and connection process. Once the Alarm Cube is paired, it will start time and data synchronization.

Pairing the Alarm Cube


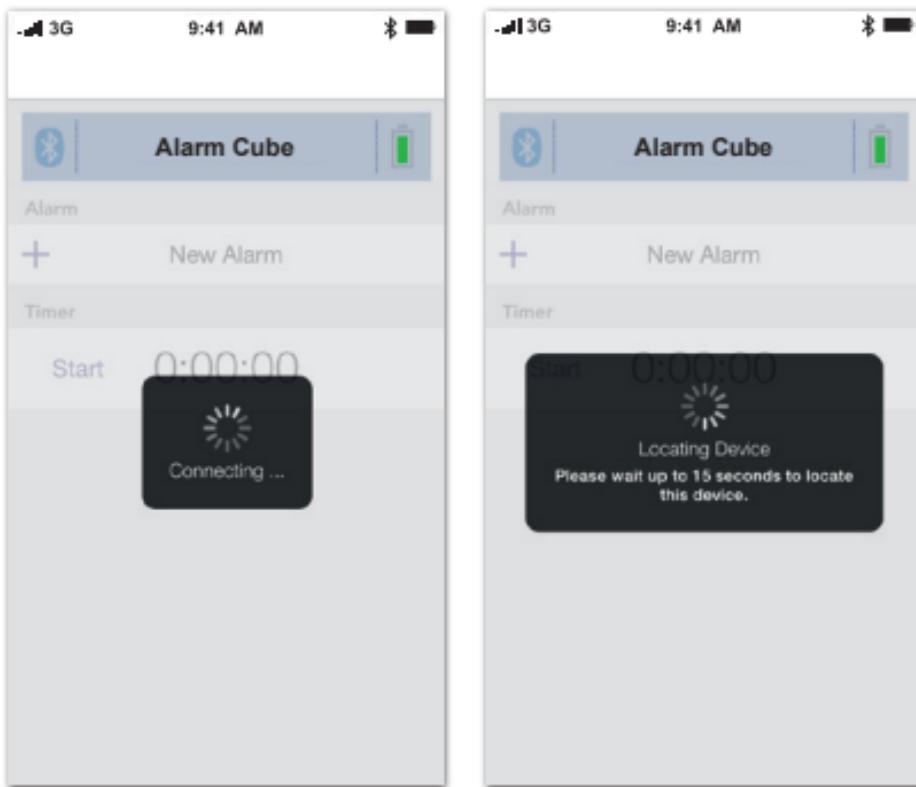


- 3.6 After the connection is made, the following information will be synchronized:
 - i) Current time and date
 - ii) Alarms & timer setting
 - iii) Unit battery level
- 3.7 When the Alarm Cube is paired with one i-device, other i-devices cannot pair with it again.
- 3.8 One iDevice can pair up to 5 Alarm Cube.

Rename the Alarm Cube

4. Rename the device.

Tap the device name (default is "Alarm Cube") at the top of the screen to edit the Alarm Cube device name.

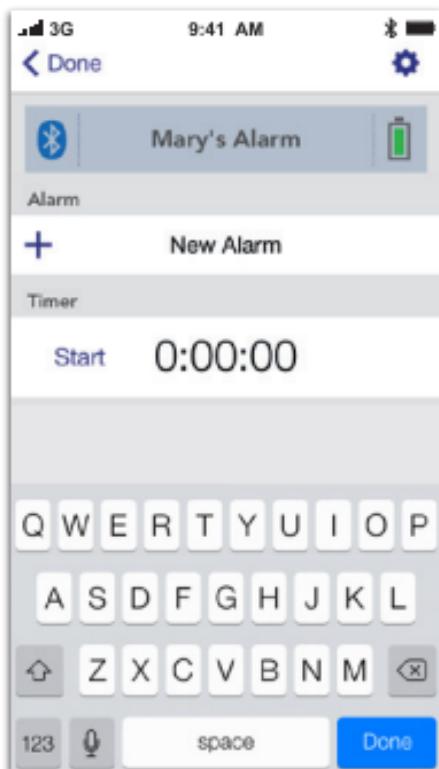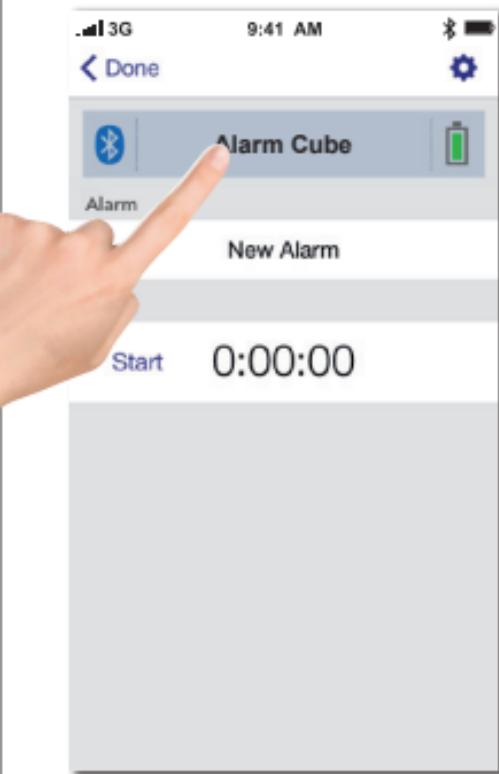

Battery status indicator


5. Battery status indicator

It indicates the battery level of your Alarm Cube device. While the battery level drops below 20%, the battery icon is in red status and a low battery warning is popped up for battery replacement remainder.

Above 60% 

Between
20% ~ 60% 


Below 20% 

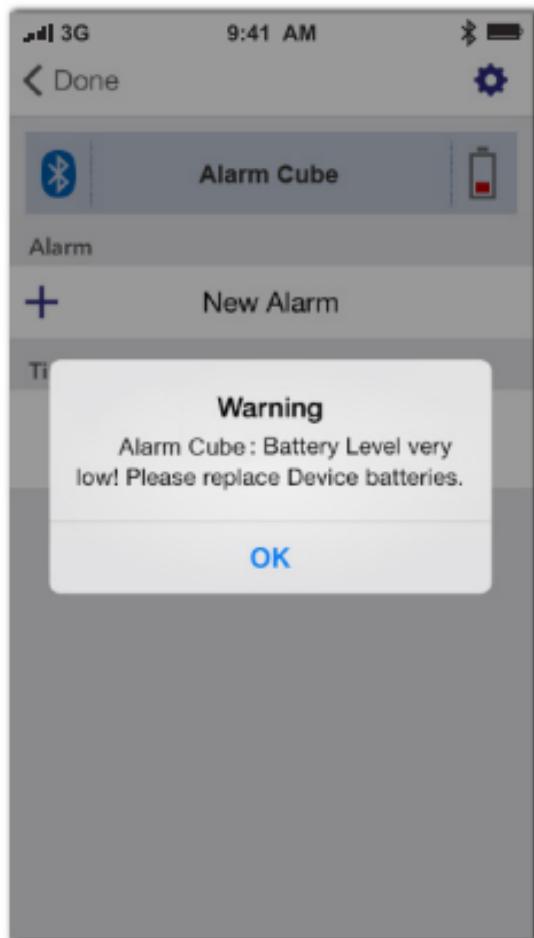

Setting the alarm time

6. Setting the alarm time

6.1 Tap [New Alarm] to create a new alarm or tap the existing alarm to modify.

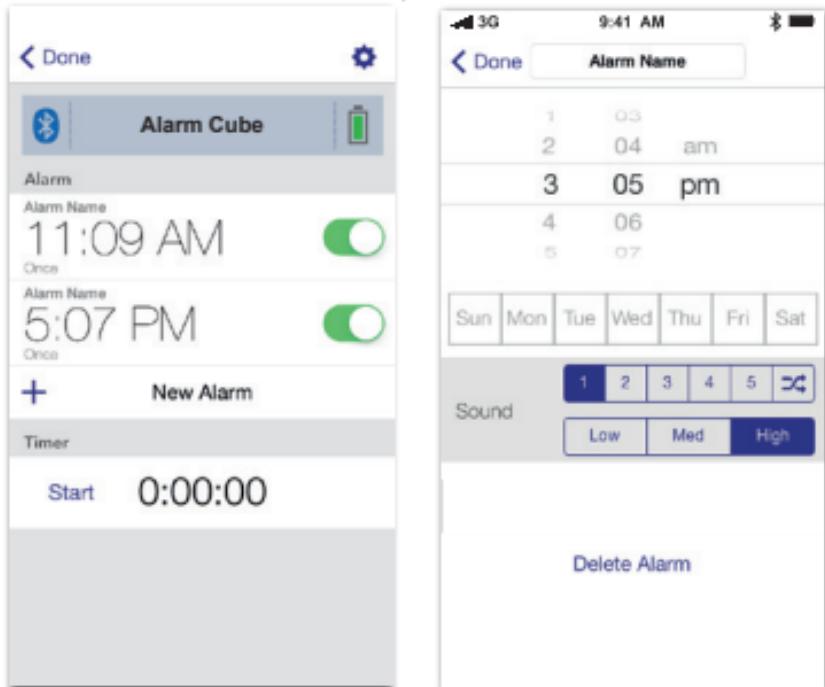

6.2 The alarm setting screen appears. You can edit and adjust different items on this screen, which include:

- Alarm Name: Tap to edit your preferred name to this alarm.
- Time: Tap to adjust the time for this alarm.
- Day of Week: Tap to select which day of week to enable the alarm.
 - If none is selected, it will be as a once alarm.
 - If all days are selected, it will be as a daily alarm.
- Sound pattern: Tap to select which tone pattern (5 options plus one random pattern available) is applied to this alarm.

Setting the alarm time

- v) Alarm volume level: Tap to select the alarm sound volume level (three options: Low, Med and High).

6.3 Complete the alarm setting.

- i) Tap [Done] to save the alarm setting and go back to main screen.
- ii) Tap [Cancel] to restore to the original alarm setting and go back to main screen.
- iii) Tap [Delete Alarm] to delete the current alarm and go back to main screen.

Snooze operation

7. Using the SNOOZE function


7.1 When the alarm sounds, press the [Snooze] button to stop alarm and the snooze will repeat three time every 5 minutes.

7.2 "Maximum Snooze" and "Snooze Duration" default value can be adjusted in the preference screen according to user own preference.




To turn off the alarm

8. To disable the alarm

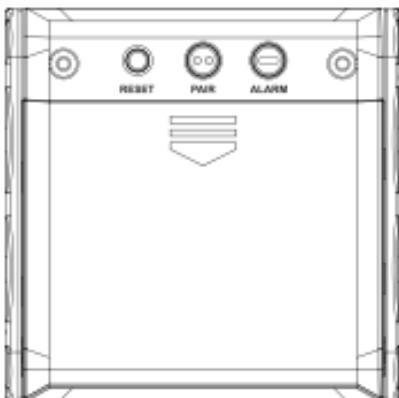

8.1 When the alarm sounds, press the [Snooze] button once or press [Alarm] to disable the alarm.

8.2 The alarm will sound for 1 minute and stop automatically. If Snooze Enabled setting is ON, the alarm will repeat every 5 minutes. You can press the [Snooze] button to interrupt the alarm momentarily, or can press [Alarm] button to turn off the alarm and stop the snooze function completely.


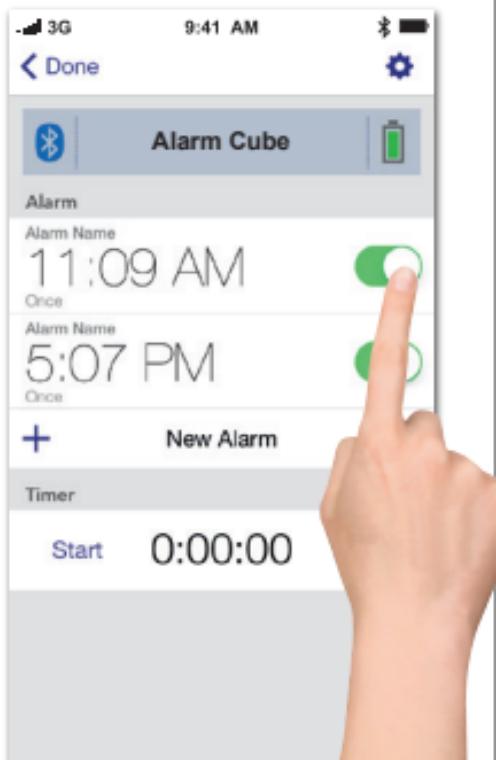


8.3 User can tap the alarm time to disable the alarm completely (Please make sure your app is paired with the device)

Setting the Timer

9. To set the timer

Tap timer of main screen and to go into timer screen.

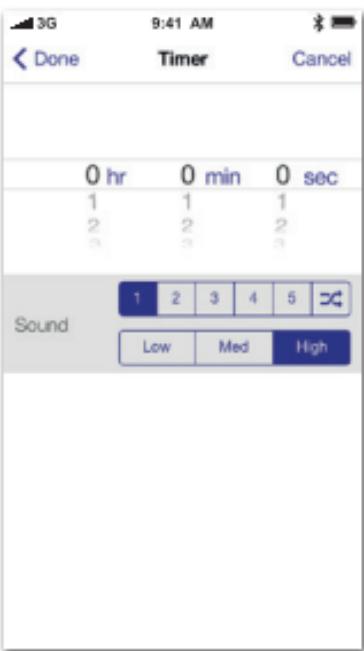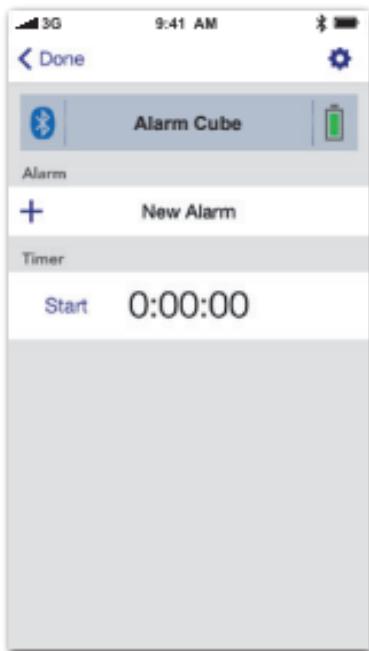

9.1 You can edit and adjust items below on this screen.

i) Timer period:

Turn the roller to adjust the timer period.

ii) Sound pattern:

Tap to select the tone pattern (5 options plus one random pattern available).


iii) Sound volume level:

Tap to select the sound volume level (three options: Low, Med and High).

Setting the timer

9.2 Using the Timer


In the Home screen, you can tap “Start” under Timer to start counting.

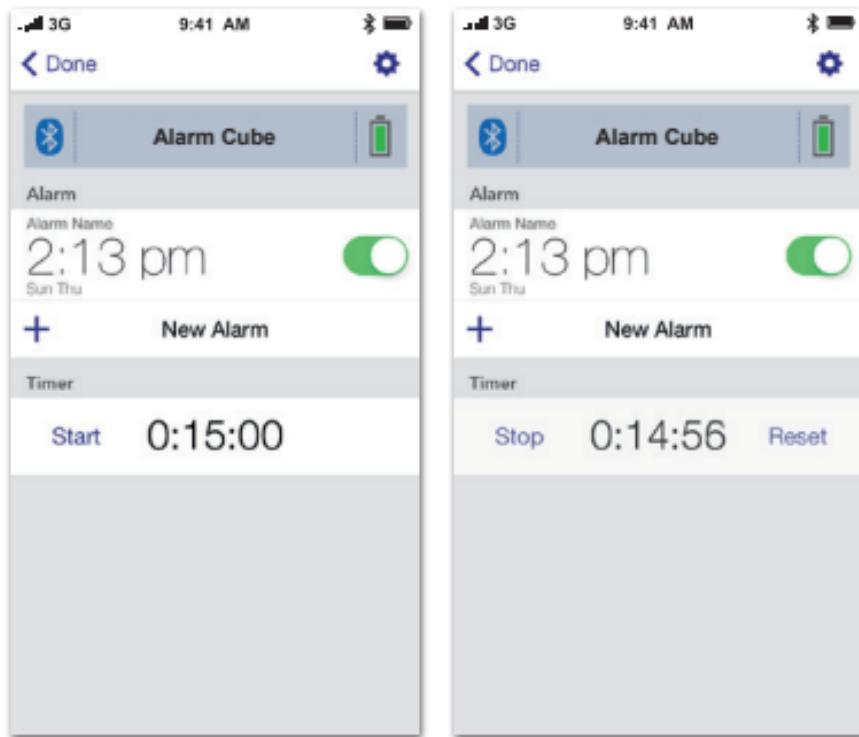

Then you can tap “Stop” to stop the current timer and “Start” to re-continue the timer again. The timer can be reset by tapping the [Reset].

Delete the Alarm Cube record

10. Delete the Alarm Cube record.

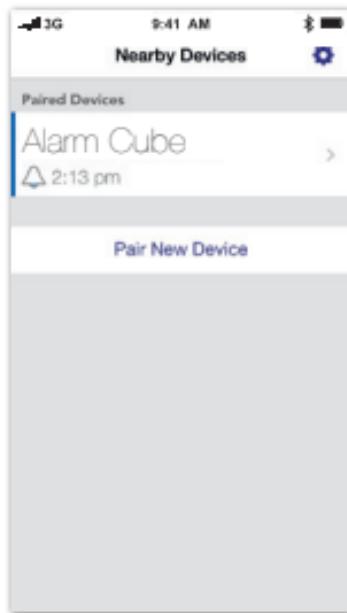

You can tap the  at Nearby Devices screen to enter the Known Devices page. By tapping "Edit" and then the  , you can select "Delete" to delete the Alarm Cube record on the current device.



Preference

11) Preference setting

Tap the  to enter the Preference screen. You can edit and adjust the following items on this screen.



11.1 Snooze Enabled: Tap to select ON/OFF to enable/disable the Snooze functionality. If 'Snooze Enabled' is ON, you will have two more options, which are:

Maximum Snoozes: The maximum number of times to repeat the snooze function, which can be set to Unlimited or values from 1 to 9.


Snooze Duration: The time interval between snooze function, which can be set to values from 1 to 15 minutes.

Preference


- 11.2 Alarm Sound Duration: The alarm duration, which can be set to values from 1 to 15 minutes.
- 11.3 Auto DST update: It will adjust Daylight Saving Time (DST) automatically based on your idevice time zone setting. The alarm clock will be automatically one hour ahead of Standard Time in summer time and will be back to the normal Standard Time when back to winter time, according to your idevice's time zone.
- 11.4 Device Version: The Alarm Cube firmware version is shown for reference.
Tap [Done] to save the setting or Tap [Cancel] to restore the setting, and then go back to main screen.

Reset the Vibration Alarm

12. Reset the Alarm Cube

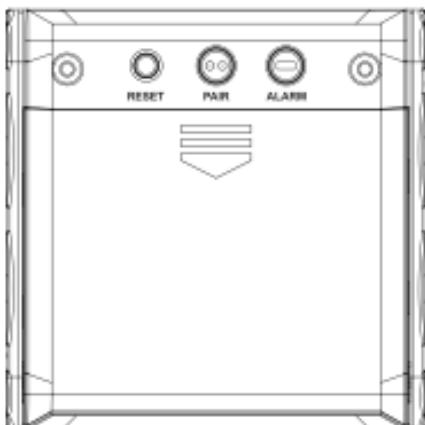

If the Alarm Cube is not working properly, press RESET button with a pointed object, the LED flashes twice in (purple) color. Then the LED will flash once per 6 seconds in red color.

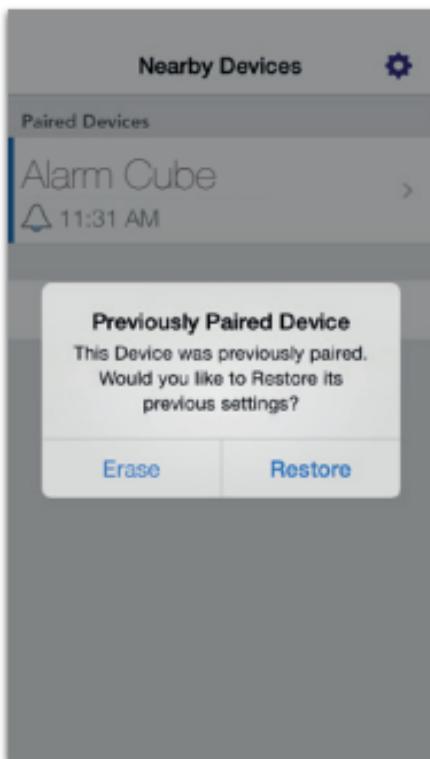

After reset, all data in the Alarm Cube is deleted. And you need to press and hold the [PAIR] button again to re-pair the Alarm Cube. If it has been paired previously with the same i-device, you can select "Restore" to restore all setting and data or select "Erase" to start all from scratch.

Care Of Your Vibration Alarm

- The unit shall not be exposed to dripping or splashing.
- Do not expose the unit and batteries to humid, rain, sand or excessive heat caused by heating equipment.
- No objects filled with liquids, such as vases, shall be placed on the unit.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- Do not cover the unit. Adequate space with a small gap between the buzzer holes and surrounding surfaces.
- To clean the set, use a soft dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

Disposal of Your Old Product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.



Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Disposal of Flat Batteries / Accumulators

You, as the end user, are legally obliged (**Battery Ordinance**) to return all flat batteries and rechargeable batteries.

Disposal in the household waste is prohibited.

“European Directive 2006/66/EC” Batteries, including rechargeable batteries, which contain hazardous substances are marked by symbols which indicate the prohibition of disposal in the household waste.



The designations for the heavy metals concerned are as follows:



Cd = cadmium, **Hg** = mercury, **Pd** = lead. You can return flat batteries / rechargeable batteries free of charge to the collection points in your community or anywhere where batteries / rechargeable batteries are sold.

You thus fulfil your statutory obligations and help protect the environment.

Caution

Replace only with the same or equivalent type of battery, please refer to the engraved battery marks inside the battery compartment for the correct battery polarity (+) and (-). Danger of explosion is possible if battery is incorrectly replaced.

This product complies with the requirement of the 1999/5/EC directive. Use this unit and mobile phone only in environments with ambient temperatures between 0°C and 35°C.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Japan Radio Law Statement

This product contains the certified module by Japan Radio Law.

The certification number is  018-140077.

BAC