




802.11n/20MHz/MCS0/5260MHz/Ch52/Ant.1

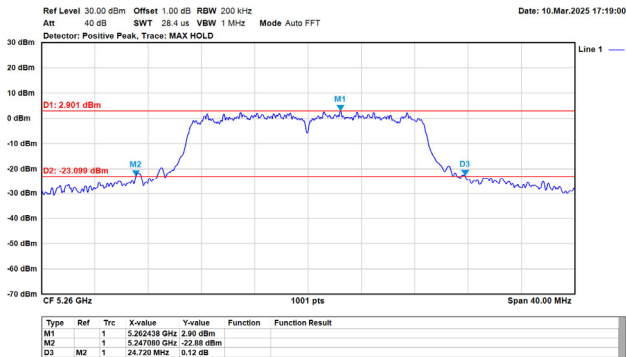


802.11n/20MHz/MCS0/5300MHz/Ch60/Ant.1

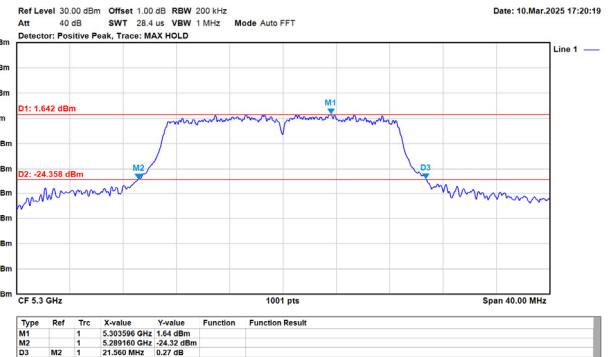


802.11n/20MHz/MCS0/5320MHz/Ch64/Ant.1

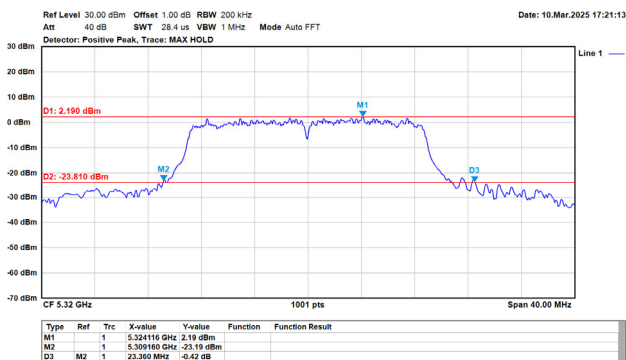


802.11n/20MHz/MCS0/5500MHz/Ch100/Ant.1

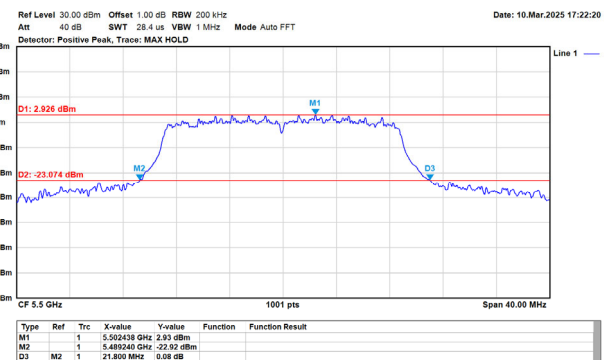


802.11n/20MHz/MCS0/5580MHz/Ch116/Ant.1

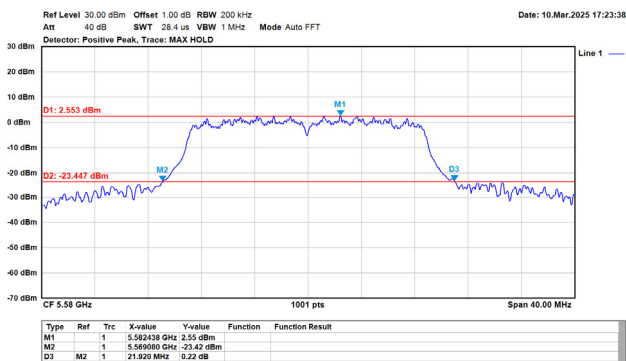


802.11n/20MHz/MCS0/5700MHz/Ch140/Ant.1

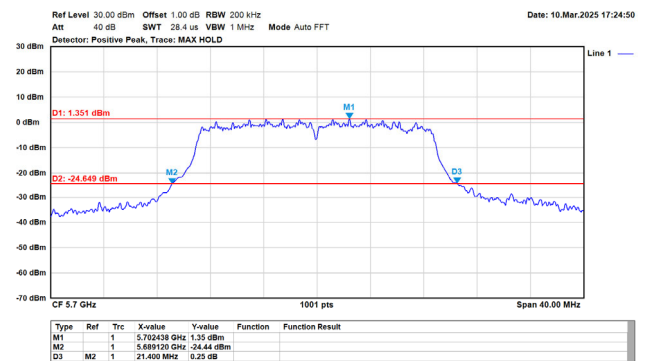


802.11n/40MHz/MCS0/5190MHz/Ch38/Ant.1

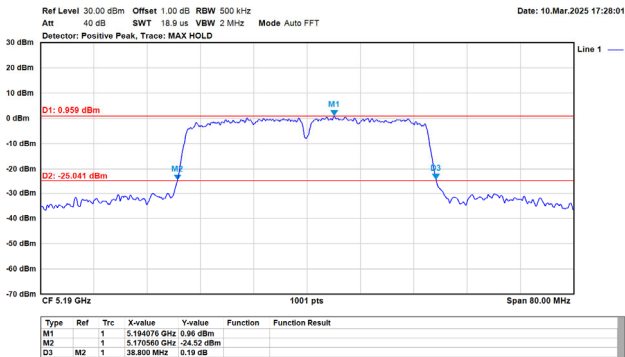


802.11n/40MHz/MCS0/5230MHz/Ch46/Ant.1

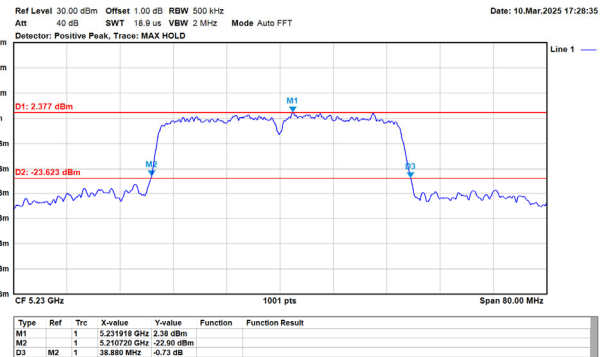


802.11n/40MHz/MCS0/5270MHz/Ch54/Ant.1

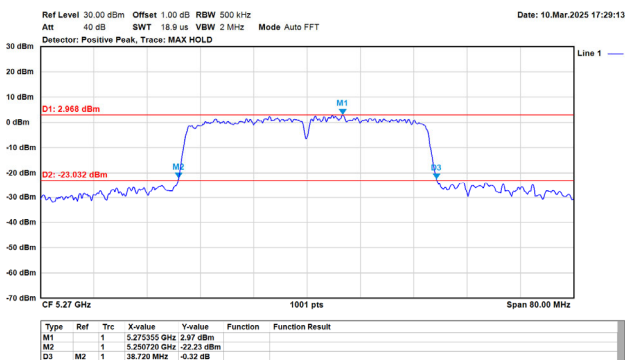


802.11n/40MHz/MCS0/5310MHz/Ch62/Ant.1

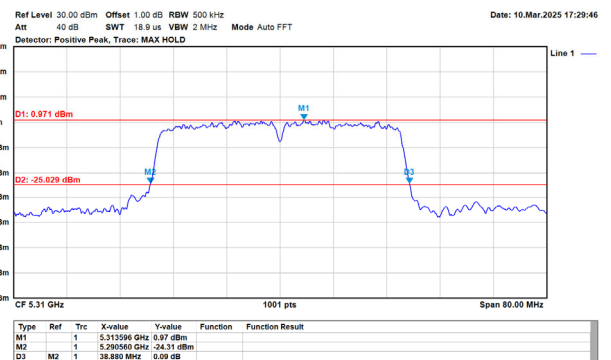


802.11n/40MHz/MCS0/5510MHz/Ch102/Ant.1

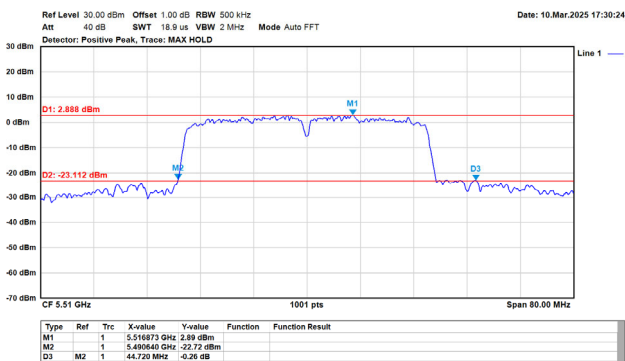


802.11n/40MHz/MCS0/5550MHz/Ch110/Ant.1

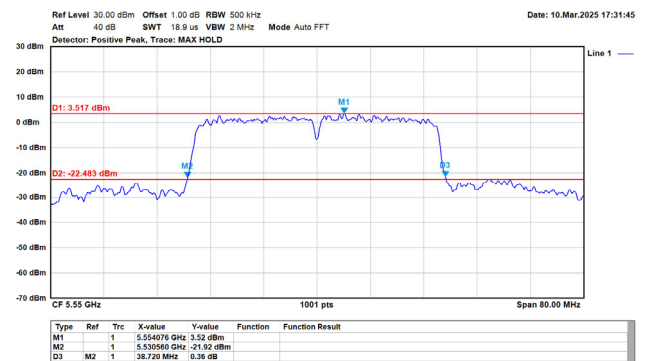


802.11n/40MHz/MCS0/5670MHz/Ch134/Ant.1

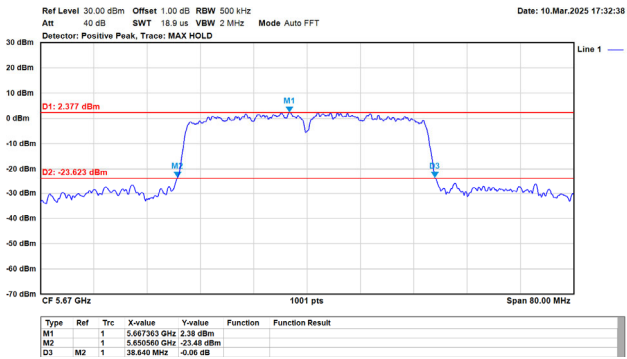

For 6dB Bandwidth:

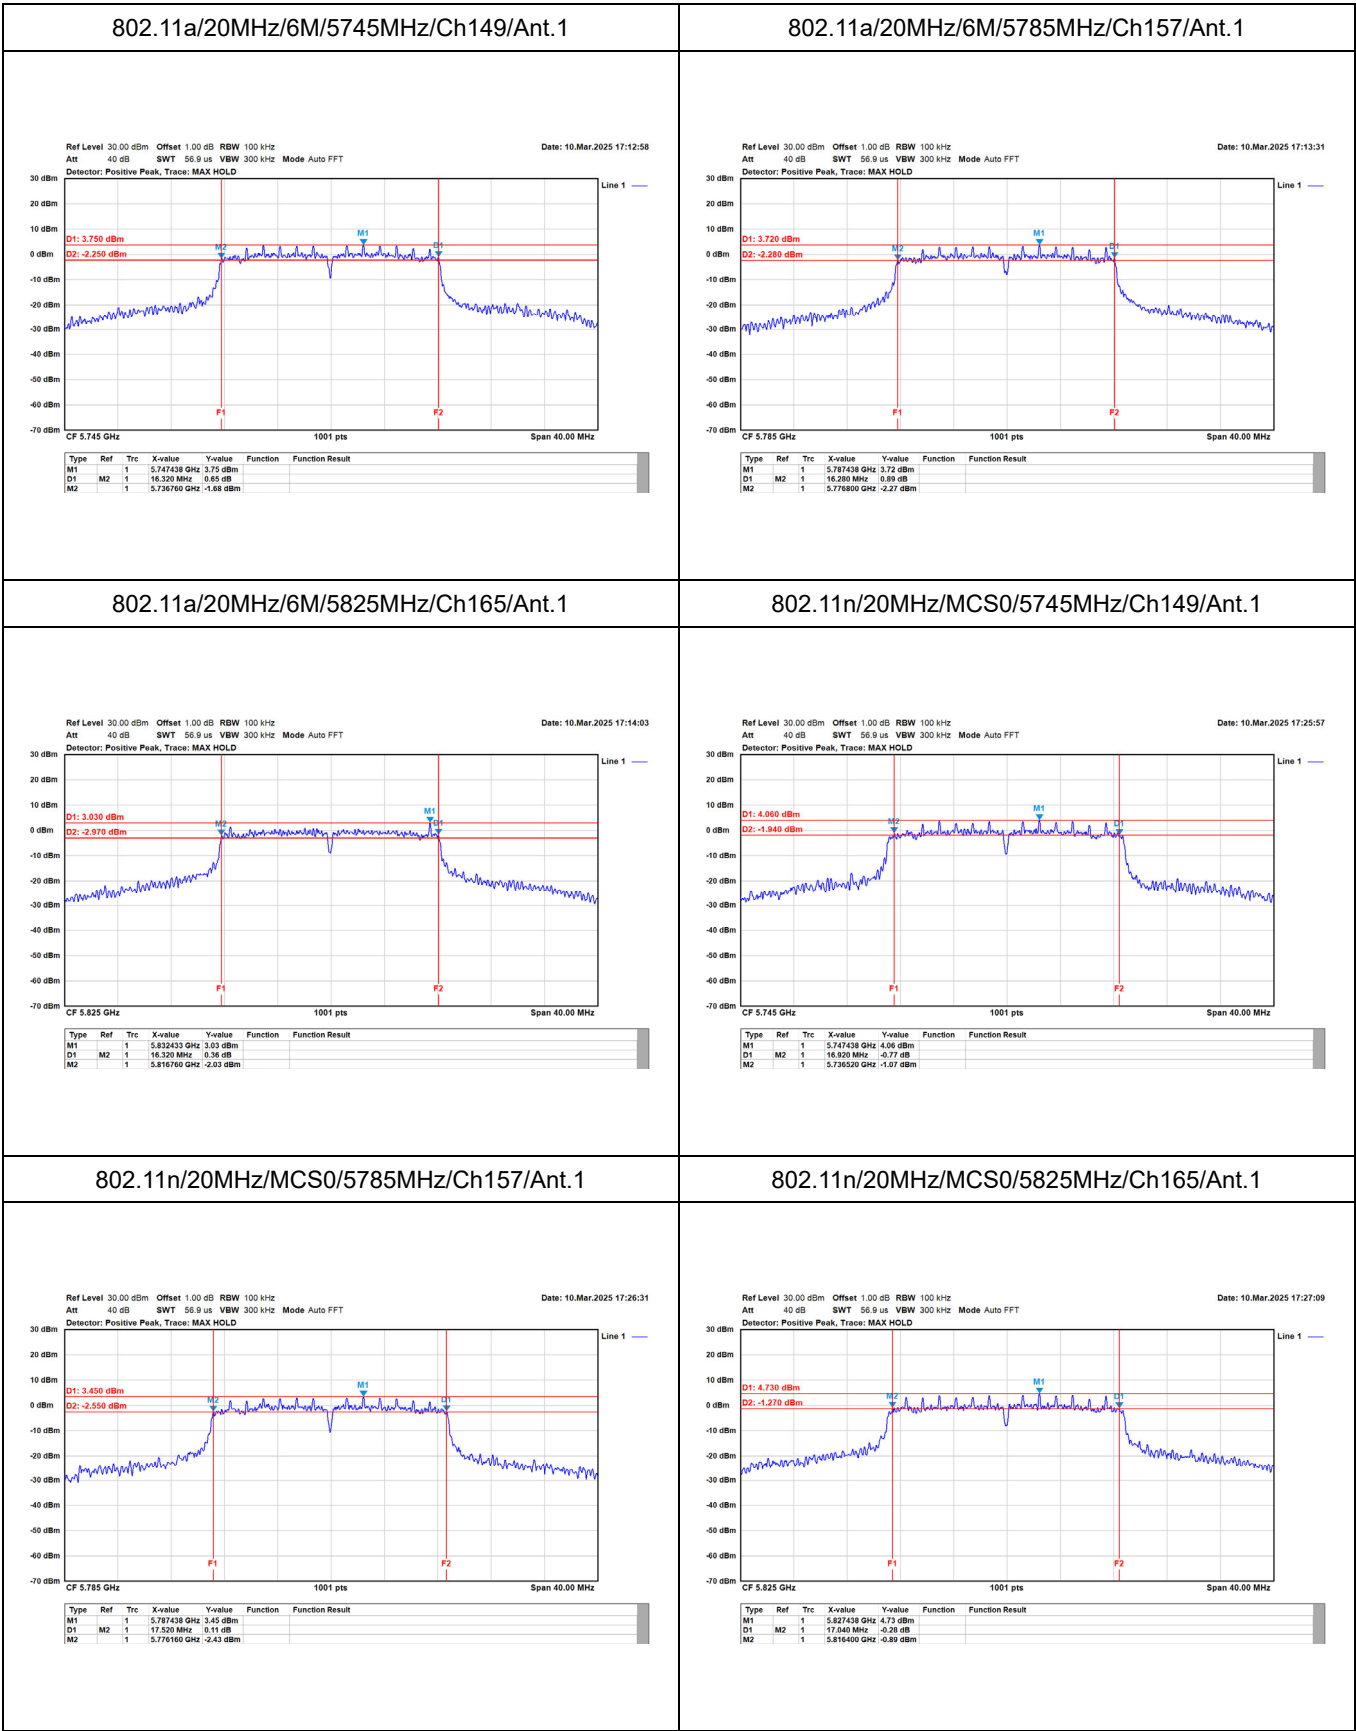

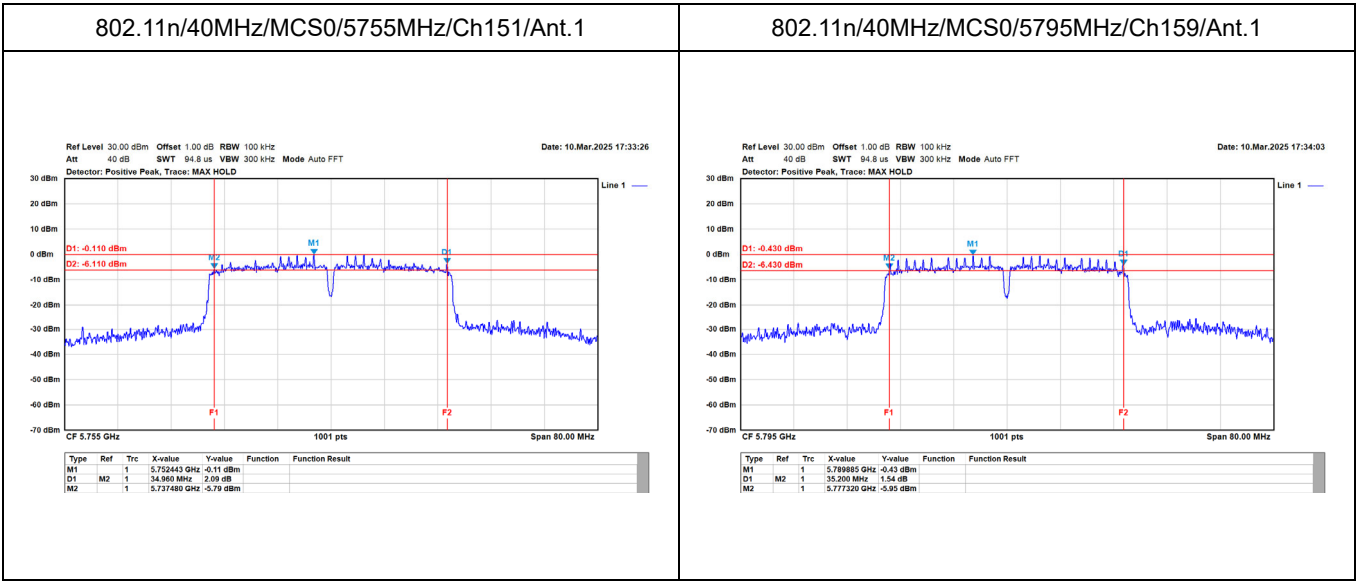


Appendix B. Test Result of Maximum Conducted Output Power

Modulation	Frequency (MHz)	Maximum Conducted Output Power (dBm)	Limit (dBm)	Result
		Ant. 1		
802.11a (20MHz)	5180	12.60	24.00	Pass
	5200	15.59	24.00	Pass
	5240	15.51	24.00	Pass
	5260	16.08	24.00	Pass
	5300	16.72	24.00	Pass
	5320	13.44	24.00	Pass
	5500	12.75	24.00	Pass
	5580	16.11	24.00	Pass
	5700	9.43	24.00	Pass
	5745	16.06	30.00	Pass
	5785	15.30	30.00	Pass
	5825	15.28	30.00	Pass
802.11n (20MHz)	5180	12.22	24.00	Pass
	5200	15.25	24.00	Pass
	5240	15.40	24.00	Pass
	5260	16.04	24.00	Pass
	5300	16.58	24.00	Pass
	5320	13.07	24.00	Pass
	5500	12.12	24.00	Pass
	5580	16.15	24.00	Pass
	5700	10.44	24.00	Pass
	5745	16.42	30.00	Pass
	5785	15.43	30.00	Pass
	5825	15.29	30.00	Pass
802.11n (40MHz)	5190	7.35	24.00	Pass
	5230	13.00	24.00	Pass
	5270	14.00	24.00	Pass
	5310	10.05	24.00	Pass
	5510	11.05	24.00	Pass
	5550	13.67	24.00	Pass
	5670	12.41	24.00	Pass
	5755	13.98	30.00	Pass
	5795	14.18	30.00	Pass

Note: For straddle channels, the total power = conducted output power + duty factor, and the duty factor refer to section 2.3.

Appendix C. Test Result of Transmitter Radiated Spurious Emission


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Bob

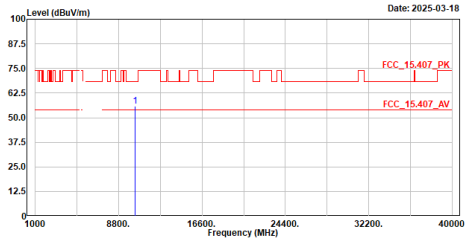

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10360.000	55.83	68.22	-12.39	60.17	-4.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Bob

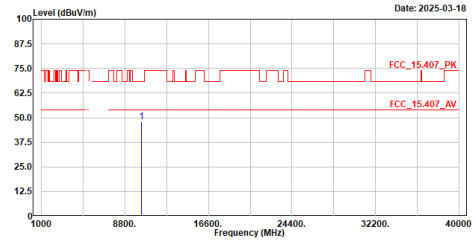

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10360.000	47.96	68.22	-20.26	52.30	-4.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5280MHz
Test BY :Bob

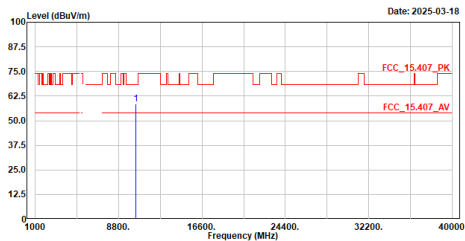

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10400.000	58.63	68.22	-9.59	63.05	-4.42	Peak





Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5280MHz
Test BY :Bob

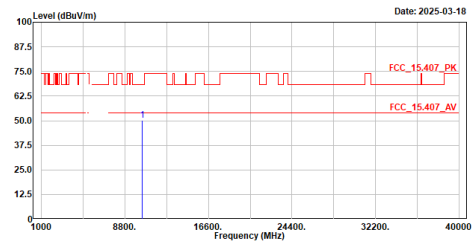


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10400.000	50.25	68.22	-17.97	54.67	-4.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

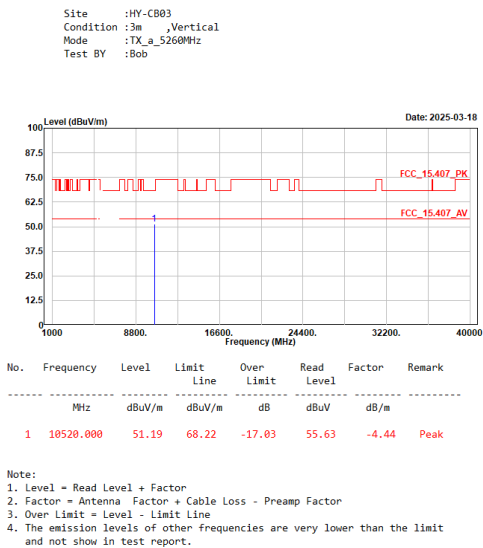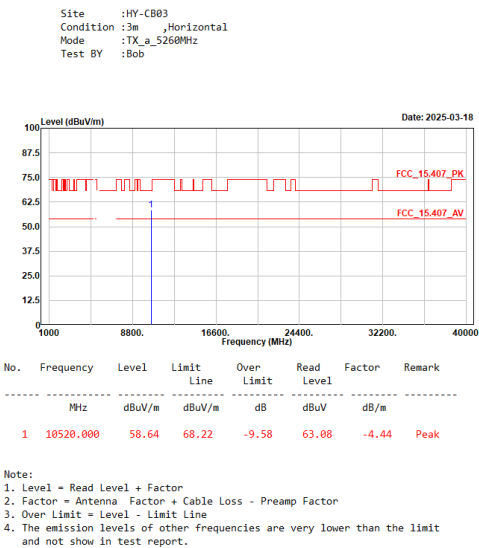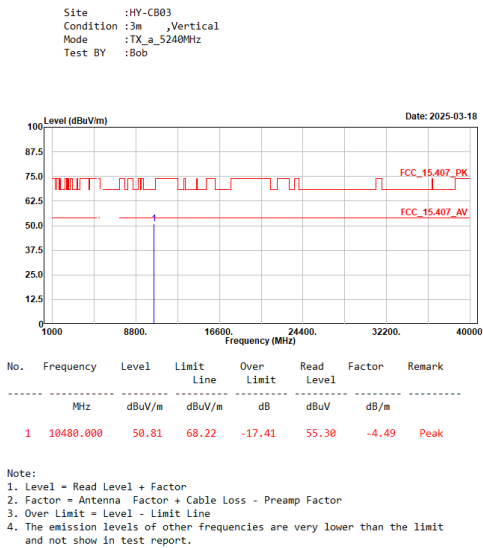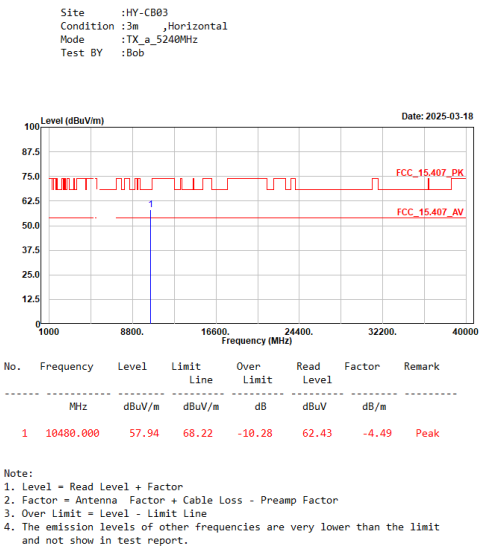

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5300MHz
Test BY :Bob

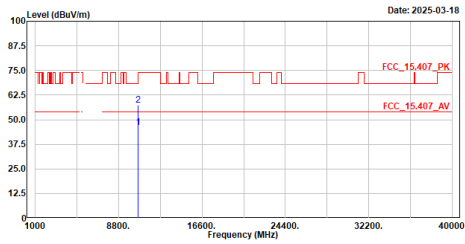


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10600.000	45.90	54.00	-8.10	49.80	-3.90	Average
2	10600.000	57.32	74.00	-16.68	61.22	-3.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5300MHz
Test BY :Bob

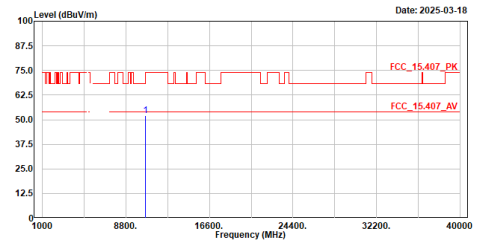


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10600.000	51.89	74.00	-22.11	55.79	-3.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Bob

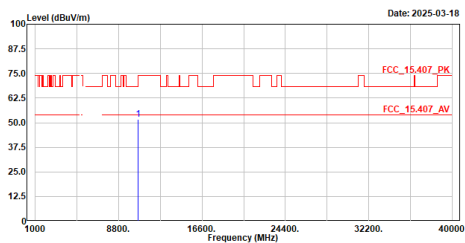


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10640.000	51.51	74.00	-22.49	55.32	-3.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.





Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Bob

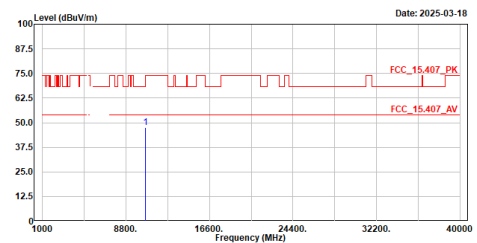


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10640.000	47.61	74.00	-26.39	51.42	-3.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

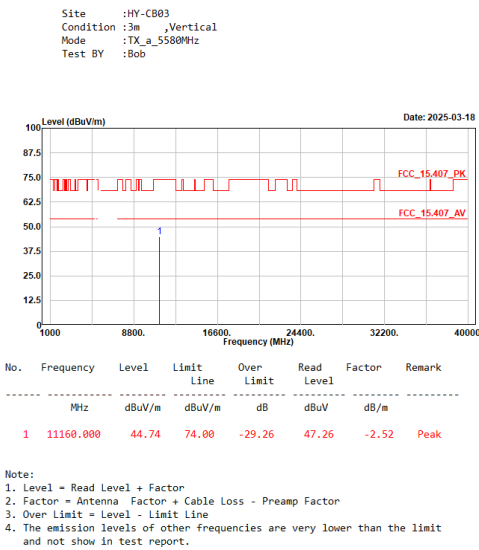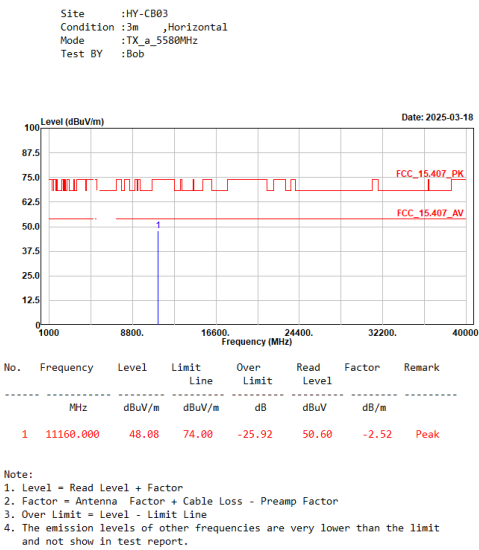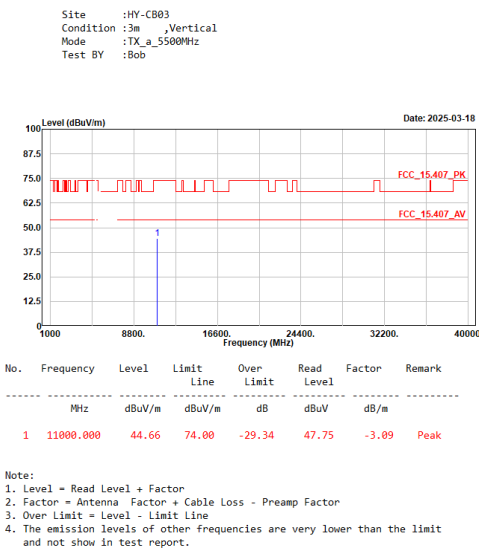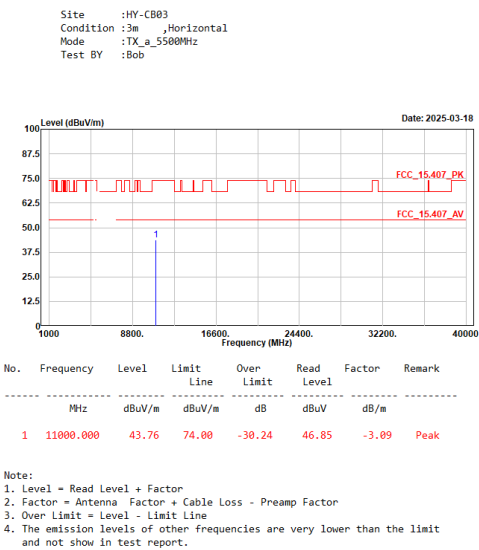


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5700MHz
Test BY :Bob

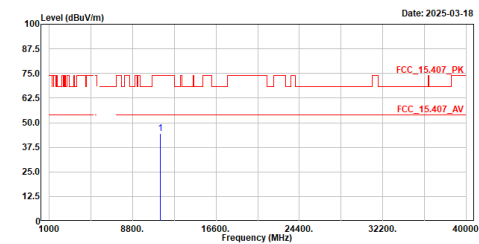

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11400.000	44.47	74.00	-29.53	46.21	-1.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5700MHz
Test BY :Bob

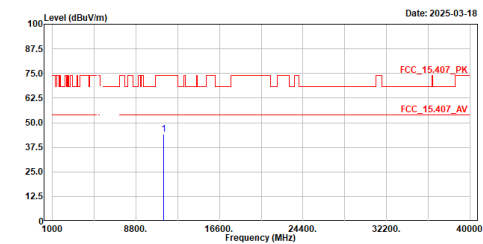

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11400.000	44.07	74.00	-29.93	45.81	-1.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
Test BY :Bob

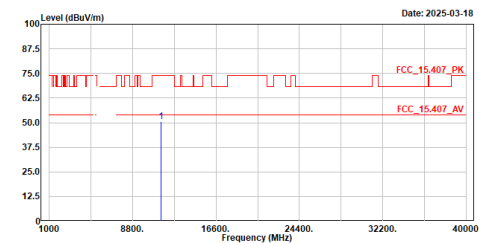

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11490.000	50.75	74.00	-23.25	52.32	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5745MHz
Test BY :Bob

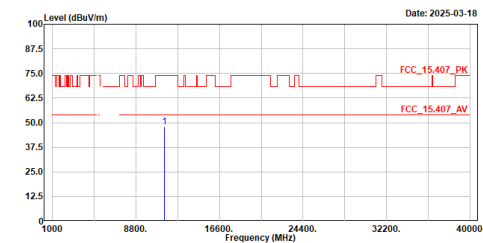

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11490.000	47.79	74.00	-26.21	49.36	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5785MHz
Test BY :Bob

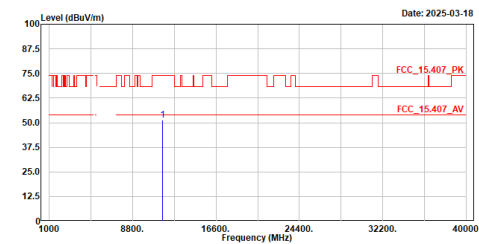

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11570.000	51.26	74.00	-22.74	52.66	-1.40	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5785MHz
Test BY :Bob

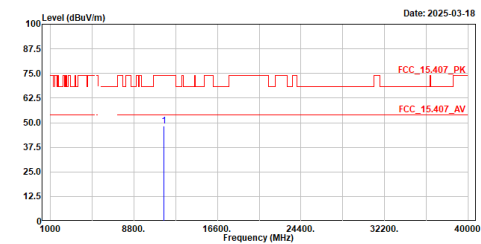

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11570.000	48.27	74.00	-25.73	49.67	-1.40	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5825MHz
Test BY :Bob

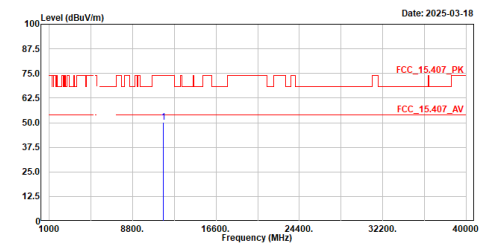

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11650.000	50.37	74.00	-23.63	51.85	-1.48	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5825MHz
Test BY :Bob

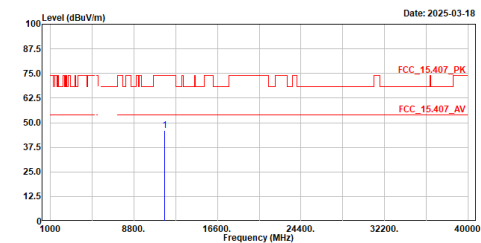

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11650.000	45.93	74.00	-28.07	47.41	-1.48	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5180MHz
Test BY :Bob

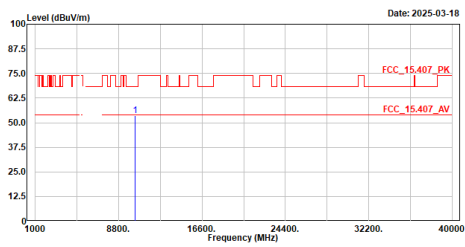


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10360.000	53.53	68.22	-14.69	57.87	-4.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5180MHz
Test BY :Bob

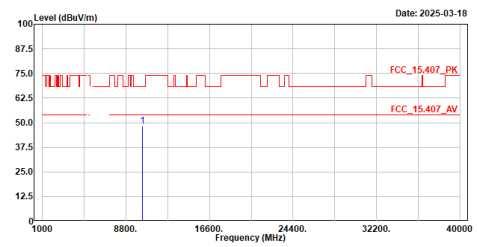


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10360.000	48.48	68.22	-19.74	52.82	-4.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5200MHz
Test BY :Bob

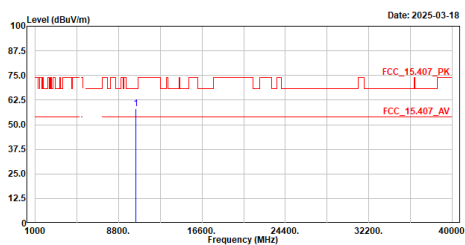


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10400.000	58.08	68.22	-10.14	62.50	-4.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5200MHz
Test BY :Bob

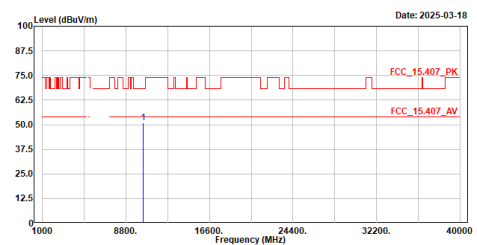


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10400.000	51.12	68.22	-17.10	55.54	-4.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5240MHz
Test BY :Bob

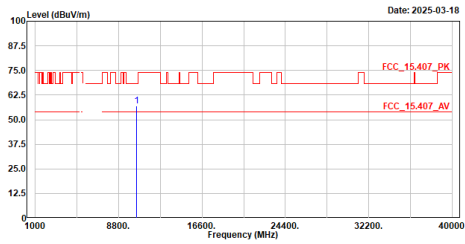


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10480.000	57.08	68.22	-11.14	61.57	-4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5240MHz
Test BY :Bob

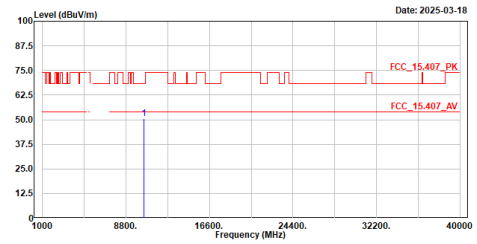


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10480.000	50.53	68.22	-17.69	55.02	-4.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5260MHz
Test BY :Bob

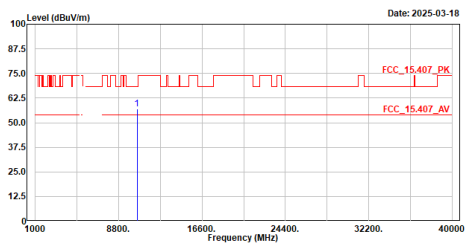


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10520.000	57.02	68.22	-11.20	61.46	-4.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5260MHz
Test BY :Bob

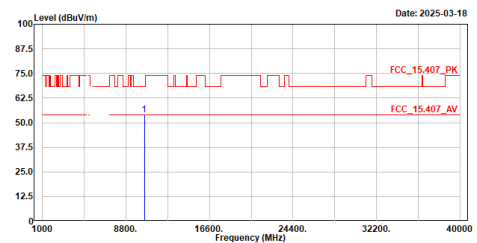


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10520.000	53.83	68.22	-14.39	58.27	-4.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5300MHz
Test BY :Bob

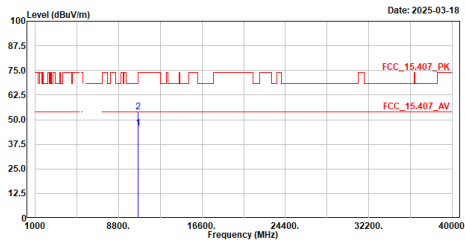

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10600.000	45.66	54.00	-8.34	49.56	-3.90	Average
2	10600.000	54.10	74.00	-19.90	58.00	-3.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5300MHz
Test BY :Bob

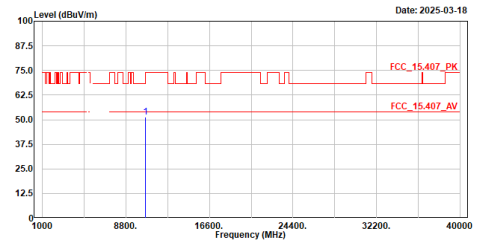

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10600.000	51.43	74.00	-22.57	55.33	-3.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5320MHz
Test BY :Bob

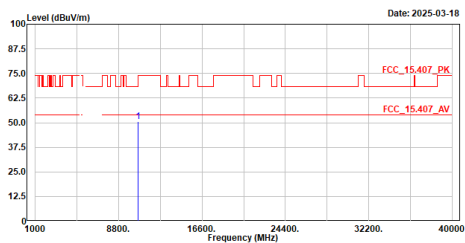

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10640.000	50.53	74.00	-23.47	54.34	-3.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5320MHz
Test BY :Bob

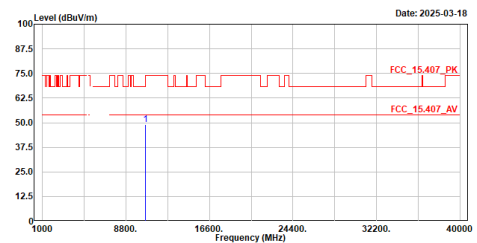

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10640.000	48.99	74.00	-25.01	52.80	-3.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5580MHz
Test BY :Bob

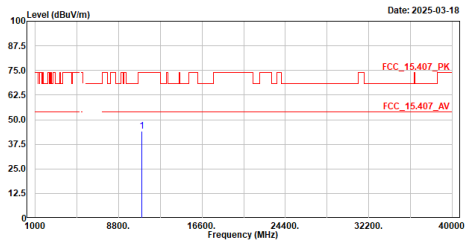


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11000.000	44.10	74.00	-29.90	47.19	-3.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5580MHz
Test BY :Bob

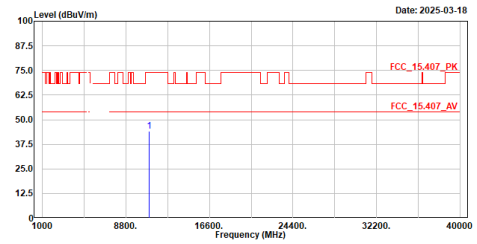


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11000.000	44.02	74.00	-29.98	47.11	-3.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5580MHz
Test BY :Bob

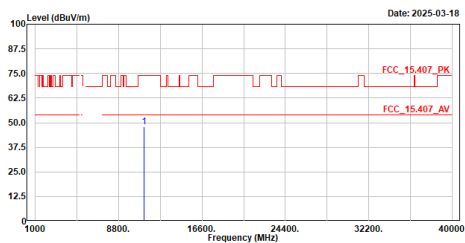


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11160.000	47.75	74.00	-26.25	50.27	-2.52	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5580MHz
Test BY :Bob

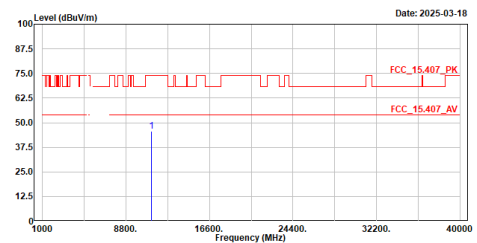


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11160.000	45.82	74.00	-28.18	48.34	-2.52	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5700MHz
Test BY :Bob

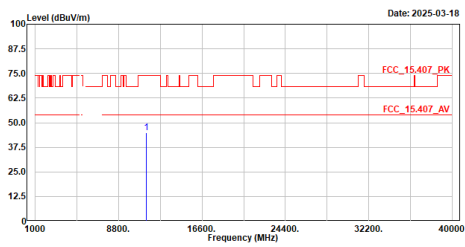


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11400.000	45.01	74.00	-28.99	46.75	-1.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5700MHz
Test BY :Bob

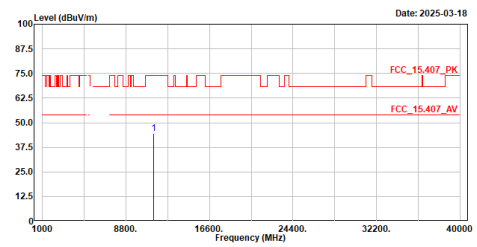


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11400.000	44.35	74.00	-29.65	46.09	-1.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5745MHz
Test BY :Bob

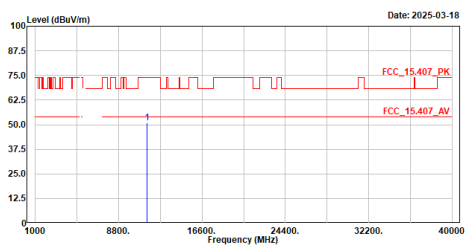


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11490.000	50.83	74.00	-23.17	52.40	-1.57	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5745MHz
Test BY :Bob

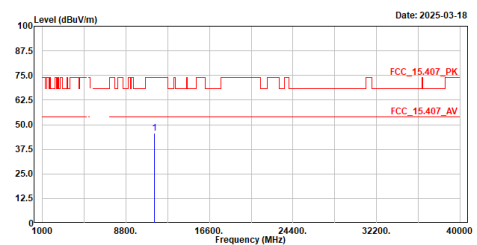


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11490.000	45.76	74.00	-28.24	47.33	-1.57	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5785MHz
Test BY :Bob

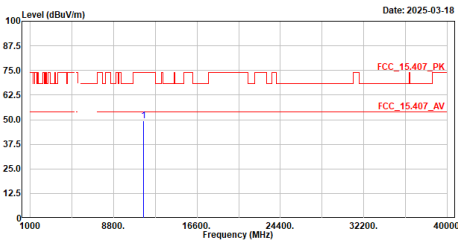

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11570.000	49.31	74.00	-24.69	50.71	-1.40	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5785MHz
Test BY :Bob

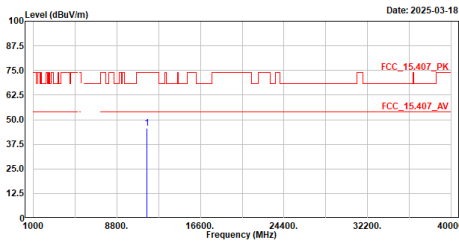

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11570.000	45.63	74.00	-28.37	47.03	-1.40	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5825MHz
Test BY :Bob

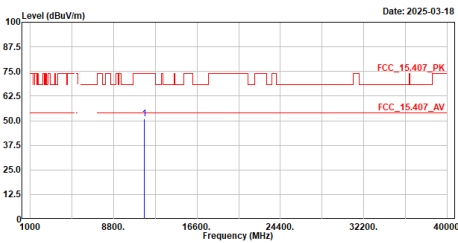

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11650.000	50.86	74.00	-23.14	52.34	-1.48	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5825MHz
Test BY :Bob

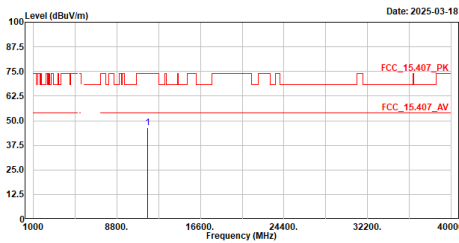

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11650.000	46.30	74.00	-27.70	47.78	-1.48	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5190MHz
Test BY :Bob

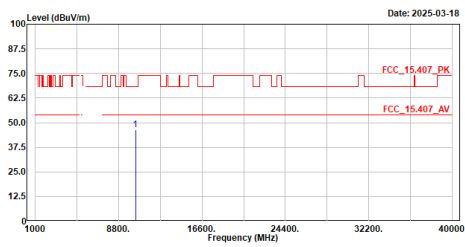


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10380.000	46.54	68.22	-21.68	50.92	-4.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5190MHz
Test BY :Bob

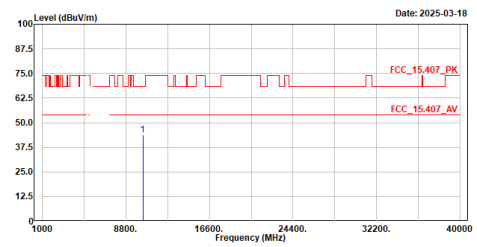


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10380.000	43.95	68.22	-24.27	48.33	-4.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5230MHz
Test BY :Bob

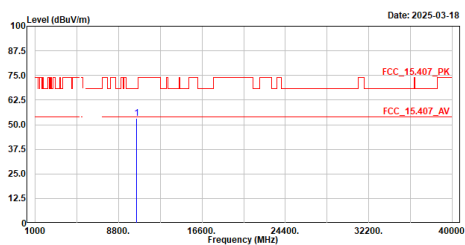


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10460.000	53.25	68.22	-14.97	57.77	-4.52	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5230MHz
Test BY :Bob

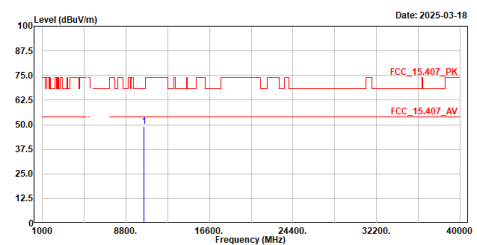


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10460.000	48.97	68.22	-19.25	53.49	-4.52	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5270MHz
Test BY :Bob

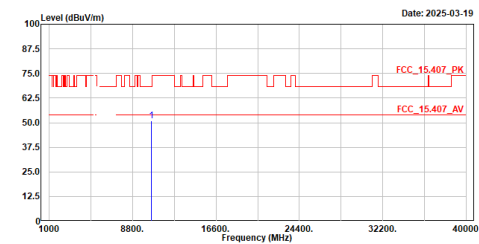

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10540.000	50.89	68.22	-17.33	55.19	-4.30	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5270MHz
Test BY :Bob

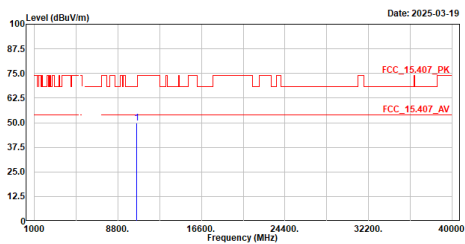

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10540.000	49.66	68.22	-18.56	53.96	-4.30	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5310MHz
Test BY :Bob

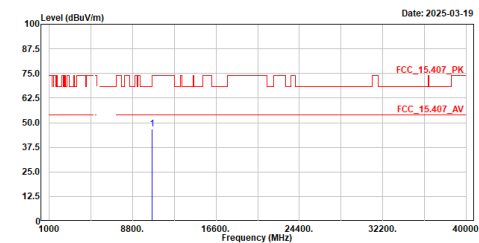

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10620.000	46.61	74.00	-27.39	50.45	-3.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5310MHz
Test BY :Bob

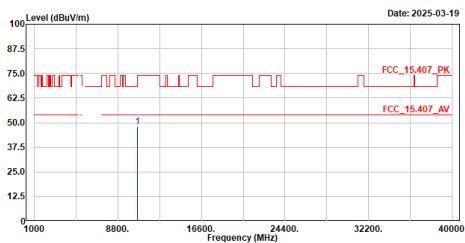

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10620.000	47.90	74.00	-26.10	51.74	-3.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5510MHz
Test BY :Bob

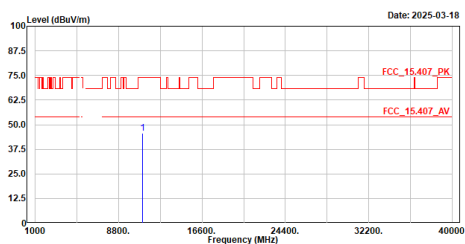


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11020.000	45.56	74.00	-28.44	48.53	-2.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5510MHz
Test BY :Bob

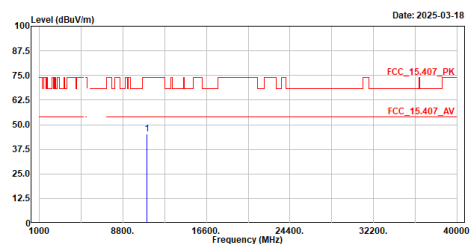


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11020.000	45.10	74.00	-28.90	48.07	-2.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5550MHz
Test BY :Bob

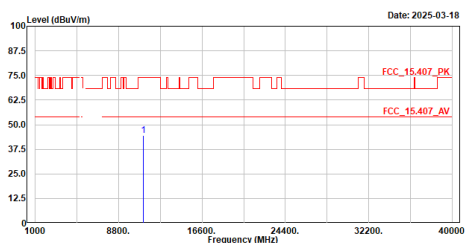


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11100.000	44.46	74.00	-29.54	47.10	-2.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5550MHz
Test BY :Bob

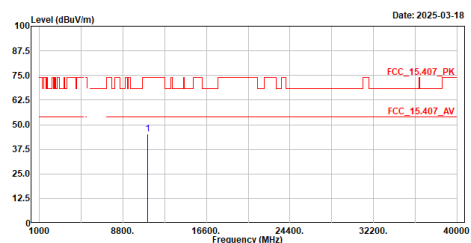


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB/m	
1	11100.000	45.34	74.00	-28.66	47.98	-2.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5670MHz
Test BY :Bob

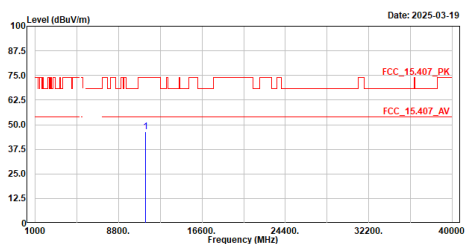


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11340.000	46.48	74.00	-27.52	48.26	-1.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5670MHz
Test BY :Bob

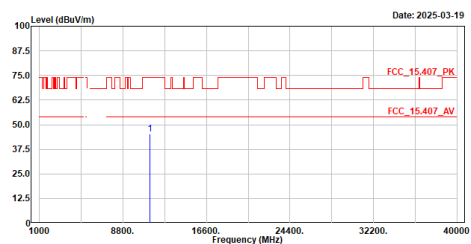


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11340.000	45.11	74.00	-28.89	46.89	-1.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5755MHz
Test BY :Bob

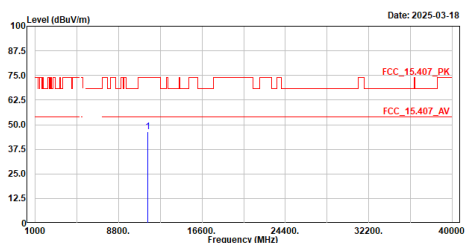


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11510.000	46.29	74.00	-27.71	47.78	-1.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5755MHz
Test BY :Bob

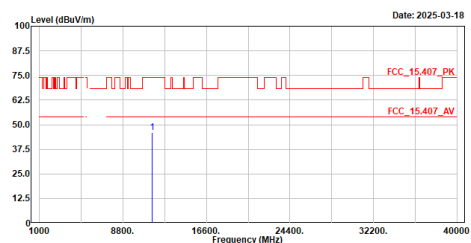


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11510.000	45.89	74.00	-28.11	47.38	-1.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5795MHz
Test BY :Bob

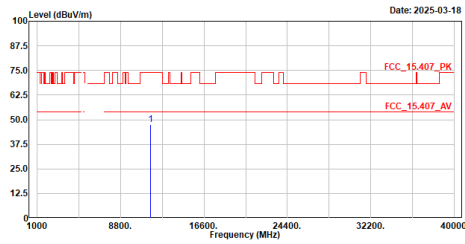

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	47.58	74.00	-26.42	49.02	-1.44	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5795MHz
Test BY :Bob

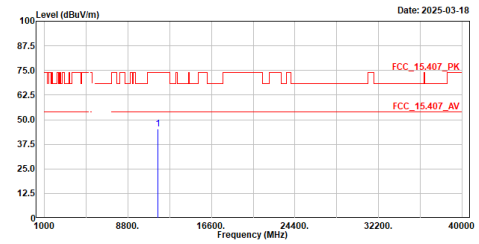

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	45.46	74.00	-28.54	46.90	-1.44	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5795MHz
Test BY :Bob

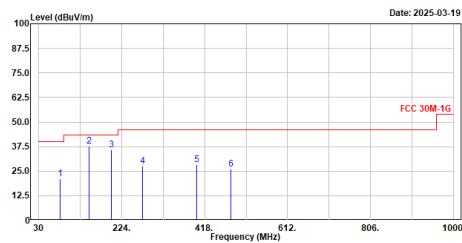

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	79.470	20.95	40.00	-19.05	49.76	-28.81	QP
2	148.340	37.60	43.50	-5.90	61.63	-24.03	QP
3	199.750	35.68	43.50	-7.82	62.51	-26.83	QP
4	273.470	27.69	46.00	-18.31	51.56	-23.87	QP
5	399.570	28.24	46.00	-17.76	48.49	-20.25	QP
6	480.080	26.09	46.00	-19.91	44.44	-18.35	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5795MHz
Test BY :Bob

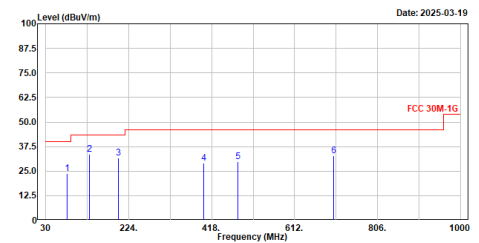

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	79.470	23.81	40.00	-16.19	52.62	-28.81	QP
2	132.820	33.75	43.50	-9.75	58.88	-25.13	QP
3	199.750	31.76	43.50	-11.74	58.59	-26.83	QP
4	399.570	28.95	46.00	-17.05	49.20	-20.25	QP
5	480.080	29.87	46.00	-16.13	48.22	-18.35	QP
6	704.150	32.65	46.00	-13.35	46.68	-14.03	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Ashton

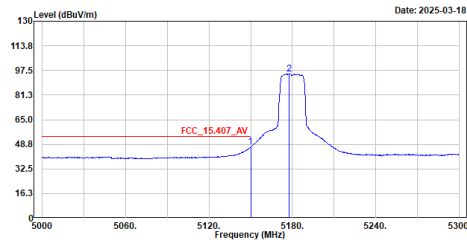

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	47.06	54.00	-6.94	31.22	15.84	Average
2	5177.900	95.30	-----	-----	79.37	15.93	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Ashton

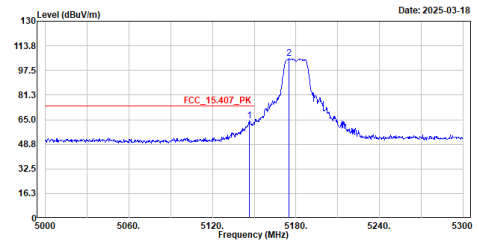

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5146.700	64.26	74.00	-9.74	48.41	15.85	Peak
2	5175.200	105.30	-----	-----	89.38	15.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Ashton

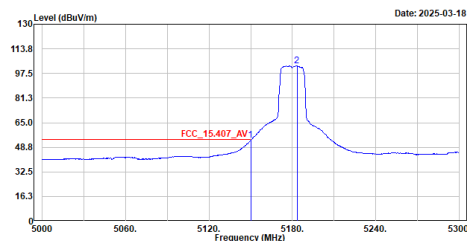

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	53.31	54.00	-0.69	37.47	15.84	Average
2	5183.300	102.48	-----	-----	86.53	15.95	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Ashton

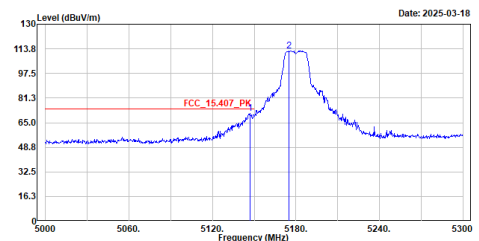

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5147.000	71.00	74.00	-3.00	55.15	15.85	Peak
2	5174.900	112.45	-----	-----	96.53	15.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Ashton

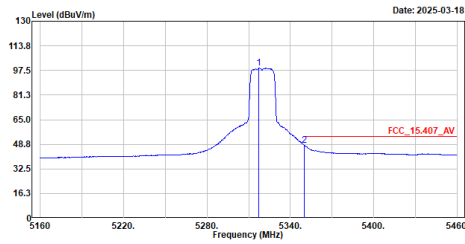

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5317.200	99.03	-----	-----	82.91	16.12	Average
2	5350.200	47.91	54.00	-6.09	31.64	16.27	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Ashton

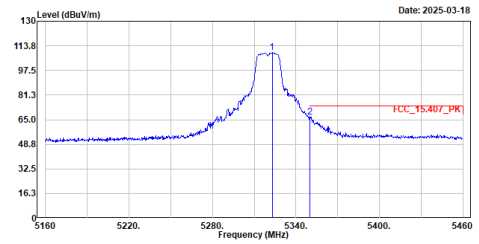

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.900	109.21	-----	-----	93.07	16.14	Peak
2	5350.200	66.63	74.00	-7.37	50.36	16.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Ashton

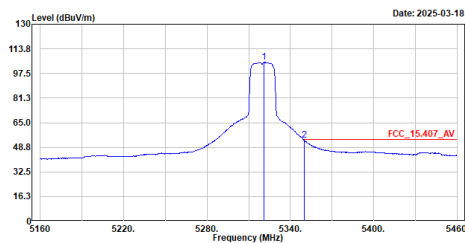

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5321.100	104.81	-----	-----	88.69	16.12	Average
2	5350.000	53.49	54.00	-0.51	37.22	16.27	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Ashton

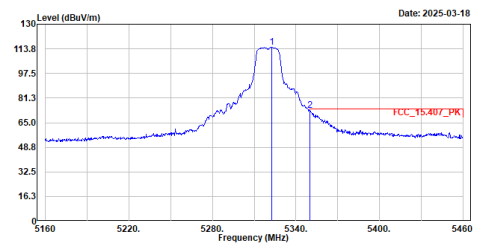

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.600	114.94	-----	-----	98.80	16.14	Peak
2	5350.000	72.91	74.00	-1.09	56.64	16.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Ashton

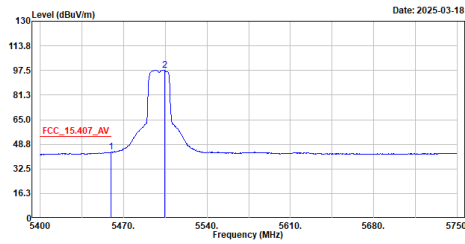

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.500	43.71	54.00	-10.29	27.05	16.66	Average
2	5504.300	97.56	-----	-----	80.91	16.65	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Ashton

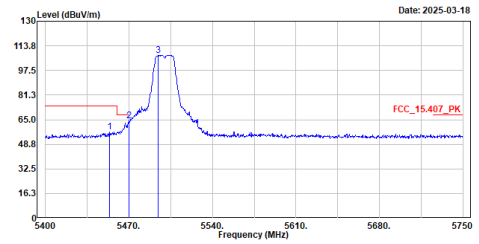

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5453.900	56.86	74.00	-17.14	40.20	16.66	Peak
2	5470.000	64.10	68.22	-4.12	47.45	16.65	Peak
3	5494.500	107.62	-----	-----	90.97	16.65	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Ashton

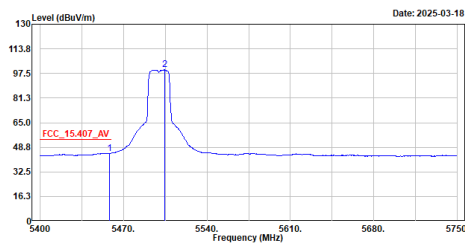

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.100	44.79	54.00	-9.21	28.13	16.66	Average
2	5504.300	99.91	-----	-----	83.26	16.65	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Ashton

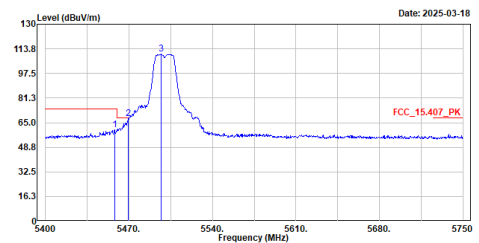

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.100	60.53	74.00	-13.47	43.87	16.66	Peak
2	5469.650	67.47	68.22	-0.75	50.82	16.65	Peak
3	5497.300	110.15	-----	-----	93.50	16.65	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5700MHz
Test BY :Ashton

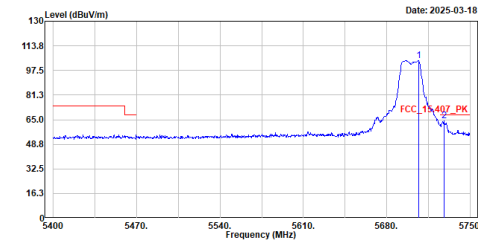


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5706.600	104.11	-----	-----	86.14	17.97	Peak
2	5727.950	64.12	68.22	-4.10	45.99	18.13	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5700MHz
Test BY :Ashton

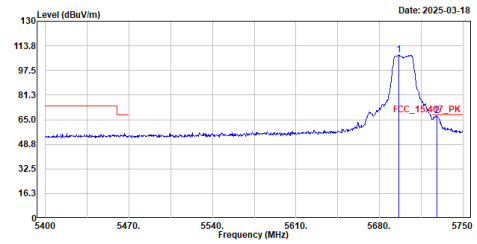


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5696.100	107.70	-----	-----	89.80	17.90	Peak
2	5727.950	67.53	68.22	-0.69	49.40	18.13	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
Test BY :Ashton

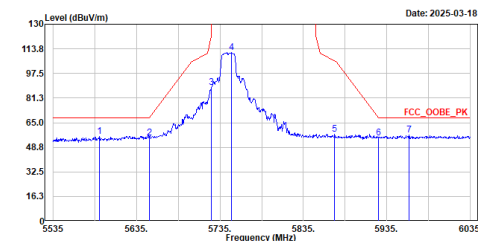


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5590.000	56.06	68.20	-12.14	38.64	17.42	Peak
2	5650.000	54.98	68.21	-13.23	37.36	17.62	Peak
3	5725.000	88.48	122.20	-33.72	70.38	18.10	Peak
4	5748.500	111.25	-----	-----	92.98	18.27	Peak
5	5872.500	57.62	105.90	-48.28	39.15	18.47	Peak
6	5925.000	54.85	68.21	-13.36	36.33	18.52	Peak
7	5962.000	56.77	68.20	-11.43	38.15	18.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5745MHz
Test BY :Ashton

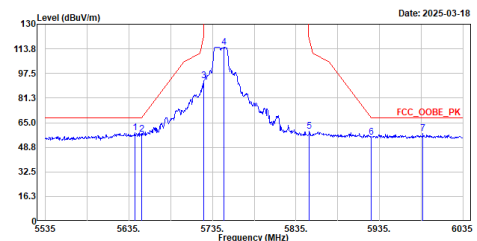


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5642.000	58.42	68.20	-9.78	40.82	17.60	Peak
2	5650.000	57.26	68.21	-10.95	39.64	17.62	Peak
3	5725.000	92.73	122.20	-29.47	74.63	18.10	Peak
4	5748.500	114.88	-----	-----	96.61	18.27	Peak
5	5851.000	59.17	119.92	-60.75	40.69	18.48	Peak
6	5925.000	55.46	68.21	-12.75	36.94	18.52	Peak
7	5987.000	57.65	68.20	-10.55	38.97	18.68	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5825MHz
Test BY :Ashton

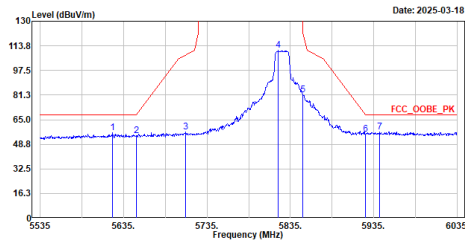

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5622.000	56.35	68.20	-11.85	38.82	17.53	Peak
2	5650.000	54.34	68.21	-13.87	36.72	17.62	Peak
3	5709.500	56.76	107.86	-51.10	38.76	18.00	Peak
4	5820.500	110.87	-----	-----	92.46	18.41	Peak
5	5850.000	81.36	122.20	-40.84	62.89	18.47	Peak
6	5925.000	55.51	68.21	-12.70	36.99	18.52	Peak
7	5942.500	56.95	68.20	-11.25	38.38	18.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5825MHz
Test BY :Ashton

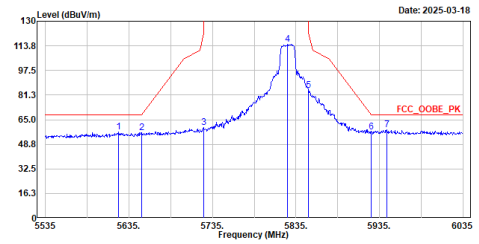

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5622.500	57.02	68.20	-11.18	39.49	17.53	Peak
2	5650.000	56.25	68.21	-11.96	38.63	17.62	Peak
3	5724.500	59.76	121.06	-61.30	41.66	18.10	Peak
4	5825.000	114.80	-----	-----	96.38	18.42	Peak
5	5850.000	84.47	122.20	-37.73	66.00	18.47	Peak
6	5925.000	57.03	68.21	-11.18	38.51	18.52	Peak
7	5943.500	58.19	68.20	-10.01	39.62	18.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5180MHz
Test BY :Ashton

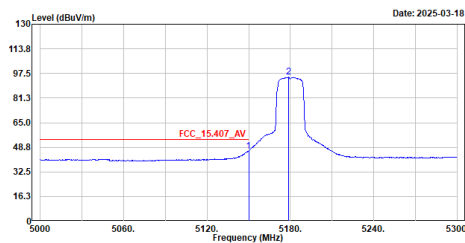

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	46.30	54.00	-7.70	30.46	15.84	Average
2	5178.800	95.01	-----	-----	79.07	15.94	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5180MHz
Test BY :Ashton

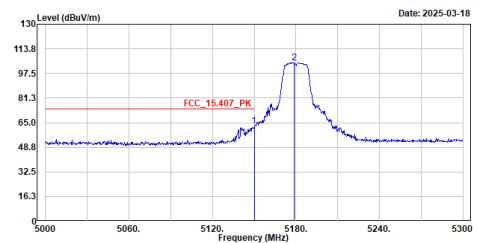

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	62.58	74.00	-11.42	46.74	15.84	Peak
2	5178.500	104.51	-----	-----	88.58	15.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5180MHz
Test BY :Ashton

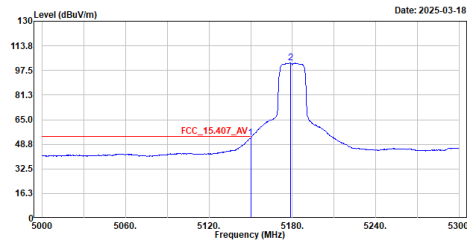

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	53.16	54.00	-0.84	37.32	15.84	Average
2	5178.800	102.40	-----	-----	86.46	15.94	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5180MHz
Test BY :Ashton

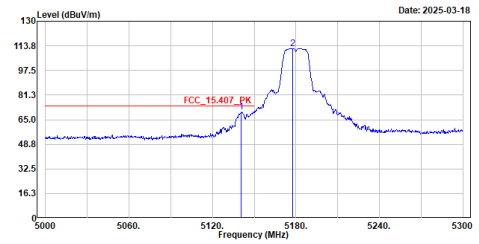

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5140.700	70.17	74.00	-3.83	54.32	15.85	Peak
2	5177.900	111.93	-----	-----	96.00	15.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5320MHz
Test BY :Ashton

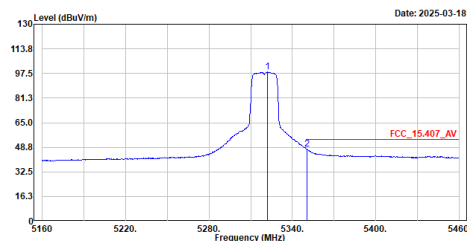

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.000	98.37	-----	-----	82.24	16.13	Average
2	5350.500	47.66	54.00	-6.34	31.39	16.27	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5320MHz
Test BY :Ashton

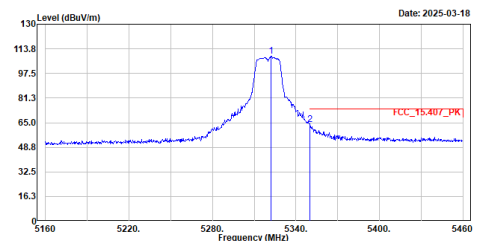

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.300	109.01	-----	-----	92.88	16.13	Peak
2	5350.200	63.79	74.00	-10.21	47.52	16.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5320MHz
Test BY :Ashton

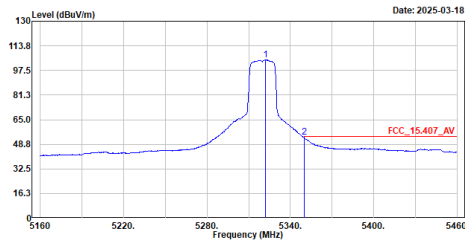

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.000	104.50	-----	-----	88.37	16.13	Average
2	5350.000	53.24	54.00	-0.76	36.97	16.27	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5320MHz
Test BY :Ashton

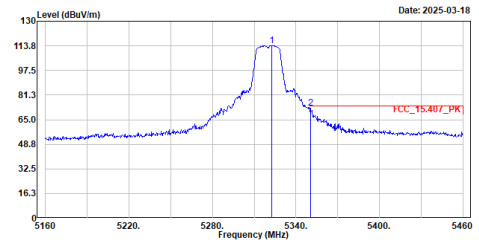

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.600	114.03	-----	-----	97.89	16.14	Peak
2	5350.500	72.76	74.00	-1.24	56.49	16.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5500MHz
Test BY :Ashton

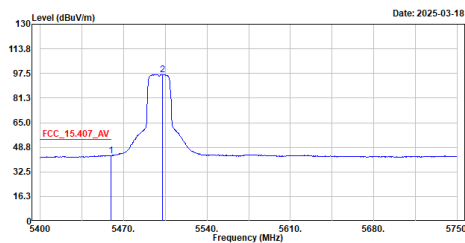

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.150	43.41	54.00	-10.59	26.75	16.66	Average
2	5502.900	96.86	-----	-----	80.21	16.65	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5500MHz
Test BY :Ashton

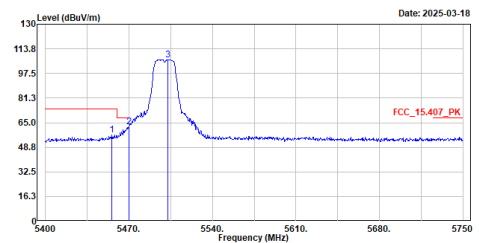

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5455.650	56.79	74.00	-17.21	40.14	16.65	Peak
2	5470.000	62.07	68.22	-6.15	45.42	16.65	Peak
3	5502.900	106.61	-----	-----	89.96	16.65	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5500MHz
Test BY :Ashton

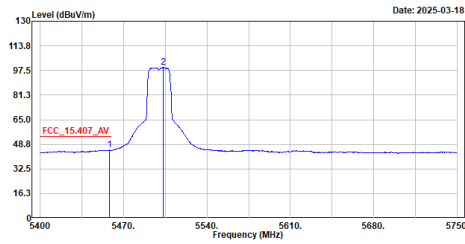

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5450.100	45.05	54.00	-8.95	28.39	16.66	Average
2	5503.250	99.39	-----	-----	82.74	16.65	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5500MHz
Test BY :Ashton

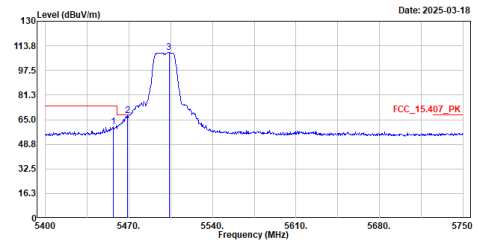

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5457.050	60.10	74.00	-13.90	43.46	16.64	Peak
2	5468.950	67.51	68.22	-0.71	50.86	16.65	Peak
3	5503.600	109.32	-----	-----	92.67	16.65	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5700MHz
Test BY :Bob

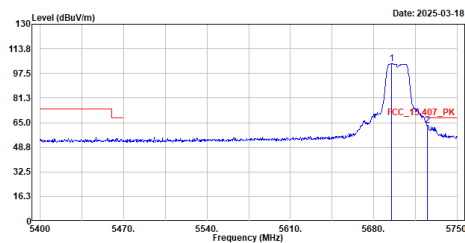

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5695.050	104.04	-----	-----	86.15	17.89	Peak
2	5725.150	63.35	68.22	-4.87	45.25	18.10	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5700MHz
Test BY :Bob

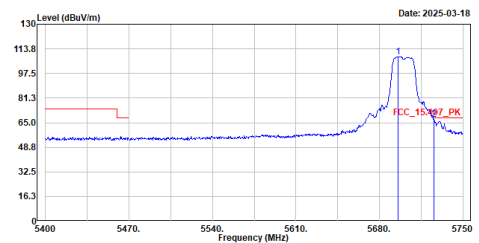

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5695.400	108.66	-----	-----	90.77	17.89	Peak
2	5725.850	67.43	68.22	-0.79	49.32	18.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5745MHz
Test BY :Bob

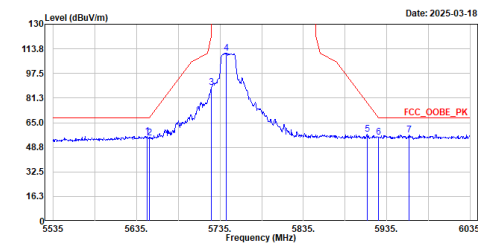

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5647.500	56.14	68.20	-12.06	38.53	17.61	Peak
2	5650.000	54.95	68.21	-13.26	37.33	17.62	Peak
3	5725.000	88.22	122.20	-33.98	70.12	18.10	Peak
4	5742.500	110.77	-----	-----	92.55	18.22	Peak
5	5911.500	57.39	78.20	-20.81	38.89	18.50	Peak
6	5925.000	55.40	68.21	-12.81	36.88	18.52	Peak
7	5962.000	57.05	68.20	-11.15	38.43	18.62	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5745MHz
Test BY :Bob

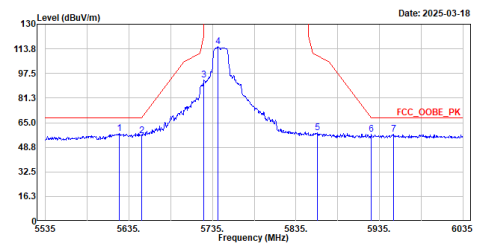

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5623.500	58.10	68.20	-10.10	40.57	17.53	Peak
2	5650.000	56.30	68.21	-11.91	38.68	17.62	Peak
3	5725.000	93.15	122.20	-29.05	75.05	18.10	Peak
4	5742.000	115.39	-----	-----	97.17	18.22	Peak
5	5861.000	58.17	109.12	-50.95	39.69	18.48	Peak
6	5925.000	57.17	68.21	-11.04	38.65	18.52	Peak
7	5952.000	57.39	68.20	-10.81	38.80	18.59	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n20_5825MHz
Test BY :Bob

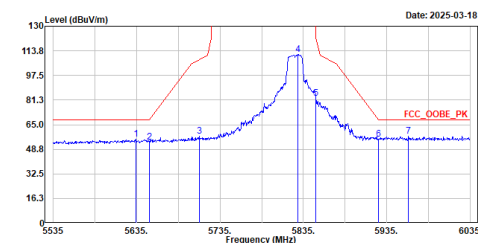

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5634.000	55.25	68.20	-12.95	37.68	17.57	Peak
2	5650.000	53.34	68.21	-14.87	35.72	17.62	Peak
3	5710.000	57.17	108.00	-50.83	39.17	18.00	Peak
4	5825.500	111.26	-----	-----	92.84	18.42	Peak
5	5850.000	82.33	122.20	-39.87	63.86	18.47	Peak
6	5925.000	55.57	68.21	-12.64	37.05	18.52	Peak
7	5961.000	57.49	68.20	-10.71	38.88	18.61	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n20_5825MHz
Test BY :Bob

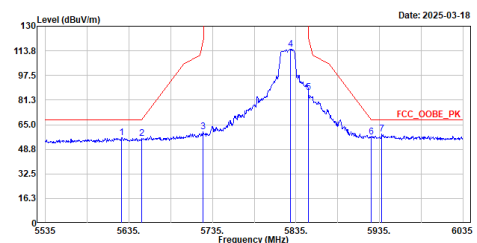

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5626.500	56.48	68.20	-11.72	38.93	17.55	Peak
2	5650.000	56.15	68.21	-12.06	38.53	17.62	Peak
3	5724.000	68.24	119.92	-59.68	42.15	18.09	Peak
4	5828.000	114.74	-----	-----	96.32	18.42	Peak
5	5850.000	86.28	122.20	-35.92	67.81	18.47	Peak
6	5925.000	56.86	68.21	-11.35	38.34	18.52	Peak
7	5938.000	58.85	68.20	-9.35	40.29	18.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5190MHz
Test BY :Ashton

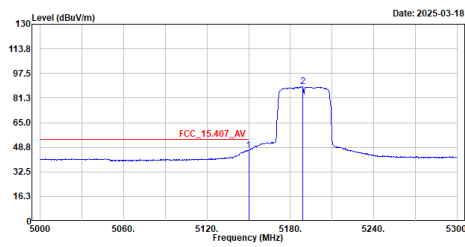

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	5150.000	46.79	54.00	-7.21	30.95	15.84	Average
2	5188.700	88.64	-----	-----	72.66	15.98	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5190MHz
Test BY :Ashton

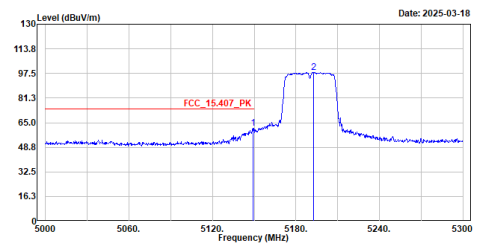

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	5149.100	61.37	74.00	-12.63	45.53	15.84	Peak
2	5192.900	98.15	-----	-----	82.15	16.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5190MHz
Test BY :Ashton

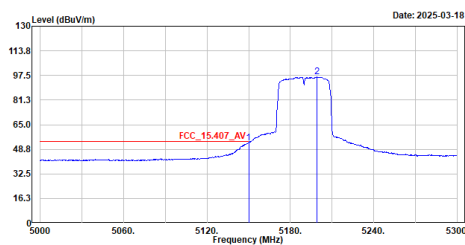

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	5150.000	53.15	54.00	-0.85	37.31	15.84	Average
2	5199.200	96.48	-----	-----	80.45	16.03	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5190MHz
Test BY :Ashton

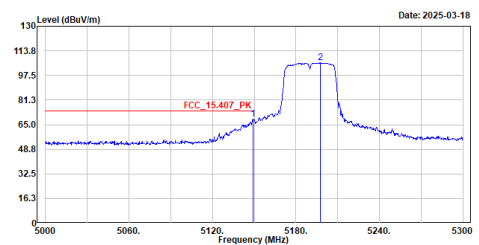

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	5149.400	68.60	74.00	-5.40	52.76	15.84	Peak
2	5197.400	105.99	-----	-----	89.97	16.02	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5310MHz
Test BY :Ashton

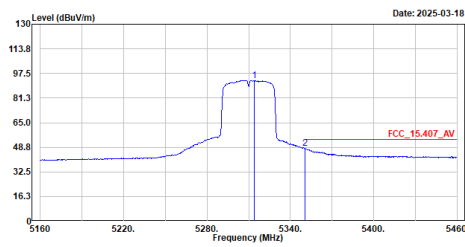

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5313.900	92.92	-----	-----	76.81	16.11	Average
2	5350.500	48.05	54.00	-5.95	31.78	16.27	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5310MHz
Test BY :Ashton

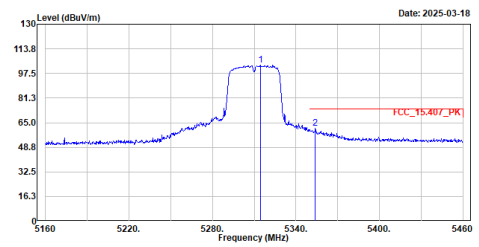

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5314.800	103.00	-----	-----	86.89	16.11	Peak
2	5353.800	61.35	74.00	-12.65	45.08	16.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5310MHz
Test BY :Ashton

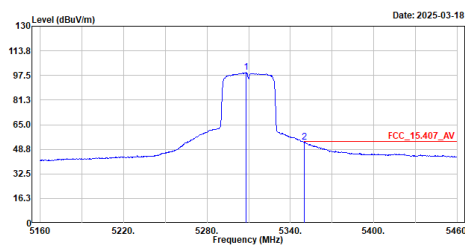

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5307.900	99.34	-----	-----	83.24	16.10	Average
2	5350.000	53.36	54.00	-0.64	37.09	16.27	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5310MHz
Test BY :Ashton

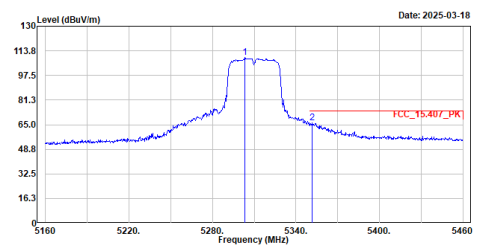

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5303.400	109.33	-----	-----	93.24	16.09	Peak
2	5351.700	66.41	74.00	-7.59	50.13	16.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5510MHz
Test BY :Ashton

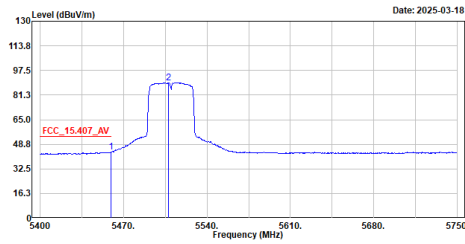

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.150	43.82	54.00	-10.18	27.16	16.66	Average
2	5507.450	89.39	-----	-----	72.71	16.68	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5510MHz
Test BY :Ashton

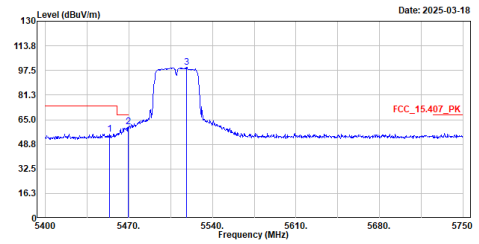

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5453.900	55.58	74.00	-18.42	38.92	16.66	Peak
2	5469.650	68.26	68.22	-7.96	43.61	16.65	Peak
3	5518.300	99.65	-----	-----	82.88	16.77	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5510MHz
Test BY :Ashton

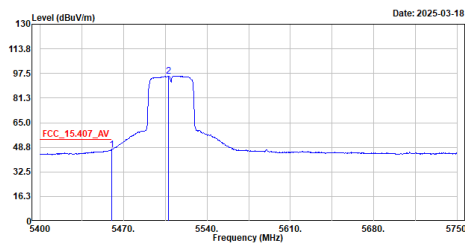

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	47.01	54.00	-6.99	30.36	16.65	Average
2	5507.800	95.87	-----	-----	79.19	16.68	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5510MHz
Test BY :Ashton

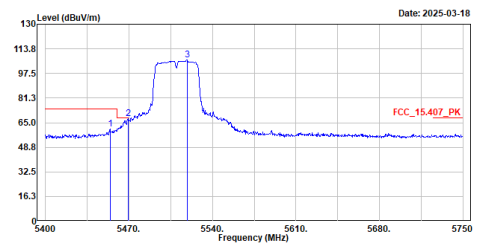

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5454.250	68.67	74.00	-13.33	44.01	16.66	Peak
2	5469.300	67.50	68.22	-0.72	50.85	16.65	Peak
3	5518.650	106.44	-----	-----	89.67	16.77	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5670MHz
Test BY :Bob

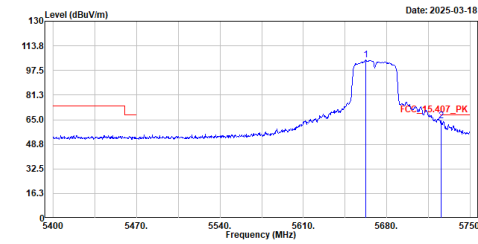

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	5662.150	104.48	68.22	-3.94	86.80	17.68	Peak
2	5725.850	64.28	68.22	-3.94	46.17	18.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5670MHz
Test BY :Bob

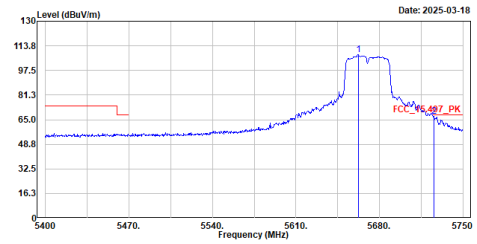

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	5662.150	107.87	68.22	-0.85	90.19	17.68	Peak
2	5725.500	67.37	68.22	-0.85	49.27	18.10	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_n40_5755MHz
Test BY :Bob

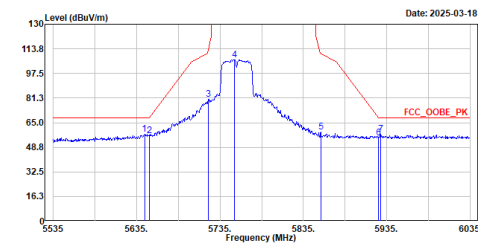

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	5644.500	57.50	68.20	-10.70	39.90	17.60	Peak
2	5650.000	56.66	68.21	-11.55	39.04	17.62	Peak
3	5721.000	80.60	113.08	-32.48	62.52	18.08	Peak
4	5752.500	106.66	-----	-----	88.38	18.28	Peak
5	5856.000	58.77	110.52	-51.75	40.30	18.47	Peak
6	5925.000	54.89	68.21	-13.32	36.37	18.52	Peak
7	5927.500	57.27	68.20	-10.93	38.74	18.53	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_n40_5755MHz
Test BY :Bob

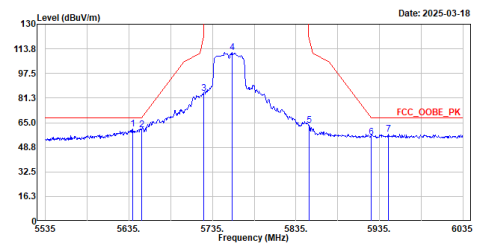

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	5639.500	60.85	68.20	-7.35	43.26	17.59	Peak
2	5650.000	60.36	68.21	-7.85	42.74	17.62	Peak
3	5725.000	94.29	122.20	-37.91	66.19	18.10	Peak
4	5758.500	111.34	-----	-----	93.05	18.29	Peak
5	5858.500	63.36	121.06	-57.70	44.89	18.47	Peak
6	5925.000	55.24	68.21	-12.97	36.72	18.52	Peak
7	5946.000	57.53	68.20	-10.67	38.96	18.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_m40_5795MHz
Test BY :Bob

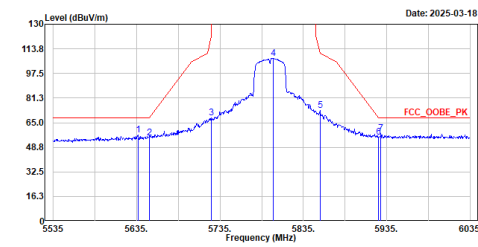


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5636.500	56.68	68.20	-11.52	39.10	17.58	Peak
2	5650.000	55.02	68.21	-13.19	37.40	17.62	Peak
3	5724.500	68.33	121.06	-52.73	50.23	18.10	Peak
4	5790.500	107.66	-	-	89.29	18.37	Peak
5	5855.000	73.15	110.80	-37.65	54.68	18.47	Peak
6	5925.000	55.26	68.21	-12.95	36.74	18.52	Peak
7	5928.000	57.71	68.20	-10.49	39.17	18.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_m40_5795MHz
Test BY :Bob

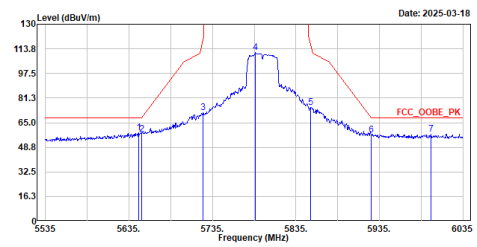

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5646.500	58.37	68.20	-9.83	40.76	17.61	Peak
2	5650.000	57.40	68.21	-10.81	39.78	17.62	Peak
3	5724.000	71.64	119.92	-48.28	53.55	18.09	Peak
4	5786.500	111.15	-	-	92.01	18.34	Peak
5	5852.500	74.98	116.50	-41.52	56.50	18.48	Peak
6	5925.000	57.01	68.21	-11.20	38.49	18.52	Peak
7	5997.000	57.54	68.20	-10.66	38.84	18.70	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.