

LVARA

Smart Skincare Mini Fridge-9L



Instruction &amp; Warranty Guide

**Who We are**

Hello, we're LVARA - And we create a better graceful product for your everyday Living. Our mission is to create and choose the product with lovely design and durable quality to deliver a Graceful Living for the Most Important. We smile with satisfaction. Thank you for choosing us!

## Follow us

Facebook: [Ivara.official](#)  
Instagram: [Ivara.\\_official](#)

**LVARA****Smart Skincare Mini Fridge-9L**

This thermoelectric mini fridge is specially designed for your skincare and cosmetic products, beauty tools, and essentials.

Storing skincare products in the fridge at your preferred temperature can help protect their longevity and stability.

9 Liters is roomy and convenient to organize your beauty products, more accommodating for toner serums, washes and lotions.

Adopting the semiconductor air cooling technology that protects your makeup from freezing, frost and water droplet.

This fridge is ultra-durable, eco-friendly and safe to use. It does not use compressors, cryogen, refrigerators, or freons.

- Air Cooling
- Optimized Storage
- Dust-Proof
- Low Noise
- Type C Adaptor
- Frost-free

**Smart Control, Anywhere, Anytime**

App control to set the optimal temperature (42°F~82°Fadjustable) for your different kinds of beauty products.

Annoyed at expired cosmetics? Use the app to monitor your skincare's shelf life, and set the schedule to remind you to use before expiration.

Help save energy by letting you turn on/off LED indicator lamp, and 3 working modes (standard / smart / night) could meet your different needs.


You can manage your skincare fridge remotely, even while you're away from home.

- Remote Control
- No Hub Required
- Temperature Adjustable
- Voice Control
- Away Mode
- Skincare's Shelf Life Reminder

LVARA




You can manage your skincare fridge remotely, even while you're away from home.

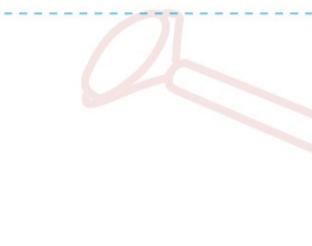


You can manage your skincare fridge remotely, even while you're away from home.




You can manage your skincare fridge remotely, even while you're away from home.

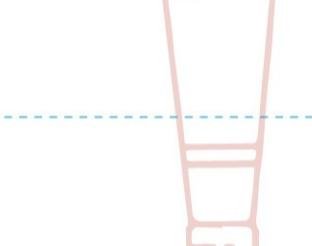

You can manage your skincare fridge remotely, even while you're away from home.

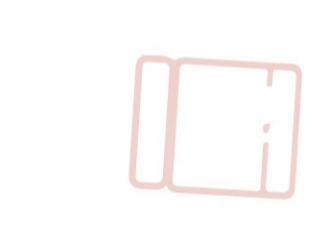

You can manage your skincare fridge remotely, even while you're away from home.

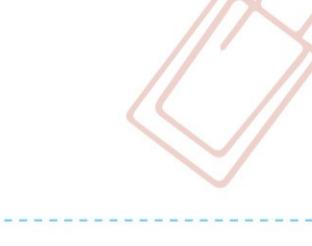

You can manage your skincare fridge remotely, even while you're away from home.



You can manage your skincare fridge remotely, even while you're away from home.




You can manage your skincare fridge remotely, even while you're away from home.



You can manage your skincare fridge remotely, even while you're away from home.




You can manage your skincare fridge remotely, even while you're away from home.



You can manage your skincare fridge remotely, even while you're away from home.

**Getting to Know Your LVARA****Specifications**

Model No.	Internal Temperature	Electric Parameter
TCST-IVUS	54°F~75°F (Common range) 42°F~62°F (expand range)	100~240Vac 50/60Hz
Wireless Protocol	Wi-Fi/Bluetooth	DC5V~3A
	Weight	8.05lb/ 3.65kg
	Capacity	9L

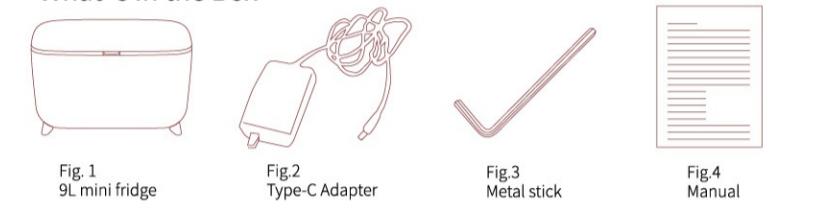**What's in the Box****What Can You Keep in Your LVARA**

LVARA is ideal for storing skincare products, including perfume, balm, lipstick, eye cream and eyeliner, jade roller, moisturizer, facial cleanser, lotion, cream, nail polish, organic and preservative-free skincare, serum, sheet mask, facial spray and mist, sunscreen, and toner etc.

**3. Set up your LVARA in the SMART LIFE app**

- 1 Open the SMART LIFE app, log in with an existing account user name and password, or create a new account.

## 3. 2 Set up your LVARA

- Turn on your mobile phone to the 2.4GHz Wi-Fi network.
- Turn on Bluetooth on phone (Enable Bluetooth to add this Wi-Fi device).
- Make sure LVARA is plugged in.
- Reset LVARA (the "Device"). Press and hold the Reset Key on the back for 5 seconds or until you hear two "beep", using the metal stick included in the packaging.
- Open app, on home page, tap Add Device or upper right corner (Fig.1)
- The APP interface will have a window pop up in about one minute: device to be added, please select Go to add (Fig.2)

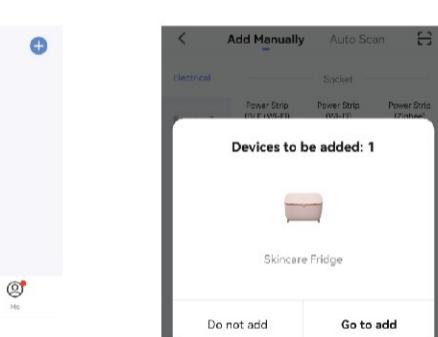


Fig. 1

Fig. 2

- OR, if you skip above point 6, you can also add device by one of another two options: Auto Scan or Add Manually.

Auto Scan: tap Auto Scan, skincare fridge image appears if device found, then Next to connect

Add Manually: tap Large Home screen on the left side, select Refrigerator (BLE+Wi-Fi), tap upper right EZ Mode to choose AP mode, then please follow on-screen instruction.

③ Select 2.4GHz Wi-Fi network and enter password.

④ Confirm connected

⑤ That's it!

You've finished setting up your LVARA and you can now control it remotely. Note: Bluetooth could be turned off now while using Wi-Fi control.

**4. Under Settings set up your routines**

## Smart mode

schedule: sleep time

Temperature range: 54°F~75°F (Common range) / 42°F~62°F (expand range)

Temperature unit: °F / °C

**Rename device**

Tap on main interface, as figure 5

**Manage your Skincare**

Tap on main interface, then input skincare's photo, expiration date and set reminder.

Tap Add New Product

Add skincare's photo, input expire date and set reminder before expiry

fig. 3 fig. 4 fig. 5 fig. 6 fig. 7 fig. 8

**Voice Control**

Works with Alexa, Google Assistant

You can view our handy how-to-connect videos along with hints and tips at [www.lvara.com](#)

fig. 4 fig. 5 fig. 6 fig. 7 fig. 8

**5. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**6. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**7. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**8. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**9. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**10. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**11. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**12. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**13. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**14. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**15. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**16. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**17. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**18. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**19. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.

fig. 1 fig. 2 fig. 3 fig. 4 fig. 5 fig. 6

**20. Tap on main interface to select share device**

Device could be shared via link copy, WhatsApp, Messenger etc.

Once shared and connected, other members could also remote control the device directly via SMART LIFE app.