# 1 This box contains

No.	Name	Quantity
1	Direct Vina TV box	1
2	Remote control	1
3	Power adapter	1
4	HDMI & AV cables	1
5	User's Guide	1


# 2 How to use the remote control





[ Note ] Some applications need to use an optical mouse.


# 3 Connection ports

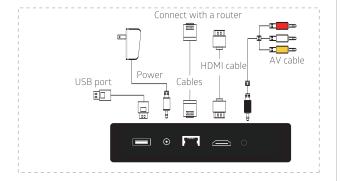

# 4 Connecting the box to TV

### 1. Use a HDMI cable to connect the box to the TV ( recommended)

**B1.** Connect the Direct Vina box to the TV by connecting the HDMI cable to the HDMI-in port on the TV

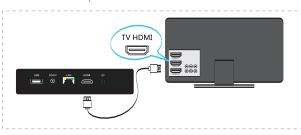


**B2.** Switch the signal source from TV to HDMI

B3. Power up the box

Note Please note that only perform this task when the box has been powered off. Do not remove the HDMI cable while the box power is on.

### 2. Connecting the box and the TV with the AV cable

**B1.** Connect one end of the AV cable (red, white, yellow) to the AV sockets on the TV. Connect the other end to the Direct Vina box

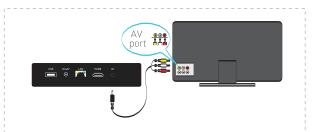

- B2. Switch the signal source to AV
- **B3.** Power up the box
- [ Note ] Do not connect the HDMI and AV cables to the box simultaneously.

  If you have not used the HDMI for some time, try to plug in and unplug
  a couple of times to get better TV signals.

# 5 Connecting the box to the Internet

#### 1. LAN Cable connection

Connect the LAN cable with the Direct Vina box.
The box will automatically recognize the IP address.

### 2. Wifi connection

- Step 1. Enter Settings -> Select Wireless Network
- Step 2. Select Wifi -> Turn on
- Step 3. Select a Wifi Network
- [ Note ] The LAN connection will not work when you use a Wifi connection

## 6 Contact Us

If you have any issues setting up your Direct Vina box, please contact us:

### Direct Vina

Toll- Free: 1-855-606-9999
Email: Support@directvina.com
Website: https://www.directvina.com

FCCID: 2AGUQ-A301 Model: A301

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

## Return and Exchange Policy

The Direct Vina box (the Device) carries a one year limited manufacturer's warranty from the purchase date.

The manufacturer warrants the Device against defects and workmanship under normal usage. This warranty does not apply to water damage. unauthorized manipulation of the Device, normal wear and tear, not follow the instructions to set up and operate the Device, and negligence. When the conditions are met, we will repair or replace with a new Device.

You have 30 days from the purchase date to return this Device to Direct Vina for a full refund. The refund will be issued in the same form of payment you originally used to purchase the Device.

We must receive the Device prior to or on the 30th day from the purchase date in order to process your return.

The Device must be returned in the original conditions with no damages. It must include all the original components in the original packaging.

### Return instructions:

If you purchase the Device from a store, please return it to the store where you purchased.

If you purchased the Device directly from Direct Vina, please do the following:

- 1. Call us toll free at 1-855-606-9999 for authorization
- 2. Send the Device to the following address:
  Direct Vina
- PO Box 24372 Stanley, KS 66283

We strongly advise you use a tracking service carrier such as Fed Ex, UPS, USPS Priority Mail to ship your return. Also note that you'll be responsible for the return shipping cost.



