



## Main Transportation Unit (Continued)

- Remove note by rotating Knob C in the direction of the arrow mark.

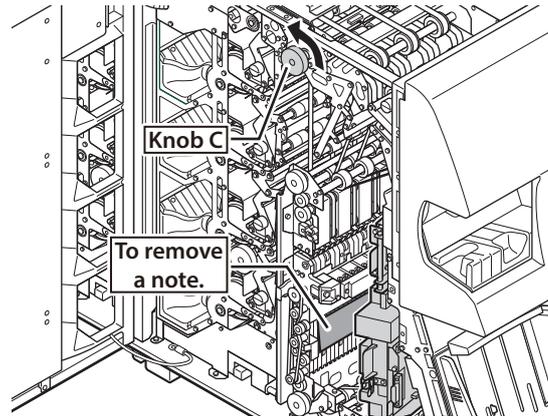


### In case a note is blocked:

- Open the Transportation Path 2 by the Lever 2 and remove a note blocked by rotating the Knob C.

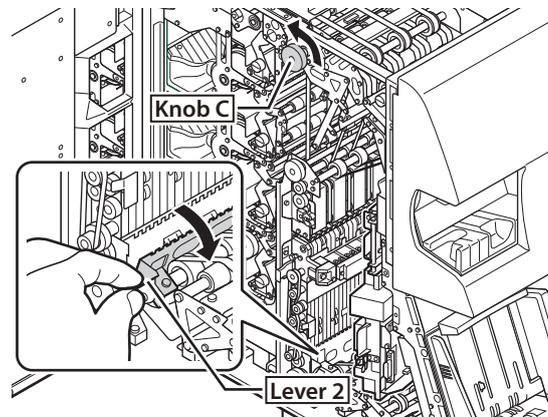


- Close the Transportation Path 2 gently.

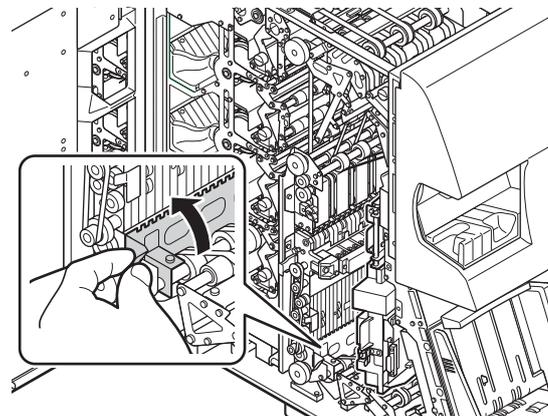

## **STEP-5** Close the Validator Unit.


- Close the Validator Unit by the Lever 3.
- Lock Validator Unit by clamp.

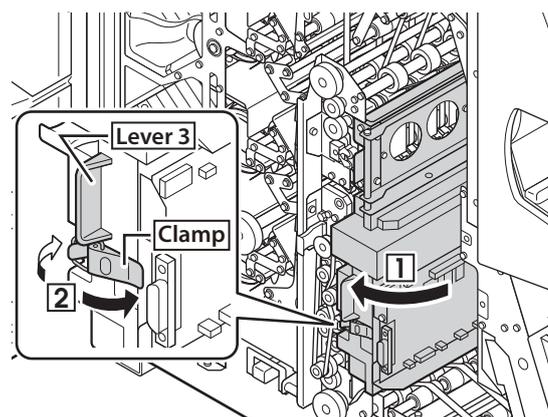


## Main Transportation Unit (Continued)

### STEP-6 Close the Transportation Path 4.

1. Keep up the Transportation Path 4 by the Lever 4 and unlock by pressing Lever 5.
2. Close the Transportation Path 4 gently.


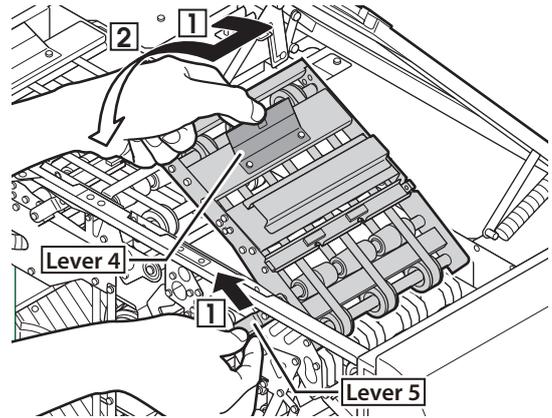


### STEP-7 Close the Front Door.

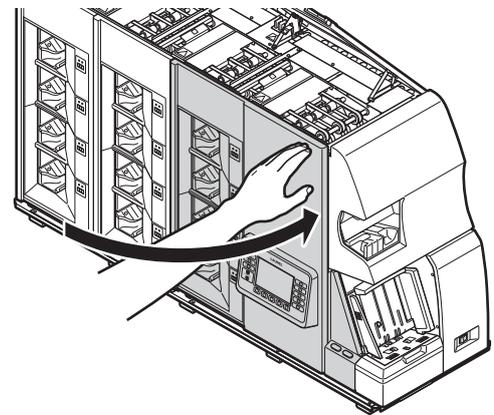


### STEP-8 Close the Upper Door.

1. Keep up the Upper Door by the handle to unlock by pressing Lever 6.
  2. Close the Upper Door gently.
    - The reset action gets started.
    - Stand-by Display is shown after completing the reset action normally.
- If the reset does not get started, press F5 key to activate the reset.

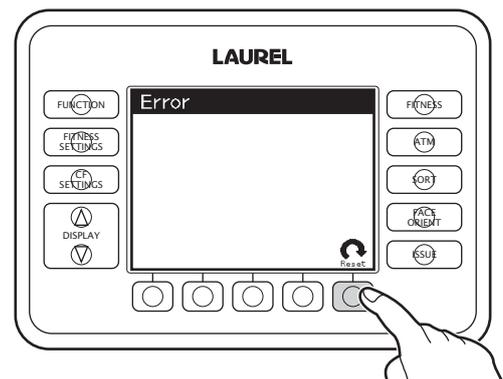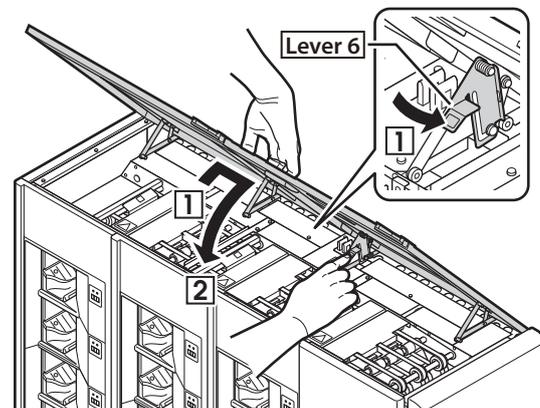


## Upper Transportation Unit

- STEP-1** Open the Front Door by the handle.

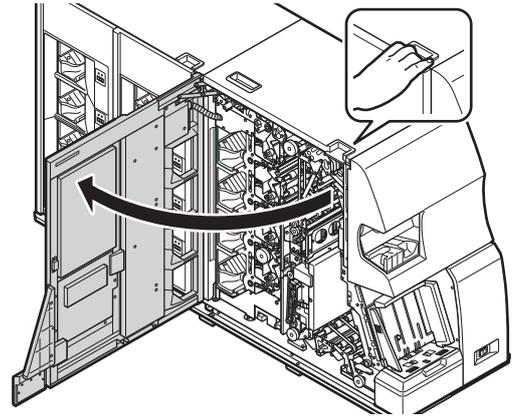



- STEP-2** Open the Upper Door and be sure to lock the door kept open.

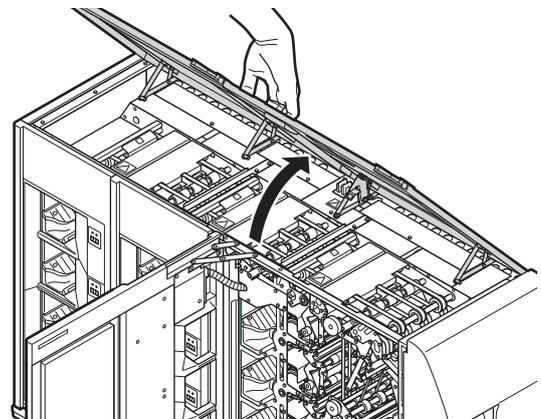

- STEP-3** Open Transportation and remove notes.

### Transportation Path 4


1. Unlock the Transportation Path 4 by pressing Lever 4 in the direction to arrow mark.
2. Open the Transportation Path 4 till locking the position.
3. Remove notes remained by rotating knob C.

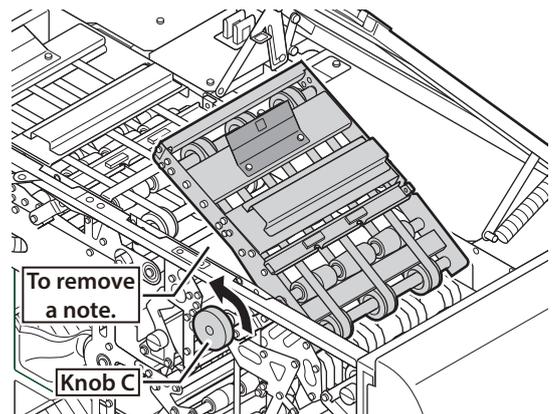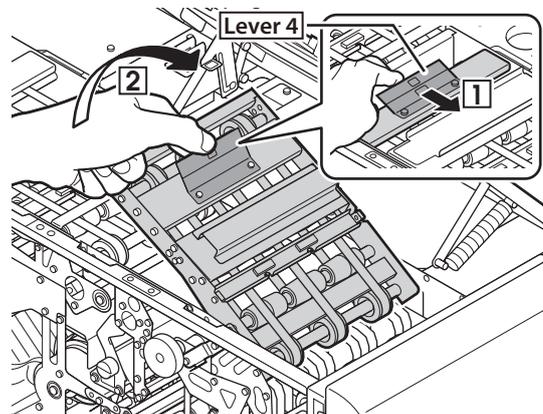


## Upper Transportation Unit (Continued)

### Transportation Path 7

1. Unlock the Transportation Path 7 by pressing Lever 7 in the direction to arrow mark.
2. Open the Transportation Path 7 till locking the position.

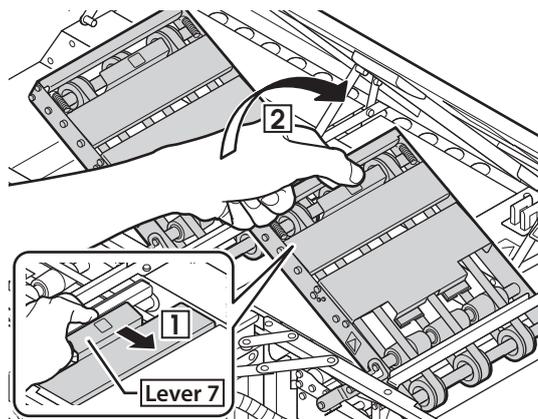


3. Remove notes remained by rotating knob C.

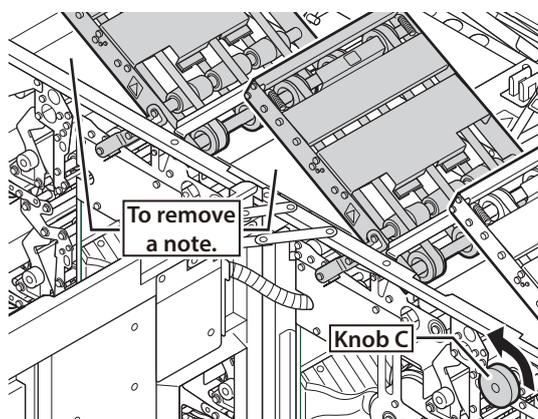


### In case a note is blocked:

- 3-1. Turn the knob at transportation path DR to the direction of arrow and release the lock.

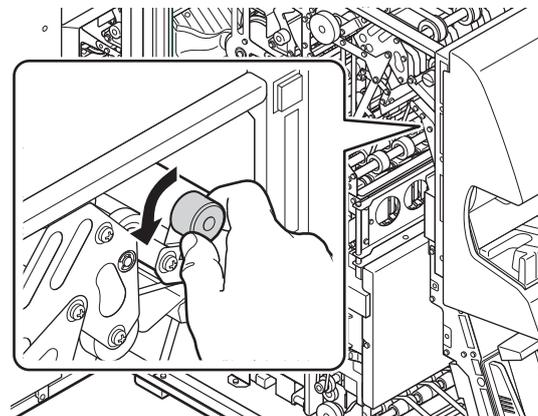


- 3-2. Pull the knob and open the transportation path DR.

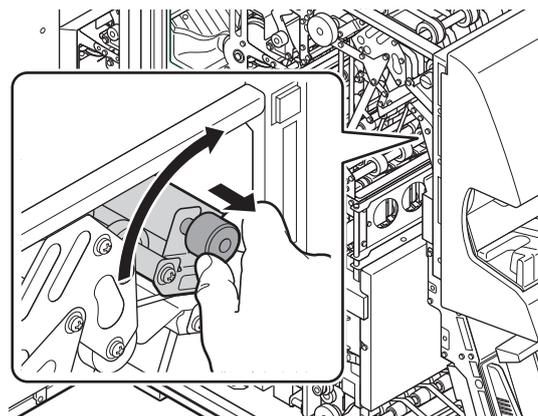


## Upper Transportation Unit (Continued)

- 3-3. Turn knob C to the direction of arrow mark and remove note remained at transportation path.

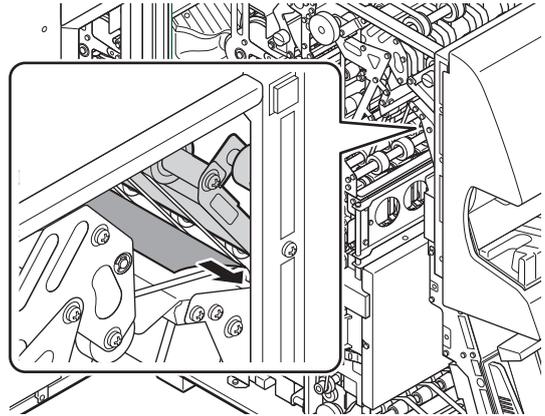


- 3-4. Close transportation path DR and tighten the knob to the direction of arrow mark.


- Be sure the transportation path DR is locked.

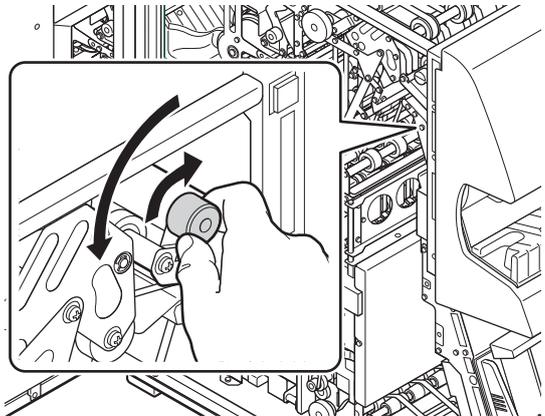

4. Turn knob J and discharge note to Reject Pocket.

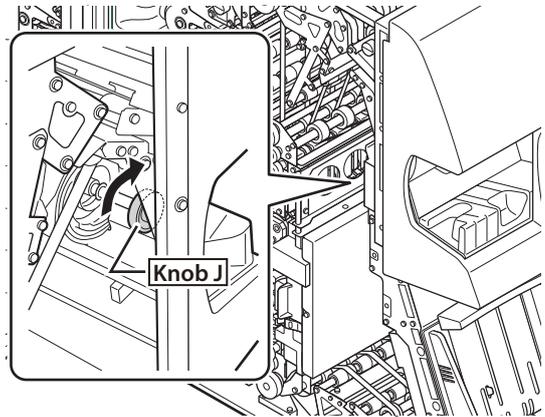

5. Remove the notes from Reject Pocket.

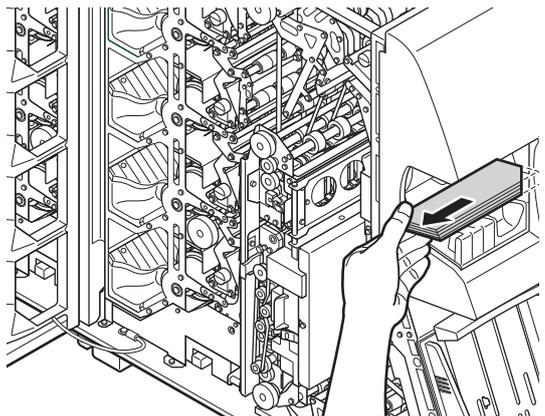


## Upper Transportation Unit (Continued)

### STEP-4 Close Transportation.


#### Transportation Path 7

1. Hold up the Transportation Path 7 with holding Lever 7 and release the lock by pressing Lever 8.
2. Close the Transportation Path 7 gently.

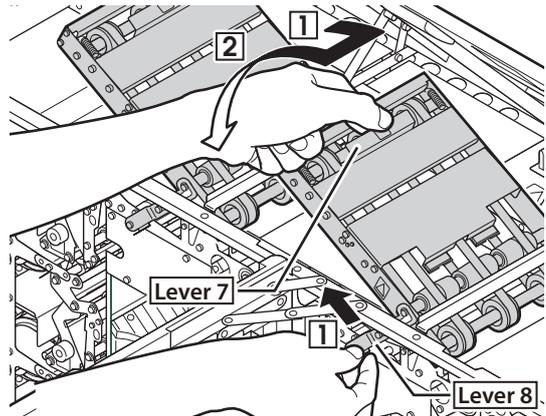


#### Transportation Path 4

1. Hold up the Transportation Path 4 with holding Lever 4 and release the lock by pressing Lever 5.
2. Close the Transportation Path 4 gently.

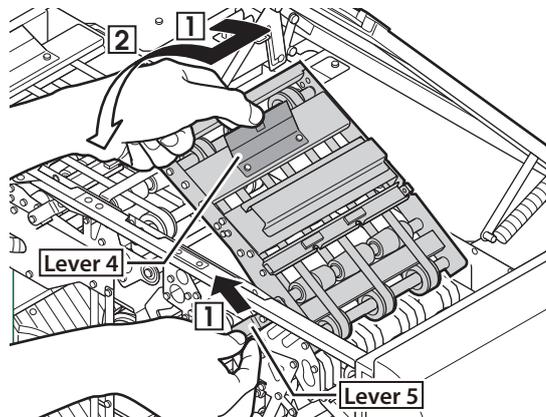


### STEP-5 Close the Front Door.

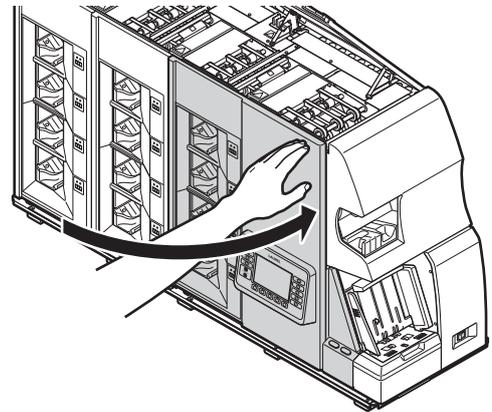

### STEP-6 Close the Upper Door.


1. Keep up the Upper Door to unlock by pressing the Lever 6.
2. Close the Upper Door gently.
  - The reset action gets started.
  - Stand-by Display is shown after completing the reset action normally.

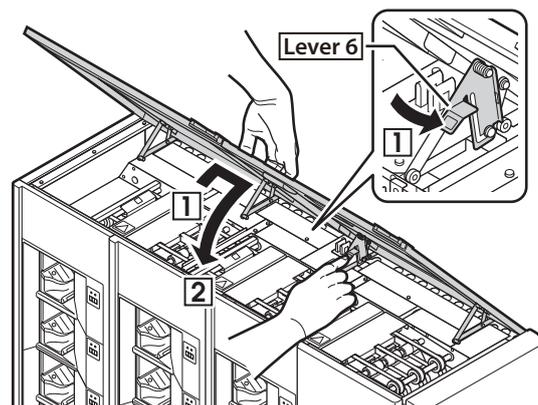

## Upper Transportation Unit (Continued)


---

- If the reset does not get started, press F5 key to activate the reset.

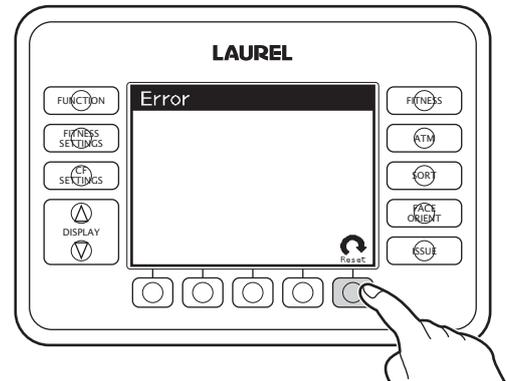


## Pocket Transportation Unit 1

- STEP-1** Open the Front Door by the handle.

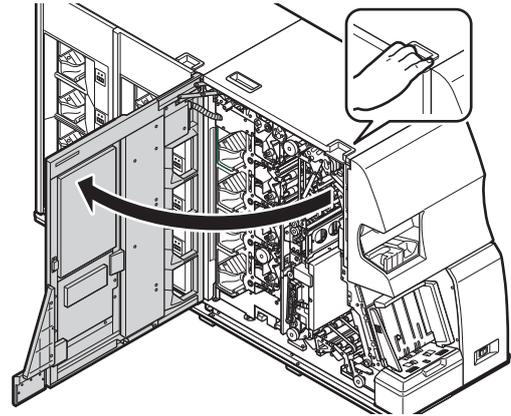


- STEP-2** Open the Upper Door and be sure to lock the door kept open.

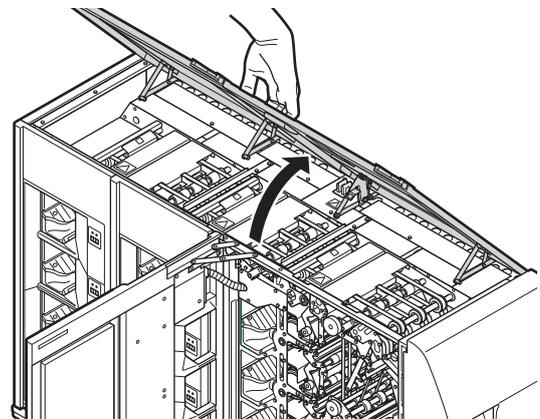

- STEP-3** Open Transportation Path 4

1. Unlock the Transportation Path 4 by pressing Lever 4 in the direction to arrow mark.
2. Open the Transportation Path 4 till locking the position.

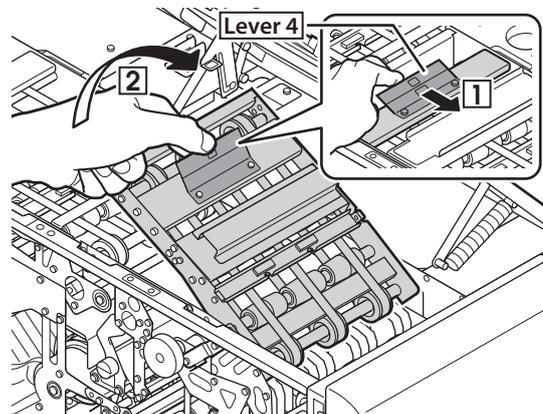

- STEP-4** Remove note at transportation path.

1. Turn knob D to the direction of arrow mark and remove notes remained at transportation path.

