

# JUJU JOINTS™

## GET STARTED

### LED INDICATORS

Upon inhalation, the JUJU Joints™ LED identifies the strain brand colour by default. You can also customize the light colour, using the JUJU Tech™ app:

| LED Colour  | Device Status                              |
|-------------|--------------------------------------------|
| White       | Your JUJU Joints™ device is ready for use. |
| White Flash | Bluetooth® pairing is successful.          |
| Yellow      | Low battery.                               |
| Red         | Please call customer service.              |

### CUSTOMER SUPPORT

JUJU Joints Canada Inc.  
555 Legget Drive, Kanata, ON K2K 3B8  
1-844-901-5858 (JUJU)  
jujujoints.com

### RECYCLING

JUJU Joints™ uses recyclable material and electronic components. Return JUJU Joints™ to a participating retailer for recycling.

### IMPORTANT SAFEGUARDS

- Failure to follow instructions and warnings may result in injury or damage.
- This product should not be used if it appears to be malfunctioning.
- If taken on board an aircraft, Bluetooth® capabilities should only be used in accordance with rules and guidance provided by aviation authorities.
- Working temp -5 to 40°C.

### WARNINGS

- May ignite, explode, leak or get hot if damaged.
- Keep away from children.
- Do not drop or puncture battery.
- Do not expose to flame, excessive heat or immerse in liquids.
- Dispose of devices properly.

### CAN ICES-3 (B)/NMB-3(B)

HVIN: JJ001  
IC: 25443-420JJ001  
FCC ID: 2AUM6 J001

35715 US Hwy 40  
Ste D102  
Evergreen, CO 80439




*This device complies with part 15 of the FCC Rules and Innovation, Science and Economic Development Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.*

*Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

### GET STARTED

1. Press and hold the wake-up button at the bottom of your JUJU Joints™ device until the LED light appears. Inhale from the mouthpiece to initiate your session.
2. To preserve battery life, your device will sleep after 20 minutes of inactivity.
3. Download the JUJU Tech™ app on your mobile device from the Google Play Store to explore and enable smart features.

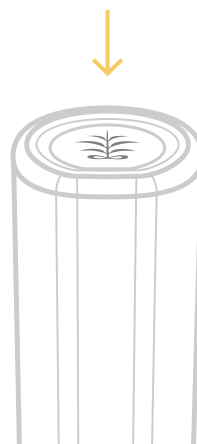

SAVE THESE  
INSTRUCTIONS

*There may be health risks associated with vaping that are not fully known or understood.  
Refer to Health Canada for risks of vaping: <https://canada.ca/en/health-canada.html>*

The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Canopy Growth Corporation is under license. Other trademarks and trade names are those of their respective owners.

