
成品规格: 120*70mm

材质: 128g双铜+单K印刷+骑马订

封底 封面

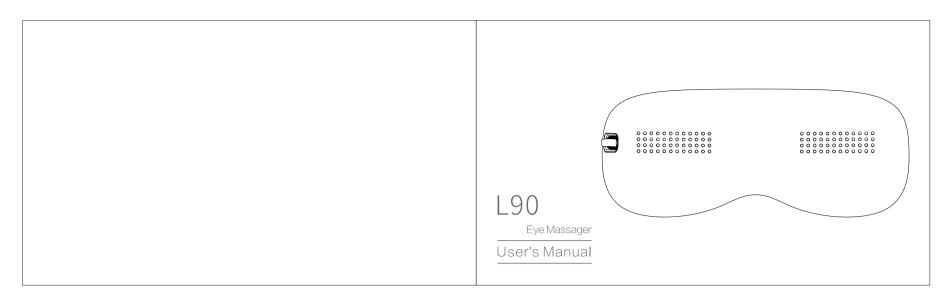

- 01. Our company reserves the right to modify any information in this user guide without prior notice
- and assumes no responsibility. 02. Unless required by applicable laws, our company does not provide any express or implied guarantee for the contents of this user guide. Including but limited to guarantees for sale or use
- 03. To the extent permitted by law, under any circumstances, our company will not compensate for any special, incidental, indirect, or secondary damages arising from the use of the relevant content of this user guide, and will not compensate for any profits, data, goodwill or predictable
- 04. If you need to export, re-export, or import this product, please comply with import and export control laws and regulations.
- 05. Our company will not be responsible for any loss caused by the personal and property injuries caused by your illegal operation of this product, or other social hazards.

Preface

Thank you for purchasing and using our products. In order to fully experience our products, please be sure to read and save this user guide carefully.

Precautions

MARNING:

Do not use this product in one of the following situations:

f. Patients with infectious diseases.

- a. Those who wear contact lenses should remove the contact lenses before using this appliance.
- b. Rehabilitation stage after eye surgery. c. Patients who are undergoing treatment and feel abnormalities.
- d. Patients with hypertension, high intraocular pressure, arteriosclerosis or cerebral thrombosis
- e. Patients with high fever, malignant tumors and osteoporosis.

Precautions

⚠ NOTICE 01. Be sure to unplug the plug from the socket before using or cleaning the machine.

- 02. Please keep this machine away from water, fire and corrosive environments. O3. If the unit accidentally falls into the water during charging, please pull out the plug immediately, and do not directly touch the unit that has fallen into the water.
- 04. Do not use this machine in a humid, high temperature, and high electromagnetic environment. 05. This machine contains lithium batteries, please do not disassemble, modify or throw in the fire by yourself to avoid danger.
- 06. This machine has a constant temperature heating function. Using the heating function for a long time or those who are sensitive to temperature may cause low-temperature burns.

 07. Do not use the machine continuously for a long time, otherwise it may cause fatigue and discomfort
- to the massaged part. O8. Any patient or incapable of operation is not suitable for using this machine.
 O9. Do not allow children or persons with limited ability to use this machine without adult care.

10. This machine is a household electronic product, not as a medical device, and not suitable for diagnosis, treatment and other commercial purposes.

Before using the product, please check the integrity of the internal accessories. If there are any missing or damaged items, please contact the seller and replace them with new ones.

The list of contents in the package is as follows: 01. L90 host *1

02. Type-C charging cable*1 03. User Guide *1

Switch button/mode **5** Type-C charging jack ${\sf Cold\,compress\,and}$ Bandage hot compress area Massage area

1. Press the power button 2S vertically and long to turn on/off. When playing music, double click the button to pause the music Double click the key to resume music playing. 2. Pull the key up (in the direction) to switch the working mode. There are five working modes in total: eye beauty mode and eye care mode Mode, eye protection mode, sleep mode and hot and

cold mode circulate in turn. 3. Pull the key downward (in the direction) to switch the temperature mode. There are 6 temperature modes in total: hot compress low gear, hot compress

 $High\ grade, low\ grade\ of\ cold\ compress, high\ grade\ of\ cold\ compress, cold\ and\ hot\ cycle, cold\ compress, cold\ compress, cold\ and\ hot\ cycle, cold\ compress, cold\ cold\ compress, cold\ cold\ compress, cold\ cold\ compress, cold\ cold\ compress, cold\ cold\$ and hot mode closing cycle in turn.
Connect mobile BluetoothAndroid operation procedure:

1. Turn on the Bluetooth port on yourphone 2. In the Other Devices list, select L90.

3. The Bluetooth Pairing Request page isdisplayed.4. Click PAIR, The connection is successful.

1. Turn on Bluetooth. 2. Select L90 from the OTHER DEVICES listThe connection is successful.

Please confirm whether the product has power. If the battery is too low, when the function of the machine is turned off or cannot be turned on, please charge it before using it. After the battery is fully charged, be sure to unplug the power adapter to avoid prolonged charging and cause the battery life to be too short to ensure the battery life.

1. Connect the USB charging cable to the charging point of the product. 2. The indicator light is red during the charging process, and the indicator light is white after the charging

 During the charging process, the machine starts the self–protection program, and the machine cannot be turned on. 4. The host uses a built-in rechargeable battery, and the charging time is 2 to 3 hours.

5. During use, the voice prompts low battery alarm, please suspend use, and use it after fully charged. Multiple charging methods

Computer USB port/mobile power supply/5V == 1A power adapter Note: The default working time of booting is 10 minutes, if you need to extend the use time, you need to boot again.

Five modes for you to choose → Eye beauty mode Eye loving mode $Eye\ protection\ mode$ Sleep mode Cold and hot cycle Cold and hot mode $\,$

Transportation and storage conditions

Atmospheric pressure: 86kpa~106kpa Ambient temperature: -10°C~65°C

Relative humidity: ≤80%RH, no corrosive gas and well-ventilated indoor. $\label{thm:continuous} \mbox{Transportation: This machine is equipped with simple earthquake-proof facilities, suitable for air,$

railway, road and ship transportation. Rain, snow, splashing, upside-down and collision should be avoided. When the storage period exceeds 6 months, it should be checked out of the box and treated with electricity for half an hour. The unit should not be close to the ground, walls, and roofs. The room should be well ventilated to avoid strong sunlight and corrosive gas erosion.

- 10 -

Product information

Model: L90

Rated input: 5V === Rated power: 12W

Battery capacity: 2000mAh Charging interface: Type-c Weight: about 310g

Size:215*89*89.5mm

- 11 -

Troubleshooting and maintenance

1. If there is a failure during operation, please check the following. 2.The product still cannot be resolved after the basic troubleshooting, please call the after-sales customer service. Do not disassemble or assemble this product by yourself.

	Colditori
Product battery is low	Please charge
Music paused state	Double-click the switch to resume music playback
Can't charge USB cable is not inserted in place No original charging cable is used	Reinsert the USB in place
	Replace with the charging cable that matches the product
Charger output current is too small	Please replace the power adapter with output current ≥ 1A
	Product battery is low Music paused state USB cable is not inserted in place No original charging cable is used

- 12 -

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.