

User Manual

English

Warning:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received,including interference that may cause undesired operation



Android User

Scan the above qr code on your android phone or search "ATranslator" in the Google store. Download the Android application and use it with the translator

Apple iOS User

An apple phone can scan the qr code or download the app "ATranslator" from the apple store and use it with a translator

Be careful:

- 1.Translator must be connected to Bluetooth of smartphone.
- 2.The ATranslator application needs to be installed on the mobile phone
- 3.Ensure that the mobile network is in a normal state (recommend mobile 4G network)
- 4.long press the power button of the translator for 2 seconds, and the volume can be adjusted by the buttons of the mobile phone and the translator.



1. Open the ATranslator APP and click on the "Dialogue Translation" option in the middle of the interface to enter the Bluetooth connection page.

Search for the Bluetooth name (AI Translator), click to connect, and press the back key to return to the main interface after successful connection

(only when the indicator light is green, can it be used normally; If the indicator light shows white, restart and reconnect the translator and APP to ensure the normal connection of the phone)

How to set the language:




1. Click on the language logo at the top of the screen in the main translation interface.
2. Select the language you want to translate in the pop-up language list.

Voice translation:

1. In the translation interface of APP, the left language corresponds to the "A" key of the translator and the right language corresponds to the "B" key of the translator.
2. In order to accurately translate, press the A or B button of the translator and wait for 1 second to start talking (Apple mobile phone needs to press and hold the button for 2 seconds before speaking)
3. Release the button after speaking (don't speak too fast, try to speak clearly and within 60 seconds)
4. The translator will translate the speech recognition into text and translate it into the required language for sound playback (if the network is not good, the playback time will be prolonged).



When using the translator, please make sure that the translation interface on the APP is always open on the IOS phone, otherwise the translation cannot be performed normally.
ANDROID mobile phone can open or not open the translation interface, can translate (APP process needs to run in the background, can not close).

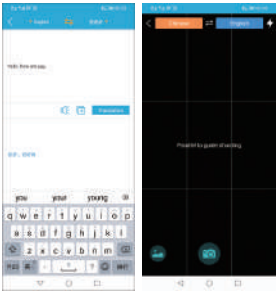

Text translation:

At the top of the text translation interface, select the language to be translated, click the blank space in the upper part to directly enter the content to be translated, click the "translation" button on the right, and the translation result will be displayed in the lower part.

Photo translation.

Set the language to be translated in the APP interface and click to take a photo.

Indicator light specification/product specification

Red light	constantly	Charging
Yellow light	constantly	Charge Complete
Blue light	flashing	Bluetooth ready to pair
White light	constantly	Bluetooth connected
Green light	constantly	Translator is connected to AI Translator application
Bluetooth	version	BT4.2
Speaker		8Ω 1W
Duration		8m

Frequently asked questions:

1. The device cannot be turned on. Make sure your device is fully charged or recharged.Or press the power button for 8 seconds to reset
2. The application is not connected to the device? Please make sure that the translator is not connected to other phones. If so, please disconnect and reconnect to the new phone.If no other phone is connected, please unpair or unsave the paired bluetooth device in the bluetooth setting of the phone and reconnect.
3. Why can't I hear any sound? You may need to turn up the speaker volume or make sure the device is connected to your phone.
- 4.Unable to find bluetooth or unable to translate after connecting to bluetooth. Restart your phone and translator and reconnect

FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.