



INTIMATE MAGICMUG G1 User's Manual

INSTRUCTIUNS FOR USE

- **Connect Bluetooth:** Confirm that both the Mug and the phone's Bluetooth are turned on. First, please open the Magii App and log in using a social account. Then, click on "Connect New Device" below and select the Magic Mug. After searching for MAGII-G1, click on "Connect". The Bluetooth logo in the upper right corner of the app displays ①, indicating successful connection of the Mug. If gray is displayed, it indicates the connection was unsuccessful, please try again.
- **Local mode:** In this mode, there is no need to constantly connect to the phone's Bluetooth. After configuring the app for the first time, the cup only has a reminder function. When using it for the first time, you need to turn on Bluetooth and use the Magii App to bind the Mug. After binding, click on the pattern to set when to drink or take medicine. After saving, the alarm will automatically remind for 30 minutes when it arrives. Touch the key to turn it off.
Note: Local mode cannot use the Mug key to send and receive signals, and is suitable for users who do not have a mobile phone or have difficulty operating their phones.
- **Pairing mode:** This mode allows you to add multiple pairwise friend mugs through the app when Bluetooth is connected. Enter the main interface of the Mug, press the string of numbers below to copy your ID number, exchange your ID number to your friend. Click on "Connect Friend's Magic Mug", enter the received friend ID number to add. Both parties need to complete the addition separately and single party addition is invalid. If you can see the friend information under "Friend's Magic Mug", it indicates that the pairing of the two mugs has been successful. You can manage and dissolve pairing relationships. Different LED light colors can be set to distinguish intimate relationships with friends. Two successfully paired mugs can send and receive signals to each other. Click ♥ key on the mug to send a "love signal" to friend. The signal flashing state will last for a maximum of 30 minutes. After the receiver touches the key or waits for a timeout, the signal will automatically turn off. If there are multiple intimate relationships, you need to manually set the best friend to the "top" status.

IMPORTANT SAFEGUARDS

When using this product, basic safety precautions should always be followed, including the following:

- (1) Read all instructions.
- (2) Avoid putting hot drinks with a temperature exceeding 55 °C /131°F to prevent burns.
- (3) Do not microwave. The product is equipped with a lithium battery, which poses a risk of explosion when heated. Do not use at high temperatures to avoid short circuits or damage to electronic devices and deformation and discoloration of plastic parts, which may affect normal use.
- (4) Close supervision is necessary when any appliance is used by or near children.
- (5) Use only power supply and charging base provided with the product for charging.
- (6) Unplug power supply when not in use and before cleaning. Clean the power and charging base with a clean, dry cloth and do not immerse in water or other liquid to protect against fire, electric shock and injury to person.
- (7) Hand wash only. Dishwasher is not allowed. Please use clean water and mild detergent for cleaning. Do not use grinding powder, metal cleaning balls, stain removers, or cleaning agents containing chlorine to avoid scratching, rusting, or corrosion of the product surface.
- (8) The ambient temperature for normal use of the product is 0-40 °C/0-104 °F. Do not put it in the freezer.
- (9) Do not operate the product with a damaged cord, plug or charging base, or after the product malfunctions. Attempting to open or service the unit voids all warranties and may cause injury to user. If you experience problems with the device, discontinue use and contact Magii or sales service provider for assistance.

Note: It is necessary to connect to the phone's Bluetooth and always keep the app in the foreground or suspended state. If the receiving app process is not opened, the signal will not be transmitted immediately. At this time, the app will pop up a prompt to the other party, and the signal will automatically transmit and light up the LED when the other party opens the app.

SET ALARM

Support setting alarms for drinking or taking medicine, and you can choose specific alarm times and cycles. Click on the droplet/pill icon to enter the settings interface, customize the light color of the alarm to distinguish items, and click "Add Alarm" to add an alarm. You can edit the name of the alarm, swipe the scroll wheel to select the specific time, and finally select the alarm cycle and press [OK] to complete.

BATTERY

You can obtain the remaining battery level of the Mug through the Magii App. When the battery level is below 10%, the App will push a charging prompt. During charging, the charging light is always red. After the battery is fully charged, the light will turn off.

CHARGING

Please use a legitimate brand charging plug of 5V-1A or 5V-2A.

MATERIAL DESCRIPTION:

Inner body: Austenitic 316 stainless steel
Mug cover: polypropylene PP
Shell: ABS resin plastic
Sealing ring: Edible grade silicone

- (10) If any of the instructions provided are not followed, or the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment for fire, electric shock or injury to persons may be impaired.
- (11) This product is intended for consumable liquids like coffee, tea, cola and so on.

- **Cannot be used for long-term insulation of dairy products or baby food (a risk of bacterial growth)**


- **Carbonated drinks, sparkling drinks, dry ice, etc. cannot be sealed with cup lids, and gas circulation should be ensured (pressure inside the cup). Increasing it may cause beverage splashing or product damage, which may cause personal injury.**

- (12) The intelligent function of this product needs to be achieved through mobile Bluetooth. Please confirm that the Bluetooth and APP are connected when using this function.
- (13) Save these instructions.

PACKAGE LIST

| Name | Quantity |
|---------------|----------|
| MagicMug | 1 |
| Charging wire | 1 |
| User's manual | 1 |

KEY DEFINITION

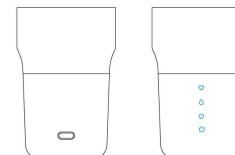

- ① Power on: Press and hold ④ for 3 seconds, and the light will be in a running state
- ② Power off: Press and hold ④ for 3 seconds, and the light will be in a flashing state
- ③ Lock/Unlock: Press ♥ and then press ④, and the light will be in a flashing state
- ④ Key ♥: Send [Love signal], and receiving light will be in breathing light state
- ⑤ Key ④: Timed alarm light, touch to turn off
- ⑥ Key ④: Intimate message alarm light, touch to turn off

APP DOWNLOAD

Scan the QR code on the right and download it according to the corresponding system through [download.magiiife.com](https://www.magiiife.com).

DOWNLOAD IN APP STORE

You can search for "Magii" in the App Store to download;



magii your life

Designed in Shanghai

Name: MagicMug
Model: G1
Capacity: 350ml | 12 oz
Packaging specifications: 10×10×18cm
Producer: Shanghai Magii Intelligent Technology Co., Ltd.
Made in China
Manufacturer: Suzhou Rongwen Kubai Lighting System Corp., Ltd
Add: No.18 Luhe QianJing Tang Road, Huangjing Town, Taicang City

www.magiiife.com

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.