

# Smart Watch Medicine Box

## Specifications

Model No.	KY-S03
Watch NW	70G
Dimension	47.9*50.3*18.5mm
Strip Length	22mm
Memory	16MB
Step Tracker	Walking Step Tracker
Time	Time Display
Memo reminder	10 modes Reminder
Waking Screen by Raising Wrist	Automatic
Language settings	7 languages supportable
Charger specifications	5V/1A
Maximum standby time	About 160H
Maximum wrist size	60mm
Battery capacity	300mAh
Bluetooth caller ID	Bluetooth phone call
Call log	Display number log
Stopwatch	Available
Mute setting	Available
Resolution	466*466 (HD)

## 1. Component Introduction

Welcome to purchase and use. Please read this manual carefully before use. When using this device for the first time, please read the manual carefully and follow the steps in the manual for your convenience.



### 3. Power on and off

- Press the power button for 2 seconds to turn on the device. After the device is turn-on completely then setting the language (select the language according to your needs), time, and date, and enter into the system operation interface.
- If you need to change the language after turn-on, you can slide down on the main dial page, enter Settings-Language, and change the system's default language. (Simplified Chinese, English, German, French, Italian, Spanish, Traditional Chinese, Japanese, Arabic)




### 4. Switch watch face style

- On the watch face interface that press to 2 seconds to enter the watch face selection mode, slide left and right to switch, and click OK. There are 10 styles of watch faces to choose from.



## 5. Main dial display function

- Slide the main dial upward to enter the message interface. Click the message icon to view the message and medication record. Click to turn the page. After viewing the message, you can exit or swipe right to exit.
- Slide the main dial downward to enter the Do Not Disturb mode/drain function/flashlight/phone/brightness adjustment/setting function.
- Slide the main dial page to the left to enter the phone/step counting function.
- Slide the main dial page to the right to enter the main menu page: sports mode/today data/sports record/phone/-medication reminder/important reminder/medication reminder record/flashlight/alarm clock/timer/stopwatch/calculator/setting.

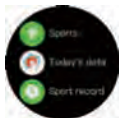

## VI. Main menu functions Introduction

### 1. Sports mode

The watch sports modes include outdoor running, outdoor walking, indoor running, cycling, basketball, football, table tennis, badminton, rope skipping, square dancing, boxing, yoga, and other modes: enter to set target time, target mileage, target calories and other sports data; click to start exercise, swipe right to exit the current sports mode

### 2. Phone

After pairing it with Bluetooth on the mobile phone, you can usually use this function to answer and make calls.

Call interface:

- Click the call interface.
- Enter the corresponding number.
- Click the call icon to make a call.

Recent calls: click to view call records

Contacts: Click Contacts → Update → to synchronize the mobile phone phone book

### 3. Medication reminder

- Click "+" to add a fixed medication reminder. Users can set the reminder cycle by themselves: one month/one week, or an actual number of days. According to your medication plan, set the daily medication time on the operation panel of the smart device.
- The medicine box will remind you to take the medicine when you set it. When the reminder arrives, the intelligent medicine box will emit a sound and vibration reminder to ensure you will not miss the medication time.
- When the medication reminder vibrates or rings, if you do not open the medicine box to take the medicine, the watch interface will continue to display the medication reminder message until you open the medicine box. The reminder text will not disappear.
- Medication reminder record: click to view the most recent medication record.

## 4. Important reminders

- Click "+" to add important schedule reminders for users
- Important reminders display the phrase (Important matters).

## VII. Setting functions

**Preferences:** You can set homepage shortcut function options

**Theme Style:** Contains a variety of different UI display styles

**Watch face settings:** You can choose your favorite watch face as the main watch face of the device

**Low power mode:**

After the low power mode chosen, you will turn off the waking screen by raising your wrist. Vibration and call functions are turned off. The screen brightness is reduced to ensure the device can be used longer when the battery is low.

**Screen off the clock:** Turn on the screen off the clock. After the screen is off, the screen will always display a digital or pointer clock. Turning it on will shorten the device's standby time accordingly.

**Screen on time:** Users can set the screen on time or always on state.

**Vibration and ringtones:** You can set vibration or ringtone reminders for incoming calls and taking medicines.

**Language:** Select a language for system language settings

**Date and time:** Set the corresponding time and date

**Turn off:** To turn off the device

**Restart:** Restart the device

**Restore to factory settings:** Click Restore to restore the device to the factory state and all data stored will be cleared.

**System:** You can view detailed device configuration information

## Tips:

※ The watch is charging with a magnetic charger. Please make sure that watch is on charging process smoothly when charging and no any dirt at the magnetic contact position. This product's battery cannot be removed separately. Due to wastage by product itself, to cause the product may not be turned on due to a dead battery after being idle for more than one month. Please charge it regularly every week to ensure the device works properly.

※ For the first use, please charge the watch. The watch is charged with a magnetic cable, and the interface is USB. To follow the specified direction to hold the watch on the base then to connect to the power supply. It is recommended to use a power adapter that meets the requirements of relevant safety standards, a power adapter that meets local certification, and a charger with specifications of 5V-1A or above to charge the watch. After charging, please turn off the power or remove the base.

## Disclaimer

Please read this manual carefully before use and keep it properly. The pictures in this manual are for reference only. If any changes, no further notice, hope its understandable.

Thank you for choosing our company's smart wearable device. You can fully understand how to use the device by reading this manual. This device can provide a variety of practical functions and services. Please read the following information carefully to use the smart watch safely and effectively.

This product does not have a refrigeration function. If you have temperature-sensitive drugs, please read the drug instructions in detail for drug storage requirements.

This device is not a medical device and is only used to remind users to take medicine on time and carry the necessary medication.

This device has a waterproof function and can be worn in lightly wet scenes such as washing hands. However, wearing it during swimming, showering, bathing, or sauna scenes is strictly prohibited.

Please do not clean your watch with a damp cloth containing vital detergent ingredients.

## After-sales service guarantee card:

### Dear user:

Thank you for choosing our product, and we would like to express our gratitude! We aim to ensure you receive our high-quality service and relieve your worries. We make the following service commitments to you and provide you with a one-year product warranty (non-human-caused) when needed.

### Warranty instructions:

1. If the user's watch has a non-human-caused product performance failure during the warranty period, such as product quality problems caused by manufacturing, material design, etc. The motherboard can enjoy a one-year free warranty service from the date of purchase
2. The warranty does not cover failures caused by personal use. For example, self-disassembly, modification, causing failures, accidentally causing falls, heavy falls, or failures during use. The warranty does not cover all non-functional failures caused by human factors.
3. When requesting a free warranty, please be sure to provide a warranty card with showing purchase date and stamped.
4. All functions of this product as per real product completely.

DONGGUAN LANCHENG ELECTRONIC TECHNOLOGY CO.,LTD.

Building B, Caiqiao Industrial Park, Kuigiao Road,  
Puxin Lake, Tangxia Town, Dongguan City,  
Guangdong Province, China.

Service Hotline: 0769-82865991

Official Website: [www.lc-pillbox.com](http://www.lc-pillbox.com)

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.