

眼罩包装/说明书

包装说明

1. 天地盒的形式
2. 包装外盒尺寸14*10*7.5cm
3. 包装说明书子盒尺寸10.5*8.5*2.5cm
4. 说明书尺寸10*8cm

外盒包装：天盖内容

Sarelina

NightBird NB10



Starting to sleep.

AI ENC

Clear Phone Call

Open Audio

Comfortable Wearing

3D Audio

High Quality Sound

Brainwave Music

Fast Sleep



Travel Resting



Mediation & No Phone



Office Nap



Daily Sleep

外盒包裝：天蓋內容



Starting to sleep.

外盒包装：地盒底部内容

Sarelina NightBird NB10
Product Name: NightBird
Product Model: NB10
Input: 5V=1A
Rated Capacity: 250mAh
Bluetooth Version: 5.3
Designed By ZY Acoustic (Shenzhen) Technology LTD, CN
Manufactured In China
Address 8B2, No. 9006, Binhe Road, Xinzhou Community,
Shatou Street, Futian District, Shenzhen, China



RoHS
compliant



子盒内容



说明书子盒两头不封口
说明书放在收纳袋里

说明书1-2



说明书3-4

How to wear the mask




Use both hands to attach the mask on the face, fasten the mask with the Velcro strap.

How to adjust the mask




Adjust the mask side to side to make sure the speaker on a comfortable position around the temples and listen the balance music.

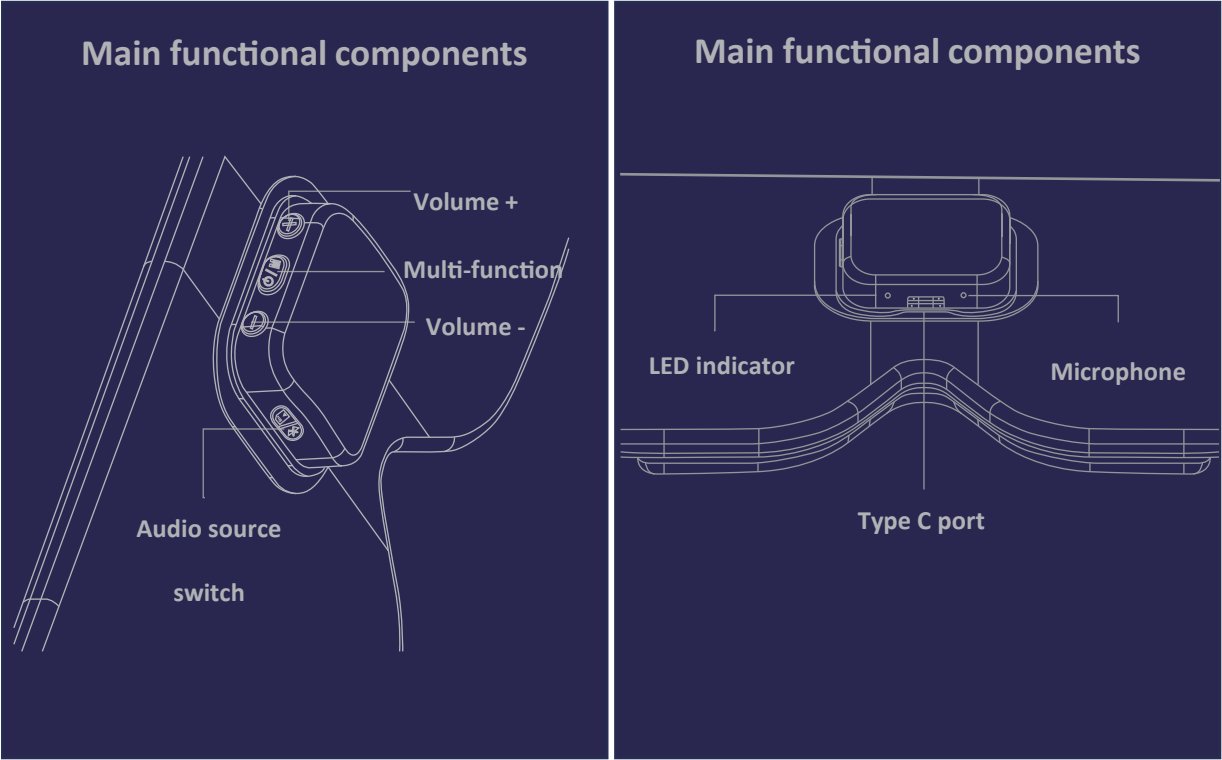


Multi-function Button

Press and hold the button for 3s, the LED indicator will turn on, the device start up. And same operation, the LED indicator will turn off, the device will shut down.

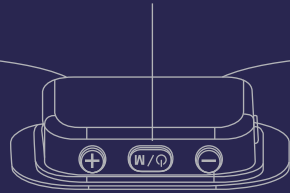

Pairing the Bluetooth

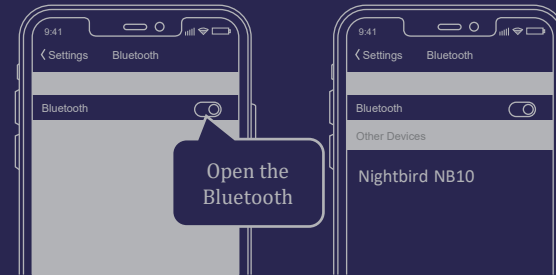

When used it the first time, the mask will automatically enter Bluetooth pairing mode upon power on, LED indicator will blink

Multi-function Button

Playing music:

On call:

Press once, play/pause

Press once, answer

Press twice, next song

Press and hold, reject


Press triple, previous song




Volume Adjustment


Press: Increase volume

Press: reduce volume

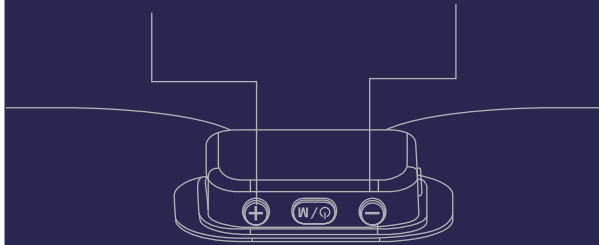

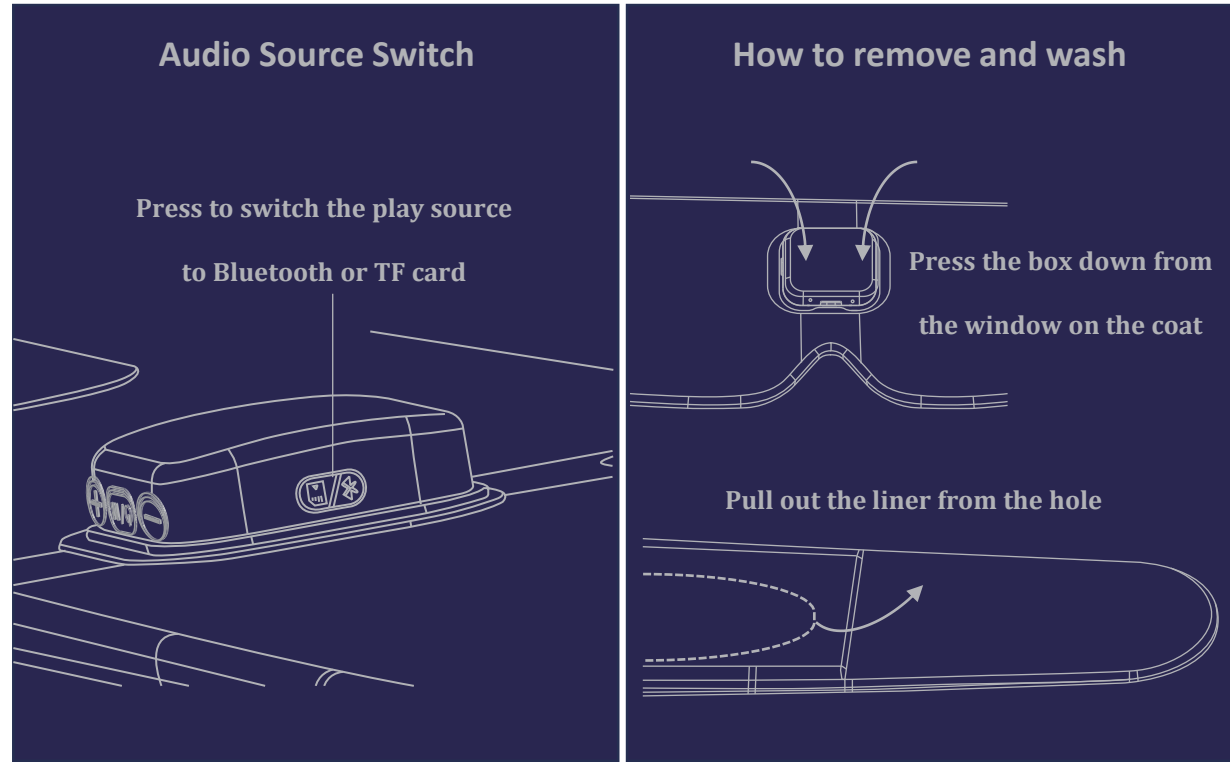


How to remove and wash




Wash the coat only

Wash it by hand or machine





Protect the liner from water

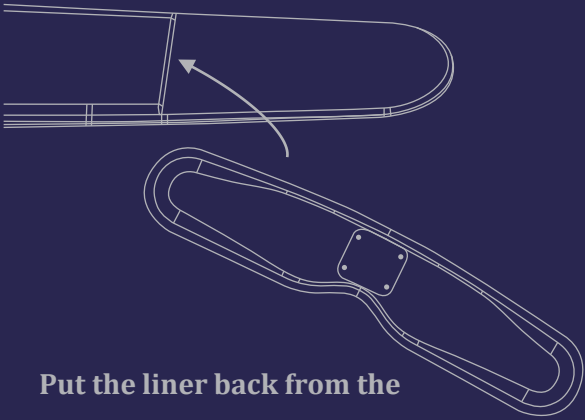How to assembly back





Put the liner back from the hole after the coat washed.

Coat washing instructions



1. Pls wash by hand or machine


2. Wash temperature <40 °C





3. Not bleachable

4. Drying in the shade

Contents



Sleep Mask *1




Instruction Manual *1

Storage bag *1

Product Warranty

Purchase No.	
User Name	
Product Model	
Failure Issue	
Phone No.	
Delivery Add	

Your Sleep, Enhanced with Sarelina



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.