


Your phone at a glance

Thank you for choosing the HUAWEI Ascend Mate2 smartphone.

Before you start, let's take a look at your new phone.

Press the power button to turn on or off the screen. Press and hold the power button for 15 seconds or more to restart your phone.

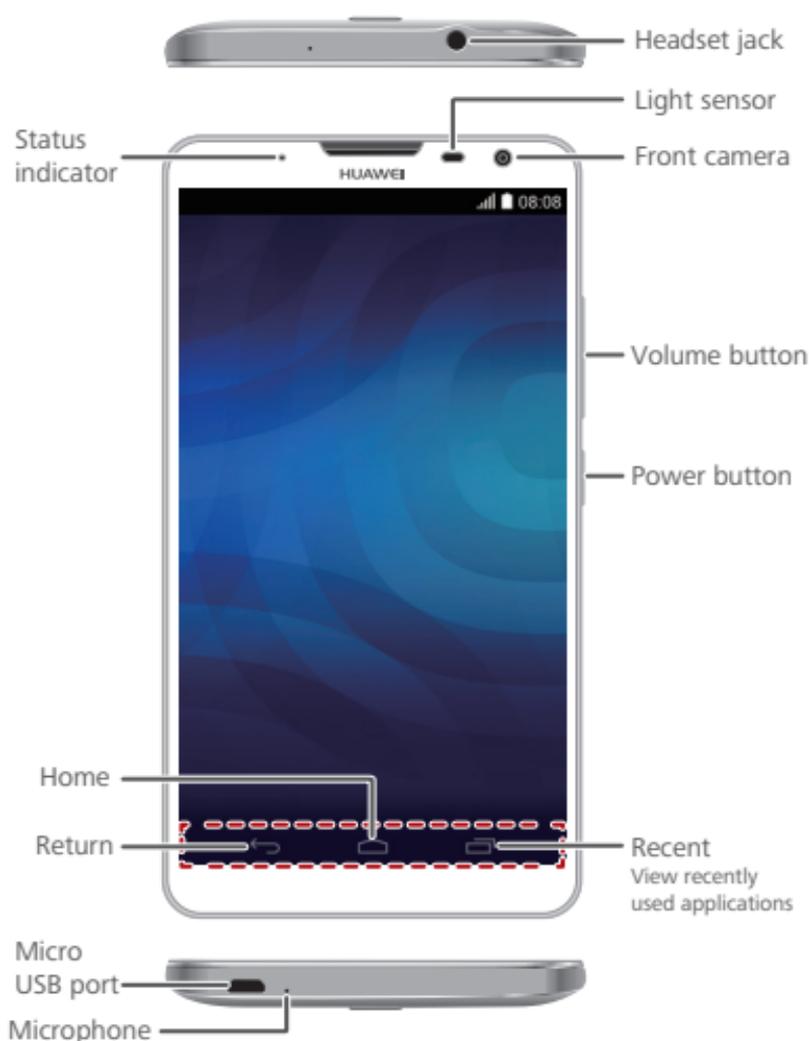


Installation

Follow the instructions in the following figures to complete the installation. Then press and hold the power button to power on your phone. Do not insert or remove the micro-SIM card when your phone is powered on.

- 1 Open the battery cover.



- 2 Insert the micro-SIM card.
Insert the microSD card (optional).

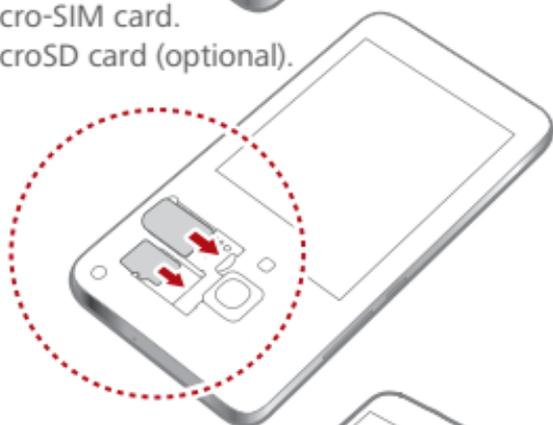

- 3 Charge the phone.



Locking and unlocking the screen

Your phone automatically locks its screen after being idle for a specified period of time.

Alternatively, you can press the power button to manually lock the screen. You can go to  and touch **Display > Sleep** to set the screen timeout period.

Follow the onscreen instructions and drag  to unlock the screen or open an application.




Managing contacts

Touch  to open **People**.

Go to the **Favorites** tab to mark a contact as your favorite or manage contact groups.

On the **People** screen, touch  > **Manage contacts** to import contacts from other devices or export contacts on your phone.

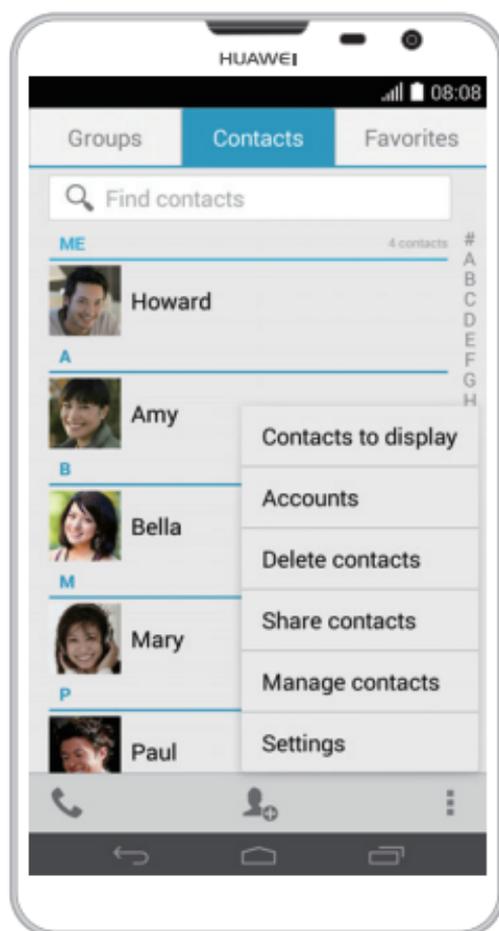

Placing a call

Touch  and enter a phone number on the dialer. If you have existing contacts on your phone, your phone automatically displays matching results as you type. Touch a number to place a call.

You can also touch a number from Contacts, Messaging, Email, or Browser to place a call.




Messaging

Touch  to open **Messaging**.

Attaching a file to a text message converts the message into a multimedia message. You can save photos, audio clips, or videos from received multimedia messages.

When you are typing, open the notification panel and touch  to switch the input method.

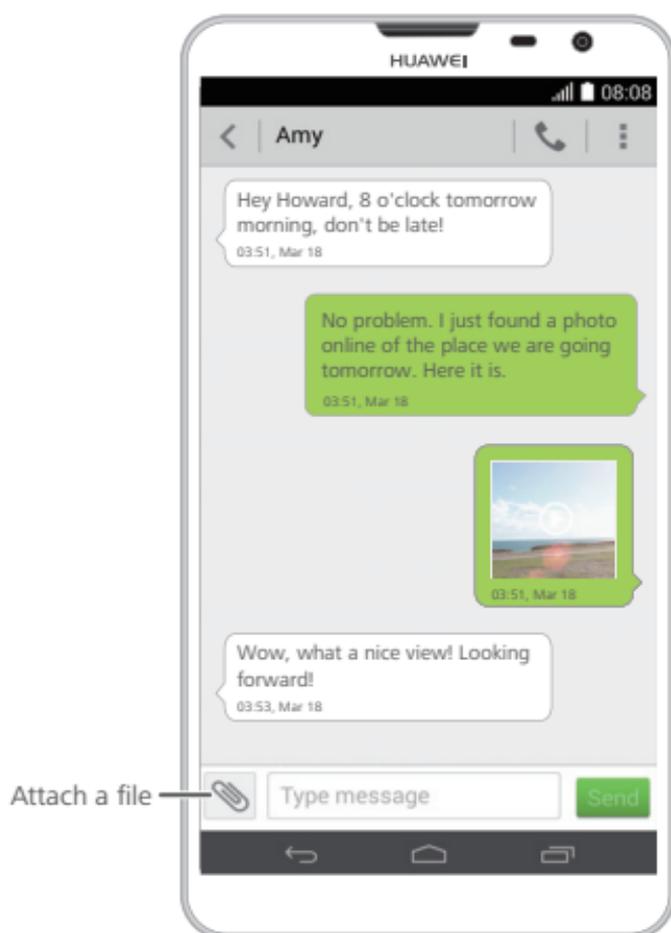


Suspend button

The suspend button contains a palette of useful functions and shortcuts which lets you quickly configure your phone settings or launch applications.

Go to  and touch **Suspend button** to turn on the suspend button. Touch  to display the suspend button menu.

Touch  to display the multi-window menu. You can then launch a commonly used tool without exiting the current screen.

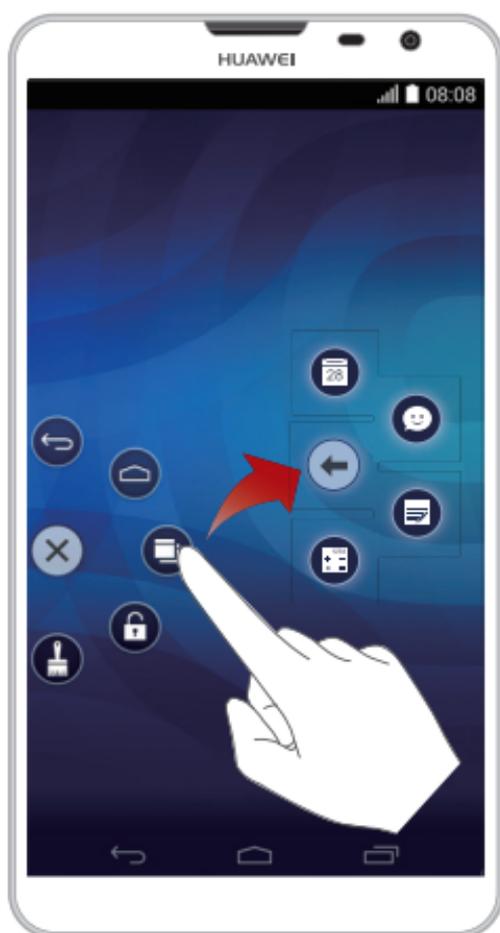

Turning on one-hand UI

In one-hand UI mode, dialing numbers, texting, and other routine activities are easy to accomplish with one hand.

Go to  and touch **One-hand UI** to turn on one-hand UI.

You can touch the arrow on either side of the screen to move the dialer or other operation area to the side of your choice.



Taking a photo or video

Touch  to open **Camera**.

In photo mode, let your camera focus automatically or touch the screen to focus the camera. Then touch  to take a photo. In video mode, frame the scene and touch  to record a video.




Editing a photo

Touch  to open **Gallery**.

When browsing a photo, touch  to edit it. You can then crop it, adjust its color, apply filters or frames to it, and more.

When you browse through **Gallery** in full screen mode, flick upward on a photo or video playback screen to turn on **Transfer**, which lets you quickly share the photo or video with your friends.

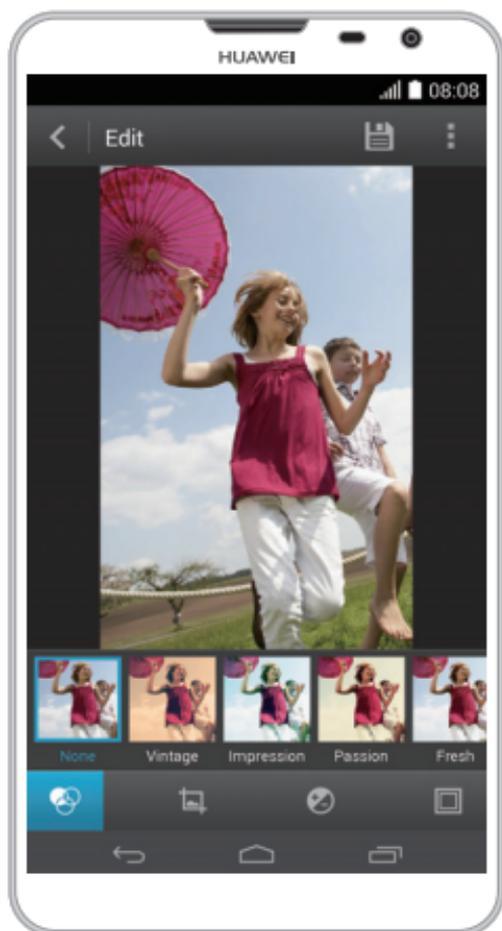


Listening to music

Touch  to open **Music**.

Play your songs by name, artist, or album, and mark your favorite songs.


To turn on DTS audio, touch  .

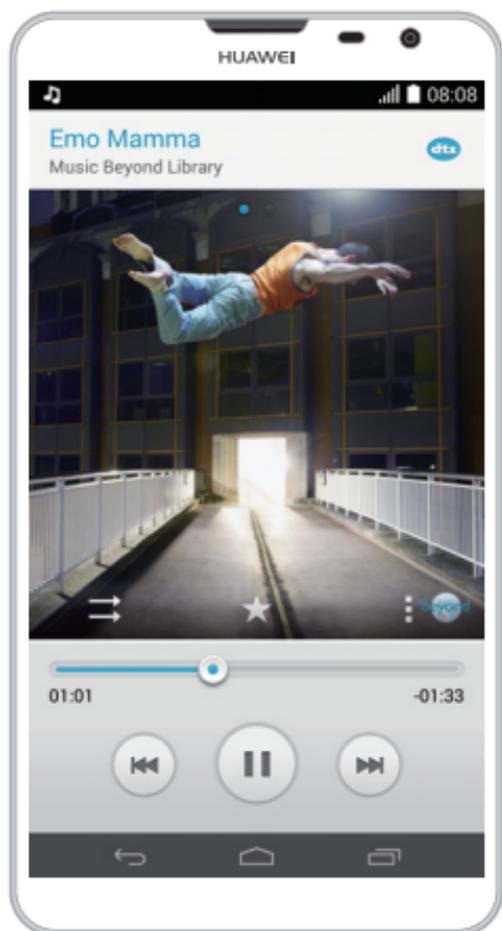

Phone Manager

Phone Manager supports system diagnosis and optimization at the touch of a button. You can configure your phone's power saving mode, clean up your storage, and turn on do not disturb mode.

Touch  to open **Phone Manager**.

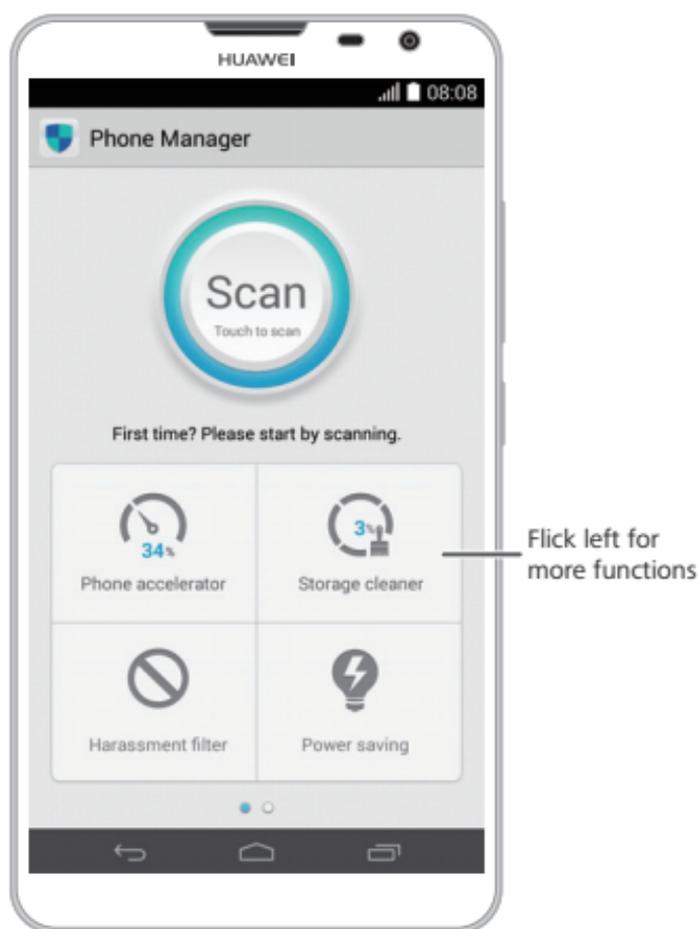

More information

Encounter any issues while using your phone?

Touch  on your phone to open **Help Center**.

For the full user guide, go to

<http://support.gethuawei.com> and search for HUAWEI Ascend Mate2.

Want to learn more about Huawei Emotion UI?

Visit <http://en.ui.vmall.com/> for the latest information.

-  This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.