


Ultrasonic Barking Collar User Manual

Thank you for purchasing our products, please feel free to contact us with any questions.
We are committed to providing the best quality products and service!

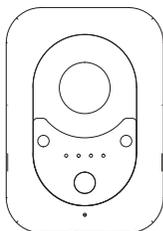


Packing list:

- 1.Receiver.
- 2.Type-cc charging cable.
- 3.User manual.

Product Parameters:

Product Name:	Ultrasonic Barking Collar.
Power supply:	universal 5V charger
Input voltage:	5V
Input current:	1000MA
Battery:	3.7V 1500MA ICR18650 NH
Waterproof IP rating:	Ip65
Sensor:	Sound detection.
Sensor distance:	15meters

Key Function:

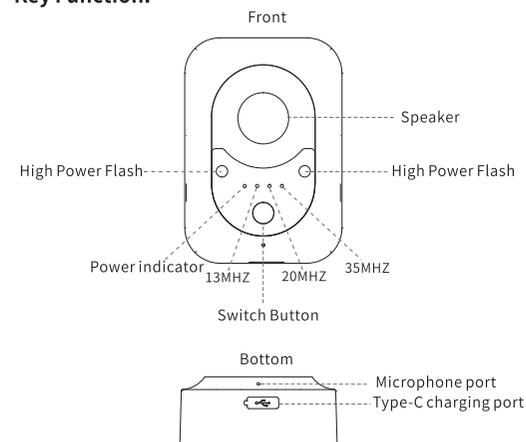

How to use:

- ① Long press the "Power" button for 3 seconds, the machine is switched on, the red and green indicator lights are on, the red indicates the power supply, the green indicates the currently selected frequency band, and then long press the button for 3 seconds, the machine is switched off.
- ② Short press the "Power" button to select the frequency band you want. You can choose to adjust the corresponding ultrasonic frequency band.
- ③ Triggered by the sound of the dog and start working.
- ④ The red light is blinking fast, which means the battery is low, please charge it as soon as possible.
- ⑤ Type-c Connect the device to a laptop PC or charger (max. 5V 2000MA) Fully charged within 5 hours The device can work continuously for 30 days when fully charged.
- ⑥ During charging Red light flashing means charging, long light means full.

Main Points:

- ① 1 The maximum detection distance is 10 metres If the dog is more than 10 metres away from the device it will not be triggered to work by the sound of the dog barking.
- ② 2 The device broadcasts ultrasound waves to deter dogs from barking, if the dog has hearing problems the device may not work.
- ③ 3 The device is suitable for dogs between 6 months and 8 years of age.
- ④ 4 It is not recommended to use the device on dogs of the opposite sex
- ⑤ 5 it is not recommended to use a device against two or more barking dogs at the same time.
- ⑥ 6 It is not recommended to use the same ultrasound frequency on the same dog for 10 days or more, dogs may be resistant to the same ultrasound frequency, please change the ultrasound frequency every 7-10 days
- ⑦ 7 Please check the battery power once a month, if the power is too low, please charge it in time.

- ⑧ 8 Built-in 1500MA rechargeable lithium battery.
- ⑨ Charging time 3-4 hours Working time : 30 days .Standby time : 60 days

Warning:

- Please fully charge the appliance before using it for the first time.
- Do not install the device in water.
- The device cannot be used while charging
- If the device is not used for a long time and cannot be switched on Please plug in the charging device and wait for 2-5 minutes after the device is charged normally.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.