



## FEATURES AND BENEFITS

- Quick and easy installation
- Adhesive holds to surface during humidity exposure and hot/cold cycles
- RoHS-compliant
- Can be installed in the following ways:
  - On different non-conductive surfaces and thicknesses
  - Near metals or the human body
  - On flat or curved surfaces

SPECIFICATIONS	
Frequency (MHz)	2400 - 2480
Peak Gain (dBi)	+2.0
Average Gain (dBi)	> -1.5
VSWR (MHz)	< 2.0:1
Impedance ( $\Omega$ )	50
Polarization	Linear

MECHANICAL SPECIFICATIONS	
Antenna Type	Flexible Planar Inverted F Antenna (FlexPIFA)
Dimensions – mm (inches)	40.1 x 11.0 x 2.5 (1.58 x 0.43 x 0.098)
Weight – g (oz.)	1.13 (0.040)
Color	Clear yellow
Adhesive	3M 100MP
Connector Mating Height (max) – mm	MHF1 (U.FL)   2.5 MHF4L   1.4

ENVIRONMENTAL SPECIFICATIONS	
Operating Temperature – °C (°F)	-40 to +85°C (-40 to +185°F)
Material Substance Compliance	RoHS

## CONFIGURATION

PART NUMBER	CABLE LENGTH	CONNECTOR
001-0014	100 mm	MHF1
001-0022	100 mm	MHF4L
001-0025	100 mm	MHF1
EFB2400A3S-13MHF1	130 mm	MHF1
EFB2400A3S-22MHF1	220 mm	MHF1

**Note:** Specifications are based on the 100mm cable length, standard antenna version with MHF1 / U.FL connector. Varying the cable length or type or connector will cause variations in these antenna specifications.

MECHANICAL DRAWING

Physical Dimensions of 001-0014, 001-0022 and EFB2400A3S-22MHF1  
(Right hand orientation)

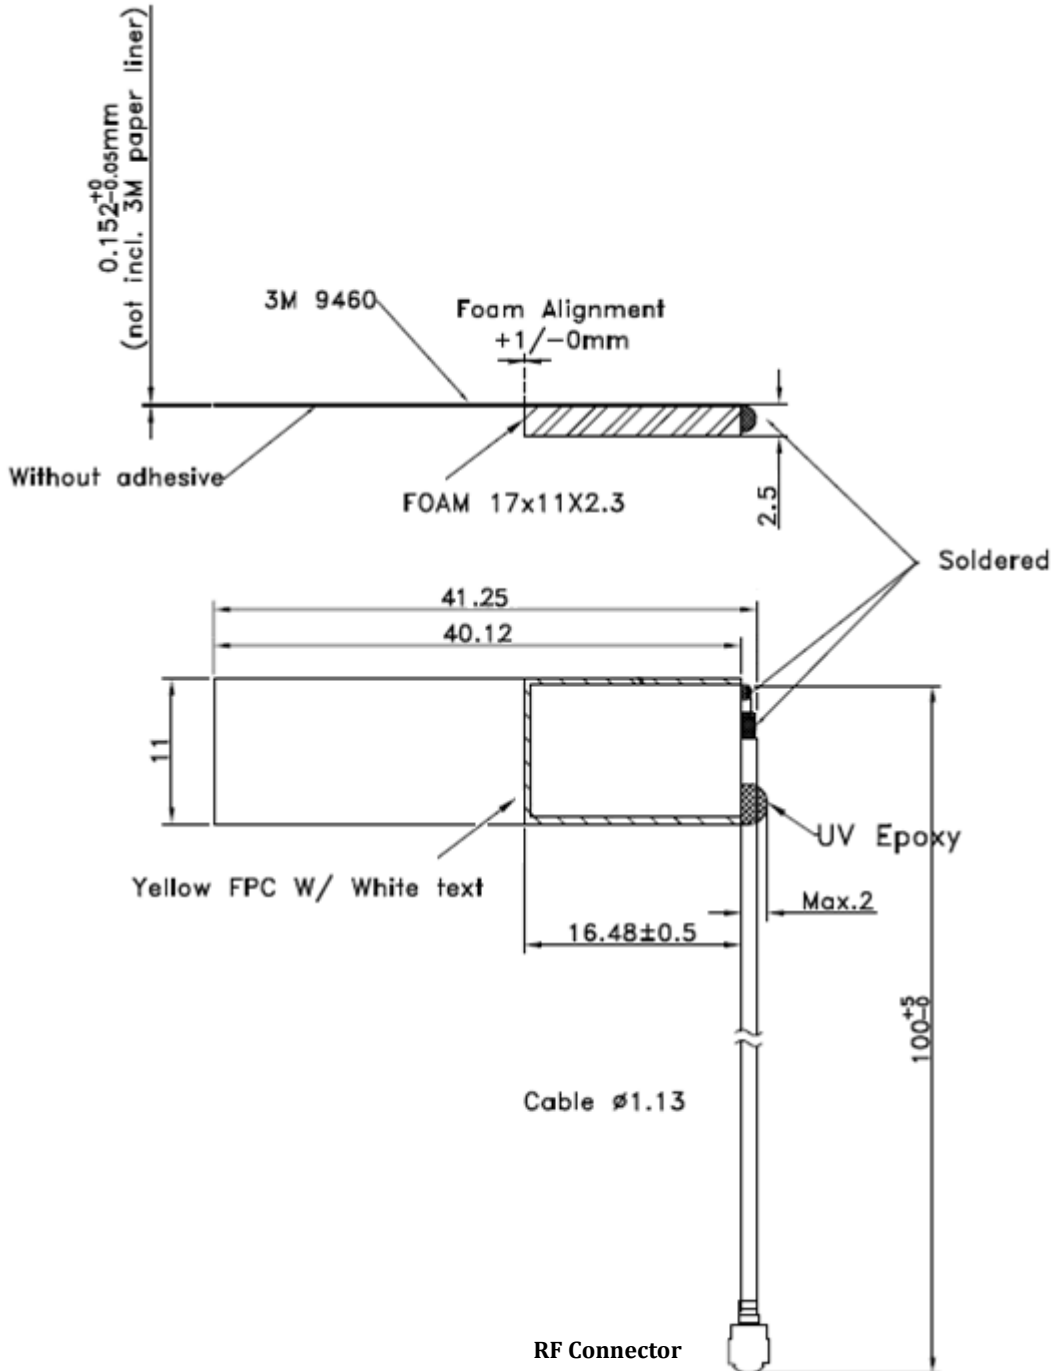


Figure 1: FlexPIFA mechanical drawing of 001-0014, 001-0022, and EFB2400A3S-22MHF1

Physical Dimensions of 001-0025  
(Left hand orientation)

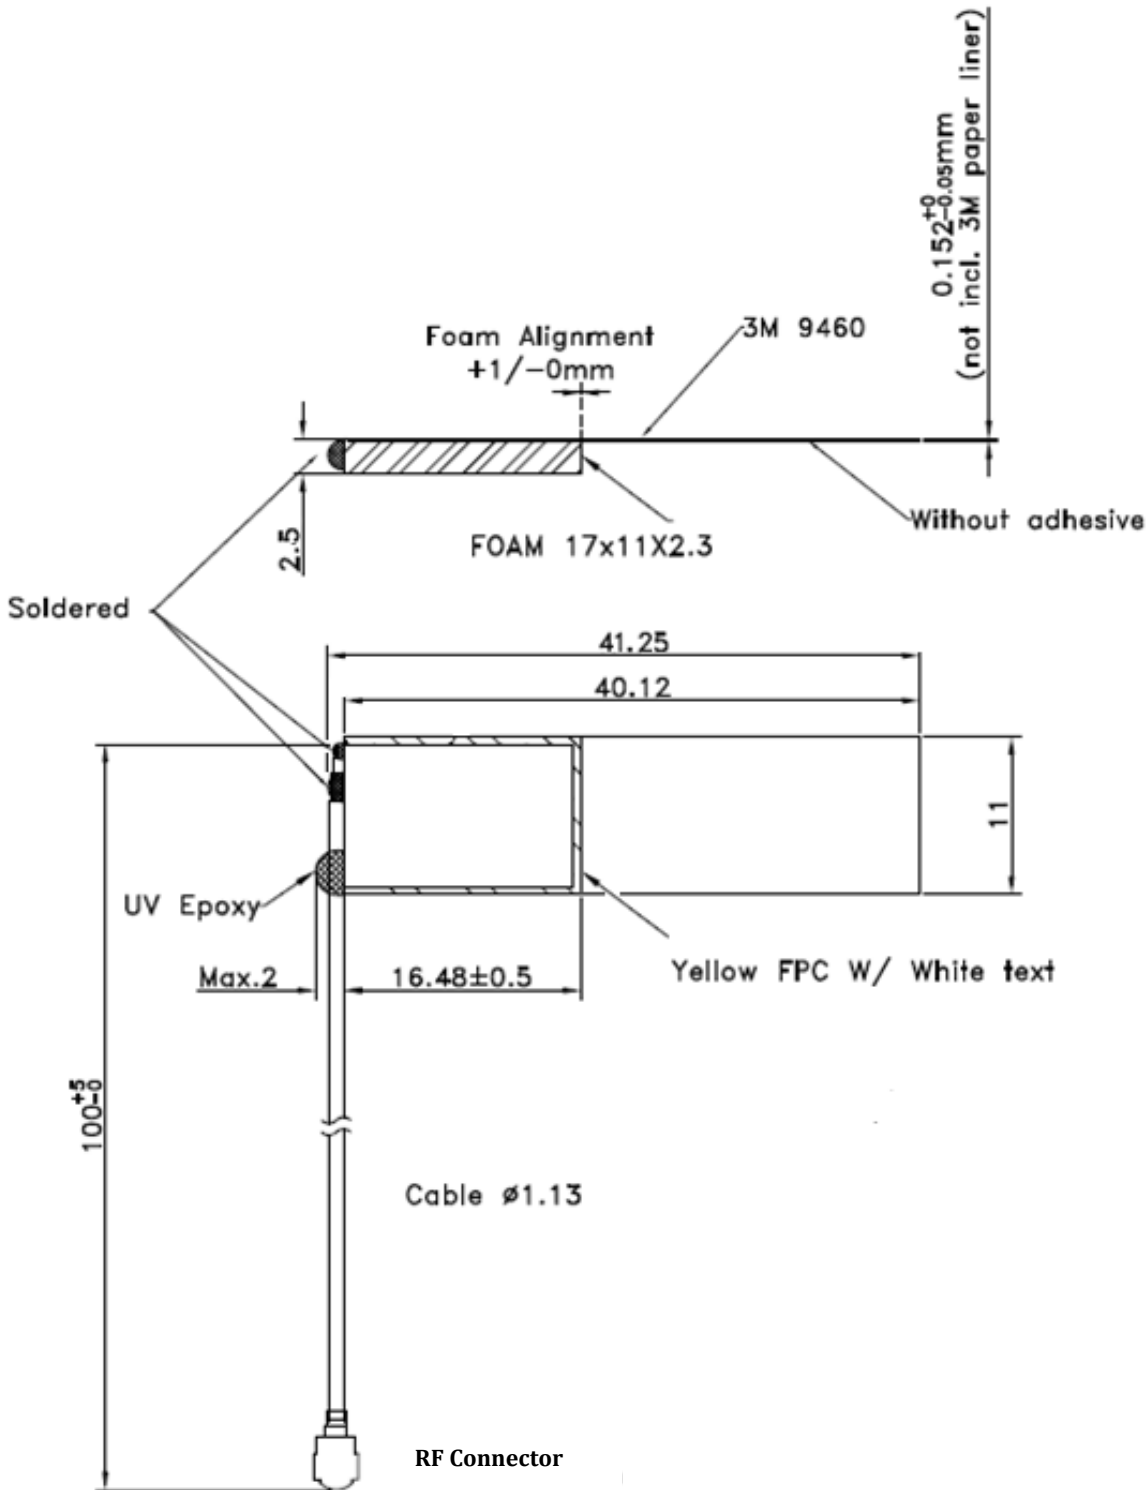


Figure 2: FlexPIFA mechanical drawing of 001-0025

Physical Dimensions of EFB2400A3S-13MHF1

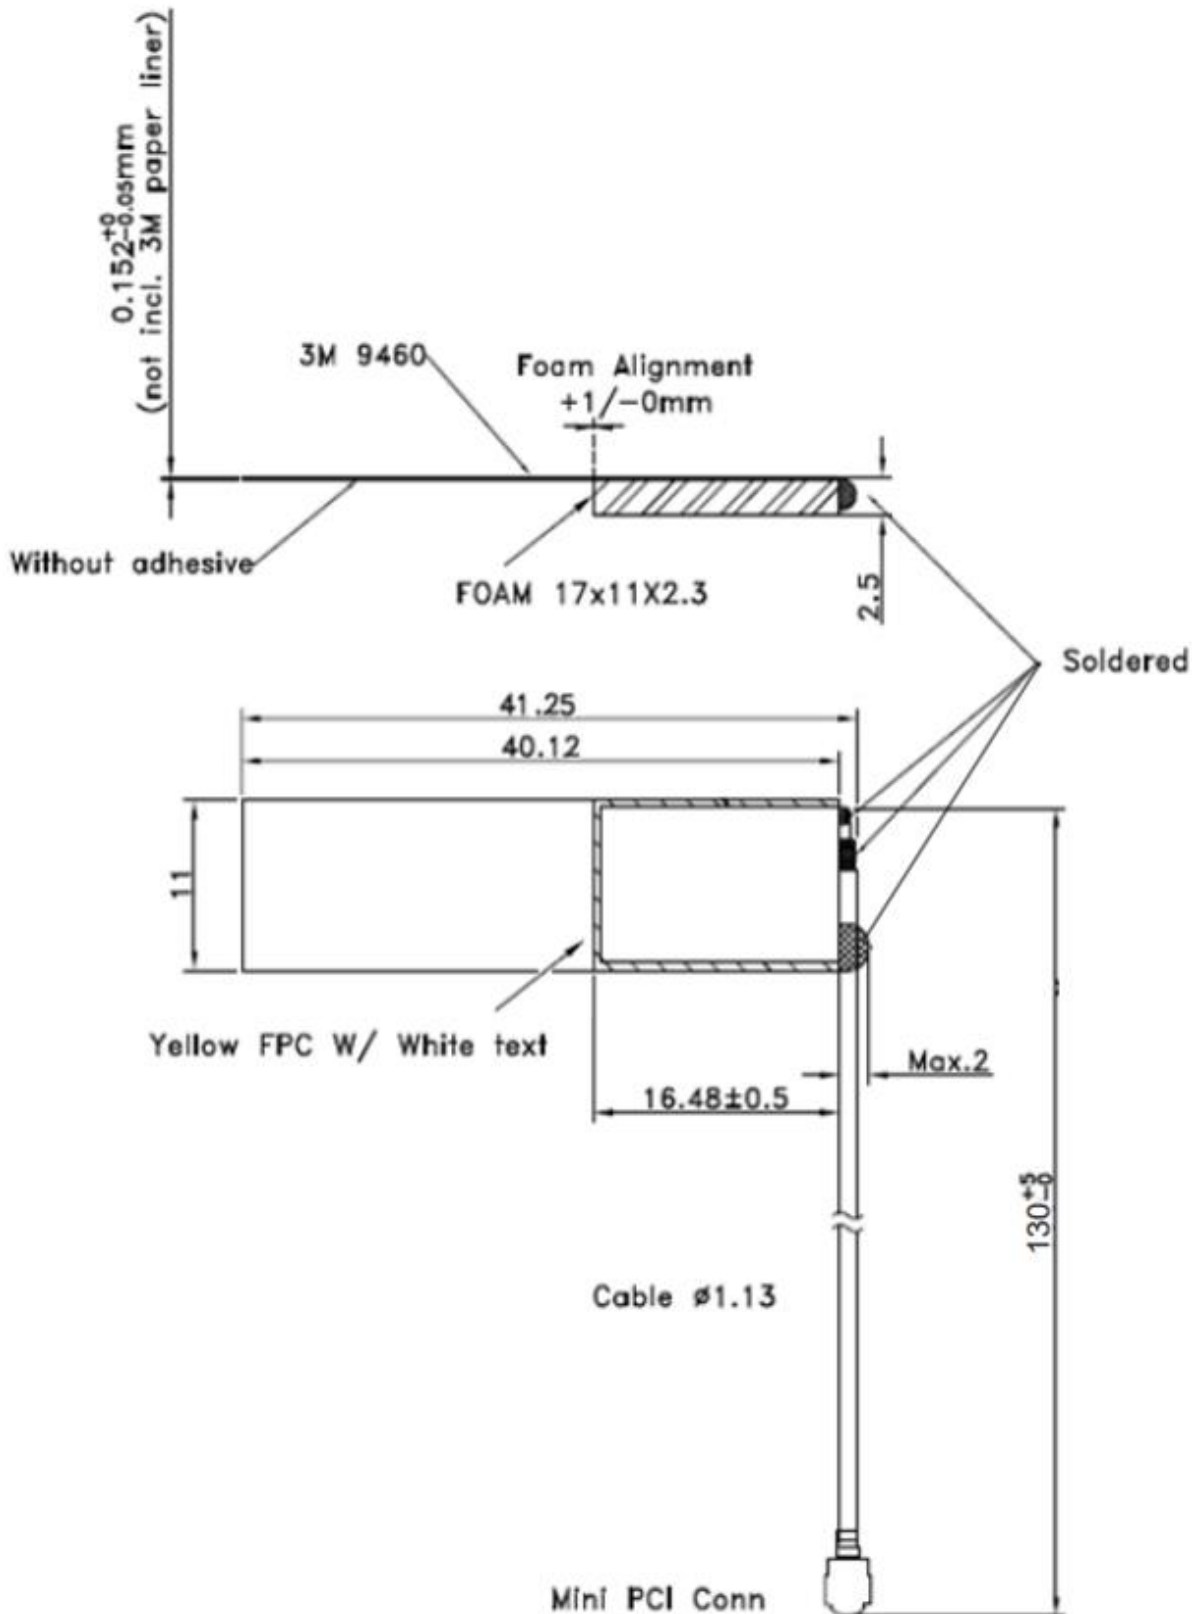


Figure 3: FlexPIFA mechanical drawing of EFB2400A3S-13MHF1

## TEST SETUP

Antenna measurements such as VSWR were measured with an Agilent E5071C vector network analyzer. Radiation patterns were measured with a CMT Planar 804/1 vector network analyzer in a Howland Company 3100 chamber equivalent. Phase center is nine inches above the Phi positioner.

Flat surface measurements were done with the antenna centered on a 1.5 mm-thick plate of polycarbonate. Curved surface measurements were taken by placing the antenna on the inside and outside of different diameter PVC tubing.

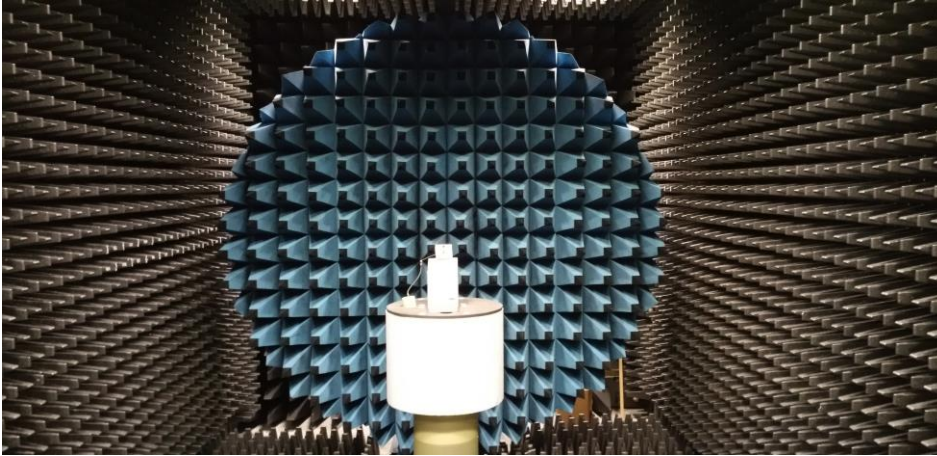


Figure 4: Antenna chamber

## FLAT SURFACE ANTENNA MEASUREMENTS

### VSWR


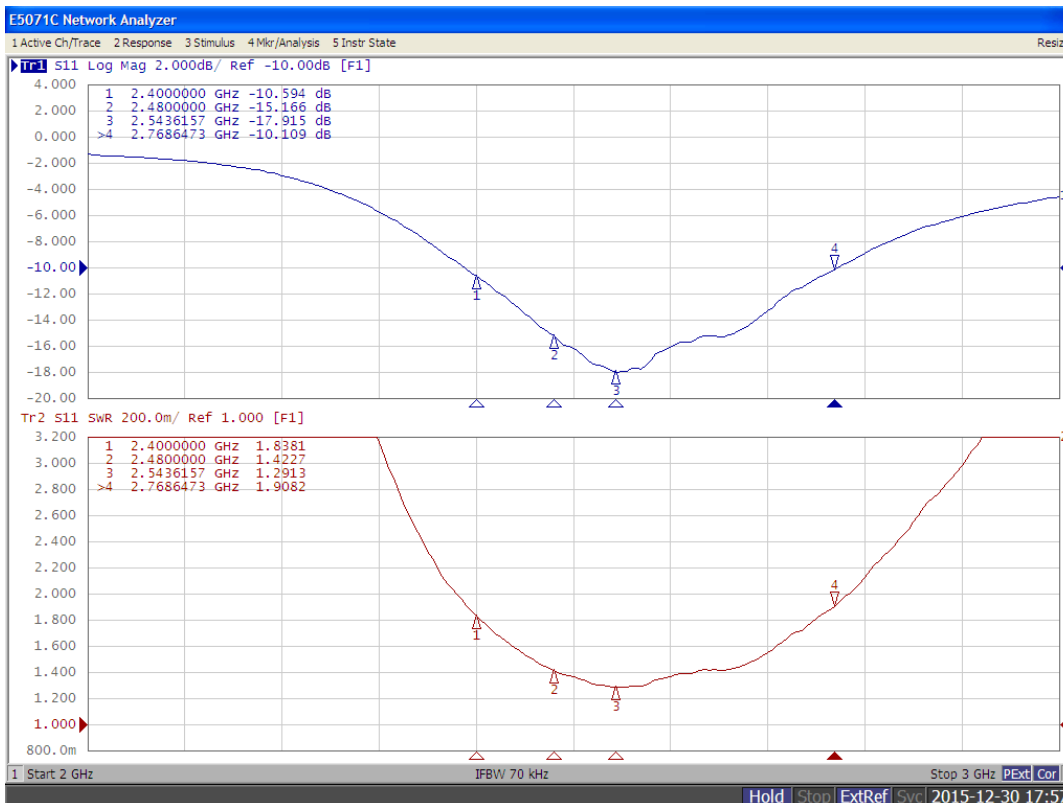


Figure 5: Antenna VSWR measured on a 1.5 mm-thick plate of polycarbonate

## FLAT SURFACE ANTENNA RADIATION PERFORMANCE

FlexPIFA centered on a 1.5 mm-thick plate of polycarbonate

*Antenna Measurement Set-Up*

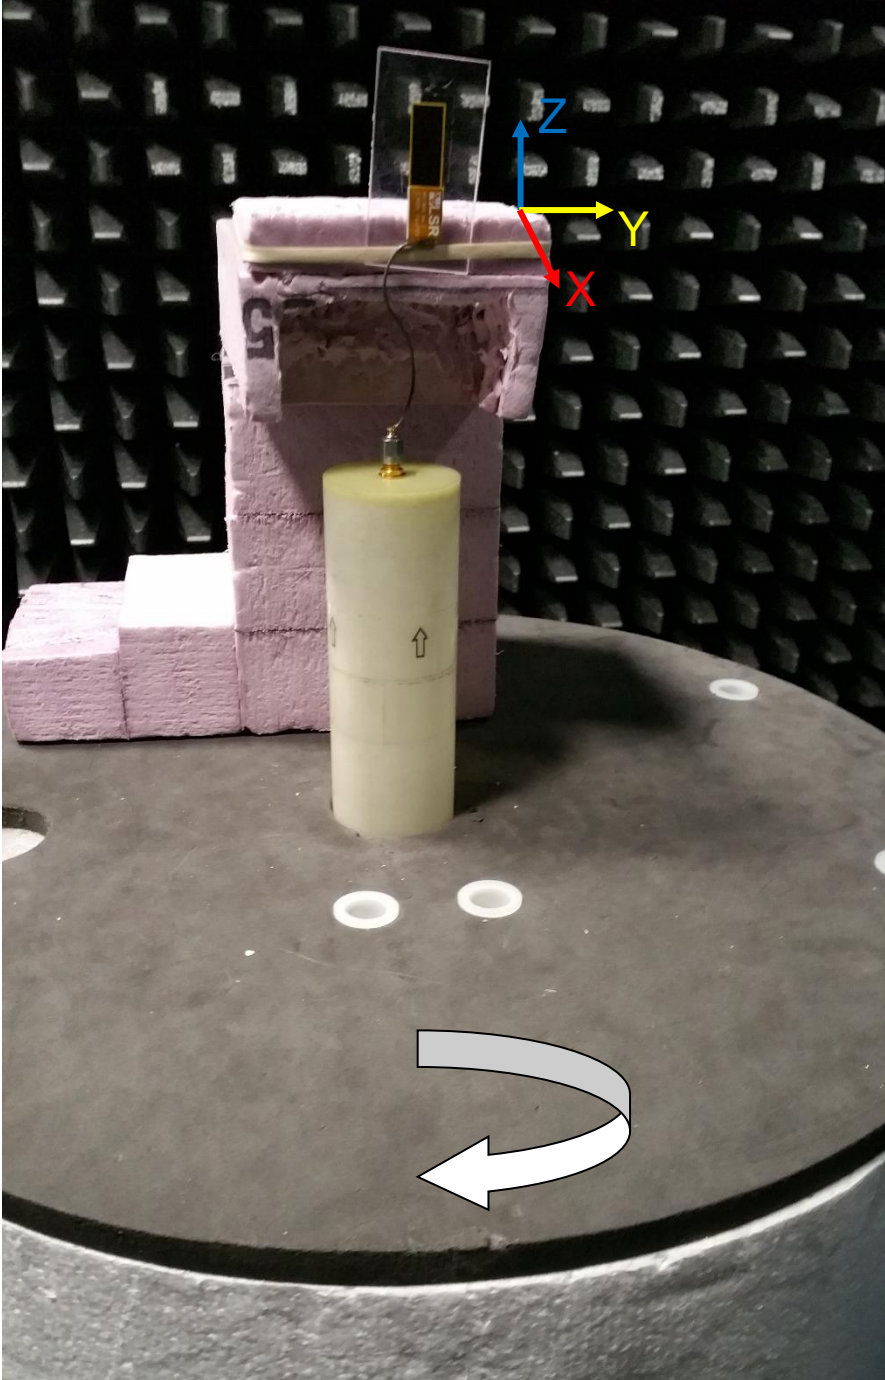

**Figure 6: Flat surface setup**



Azimuthal Conical Cuts at 2400 MHz

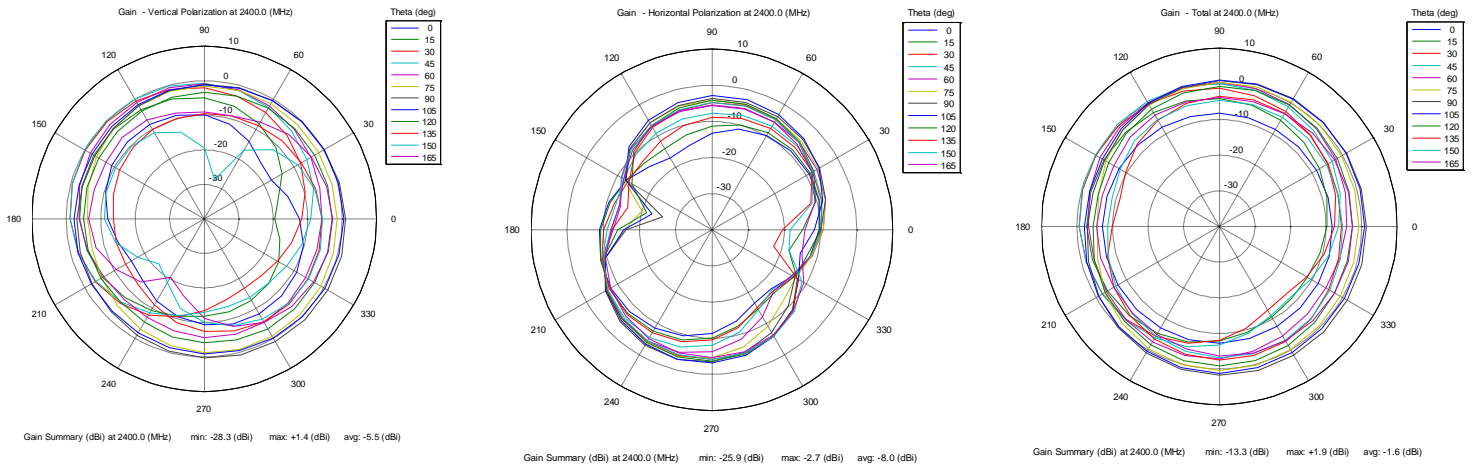


Figure 7: Vertical, horizontal, and total gain patterns – 2400 MHz

3D Plots at 2400 MHz

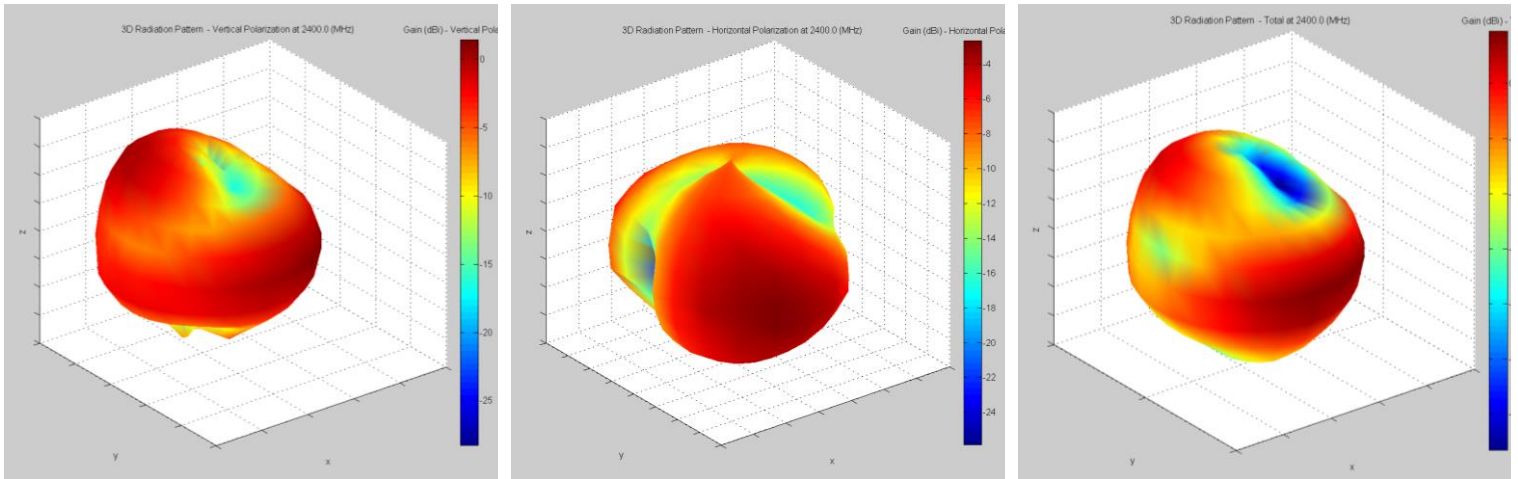


Figure 8: Vertical, horizontal, and total gain plots – 2400 MHz

Azimuthal Conical Cuts at 2440 MHz

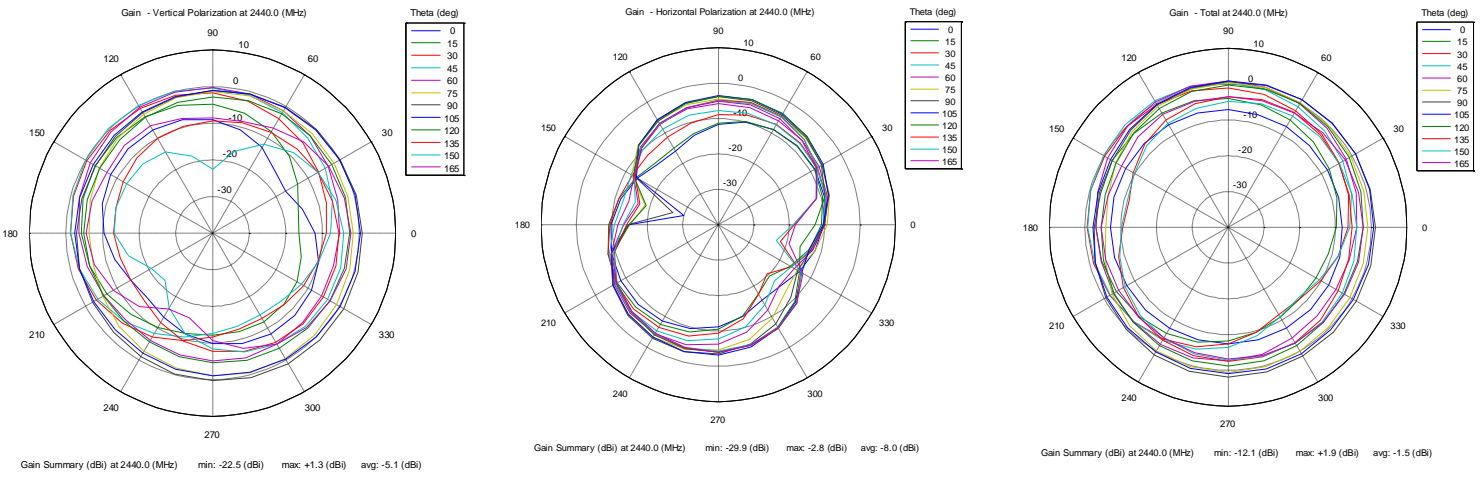


Figure 9: Vertical, horizontal, and total gain patterns – 2440 MHz

3D Plots at 2440 MHz

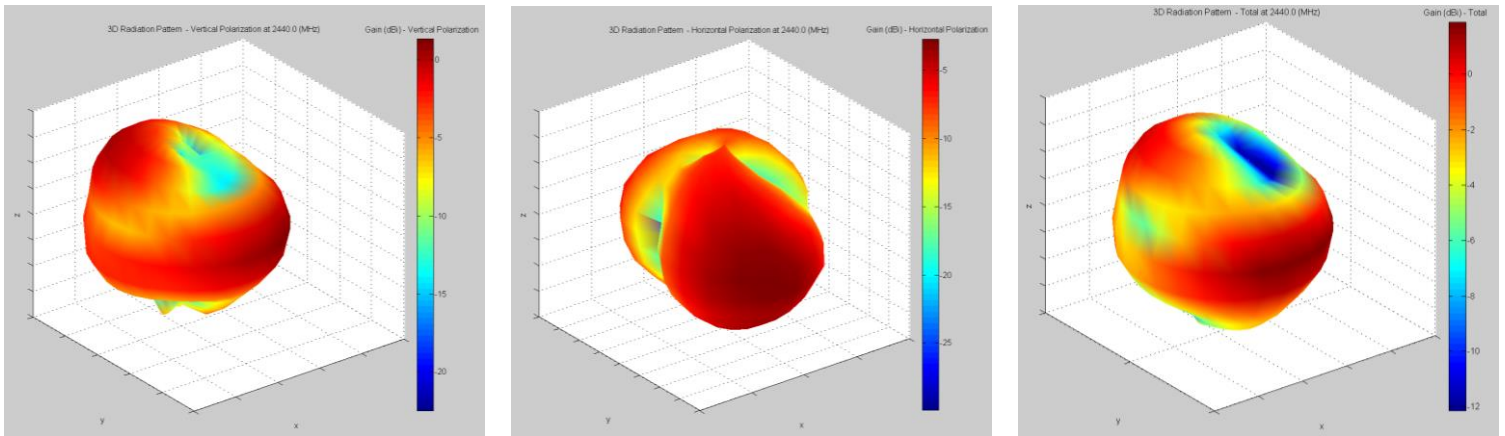


Figure 10: Vertical, horizontal, and total gain plots – 2440 MHz



Azimuthal Conical Cuts at 2480 MHz

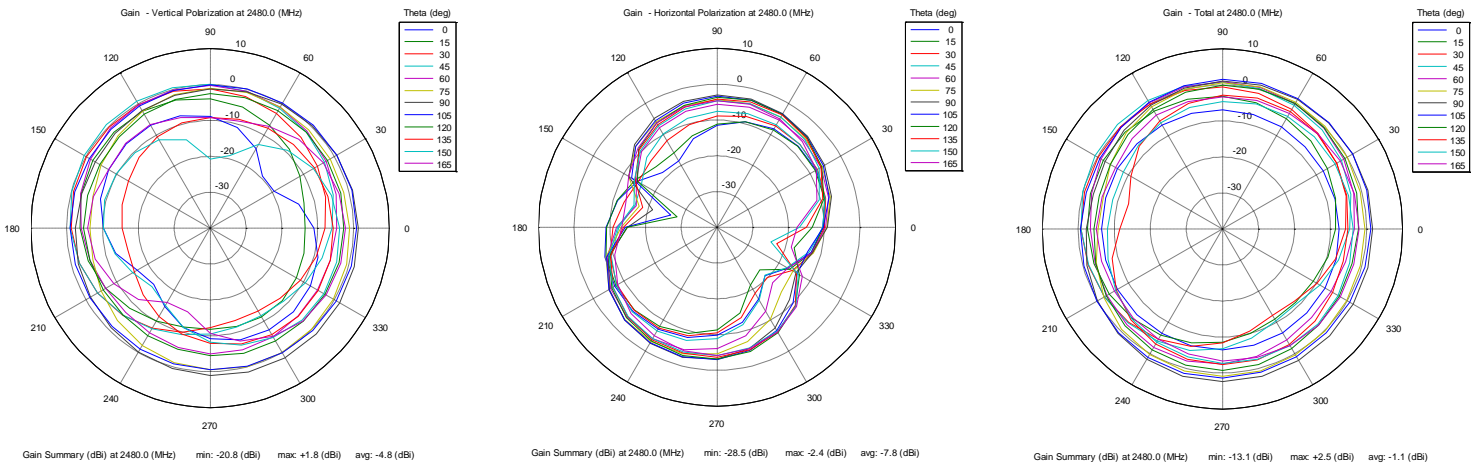


Figure 11: Vertical, horizontal, and total gain patterns – 2480 MHz

3D Plots at 2480 MHz

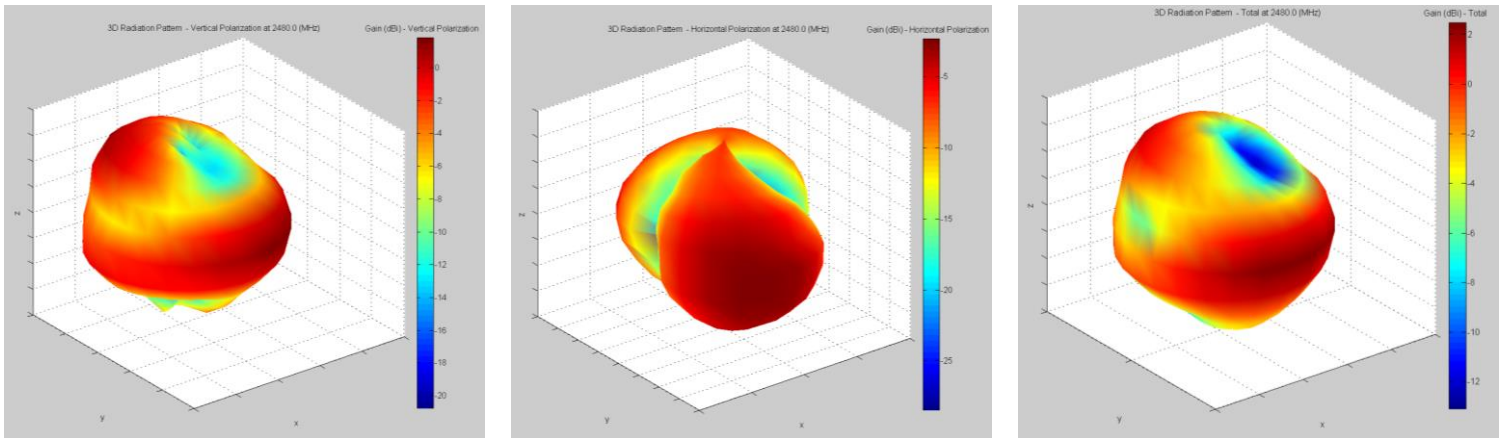


Figure 12: Vertical, horizontal, and total gain plots – 2480 MHz

## CURVED SURFACE ANTENNA RADIATION PERFORMANCE

FlexPIFA outside 51 mm outer diameter PVC tube

Antenna Measurement Set-Up

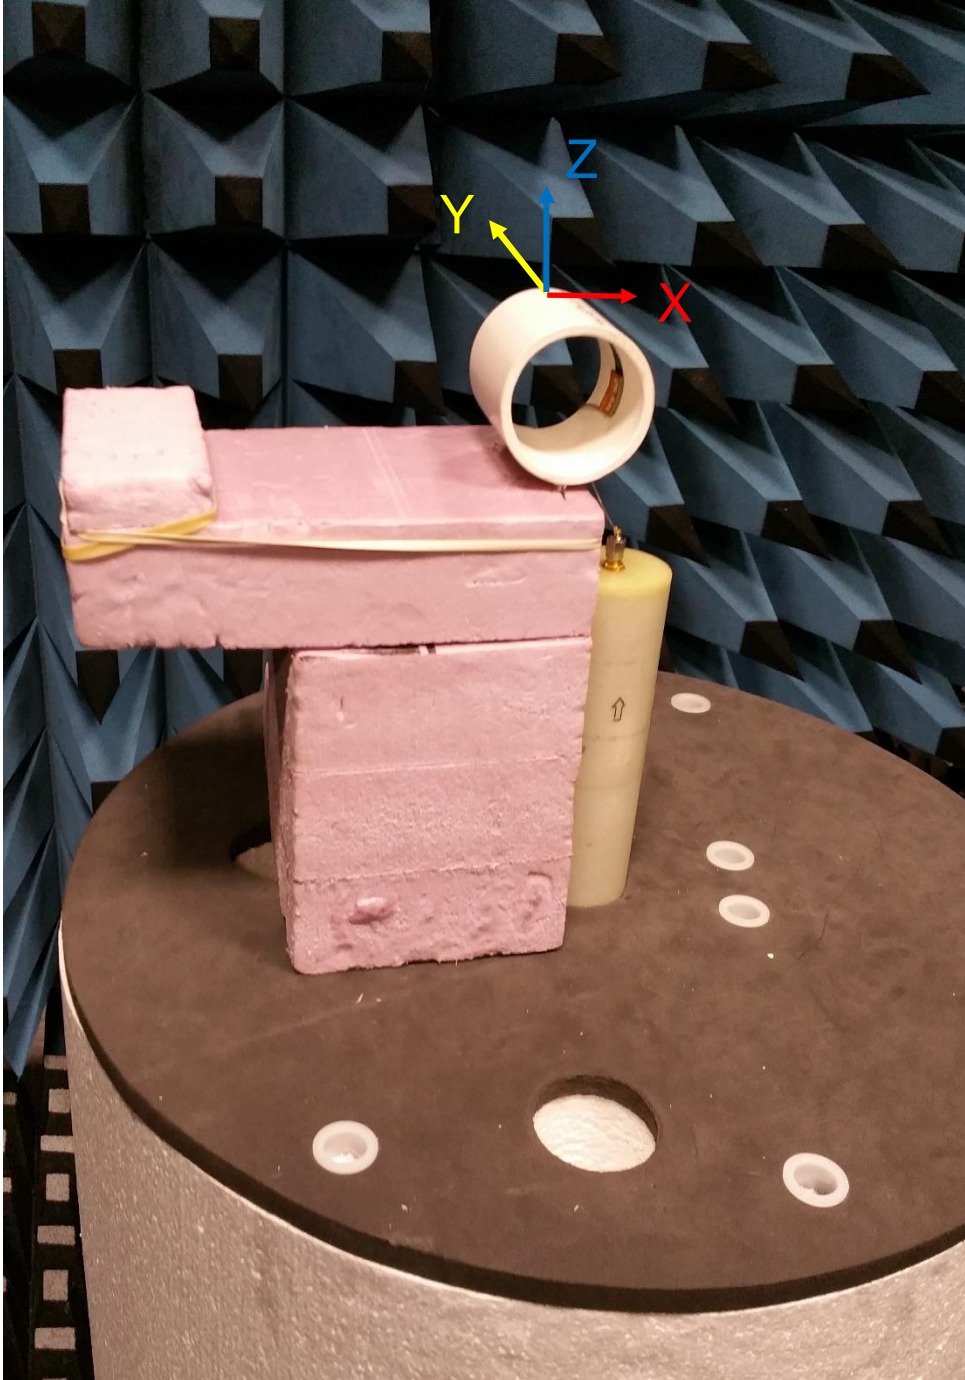


Figure 13: Outer diameter setup

Azimuthal Conical Cuts at 2440 MHz

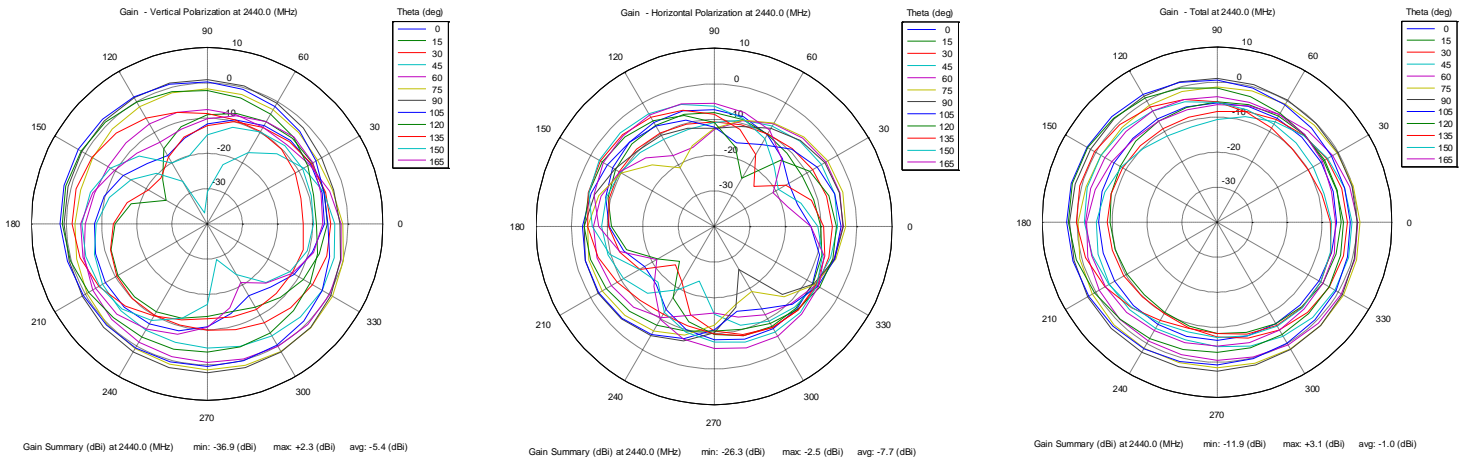


Figure 14: Vertical, horizontal, and total gain patterns – 2440 MHz

3D Plots at 2440 MHz

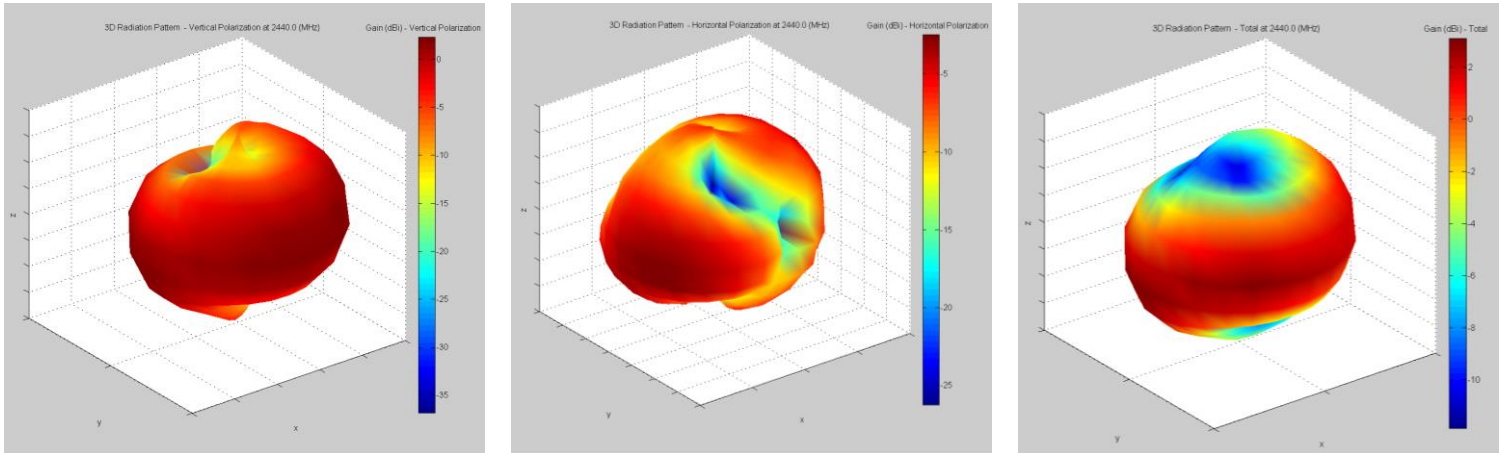


Figure 15: Vertical, horizontal, and total gain plots – 2440 MHz

FlexPIFA inside 52 mm inner diameter PVC tube

Antenna Measurement Setup

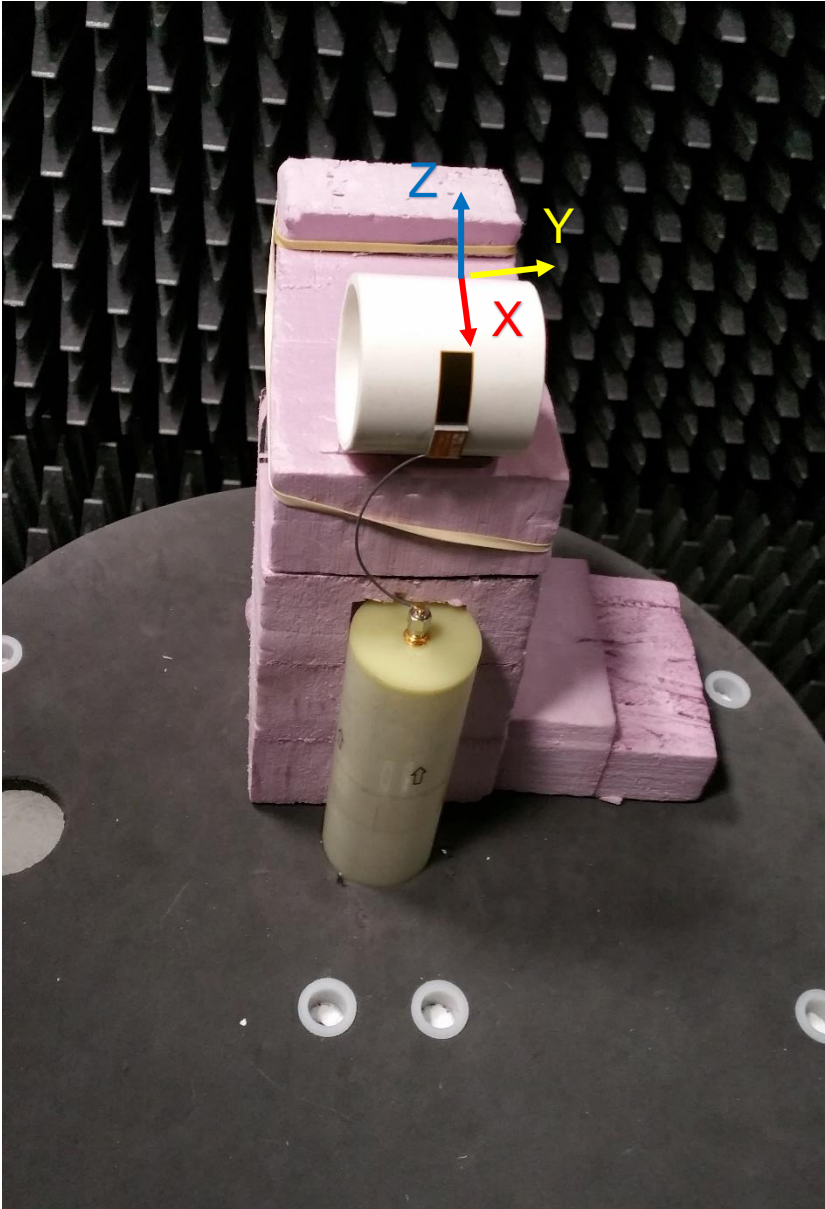


Figure 16: Inner diameter setup



Azimuthal Conical Cuts at 2440 MHz

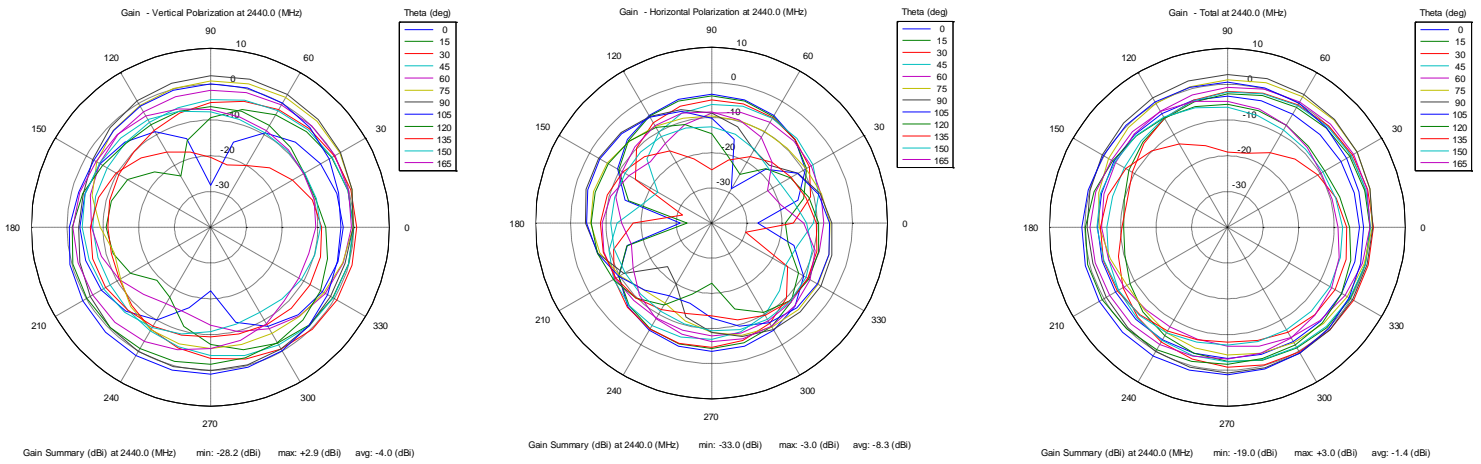


Figure 17: Vertical, horizontal, and total gain patterns – 2440 MHz

3D Plots at 2440 MHz

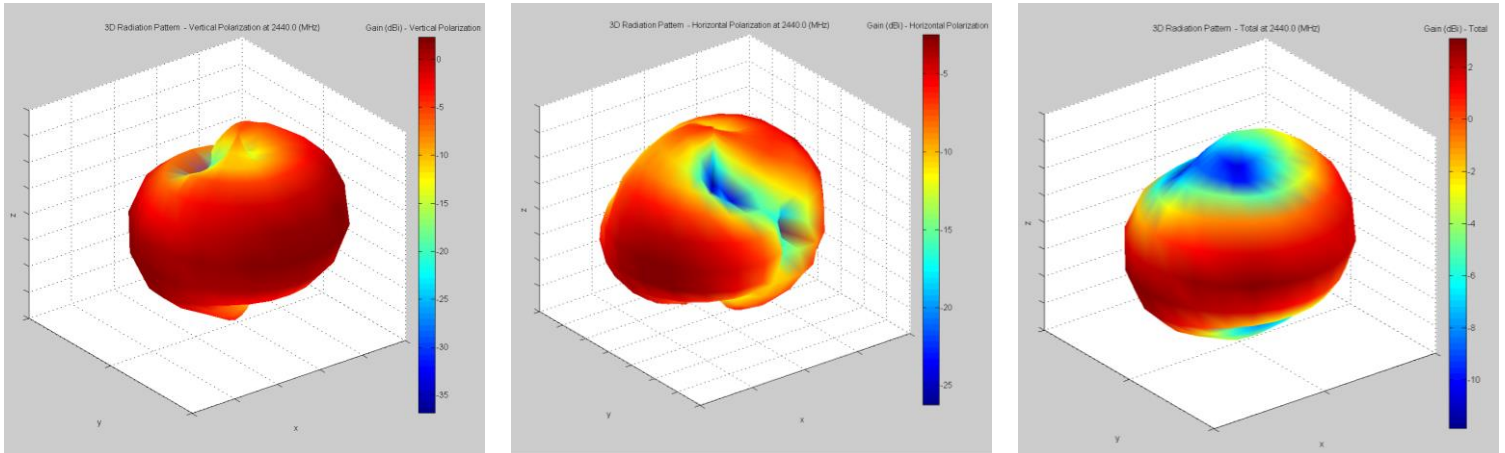


Figure 18: Vertical, horizontal, and total gain plots – 2440 MHz

OPTIMAL INSTALLATION GUIDE

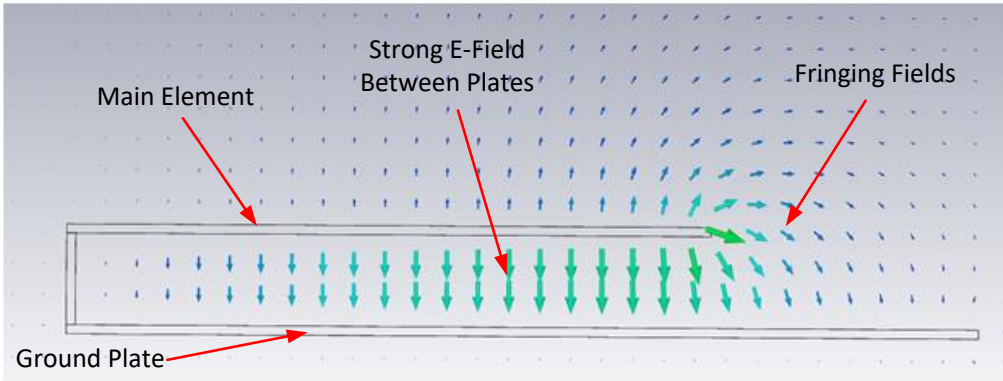


Figure 19: E-field radiation from FlexPIFA – taken from CST simulation

The main element should be kept clear of any non-metal objects (such as plastics) on top of it by at least three millimeters (see Figure 20). Similarly, the two long sides of the FlexPIFA should be kept clear of any non-metal object by at least two millimeters (See Figure 21). A one-millimeter clearance should be observed from the ground wall to any non-metal object. Mounting the FlexPIFA in a situation that does not allow for these clearance recommendations may change the gain characteristics stated in the datasheet, which could impact overall range of the wireless system.



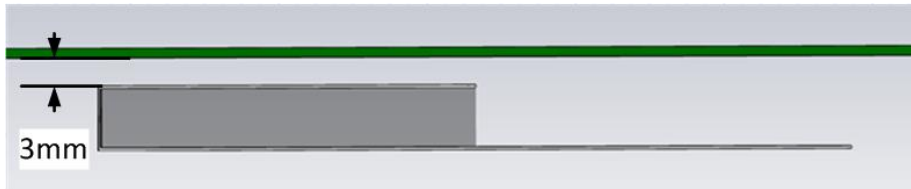


Figure 20: Top clearance

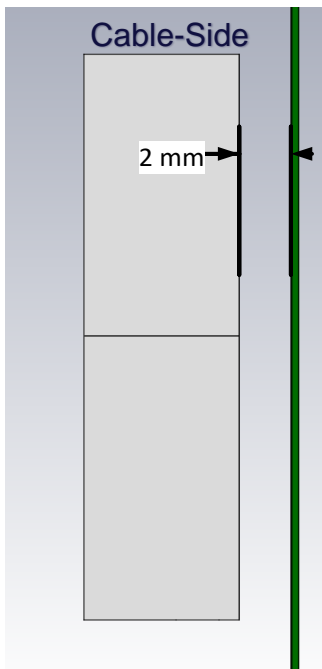

Side Clearance

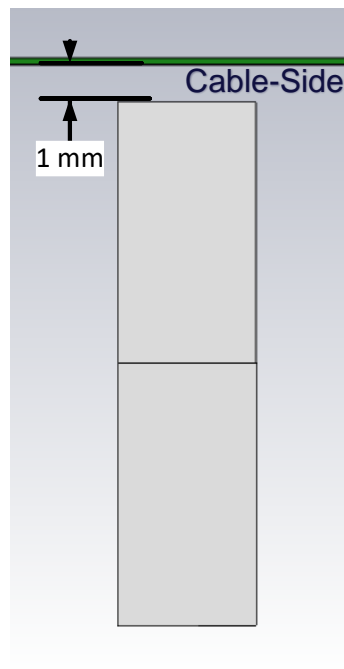


Ground Wall Clearance

Figure 21: Side and ground wall clearance



The ideal material on which to mount the FlexPIFA is 1.5-millimeter thick polycarbonate for maximum performance. However, as previously mentioned, the FlexPIFA can tolerate other non-metallic surfaces and thicknesses and still radiate effectively. Depending on the type of material, the FlexPIFA may be detuned.

The coaxial cable feeding the FlexPIFA should be routed away from the antenna. Do not run the coaxial cable over the top of the FlexPIFA or near the tip of the main element. The cable should be routed perpendicular to the side of the FlexPIFA (this is the way the cable comes assembled) or away from the ground wall. These options are shown in [Figure 22](#).

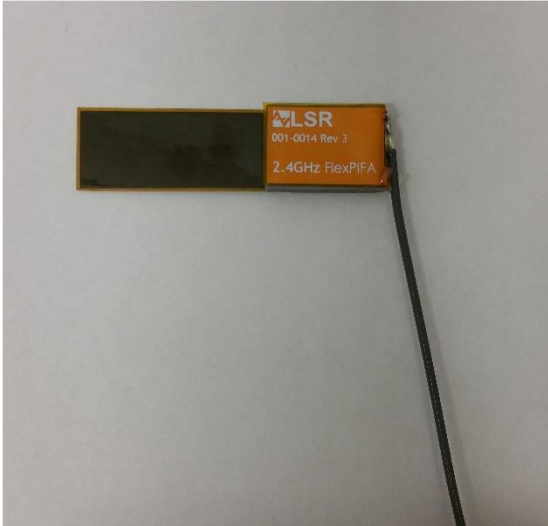

**Perpendicular to the side**



**Away from the ground wall**


**Figure 22: Recommended cable routing**

As with any antenna, care should be taken not to place conductive materials or objects near the antenna (except as described in the next section). The radiated fields from the antenna induce currents on the surface of the metal; as a result, those currents then produce their own radiation. These re-radiating fields from the metal interfere with the fields radiating from the FlexPIFA (this is true for any antenna). Other objects, such as an LCD display, placed close to the antenna may not affect its tuning but it can distort the radiation pattern. Materials that absorb electromagnetic fields should be kept away from the antenna to maximize performance. Common things to keep in mind when placing the antenna:

- Wire routing
- Speakers – These generate magnetic fields
- Metal chassis and frames
- Battery location
- Proximity to human body
- Display screen – These absorb radiation
- Paint – Do not use metallic coating or flakes


### Flex Limits of the FlexPIFA

One of the unique features of the FlexPIFA is its ability to flex. However, due to the adhesive, there are limits as to how much the antenna can be flexed and remain secured to the device. The FlexPIFA should not be flexed in a convex position with a radius less than 16 millimeters. Going smaller than this may result in the antenna peeling off the surface over time. Should a tighter radius of curvature be required, contact Laird Connectivity for assistance.

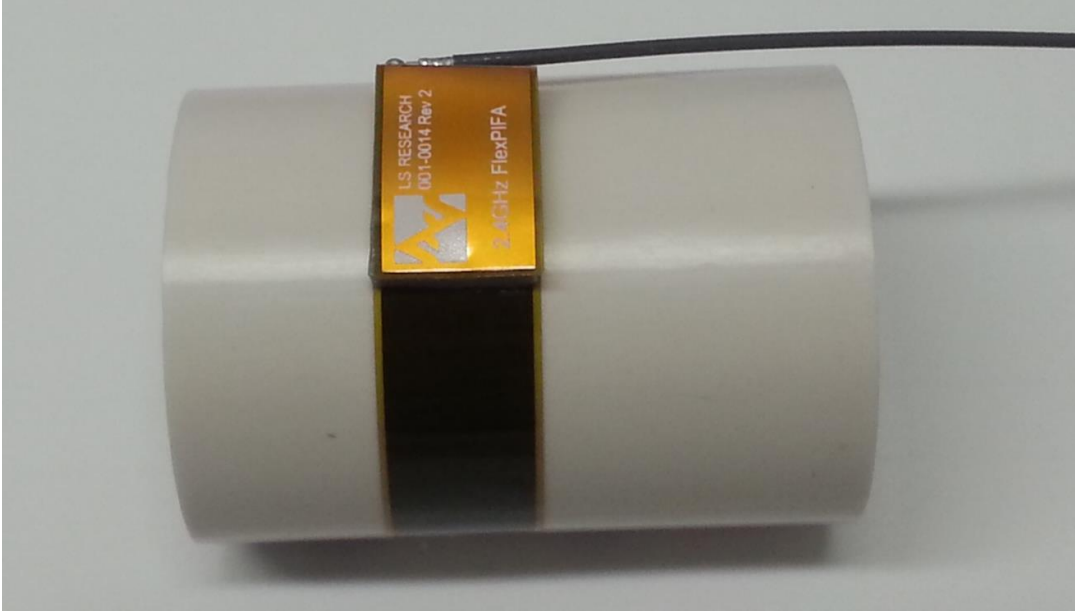

**Figure 23: Convex-mounted**

The FlexPIFA should not be flexed in a concave position with a radius less than 25 millimeters. In this scenario, the limiting factor is performance. The ground plane of the antenna is pressed closer to the main element. As previously discussed in the introduction of this datasheet, the fringing fields developing off the end of the element are responsible for most of the radiation. In a concave position with a radius of curvature less than 25 millimeters, the fringing fields are adversely affected, and gain suffers. If a tighter radius of curvature is required, contact Laird Connectivity for assistance.

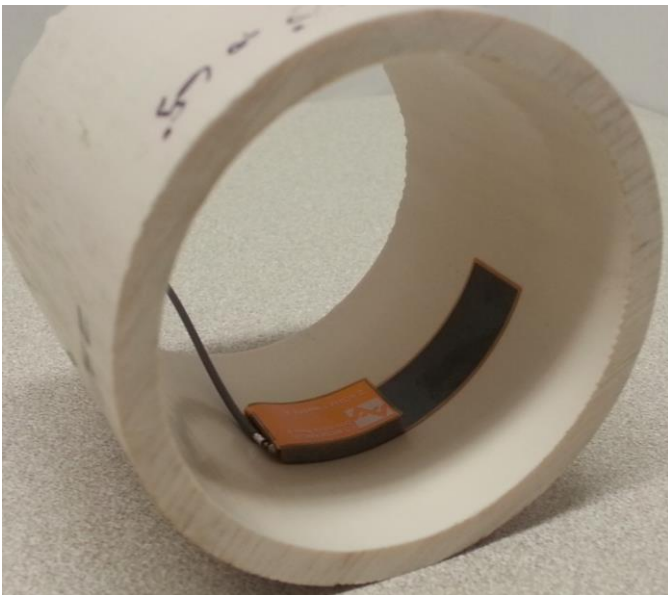

**Figure 24: Concave-mounted**

The FlexPIFA is not designed to be twisted or crumpled. The adhesive back should lay flush with the surface on which it is mounted.

## Mounting on Metal and Body Loaded Applications

The FlexPIFA can tolerate being mounted on conductive surfaces. There will be some detuning of the antenna, which translates into some gain reduction. Even though the FlexPIFA is optimized to work on non-metallic surfaces, it still radiates efficiently due to the fringing fields (see [Figure 19](#)). The ground plate of the FlexPIFA carries the adhesive backing; placing the antenna onto a metal surface simply enlarges the size of the ground beneath the main element. Previously, the fringing fields only interacted with the small ground of the FlexPIFA, however they are now interacting with the much larger ground. The fringing fields still develop and radiate, but the antenna will no longer tune as well to the 2.4 GHz frequency band. Consequently, the VSWR increases and there is some loss in radiated power. If the FlexPIFA cannot meet your range requirements after being implemented on a metal surface, contact Laird Connectivity for a custom antenna build to help meet your application needs.



Figure 25: FlexPIFA mounted on metal


**Do not mount the FlexPIFA where metal is within ten millimeters above the main element** (see [Figure 27](#)). Not only does this severely limit the radiation pattern (mainly due to the re-radiation problem previously described) it detunes the antenna inside of this range.

Similarly, the two long sides of the FlexPIFA should be kept clear of any metal object by at least five millimeters. These keep out requirements pertaining to **conductive** materials only and are different from those listed in the previous sections which apply to **non-conductive** materials. In general, it is good practice to always keep metals as far away from the antenna as possible.

For the best performance, a spacer should be placed between the FlexPIFA and the conductive surface (see [Figure 26](#)). The spacer should be 1.5 millimeters thick polycarbonate. This will significantly improve performance and tuning of the FlexPIFA on a metal surface. Other non-conductive materials such as ABS plastic can be used; however, polycarbonate provides the best results.



Figure 26: FlexPIFA mounted on metal Surface with 1.5 mm thick polycarbonate spacer

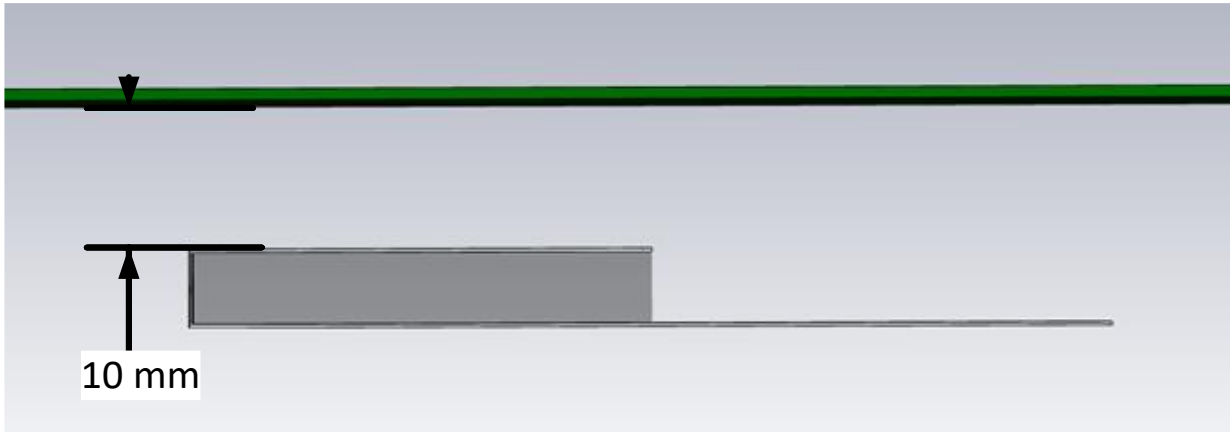

**Figure 27: Metal near main element**

For body-worn applications, the FlexPIFA can tolerate the presence of the human body. We do not recommend that you mount the antenna directly on body tissue to avoid detuning the FlexPIFA.

Additionally, the human body is an excellent absorber of 2.4 GHz RF signals. As a result, expect a reduction in range due to the presence of a body. In a body-worn application, the ground plate of the FlexPIFA should be closest to the body tissue. The main element should be pointed away from the body. Additionally, for handheld devices, the FlexPIFA should be mounted in a location where it is not covered by the hand. If the antenna is mounted in a location where the main element is covered or near a human body, ensure that there is at least a ten-millimeter separation distance between the main element and the body as shown in [Figure 27](#).

Additionally, when the FlexPIFA is mounted very close to body tissue, use a spacer to create separation distance between the body tissue and ground plate. This ensures maximum performance and prevents the antenna from detuning. As previously mentioned, the ideal spacer material is 1.5 mm thick polycarbonate.

Quite often this separation distance between the body tissue and the FlexPIFA is already provided by the enclosure. [Figure 28](#) is an example of a bracelet with the FlexPIFA integrated inside it. The enclosure provides enough spacing between the antenna and body tissue to prevent any major detuning. The enclosure is made of polycarbonate.



**Figure 28: FlexPIFA integrated into bracelet**

**PRODUCT REVISION HISTORY**

001-0014

*Rev 1: Prototype Release*




001-0021


*Rev 1: Initial Production Release*




*Rev 2: Initial Production Release*

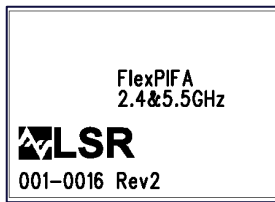


*Rev 2: Updated FPC (Improve Tuning)*

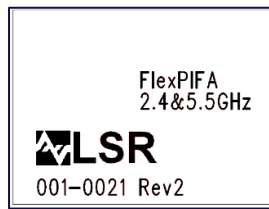


*Rev 3: Updated FPC (Improve Tuning)*

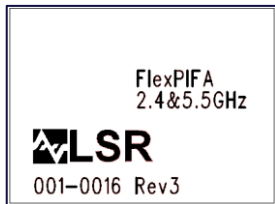


*Rev 3: Updated Silkscreen (Laird Logo and U.S. Patent)*

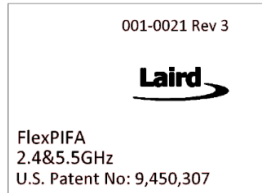


*Rev 4: Updated Silkscreen (Laird Logo and U.S. Patent)*

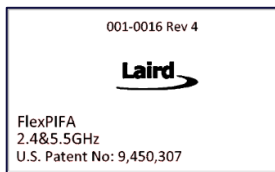

*Rev 4: Changed Supplier – Color Change to Antenna*

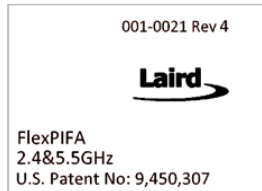

*Rev 5: Changed Supplier – Color Change to Antenna*

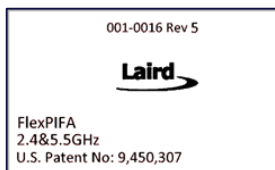

### ADDITIONAL ASSISTANCE

Please contact your local Laird Connectivity sales representative or our support team for further assistance:

<b>Support Center</b>	<a href="https://www.lairdconnect.com/resources/support">https://www.lairdconnect.com/resources/support</a>
<b>Phone</b>	Americas: +1-800-492-2320 Europe: +44-1628-858-940 Hong Kong: +852 2762 4823
<b>Web</b>	<a href="https://www.lairdconnect.com/rf-antennas/wi-fi-antennas">https://www.lairdconnect.com/rf-antennas/wi-fi-antennas</a>
<b>Address</b>	Laird Connectivity 50 S. Main Street, Ste 1100 Akron, OH 44308

[sales@lairdconnect.com](mailto:sales@lairdconnect.com)  
[support@lairdconnect.com](mailto:support@lairdconnect.com)  
[www.lairdconnect.com](http://www.lairdconnect.com)

© Copyright 2022 Laird Connectivity. All Rights Reserved. Patent pending. Any information furnished by Laird Connectivity and its agents is believed to be accurate and reliable. All specifications are subject to change without notice. Responsibility for the use and application of Laird Connectivity materials or products rests with the end user since Laird Connectivity and its agents cannot be aware of all potential uses. Laird Connectivity makes no warranties as to non-infringement nor as to the fitness, merchantability, or sustainability of any Laird Connectivity materials or products for any specific or general uses. Laird Connectivity or any of its affiliates or agents shall not be liable for incidental or consequential damages of any kind. All Laird Connectivity products are sold pursuant to the Laird Connectivity Terms and Conditions of Sale in effect from time to time, a copy of which will be furnished upon request. Nothing herein provides a license under any Laird Connectivity or any third-party intellectual property right.