



EFIX F6 GNSS USER GUIDE



Survey & Engineering | March 2025

Table of Content

Preface	5
Copyright	5
Safety Warnings	5
FCC Statement	5
CE Interference Statement	6
Brazil	6
Conformity to Japanese regulations	6
1 Introduction	7
1.1 Safety Information	7
Warnings and Cautions	7
1.2 Regulations and Safety	7
1.3 Technical Support	8
1.4 Disclaimer	8
1.5 Your Comments	8
2 Getting Started with F6	9
2.1 About the Receiver	9
2.2 Parts of the Receiver	9
2.2.1 Front Panel	9
2.2.2 Camera	10
2.2.3 Receiver Ports	11
2.3 Batteries and Power	11
2.3.1 Built-in batteries	11
2.3.2 Charging the Battery	11
2.3.3 Battery Safe	12
2.3.4 External Power Supply	12
2.4 Product Basic Supply Accessories	13
2.4.1 Base Kit Basic Supply	13
2.4.2 Rover Kit Basic Supply	14
2.5 Connecting to an Office Computer	15
2.6 Connecting to a Controller	15
2.6.1 Connecting via Wi-Fi with eField Software	15
2.6.2 Connecting via Bluetooth with eField Software	17

2.7 Downloading Logged Data	18
2.7.1 FTP Download	18
2.7.2 Web Server Download	20
2.7.3 USB Download	20
3 Equipment Setup and Operation	22
3.1 Base Station Setup	22
3.2 Rover Station Setup	23
3.3 Working with the Tilt Compensation	24
3.3.1 Operation Steps	24
3.3.2 Notes of using tilt measurement	25
3.4 Working with the Vision Camera	26
3.4.1 Vision Stakeout Operation Steps	26
3.4.2 Notes of using Vision Camera	28
4 Configuring Through a Web Browser	29
4.1 Status Menu	31
4.1.1 Position Submenu	31
4.1.2 Activity Submenu	31
4.1.3 Google Map Submenu	32
4.2 Satellites Menu	32
4.2.1 Tracking Table Submenu	33
4.2.2 Tracking Info. Table Submenu	33
4.2.3 Tracking Skyplot Submenu	34
4.2.4 Satellite Activation Submenu	34
4.3 Receiver Configuration Menu	35
4.3.1 Description	35
4.3.2 Antenna Configuration Submenu	36
4.3.3 Reference Station Settings Submenu	36
4.3.4 Receiver Reset Submenu	38
4.3.5 Languages Submenu	38
4.3.6 User Management Submenu	38
4.4 Data Recording Menu	39
4.4.1 Log Settings Submenu	39
4.4.2 FTP Push Settings Submenu	41

4.4.3 FTP Push Log Submenu	42
4.4.4 Data Download Submenu	42
4.5 IO Settings Menu	43
4.6 Network Setting Menu	48
4.6.1 Email Alarm Submenu	49
4.6.2 HTTP Submenu	49
4.6.3 HTTPS Submenu	49
4.6.4 FTP Service Submenu	50
4.7 Module Setting Menu	50
4.7.1 Description Submenu	50
4.7.2 WiFi Submenu	51
4.7.3 Bluetooth Settings Submenu	51
4.7.4 Radio Settings Submenu	52
4.8 Firmware Menu	52
4.8.1 Firmware Info Submenu	53
4.8.2 Hardware Version Submenu	53
4.8.3 Config File Submenu	53
4.8.4 System Log Download Submenu	53
4.8.5 User Log Submenu	54
4.8.6 Firmware Update Submenu	54
4.8.7 GNSS Board Upgrade Submenu	55
4.8.8 GNSS Registration Submenu	55



Preface

Copyright

Copyright 2025

EFIX | EFIX Geomatics Co., Ltd. All rights reserved. The EFIX is trademark of EFIX Geomatics Co., Ltd. All other trademarks are the property of their respective owners.

Trademarks

All product and brand names mentioned in this publication are trademarks of their respective holders.

Safety Warnings

The Global Navigation Satellite System (GNSS) comprises several distinct satellite constellations, each of which is under the jurisdiction of a specific government entity. These entities bear the sole responsibility for ensuring the accuracy of their respective systems and for maintaining the integrity of their satellite networks.

Do not rely solely on the device for critical navigation decisions. The GNSS signals may be affected by atmospheric conditions, satellite availability, signal blockage, etc.

Be aware of the limitations of GNSS accuracy. It provides positioning information with a certain level of accuracy, but errors (including manual error) and deviations can occur.

Avoid prolonged exposure to strong magnetic fields, as they may interfere with the operation of the device and affect its accuracy.

Do not dismantle or modify the device. Any unauthorized modification may result in malfunction or damage and void the warranty.

Follow all instructions provided in the user manual for proper handling, charging, and maintenance.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the



user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE Interference Statement

Declaration of Conformity: Hereby, EFIX Geomatics Co., LTD. declares that this F6 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the Declaration of conformity can be found at EFIX Geomatics Co., LTD.



Brazil

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL-www.anatel.gov.br.

Conformity to Japanese regulations

Japanese Radio Law and Japanese Telecommunications Business Law Compliance.

- This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
- This device should not be modified (otherwise the granted designation number will become invalid).

1 Introduction

The F6 GNSS receiver removes barriers to portability without sacrificing performance. Featuring full GNSS technology, it offers best-in-class GNSS signal tracking even in a harsh environment, enabling GNSS surveying beyond usual constraints. The F6 GNSS incorporates the latest innovations such as an inertial module (IMU) providing automatic pole-tilt compensation in a very compact design.

1.1 Safety Information

Warnings and Cautions

An absence of specific alerts does not mean that there are no safety risks involved.

A Warning or Caution information is intended to minimize the risk of personal injury and/or damage to the equipment.



WARNING - A Warning alerts you to a potential misused or wrong setting of the equipment.



CAUTION - A Caution alerts you to a possible risk of serious injury to your person and/or damage to the equipment.

1.2 Regulations and Safety

The receivers contain a built-in wireless modem for signal communication through Bluetooth® wireless technology or through external communication datalink. Regulations regarding the use of the wireless modem vary greatly from country to country. In some countries, the unit can be used without obtaining an end-user license. However, in some countries, the administrative permissions are required. For license information, consult your local dealer. Bluetooth® operates in license-free bands.

Before operating a F6 GNSS receiver, determine if authorization or a license to operate the unit is required in your country. It is the responsibility of the end-user to obtain an operator's permit or license for the receiver for the location or country of use.

Use and Care

This receiver is designed to withstand the rough environment that typically occurs in the field. However, the receiver is high-precision electronic equipment and should be treated with reasonable care.



CAUTION - Operating or storing the receiver outside the specified temperature range will cause irreversible damage.

1.3 Technical Support

If you have a problem and cannot find the information you need in this manual or EFIX website (www.efix-geo.com), contact your local EFIX dealer from which you purchased the receiver(s).

If you need to contact EFIX technical support, please contact us by email (support@efix-geo.com).

1.4 Disclaimer

Before using the receiver, please make sure that you have read and understood this User Guide, as well as the safety information. EFIX holds no responsibility for the wrong operation by users and for the losses incurred by the wrong understanding about this User Guide. However, EFIX reserves the rights to update and optimize the contents in this guide regularly. Please contact your local EFIX dealer for new information.

1.5 Your Comments

Your feedback about this user guide will help us to improve it in future revision. Please email your comments to support@efix-geo.com.

2 Getting Started with F6

2.1 About the Receiver

The new F6 GNSS receiver offers integrated IMU-RTK technology to provide a robust and accurate GNSS positioning in any circumstances. Unlike the standard MEMS based GNSS receivers, the F6 GNSS IMU-RTK combines state-of-the-art GNSS RTK engine, calibration-free professional IMU sensor and advanced GNSS tracking capabilities. Survey projects are achieved with high productivity and reliability pushing the boundaries of conventional GNSS RTK survey.

Premium camera enable Visual Stakeout. Bluetooth and Wi-Fi technology provides cable-free communication between the receiver and controller.

The receiver can be used as the part of an RTK GNSS system with EFIX eField software. Moreover, user can download the GNSS data that recorded in the internal memory of receiver to a computer.

To configure the receiver for performing a wide variety of functions, you can use the web interface by connecting the receiver with PC or smartphone through Wi-Fi.

2.2 Parts of the Receiver


Power Button is located on the front panel. SMA port and USB Type-C port are located on the bottom of the unit.

2.2.1 Front Panel

The following figure shows a front view of the receiver.



The front panel contains two indicator LEDs and one buttons.

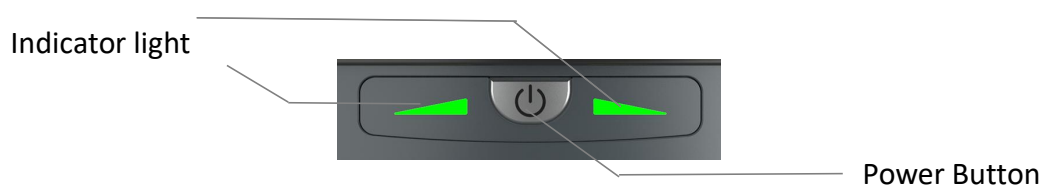

Name	Description
Indicator light	<ul style="list-style-type: none"> ✓ Indicates whether the receiver is transmitting/receiving differential data. ✓ As a Base station: successfully transmitting differential data, flash yellow light. ✓ As a Rover station: tracking satellites will flash red light, successfully receiving differential data from Base station will flash yellow light when it is single or float, flash green light when it is fixed. ✓ Shows the number of satellites that the receiver has tracked. ✓ When the receiver is searching for satellites, the red LED flashes once every 5 seconds. ✓ When the receiver tracks N satellites, the red LED blinks N times per second, pauses for 5 seconds, and then blinks N times again. ✓ Indicated charging status ✓ The power light shows yellow when charging ✓ The power light shows green when fully charged

2.2.2 Camera



The following two figures show the bottom view of the receiver:



2.2.3 Receiver Ports

The lower housing contains one SMA port, one USB Type-C communication.



Port	Name	Description
	USB Type-C port	This port is a USB Type-C connector that supports USB communications. Users can use USB Type-C Cable supplied with the system to download the logged data to a computer.
	SMA port	Connect a radio antenna to internal radio of the receiver. And this connector is not used if you are using an external radio.

2.3 Batteries and Power

2.3.1 Built-in batteries

The receiver has an built-in non-removable Lithium-ion battery.

2.3.2 Charging the Battery

The rechargeable Lithium-ion battery is supplied partially charged. Charge the battery completely before using it for the first time. Charge via USB Type-C port.



WARNING – Charge and use the rechargeable Lithium-ion battery only in strict accordance with the instructions. Charging or using the battery in unauthorized equipment can cause an explosion or fire and can result in personal injury and/or equipment damage.

To prevent injury or damage:

- Do not charge or use the battery if it appears to be damaged or leaking.
- Charge the Lithium-ion battery only in a EFIX product that is specified to charge it. Be sure to follow all instructions that are provided with the battery charger.
- Discontinue charging a battery that gives off extreme heat or a burning odor.
- Use the battery only in EFIX equipment that is specified to use it.
- Use the battery only for its intended use and according to the instructions in the product documentation.

2.3.3 Battery Safe



WARNING – Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire and can result in personal injury and/or property damage.

To prevent injury or damage:

- Do not expose the battery to fire, high temperature, or direct sunlight.
- Do not immerse the battery in water.
- Do not drop or puncture the battery.

2.3.4 External Power Supply

Provide the external power to the receiver by the USB Type-C Cable + Power Adapter.

The Power Adapter is connecting with AC power of 100-240V, the output port of the Power Adapter connects with the USB Type-C Cable.



2.4 Product Basic Supply Accessories

2.4.1 Base Kit Basic Supply

Item	Picture
F6 GNSS Receiver	
SMA Whip Antenna(410-470MHz)	
Power Adapter	
USB Type-C	
H.I. Tape	
Extension pole(30cm)	
Tribrach with optical plummet	
Auxiliary H.I. Tool	
Transport Hard Case	
Tribrach Adaptor	


2.4.2 Rover Kit Basic Supply

Item	Picture
F6 GNSS Receiver	
SMA Whip Antenna(410-470MHz)	
Power Adapter	
USB Type-C	
Range Pole (AR)	
Auxiliary H.I. Tool	
Transport Hard Case	

2.5 Connecting to an Office Computer

The receiver can be connected to an office computer via a USB Type-C. Before you connect to the office computer, ensure that the receiver is powered on.

The following figure shows how to connect to the computer for serial data transfer or settings:

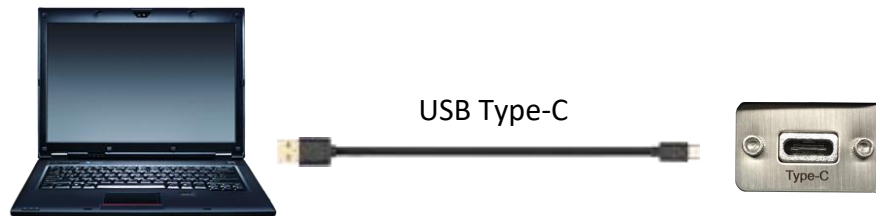


2.6 Connecting to a Controller

2.6.1 Connecting via Wi-Fi with eField Software

Turn on the controller → run eField → tap **Connect**.

In the Connect screen, select **EFIX** for the Brand field, **F6** for Device Type field, **WIFI** for Connection Type field.

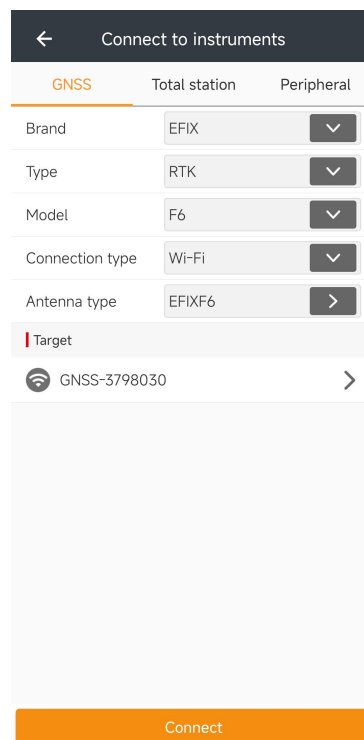


The screenshot shows the 'Connect to instruments' screen in the eField software. The screen has a dark header with a back arrow and the title 'Connect to instruments'. Below the header, there are three tabs: 'GNSS' (selected), 'Total station', and 'Peripheral'. The 'GNSS' tab is active, showing a list of fields with dropdown menus:


- Brand: EFIX
- Type: RTK
- Model: F6
- Connection type: Wi-Fi
- Antenna type: EFIXF6

Below these fields, there is a 'Target' section with a red bar and the text 'Target'. Underneath, there is a list of targets with a Wi-Fi icon and the text 'GNSS-3798030'. At the bottom of the screen, there is an orange 'Connect' button.

Tap the Click to select WI-Fi to select the hot spot → Switch on the WiFi module by the top switch → select the target device in the WIFI target list

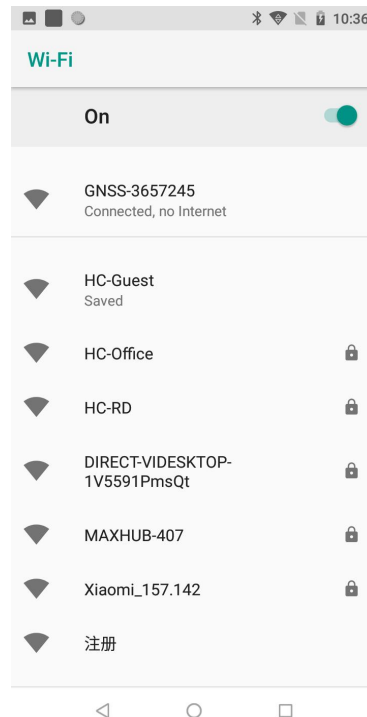


Tap the **Connect** button to build the connection.

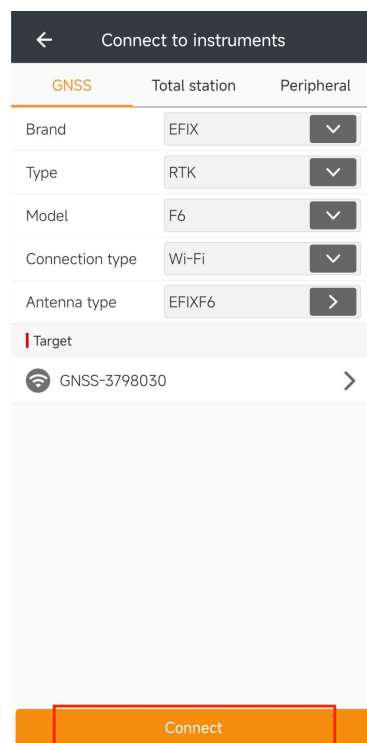


2.6.2 Connecting via Bluetooth with eField Software

Turn on the controller → run eField → go to **Config** main menu → tap **Connect**.


In the *Connect* screen, select EFIX for the **Brand** field, **F6** for *Device Type* field, **Bluetooth** for *Connection Type* field.

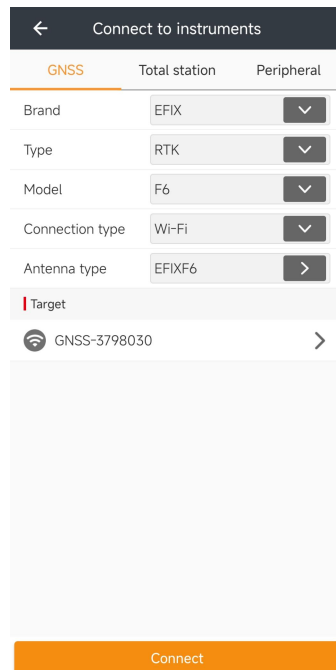

Tap the **Search** to search Bluetooth device around → Switch on the Bluetooth module by the top switch → Tap Pair new device → select the target device in the list → Tap back button → select the target device in the Bluetooth target list.

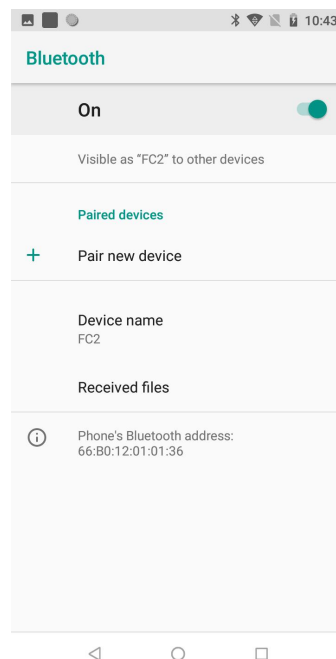

Tap the **Connect** button to build the connection.

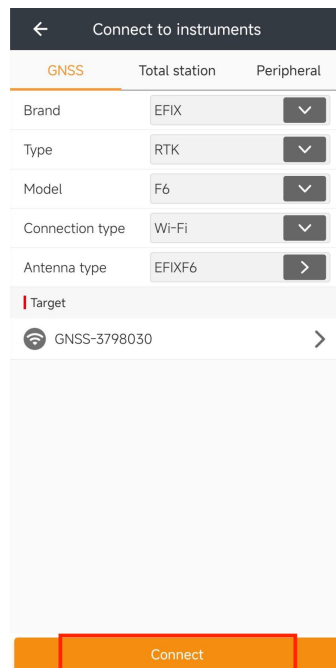


2.7 Downloading Logged Data

Data logging involves the collection of GNSS measurement data over a period at a static point or points, and subsequent post-processing of the information to accurately compute baseline information. Data logging using receivers requires access to suitable GNSS post-processing software such as the eOffice Software.


2.7.1 FTP Download

The procedures of downloading logged data through FTP are as follows:

- (1) Switch on the receiver, search its Wi-Fi in the computer and connect.
- (2) After the successful connection, open the file manager in the computer and input "ftp://192.168.1.1" in the address box.

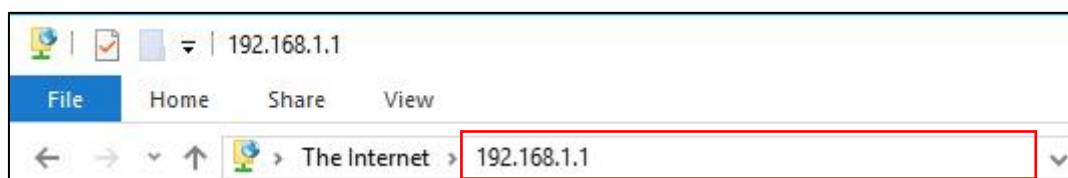


- (3) Input user name and password, the default user name and password are "ftp".

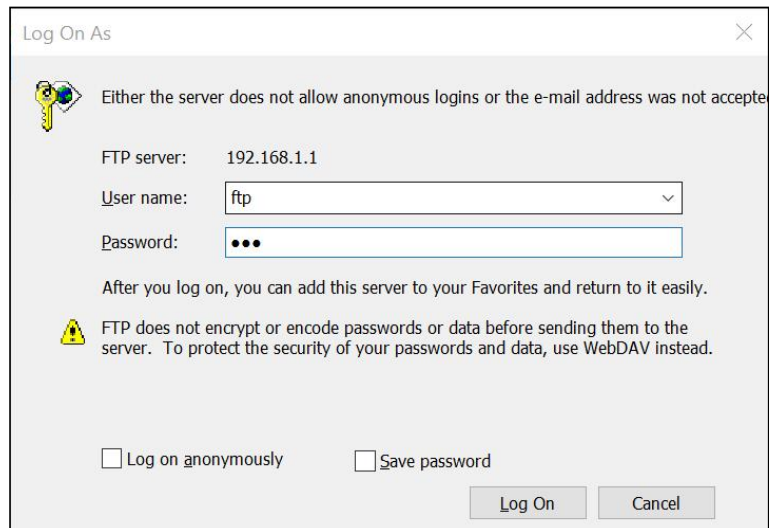

(4) Double click the folder “repo_receiver SN” (take 3225804 as example), you will see 2 folders. The “push_log” folder is used to save the log files, and the “record_1” folders are used for store static data.



(5) Double click the folder that you have configured to store the static data, you will see the folder(s) created by the F6 system automatically and named by the date which is decide by GPS time when you start to log data.

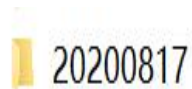

(6) Select the destination folder and double click it, two folders named as different data format (ECN and rinex) will be displayed.



(7) Select the data format that you configured to save the static data, you will find the static raw data.



Notes: For ecn files, the name of the file is represented as XXXXXXDDDNN, where XXXXXX is the SN of the receiver, DDD is day of year, and NN is the recording session.



WARNING – The static data will be saved in the first logging session, the “record_1” folder, by default. Old files will be deleted if the storage space is full. If you configure not to auto delete old files when the memory is low, the receiver will stop data logging.


2.7.2 Web Server Download

The procedures of downloading logged data through web server refer to 4.4.4 Data Download Submenu.


2.7.3 USB Download

The procedures of downloading logged data in the receiver are as follows:

(1) Switch on the receiver and connect it with a computer by Type-C. After the successful connection, a removable disk named as the Serial Number (SN) of the receiver will appear on the computer.

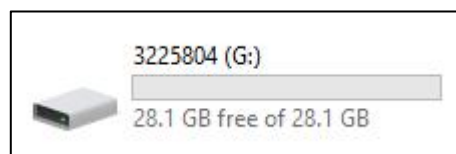


(2) Double click the removable disk and you will see the folder named as “repo”.

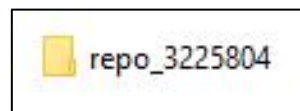


(3) Double click the folder “repo_receiver SN”, you will see 2 folders. The “push_log” folder is used to save the log files, and the “record_1” folders are used for store static data.


(4) Double click the folder that you have configured to store the static data, you will see the folder(s) created by the F6 system automatically and named by the date which is decide by GPS time when you start to log data.

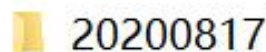

(5) Select the destination folder and double click it, and then two folders named as different data format (ecn and rinex) will be displayed.

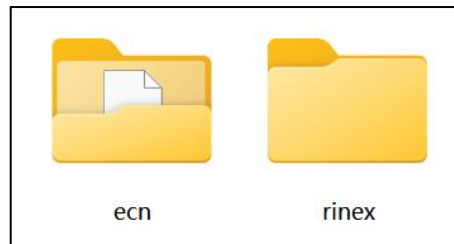

(6) Select the data format that you have configured to save the static data, you will find the static raw data.

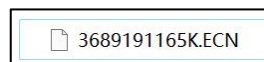

Tip – For ECN files, the name of the file is represented as XXXXXXDDDNN, where XXXXXX is the SN of the receiver, DDD is day of year, and NN is the recording session.



WARNING – The static data will be saved in the first logging session, the “record_1” folder, by default. Old files will be deleted if the storage space is full. If you configure not to auto delete old files when the memory is low, the receiver will stop data logging.

3 Equipment Setup and Operation

3.1 Base Station Setup


Note:

The receiver with PN number A11366980007070507 is equipped with a TX/RX radio.

The receiver with PN number A11366980005070507 is only equipped with a RX radio.

For good rover operation, the following base station setup guidelines are recommended:

Components:

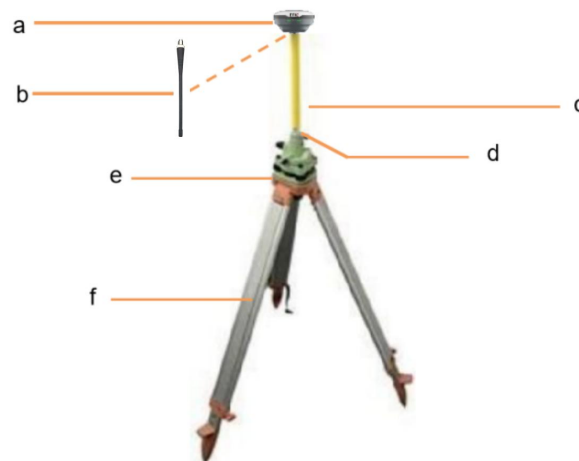

No.	Name
a	F6 GNSS receiver
b	SMA Whip Antenna
c	Extension pole (30 cm)
d	Tribrach adaptor
e	Tribrach w/ Opti
f	Aluminum tripod

Steps:

- (1) Put tripod in the target position, center and level it roughly.
- (2) Place and lock the tribrach in the tripod.

If work as a UHF base station, the SMA Whip Antenna need to be connected to the receiver.

- (3) Connect the receiver to external battery by using external power cable if necessary.
- (4) Connect the receiver to external storage disk by using USB cable if necessary.
- (5) Turn on the receiver by pressing the power button for 3 s.
- (6) Measure the antenna height by using H.I. tape and auxiliary H.I. tool.
- (7) Switch on the data controller and connect it to the receiver.
- (8) Use software to configure the receiver as UHF base mode.

3.2 Rover Station Setup

For good performance, the following rover station setup guidelines are recommended:

Components



No.	Name
a	F6 GNSS receiver
b	2M range pole w/bag

Notice: Keep the receiver fully charged.

If work as a UHF rover station, the SMA Whip Antenna need to be connected to the receiver.


- (1) Turn on the receiver by pressing the power button for 3 s.
- (2) Switch on the data controller and connect it to the receiver.
- (3) Use software to configure the receiver as cellular rover or UHF rover mode.
- (4) Use software to start survey.


3.3 Working with the Tilt Compensation


F6 use 200 Hz AUTO-IMU, automatic pole tilt compensation for automatic inertial navigation initialization, and the user do not need to calibrate it manually any more.


After enable the tilt survey, the F6 IMU can be ready after a few steps walk or a bit movement automatically.


3.3.1 Operation Steps


- (1) Open eField-> Tap PT Survey-> Tap  to activate tilt measurement.
- (2) Shake around according to the procedures in the interface to do initialization.

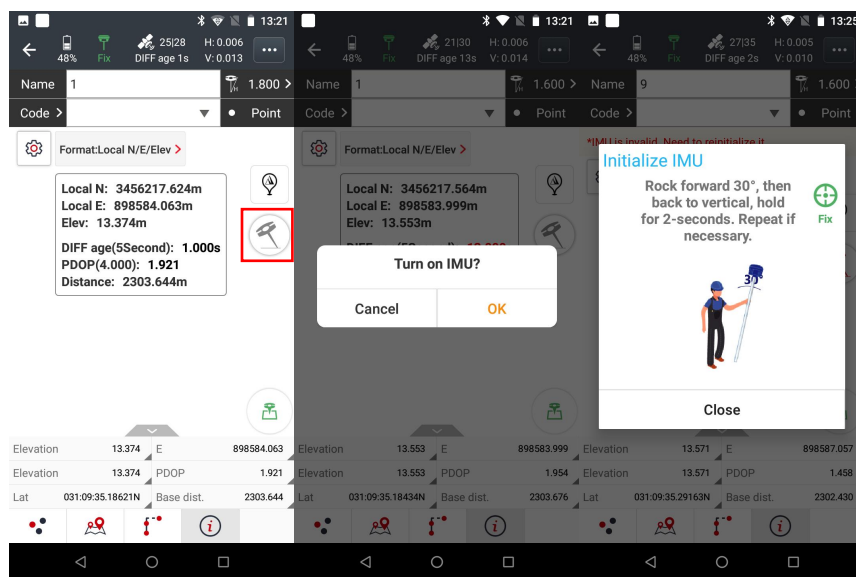



- (3) This icon  will appear when the initialization is successful.

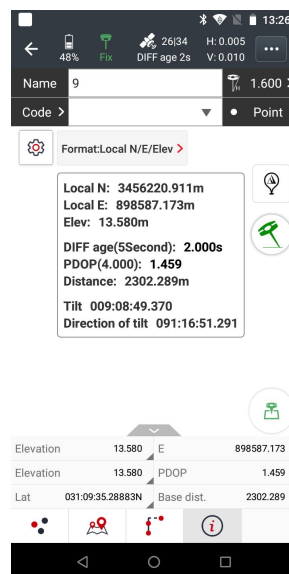

(4) Enter the Name and Antenna, then tap  point will be collected and store to Points automatically.

(5) When this icon  appears, the text will show “*IMU is invalid. Need to reinitialize it.” at the top of interface.

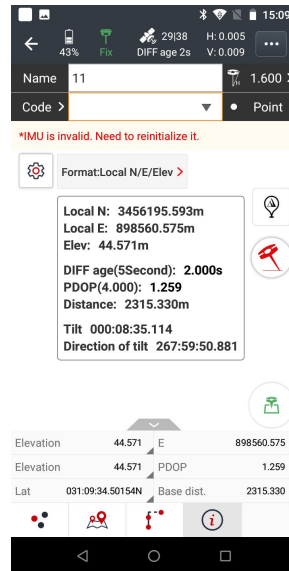

(6) Tap  to close tilt compensation.


3.3.2 Notes of using tilt measurement

1. At the beginning of initialization, the pole height of the instrument should be the same as that antenna height in the software.
2. In the process of tilt measurement, if the controller shows that “Tilt is not available, please measure in alignment” (red), please shake RTK slightly from left to right or back to front until the reminder disappears.
3. The controller will prompt “Tilt is not available, please measure in alignment” when the receiver is stationary over 30 seconds or the pole hit the ground toughly.
4. The pole cannot be shaken when point is collected.
5. Initialization is required:
 - when the RTK is turned on every time;
 - when IMU module is turned on every time;
 - when receiver drops at working;
 - when the pole is tilted more than 65 degree;
 - when the receiver is stationary more than 10 minutes;
 - when the RTK rotates too fast on the matching pole (2 rounds per second);
 - when the pole hit the ground toughly.


3.4 Working with the Vision Camera

3.4.1 Vision Stakeout Operation Steps


(1) Open eField-> Tap Stakeout-> Tap Point stakeout (Here take point stakeout as an example, currently also supports Line stakeout, CAD stakeout)

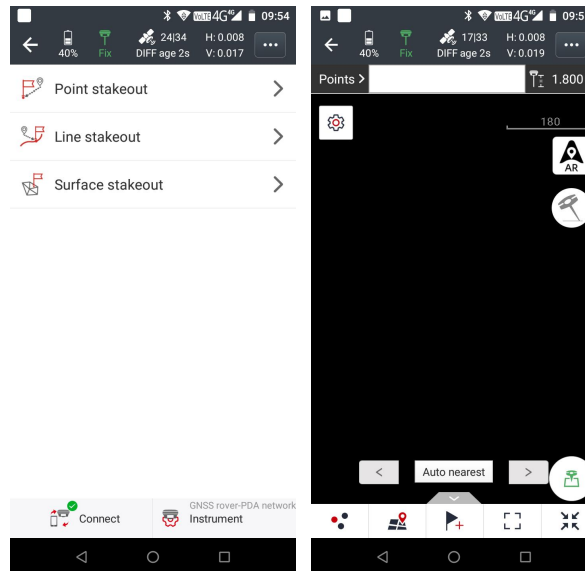


(2) Tap points, select a stakeout point, slide right and tap stakeout

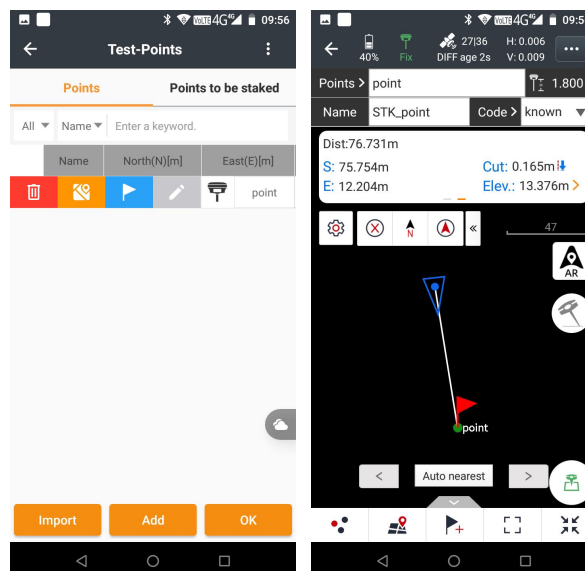


(3) Check whether the height of the antenna is consistent with the height of the 2M Range Pole w/ Bag

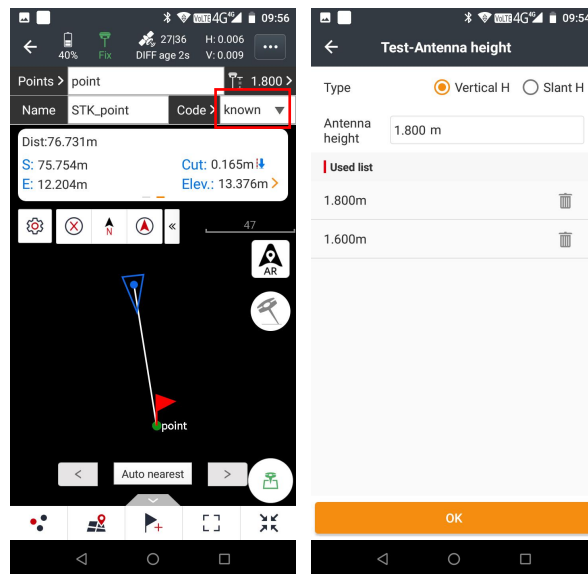


(4) Tap AR, the software will prompt you to activate tilt measurement

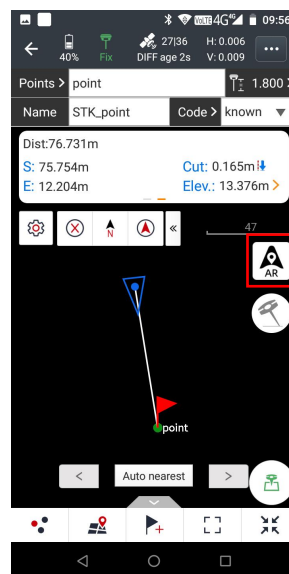

(5) This icon  will appear when the initialization is successful.

(6) If the distance to the target is less than 3.0m meters, it will automatically switch to Vision Stakeout. (The distance to use the camera can be modified in the Setting)

(7) After we are within 1cm from the target point, we can click the measurement icon to collect

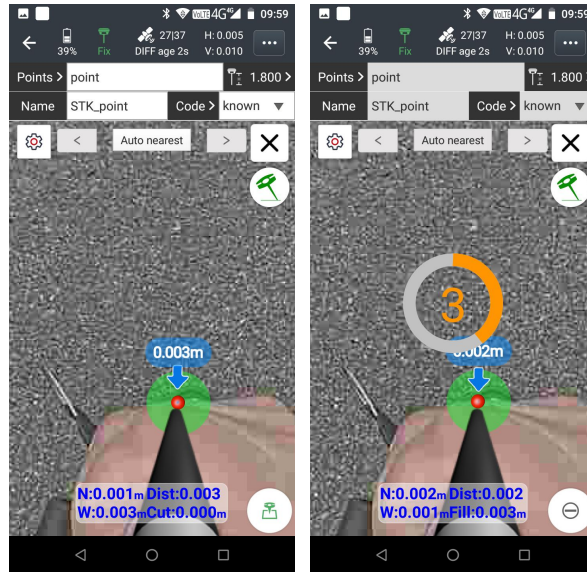

Note:

When the stakeout target point has a height, it is necessary to input the height of the target point as 0 or the actual height.

PDA and receiver camera should face the same direction.

3.4.2 Notes of using Vision Camera

1. At the beginning of initialization, the pole height of the instrument should be the same as that antenna height in the software.
2. In the process of tilt measurement, if the controller shows that “Tilt is not available, please measure in alignment” (red), please shake RTK slightly from left to right or back to front until the reminder disappears.
3. The controller will prompt “Tilt is not available, please measure in alignment” when the receiver is stationary over 30 seconds or the pole hit the ground toughly.
4. The pole cannot be shaken when point is collected.
5. Initialization is required:
 - when the RTK is turned on every time;
 - when IMU module is turned on every time;
 - when receiver drops at working;
 - when the pole is tilted more than 65 degree;
 - when the receiver is stationary more than 10 minutes;
 - when the RTK rotates too fast on the matching pole (2 rounds per second);
 - when the pole hit the ground toughly.


4 Configuring Through a Web Browser

Supported browsers:

- Google Chrome
- Microsoft Internet Explorer version 10, or higher

To connect to the receiver through a web browser:

1. Turn on the Wi-Fi of the receiver.
2. Search the wireless network named as GNSS-XXXXXXX (the SN of your receiver) on your computer, and then establish the connection.
3. After the successful connection between your computer and the receiver, enter the IP address (192.168.1.1) of the receiver into the address bar of the web browser on your computer:

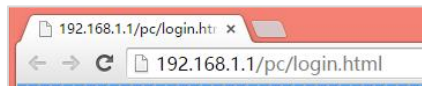

4. The web browser prompts you to enter a login account and password:




The default login account for the receiver is:

- Login Account: admin
- Password: password

Note – Tick remember me option, and then the browser will remember the Login Account and Password you entered.

5. Once you log in, the web page appears as follows:

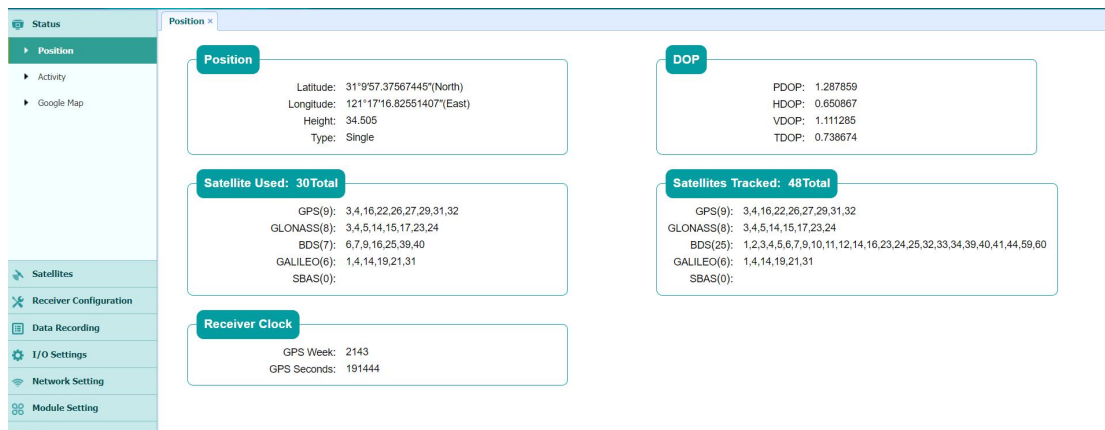

This web page shows the configuration menus on the left of the browser window, and the setting on the right. Each configuration menu contains the related Submenus to configure the receiver and monitor receiver performance.

This chapter describes each configuration menu.

To view the web page in another language, select the corresponding language name from the dropdown list on the upper right corner of the web page.

Currently, six languages are available:



4.1 Status Menu

This menu provides a quick link to review the receiver's position information, satellites tracked, runtime, current data log status, current outputs, available memory, and more.

4.1.1 Position Submenu

This page shows the relevant position information about the receiver's position solution which including the position, DOP values, satellites used and tracked, and the receiver clock information.

Position

Latitude: 31°9'57.34872476"(North)
Longitude: 121°17'16.92238566"(East)
Height: 38.955
Type: Single

DOP

PDOP: 1.328485
HDOP: 0.641613
VDOP: 1.163274
TDOP: 0.877797

Satellite Used: 28Total

GPS(7): 2,5,6,13,15,29,30
GLONASS(5): 1,2,17,23,24
BDS(11): 1,3,6,8,13,19,29,35,38,39,59
GALILEO(5): 7,13,19,26,33
SBAS(0):

Satellites Tracked: 39Total

GPS(8): 2,5,6,7,13,15,29,30
GLONASS(5): 1,2,17,23,24
BDS(21): 1,2,3,4,5,6,8,9,10,13,16,19,20,22,29,30,35,38,39,59,60
GALILEO(5): 7,13,19,26,33
SBAS(0):

Receiver Clock

GPS Week: 2118
GPS Seconds: 283368

4.1.2 Activity Submenu

Lists several important items to help you understand how the receiver is being used and its current operating condition. Items include the identities of currently tracked satellites, internal and external storage usage rate, how long the receiver has been operational, state of the internal battery, power source state. With this information, it is easy to tell exactly what functions the receiver is performing:

Satellites Track: 39Total

GPS(8): 2,5,6,7,13,15,29,30
GLONASS(5): 1,2,17,23,24
BDS(21): 1,2,3,4,5,6,8,9,10,13,16,19,20,22,29,30,35,38,39,59,60
GALILEO(5): 7,13,19,26,33
SBAS(0):

Activity Status

Current Time: 2020-08-12 06:43:06 (UTC)
Operation Duration: 00-00-00 00:32:45
Internal Storage:

2.59%

 175MB/6750MB
External Storage:


0%

 Disconnected
External Power: Connected
Battery:

82%

4.1.3 Google Map Submenu

Tap this submenu to show the location of the receiver on Google map.

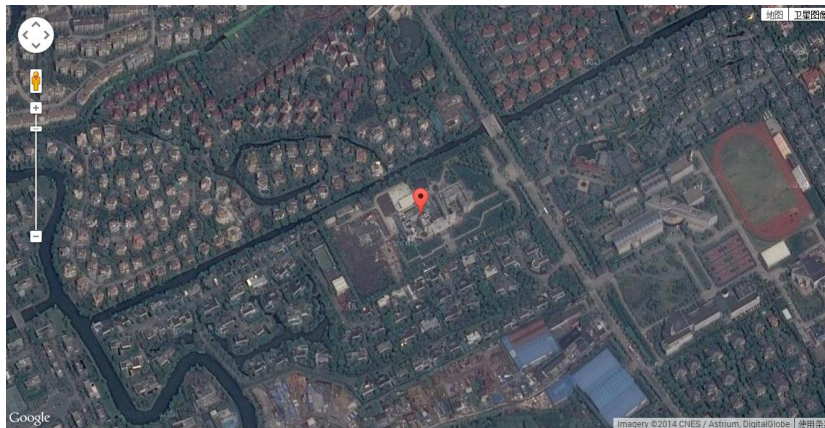

4.2 Satellites Menu

Use the Satellites menu to view satellite tracking details and enable/disable GPS, GLONASS, BDS and Galileo constellations. These menus include tabular and graphical displays to provide all required information on satellite tracking status.



4.2.1 Tracking Table Submenu

Provides the status of satellites tracked in general, such as the satellite ID, satellite type, attitude angle, azimuth angle, L1 SNR, L2 SNR, L5 SNR and enable/disable status of each one.

Tracking Table							
All GPS GLONASS BDS GALILEO SBAS							
SV	Type	Elevation Angle	Azimuth Angle	L1 SNR	L2 SNR	L5 SNR	Enabled
2	GPS	53	332	45.660	36.420	0.000	Yes
5	GPS	47	258	48.280	34.340	0.000	Yes
6	GPS	51	59	46.480	39.220	47.300	Yes
9	GPS	32	55	42.130	33.920	44.300	Yes
12	GPS	25	265	44.000	34.830	0.000	Yes
17	GPS	30	148	44.390	33.470	0.000	Yes
19	GPS	45	147	44.230	34.510	0.000	Yes
25	GPS	10	303	37.660	31.190	39.240	Yes
4	GLONASS	42	28	46.520	47.890	0.000	Yes
5	GLONASS	61	230	47.930	51.230	0.000	Yes
19	GLONASS	51	99	35.050	46.220	0.000	Yes
20	GLONASS	50	349	40.390	50.220	0.000	Yes
1	BDS	48	146	42.080	42.740	43.530	Yes
2	BDS	36	236	37.350	40.800	40.080	No
3	BDS	52	200	43.130	42.120	44.200	Yes
4	BDS	35	122	37.550	38.470	40.850	Yes
5	BDS	15	256	33.570	35.130	34.650	No
6	BDS	40	179	38.970	38.900	41.820	Yes
7	BDS	11	195	31.840	31.010	35.650	No
8	BDS	61	15	44.190	44.860	46.650	Yes
9	BDS	20	191	36.140	35.200	36.780	Yes
10	BDS	17	217	33.330	34.840	35.540	No
13	BDS	52	331	44.300	42.940	45.260	Yes
4	GALILEO	26	203	37.790	40.350	34.420	Yes
12	GALILEO	54	335	41.650	43.420	39.840	No
19	GALILEO	73	132	39.940	42.290	39.230	Yes
26	GALILEO	10	113	33.220	33.960	31.130	No


4.2.2 Tracking Info. Table Submenu

The following figure is an example of satellite track diagram page. Users can determine the satellite types and the corresponding SNR of L-band carriers to be displayed in any combination.



4.2.3 Tracking Skyplot Submenu

The following figure is an example of Skyplot page.

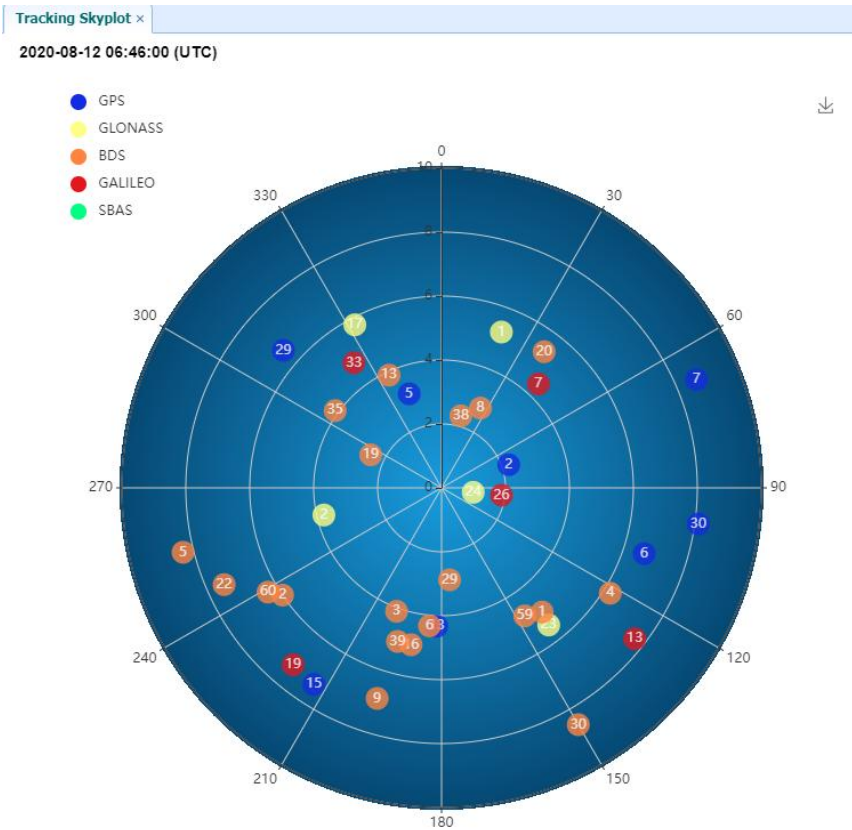


4.2.4 Satellite Activation Submenu

Use this menu to enable or disable satellites.

Satellite Activation			
GPS GLONASS BDS GALILEO SBAS			
Select All Unselect All Confirm Enable All Disable All			
Satellite Id	Enable	Satellite Id	Enable
1	<input checked="" type="checkbox"/>	2	<input checked="" type="checkbox"/>
3	<input checked="" type="checkbox"/>	4	<input checked="" type="checkbox"/>
5	<input checked="" type="checkbox"/>	6	<input checked="" type="checkbox"/>
7	<input checked="" type="checkbox"/>	8	<input checked="" type="checkbox"/>
9	<input checked="" type="checkbox"/>	10	<input checked="" type="checkbox"/>
11	<input checked="" type="checkbox"/>	12	<input checked="" type="checkbox"/>
13	<input checked="" type="checkbox"/>	14	<input checked="" type="checkbox"/>
15	<input checked="" type="checkbox"/>	16	<input checked="" type="checkbox"/>
17	<input checked="" type="checkbox"/>	18	<input checked="" type="checkbox"/>
19	<input checked="" type="checkbox"/>	20	<input checked="" type="checkbox"/>
21	<input checked="" type="checkbox"/>	22	<input checked="" type="checkbox"/>
23	<input checked="" type="checkbox"/>	24	<input checked="" type="checkbox"/>
25	<input checked="" type="checkbox"/>	26	<input checked="" type="checkbox"/>
27	<input checked="" type="checkbox"/>	28	<input checked="" type="checkbox"/>
29	<input checked="" type="checkbox"/>	30	<input checked="" type="checkbox"/>
31	<input checked="" type="checkbox"/>	32	<input checked="" type="checkbox"/>


4.3 Receiver Configuration Menu

Use this menu to configure settings such as the antenna type and height, elevation mask and PDOP setting, the reference station coordinates, receiver resetting and web interface language:

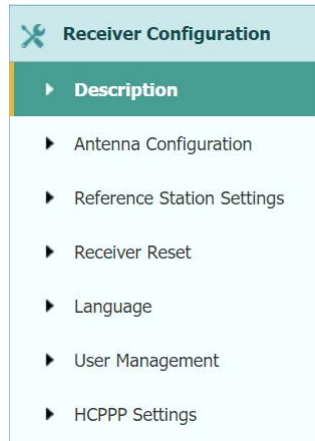


4.3.1 Description

This submenu shows the receiver information and reference station information, including antenna related information, elevation mask angle, reference station work mode and position, etc.

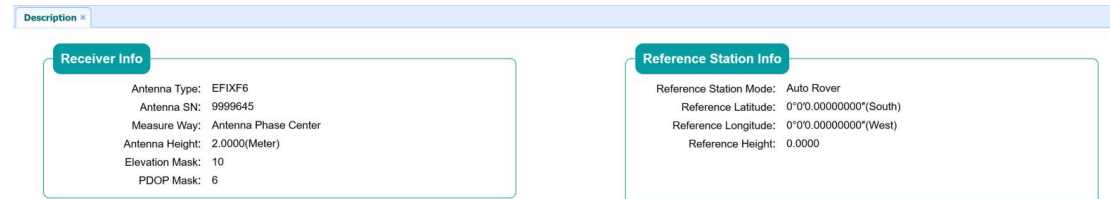

4.3.2 Antenna Configuration Submenu

Use this screen to configure all the items related to the GNSS antenna. You must enter the correct values for all antenna-related fields, because the choices you make affect the accuracy for logged data and broadcast correction data significantly:

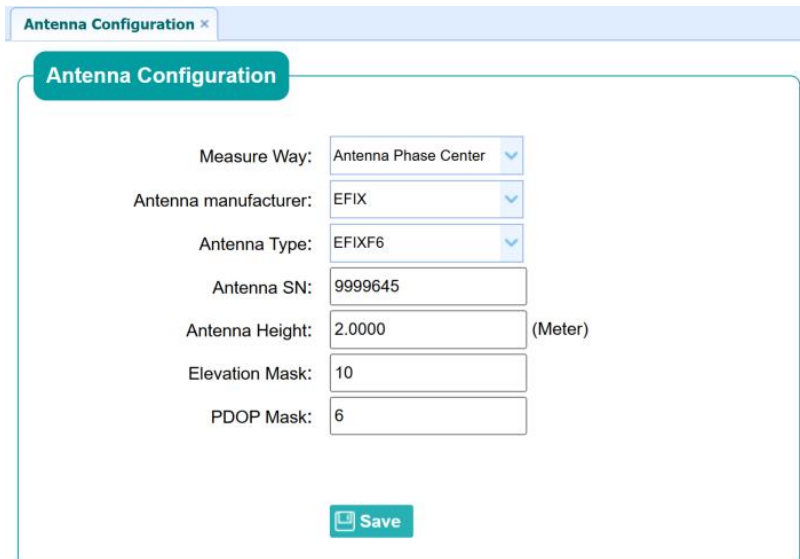

The screenshot shows the 'Antenna Configuration' submenu. It contains the following fields and controls:

- Measure Way:** A dropdown menu set to 'Antenna Phase Center'.
- Antenna manufacturer:** A dropdown menu set to 'EFIX'.
- Antenna Type:** A dropdown menu set to 'EFIXF6'.
- Antenna SN:** A text input field containing '9999645'.
- Antenna Height:** A text input field containing '2.0000', with a '(Meter)' label to its right.
- Elevation Mask:** A text input field containing '10'.
- PDOP Mask:** A text input field containing '6'.
- Save:** A green button with a floppy disk icon and the text 'Save'.


4.3.3 Reference Station Settings Submenu

Use this screen to configure settings such as the station coordinates and the broadcast station identifiers. You must enter accurate information in these fields, as this data affects the accuracy of logged data files and broadcast correction data significantly:

For **Reference Station Mode**:

There are three modes available:


1.Auto Rover: The receiver will serve as a rover after this mode is enabled, and then receive correction data through the working mode set last time.

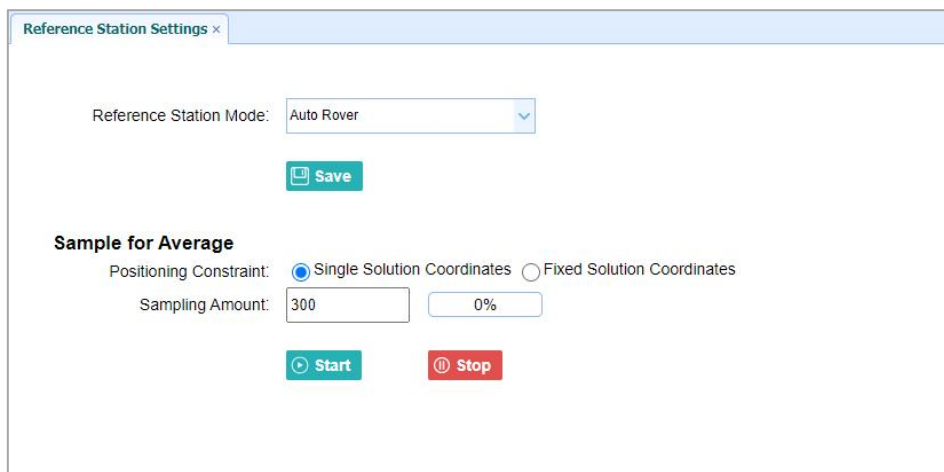

The screenshot shows the 'Reference Station Settings' submenu. It contains the following fields and controls:

- Reference Station Mode:** A dropdown menu set to 'Auto Rover'.
- Save:** A green button with a floppy disk icon and the text 'Save'.
- Sample for Average:** A section header.
- Positioning Constraint:** Two radio buttons: 'Single Solution Coordinates' (selected) and 'Fixed Solution Coordinates'.
- Sampling Amount:** Two text input fields: one containing '300' and another containing '0%'.
- Start:** A green button with a play icon and the text 'Start'.
- Stop:** A red button with a stop icon and the text 'Stop'.


2.Auto Base: The receiver will serve as a base after this mode is enabled, and then broadcast correction data based on coordinate inputted by user or obtained through autonomous positioning automatically.

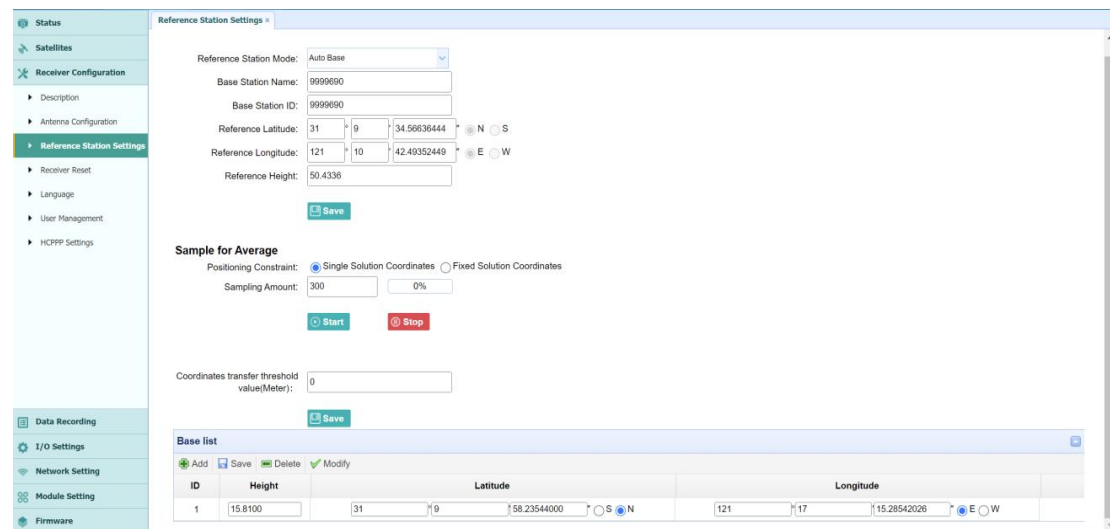

The screenshot shows the 'Reference Station Settings' window. The 'Reference Station Mode' is set to 'Auto Base'. The 'Base Station Name' and 'Base Station ID' are both '9999690'. The 'Reference Latitude' is '31° 9' 34.56636444'' N, and the 'Reference Longitude' is '121° 10' 42.49352449'' E. The 'Reference Height' is '50.4336'. Below these fields are 'Start' and 'Stop' buttons. The 'Sample for Average' section has 'Positioning Constraint' set to 'Single Solution Coordinates' and 'Sampling Amount' set to '300'. The 'Coordinates transfer threshold value(Meter)' is '0'. At the bottom, there is a 'Base list' table with one entry: ID 1, Height 15.8100, Latitude 31° 9' 58.23544000'' N, Longitude 121° 17' 15.28542026'' E, and a 'W' status.

3.Manual Base: The receiver will serve neither as a base nor a rover after this mode is enabled. Users need to configure the receiver manually.

For Reference Latitude and Reference Longitude:

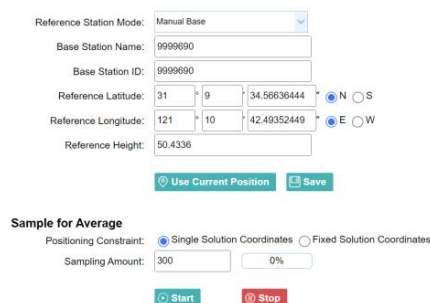

The screenshot shows the 'Reference Station Settings' window with 'Reference Station Mode' set to 'Manual Base'. The 'Base Station Name' and 'Base Station ID' are both '9999690'. The 'Reference Latitude' is '31° 9' 34.56636444'' N, and the 'Reference Longitude' is '121° 10' 42.49352449'' E. The 'Reference Height' is '50.4336'. Below these fields are 'Use Current Position' and 'Save' buttons. The 'Sample for Average' section has 'Positioning Constraint' set to 'Single Solution Coordinates' and 'Sampling Amount' set to '300'. There are 'Start' and 'Stop' buttons at the bottom.

There are mainly three methods to enter the reference coordinates and shown as follows:

4.Acquire Current Position: Click this button to acquire current position obtained through autonomous positioning automatically.

5.Manual Input: Manually input the coordinate of a control point.


6.From CORS: After the receiver logging in CORS, the software can record the coordinate of current position based on fix solution.

For Sample for Average:

Users can determine the positioning limit and sampling amount. The positioning limit falls into two types:

1.Single Solution Coordinates: Collect the coordinates of receiver obtained through autonomous positioning.


2.Fixed Solution Coordinates: Only collect coordinates of receiver with a fixed solution.

After the configuration of positioning limit and sampling amount, click  to carry out sampling and averaging → the progress bar will show the progress → the result will be served as the coordinate of current position.





If users need to save the changes, please tap  button.

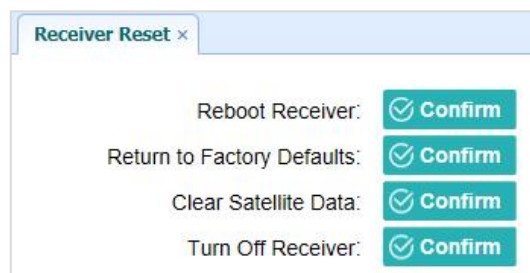4.3.4 Receiver Reset Submenu

Use this screen to completely or partially reset the receiver:



The screenshot shows the 'Receiver Reset' submenu with four options, each with a 'Confirm' button:

- Reboot Receiver: 
- Return to Factory Defaults: 
- Clear Satellite Data: 
- Turn Off Receiver: 

4.3.5 Languages Submenu


Use this screen to select the web interface language:



The screenshot shows the 'Language' submenu with a dropdown menu and a 'Confirm' button. The dropdown menu is open, showing the following options:

- English (selected)
- 中文
- Nederland
- Русский
- Türkçe
- Español

4.3.6 User Management Submenu




The screenshot shows the 'User Management' submenu with a table of users and a 'Confirm' button.

ID	User Name	Password
1	admin
2	admin1
3	admin2

4.4 Data Recording Menu

Use the Data Logging menu to set up the receiver to log static GNSS data and to view the logging settings. You can configure settings such as observable rate, recording rate, continuous logging limit, and whether to auto delete old files when memory is low. This menu also provides the controls for the FTP push feature:

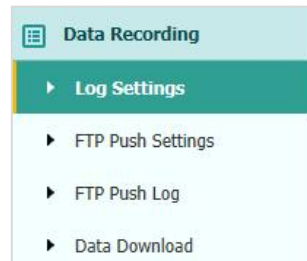

4.4.1 Log Settings Submenu

Here shows the data logging status, including internal and external storage usage and data logging status of each session. Also, users can configure the data logging settings for each session, including recording name, store location, storage limit, store formats, start time, etc.

Log Settings ×

Store Info			
	Position	Total Storage	Storage Available
1	Internal Storage	6750MB	6576MB
2	External Storage	0MB	0MB

Attention: Total assigned storage size should be less than 6GB. It will stop recording when the storage is full.

Record Info							Clear All
Recording Number	File Name	Activated	Log Status	Setting Parameter	Switch	Clear Data	
1	record1	Yes	Recording	Modify Detail	ON OFF	Clear	

To edit the settings of each session, click the **Modify** button to the right of the required session, and then the Recording Edit screen appears:


Recording Edit ×

Auto Record: ☐ Yes ☒ No
Sample Interval: 1Hz
Elevation Mask: 15 (°)
Duration Time: 60 (Minute)
Site Name: 3689191base

Antenna Height: 0.0000
Measure Way: Vertical Height
Storage Format: ECN
RINEX Version: 3.0x
Compress Rinex Data: ☐ Yes ☒ No
Advanced



Save
Back

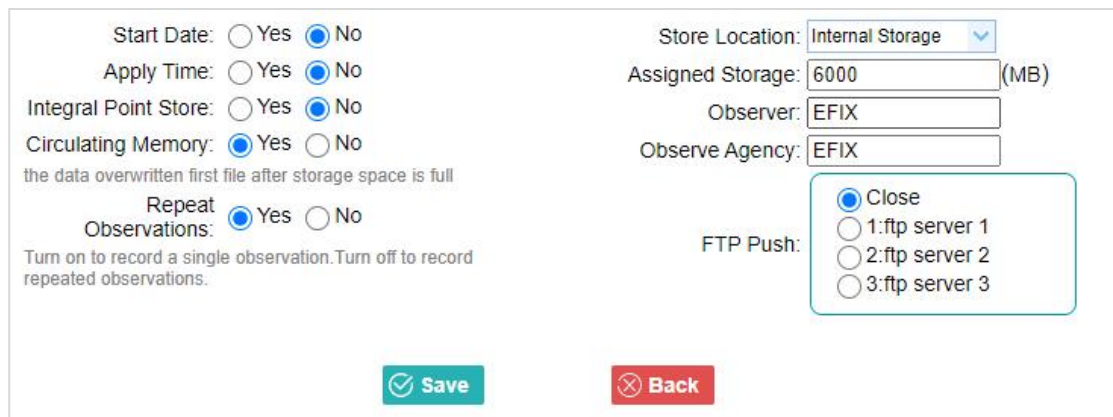Click advanced to see more settings.



In this screen, you can configure all the data logging parameters, and determine whether the recording files will be affected by the FTP Push. The parameters are mainly as follows:

- **Auto Record:** on or off.
- **Sample Interval:** Select the observable rate from the dropdown list.
- **Elevation Mask:** Enter the elevation mask.
- **Duration Time:** Set the duration of data logging.
- **Site Name:** Enter the name of the site.
- **Antenna Height:** the measured height value.
- **Measure way:** Antenna Phase Center, Vertical Height, Slant Height
- **Storage Format:** Select the format of the data store.
- **RINEX Version:** OFF, 3.02, 2.11
- **Start Date:** Select Yes or No option to determine whether to auto record start date.
- **Apply Time:** Select Yes or No option to determine whether to auto record apply time.
- **Integral Point Store:** Select Yes or No option to determine whether to allow receiver to save data every hour.
- **Circulating Memory:** Select Yes or No option to determine whether to auto delete old files if the storage space is full.
- **Repeat Observations:** Select Yes or No option to determine whether to turn on to record a single observation.
- **Store Location:** Internal Storage, External Storage.
- **Assigned Storage:** The assigned memory size of current thread(for example, Record 1) is 10000MB
- **Observer:** Enter the name of observer.
- **Observer Agency:** Enter the name of observer agency.
- **FTP Push:** Decide whether to push the stored files to the FTP server of your choice.

Tap  **Save** button to save the settings and back to the Log Settings screen. Also, users can click  **Back** to abandon the changed settings and back to Log Settings screen.

Note – To modify data logging parameters, make sure the data logging session is switched off.




To switch on or off **ANY** data logging session, tap the **ON** or **OFF** button on the right of the required session.

To delete the recorded files of **ANY** data logging session, tap the **Clear** button on the right of the required session.

To delete the recorded files of **ALL** data logging sessions, tap the **Clear ALL Accounts** button.

4.4.2 FTP Push Settings Submenu

Use this screen to configure the receiver to push stored files to the FTP server of your choice. Only files that are configured to use FTP push are transmitted.

FTP Push Settings				
Record Info				
Server ID	Server IP	Remote Directory	Server Description	Modify
1	192.168.3.72	/repo/first	ftp server 1	
2	192.168.3.72	/repo/second	ftp server 2	
3	192.168.3.72	/repo/third	ftp server 3	

Tap **Modify** button on the right of the required FTP server and the FTP Push Settings screen appears:

FTP Push Settings

Server IP: 192.168.3.72

Port: 21



Remote Directory: /repo/first

Local directory: /mnt/repo_3225804

Server Description: ftp server 1


User Name: ftpuser1

Password:

4.4.3 FTP Push Log Submenu

Shows the related information about the recorded files that be pushed. And users can tap **Clear Ftp Send Log** button in the upper right corner to clear the log of FTP Push operations.

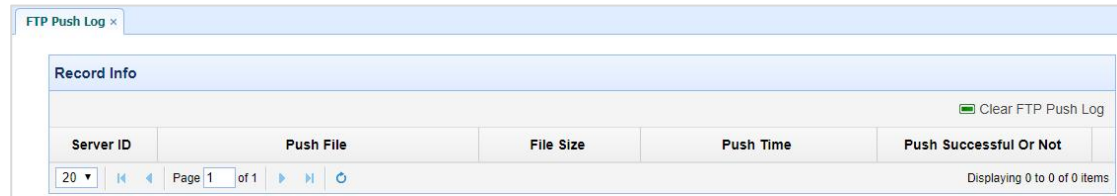

4.4.4 Data Download Submenu

In this submenu, users can download the data files that recorded in the internal storage through the internal FTP site.

1. Click this submenu, and then the log on dialogue box will prompt you to enter a user name and password:

Sign in

ftp://192.168.1.1

Your connection to this site is not private

Username

Password

Sign in **Cancel**

The default logon account for the internal FTP site is:

➤ User name: ftp

➤ Password: ftp

2. Click the directory named as “repo” to view and download the files currently stored on the receiver:

Index of /		
Name	Size	Date Modified
 System Volume Information/		8/9/19, 10:28:00 PM
 repo_3225804/		7/16/19, 1:17:00 PM

3.To find the file need to be downloaded, click the name of data logging session → the date of file that be recorded → the format of the file → the name of the target file.

4.To download a file, left-click the name of the target file → download the file according to the prompts.

4.5 IO Settings Menu




Use the IO Settings menu to set up all receiver outputs and inputs. The receiver can output CMR, RTCM, Raw data, Ephemeris data, GPGLGA, GPGLSV, on TCP/IP, UDP, serial port, or Bluetooth ports.

The following figure shows an example of the screen that appears when you select this submenu. (serial port setting is reserved menu)


I/O Settings ×					
	Type	Description	Output	Connection Status	Modify
1	RTK Client	211.144.118.5:2102	---	Unconnected	Connect Disconnecting Detail
2	TCP/UDP_Client1/NTRIP Server1	192.168.3.18:9900	---	Unconnected	Connect Disconnecting Detail
3	TCP/UDP_Client2/NTRIP Server2	192.168.3.18:9901	---	Unconnected	Connect Disconnecting Detail
4	TCP/UDP_Client3/NTRIP Server3	192.168.3.18:9902	---	Unconnected	Connect Disconnecting Detail
5	TCP/UDP_Client4/NTRIP Server4	192.168.3.18:9903	---	Unconnected	Connect Disconnecting Detail
6	TCP/UDP_Client5/NTRIP Server5	192.168.3.18:9904	---	Unconnected	Connect Disconnecting Detail
7	TCP/UDP_Client6/NTRIP Server6	192.168.3.18:9905	---	Unconnected	Connect Disconnecting Detail
8	TCP Server/NTRIP Caster1	9901	---	Closed	Connect Disconnecting Detail
9	TCP Server/NTRIP Caster2	9902	---	Closed	Connect Disconnecting Detail
10	TCP Server/NTRIP Caster3	9903	---	Closed	Connect Disconnecting Detail
11	TCP Server/NTRIP Caster4	9904	---	Closed	Connect Disconnecting Detail
12	Serial Port	115200	---	---	Settings
13	Bluetooth	GNSS-3225804	GPGLGA-5s	---	Settings
14	Radio	456.0500MHz	---	---	Settings

In this submenu, users can configure 6 types of input and output settings.

1. RTK Client

After configuring the settings of RTK client, users can log on CORS or APIS. Tap the **Connect** button to the right → the *IO Settings* screen will appear → choose one of the connection protocols among the NTRIP, APIS_BASE, APIS_ROVER and TCP → configure the related parameters → click  to log on CORS or APIS.


➤ Connection Protocol: NTRIP

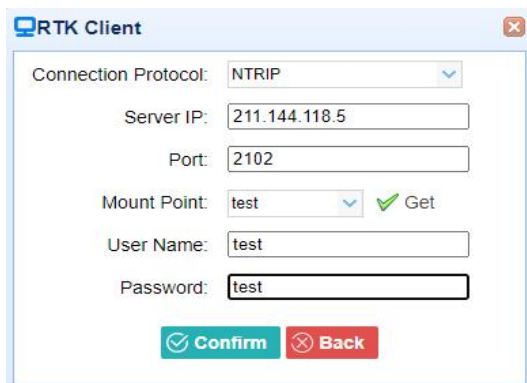

The screenshot shows the 'RTK Client' window with the following settings:

- Connection Protocol: NTRIP (selected in dropdown)
- Server IP: 211.144.118.5
- Port: 2102
- Mount Point: test (selected in dropdown) with a green checkmark and 'Get' text
- User Name: test
- Password: test
- Buttons: Confirm (green), Back (red)


➤ Connection Protocol: APIS_BASE

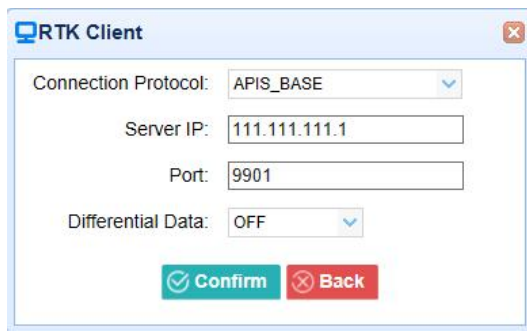

The screenshot shows the 'RTK Client' window with the following settings:

- Connection Protocol: APIS_BASE (selected in dropdown)
- Server IP: 111.111.111.1
- Port: 9901
- Differential Data: OFF (selected in dropdown)
- Buttons: Confirm (green), Back (red)


➤ Connection Protocol: APIS_ROVER

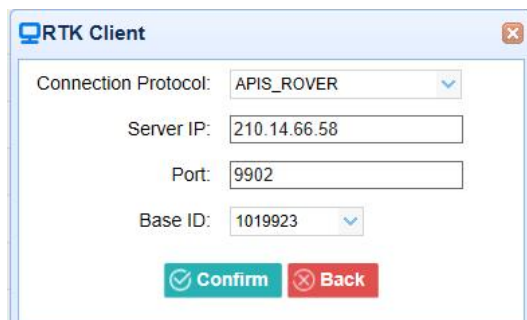

The screenshot shows the 'RTK Client' window with the following settings:

- Connection Protocol: APIS_ROVER (selected in dropdown)
- Server IP: 210.14.66.58
- Port: 9902
- Base ID: 1019923 (selected in dropdown)
- Buttons: Confirm (green), Back (red)

➤ Connection Protocol: TCP

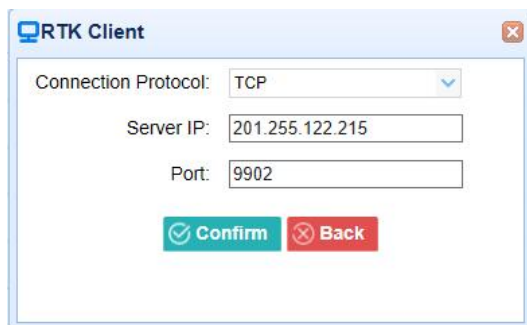


The screenshot shows the 'RTK Client' window with the following settings:

- Connection Protocol: TCP (selected in dropdown)
- Server IP: 201.255.122.215
- Port: 9902
- Buttons: Confirm (green), Back (red)

2. TCP/UDP_Client/NTRIP Server


Tap the **Connect** button on the right of required TCP/UDP Client → the *IO Settings* screen will appear → select the connection protocol from TCP, UDP, NTRIP1.0 and NTRIP2.0 → enter the IP and Port of the target server → configure messages that you want to output to the target server → click **Confirm** to save and complete the connection.

➤ Connection Protocol: TCP

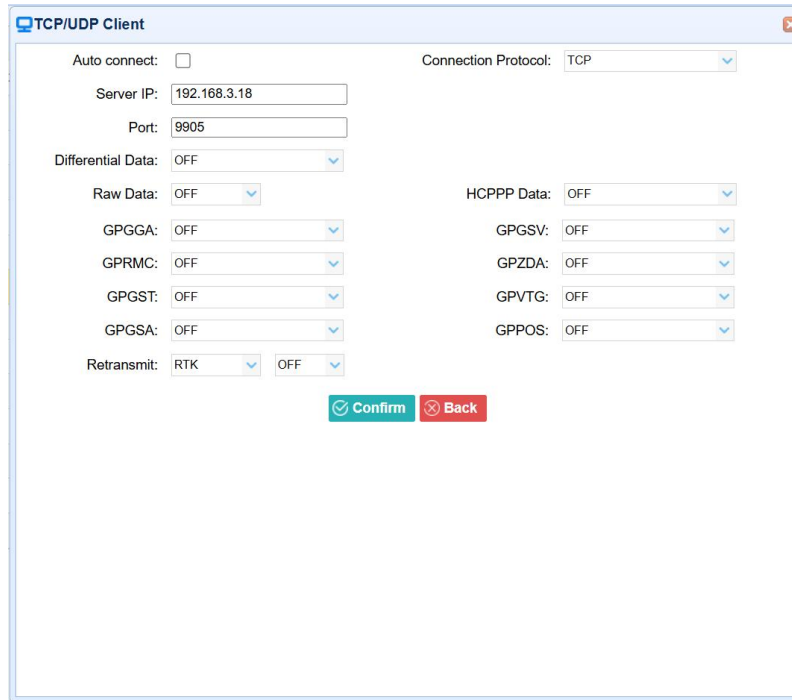


The screenshot shows the 'TCP/UDP Client' configuration window. The 'Connection Protocol' is set to 'TCP'. The 'Server IP' is '192.168.3.18' and the 'Port' is '9905'. The 'Auto connect' checkbox is unchecked. The 'Differential Data' is set to 'OFF'. The 'Raw Data' is set to 'OFF'. The 'HCPPP Data' is set to 'OFF'. The 'GPGGA', 'GPRMC', 'GPGST', 'GPGSA', 'Retransmit', 'GPGSV', 'GPZDA', 'GPVTG', and 'GPPOS' are all set to 'OFF'. The 'Retransmit' dropdown is set to 'RTK'. At the bottom, there are 'Confirm' and 'Back' buttons.

➤ Connection Protocol: UDP

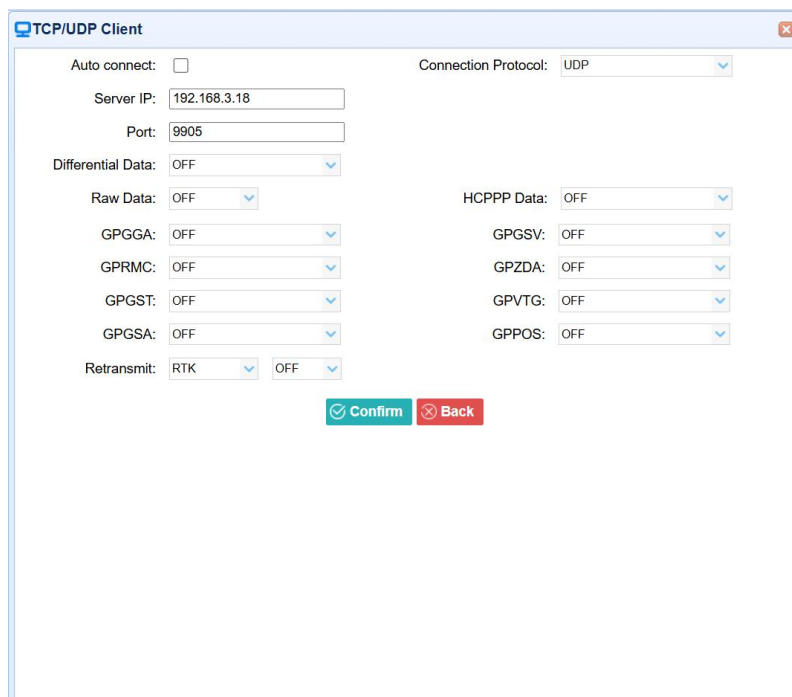


The screenshot shows the 'TCP/UDP Client' configuration window. The 'Connection Protocol' is set to 'UDP'. The 'Server IP' is '192.168.3.18' and the 'Port' is '9905'. The 'Auto connect' checkbox is unchecked. The 'Differential Data' is set to 'OFF'. The 'Raw Data' is set to 'OFF'. The 'HCPPP Data' is set to 'OFF'. The 'GPGGA', 'GPRMC', 'GPGST', 'GPGSA', 'Retransmit', 'GPGSV', 'GPZDA', 'GPVTG', and 'GPPOS' are all set to 'OFF'. The 'Retransmit' dropdown is set to 'RTK'. At the bottom, there are 'Confirm' and 'Back' buttons.

➤ Connection Protocol: NTRIP1.0

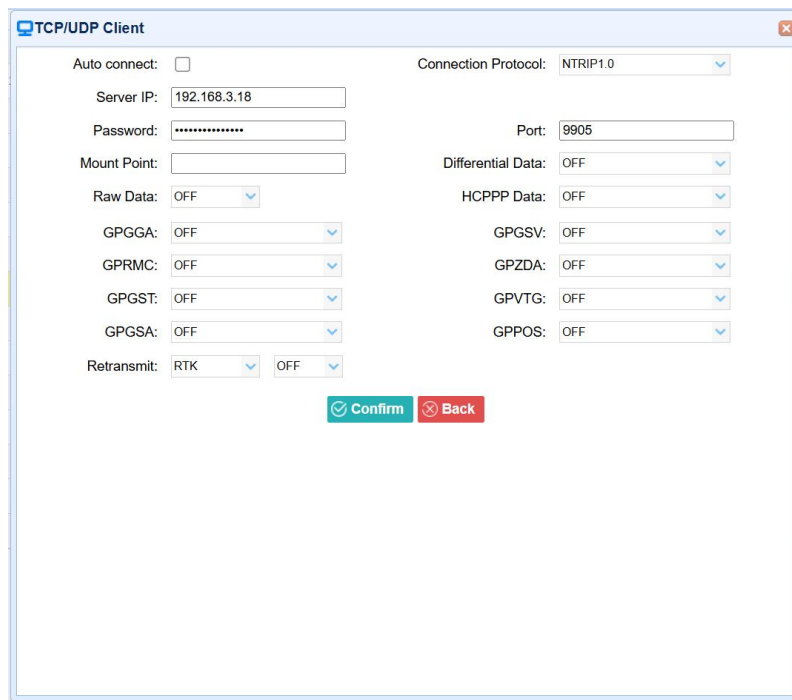


The screenshot shows the 'TCP/UDP Client' configuration window. The 'Connection Protocol' is set to 'NTRIP1.0'. The 'Auto connect' checkbox is unchecked. The 'Server IP' is '192.168.3.18', 'Password' is masked with dots, and 'Mount Point' is empty. The 'Port' is '9905'. On the left, 'Raw Data' is 'OFF', and 'GPGGA', 'GPRMC', 'GPGST', 'GPGSA', and 'Retransmit' (set to 'RTK') are all 'OFF'. On the right, 'Differential Data' and 'HCPPP Data' are 'OFF', and 'GPGSV', 'GPZDA', 'GPVTG', and 'GPPOS' are all 'OFF'. 'Confirm' and 'Back' buttons are at the bottom.

➤ Connection Protocol: NTRIP2.0

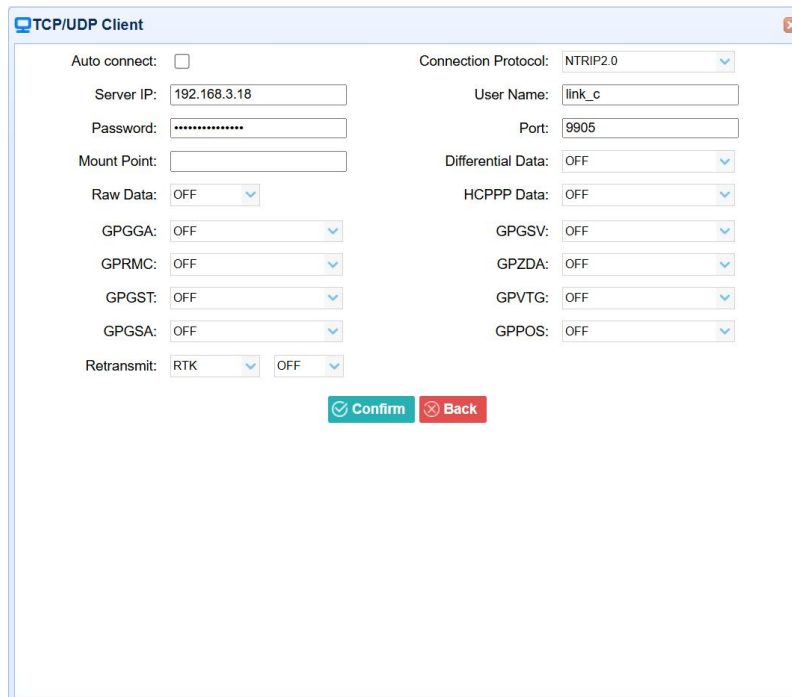


The screenshot shows the 'TCP/UDP Client' configuration window for 'NTRIP2.0'. The 'Auto connect' checkbox is unchecked. The 'Server IP' is '192.168.3.18', 'Password' is masked with dots, and 'Mount Point' is empty. The 'Port' is '9905'. The 'User Name' field is populated with 'link_c'. On the left, 'Raw Data' is 'OFF', and 'GPGGA', 'GPRMC', 'GPGST', 'GPGSA', and 'Retransmit' (set to 'RTK') are all 'OFF'. On the right, 'Differential Data' and 'HCPPP Data' are 'OFF', and 'GPGSV', 'GPZDA', 'GPVTG', and 'GPPOS' are all 'OFF'. 'Confirm' and 'Back' buttons are at the bottom.

3. TCP Server/NTRIP Caster


Tap the **Connect** button to the right of required TCP Server/NTRIP Caster → the **IO Settings** screen will appear → select one of the connection protocols between NTRIP and TCP → configure the other related parameters → click  to save the settings and open the server.

➤ Connection Protocol: TCP

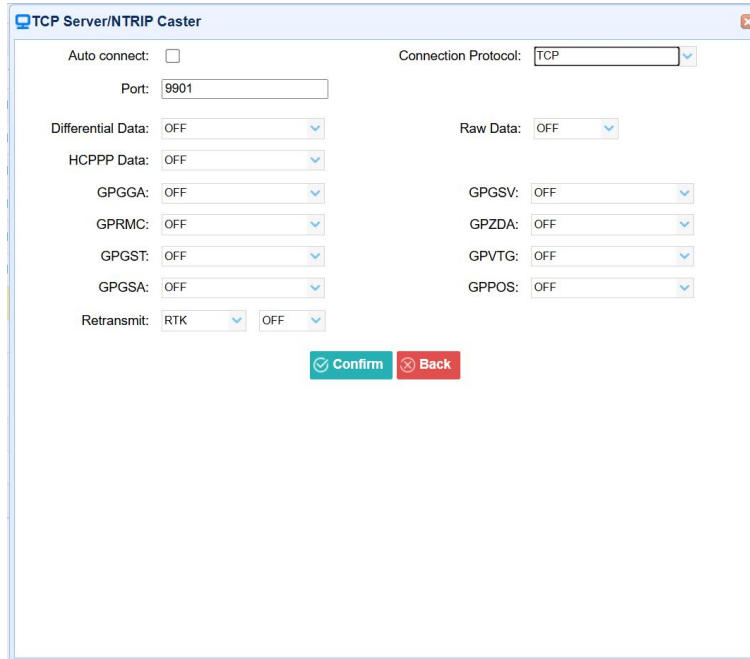

The screenshot shows the 'TCP Server/NTRIP Caster' settings window. The 'Connection Protocol' is set to 'TCP'. The 'Auto connect' checkbox is unchecked. The 'Port' is set to '9901'. The 'Differential Data' is set to 'OFF'. The 'HCPPP Data' is set to 'OFF'. The 'GPGGA' is set to 'OFF'. The 'GPRMC' is set to 'OFF'. The 'GPGST' is set to 'OFF'. The 'GPGSA' is set to 'OFF'. The 'Retransmit' is set to 'RTK' and 'OFF'. The 'Raw Data' is set to 'OFF'. The 'GPGSV' is set to 'OFF'. The 'GPZDA' is set to 'OFF'. The 'GPVTG' is set to 'OFF'. The 'GPPOS' is set to 'OFF'. At the bottom, there are 'Confirm' and 'Back' buttons.


➤ Connection Protocol: NTRIP

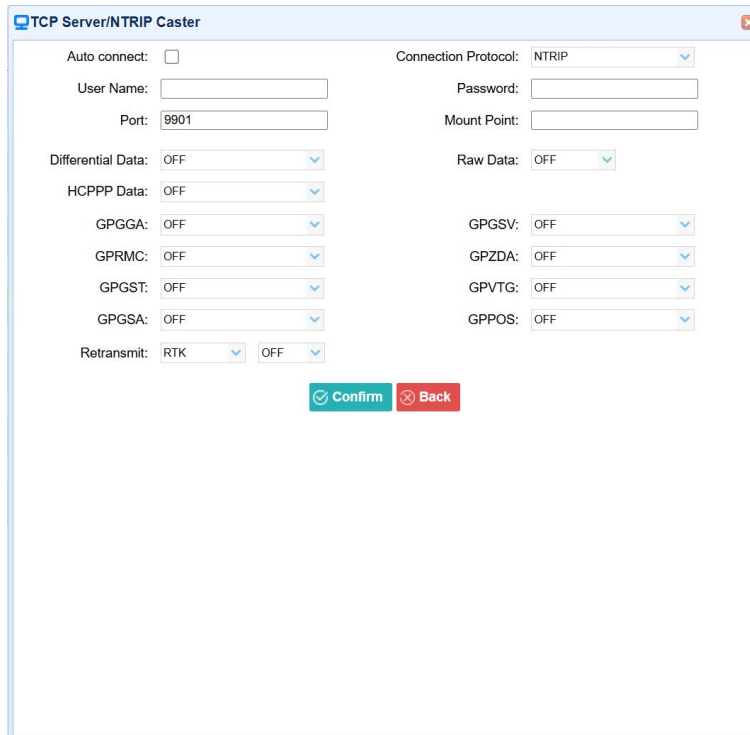

The screenshot shows the 'TCP Server/NTRIP Caster' settings window. The 'Connection Protocol' is set to 'NTRIP'. The 'Auto connect' checkbox is unchecked. The 'User Name' field is empty. The 'Password' field is empty. The 'Mount Point' field is empty. The 'Port' is set to '9901'. The 'Differential Data' is set to 'OFF'. The 'HCPPP Data' is set to 'OFF'. The 'GPGGA' is set to 'OFF'. The 'GPRMC' is set to 'OFF'. The 'GPGST' is set to 'OFF'. The 'GPGSA' is set to 'OFF'. The 'Retransmit' is set to 'RTK' and 'OFF'. The 'Raw Data' is set to 'OFF'. The 'GPGSV' is set to 'OFF'. The 'GPZDA' is set to 'OFF'. The 'GPVTG' is set to 'OFF'. The 'GPPOS' is set to 'OFF'. At the bottom, there are 'Confirm' and 'Back' buttons.


4. Bluetooth

Tap the **Settings** button to the right of Bluetooth → the *Bluetooth Set* screen will appear → configure the messages that you want to transmit through Bluetooth → click **Confirm** to save the settings and start to transmit.

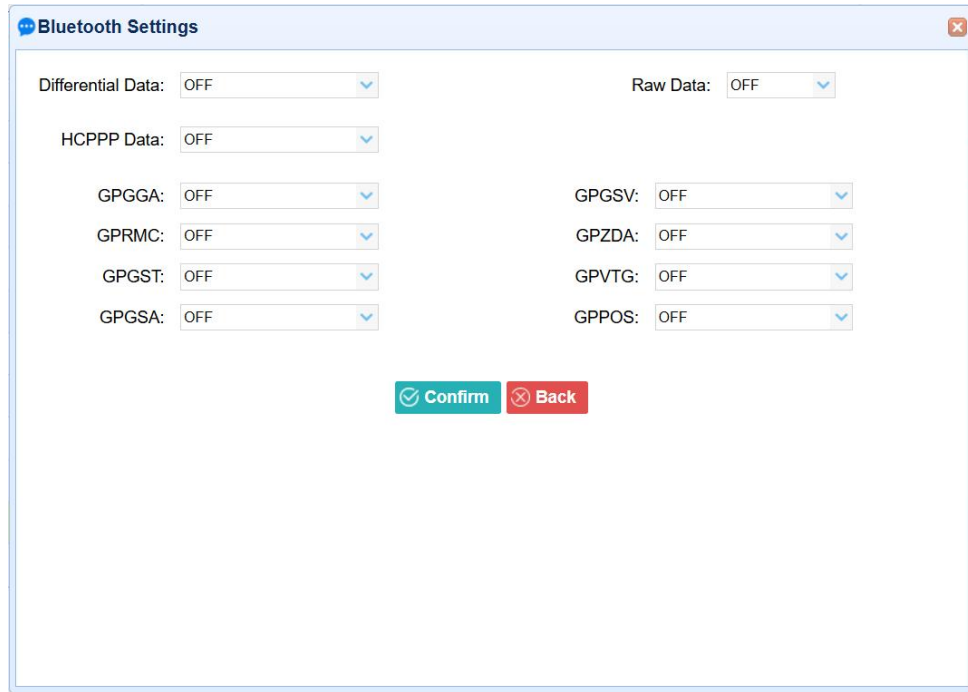


4.6 Network Setting Menu

Use this menu to set email alert for specific situation, configure HTTP or HTTPS port, and the username and password of internal FTP site:

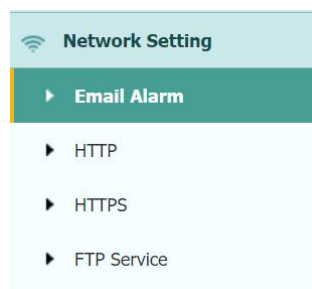

4.6.1 Email Alarm Submenu


Use this submenu to choose which situation of receiver will be alerted and input the email address.

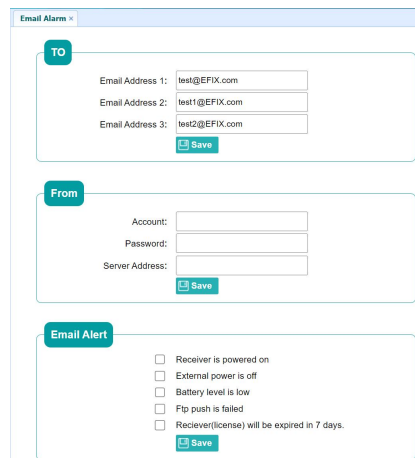

The screenshot shows the 'Email Alarm' submenu with three sections: 'TO', 'From', and 'Email Alert'. The 'TO' section contains three email address input fields (test@EFIX.com, test1@EFIX.com, test2@EFIX.com) and a 'Save' button. The 'From' section contains input fields for 'Account', 'Password', and 'Server Address', with a 'Save' button. The 'Email Alert' section contains five checkboxes for alert conditions: 'Receiver is powered on', 'External power is off', 'Battery level is low', 'Ftp push is failed', and 'Receiver(license) will be expired in 7 days', with a 'Save' button.

4.6.2 HTTP Submenu


Use this submenu to configure HTTP port.

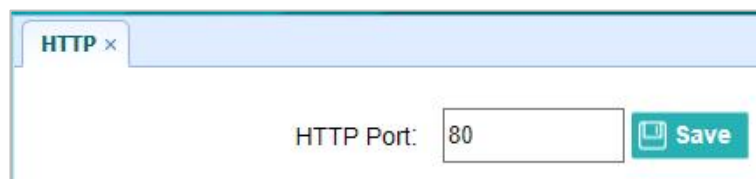

The screenshot shows the 'HTTP' submenu with a single input field for 'HTTP Port' set to '80' and a 'Save' button.

4.6.3 HTTPS Submenu


Use this submenu to configure HTTPS port.

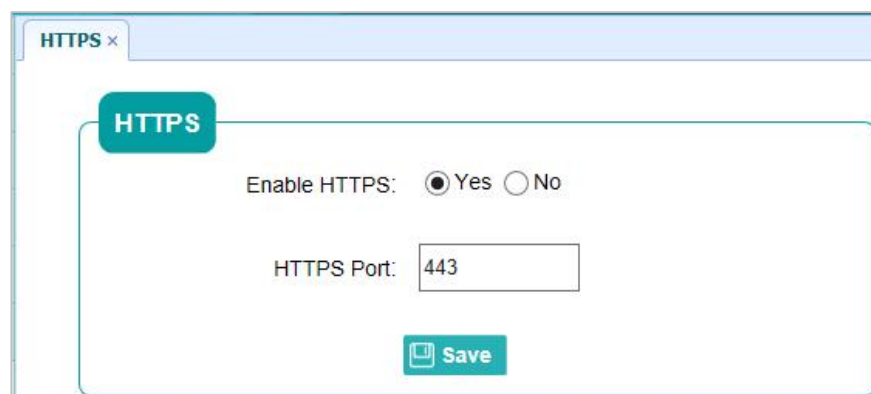

The screenshot shows the 'HTTPS' submenu with a section titled 'HTTPS' containing 'Enable HTTPS' (radio buttons for 'Yes' and 'No', with 'Yes' selected), 'HTTPS Port' (input field set to '443'), and a 'Save' button.

4.6.4 FTP Service Submenu


Use this submenu to configure the user name and password of internal FTP site.

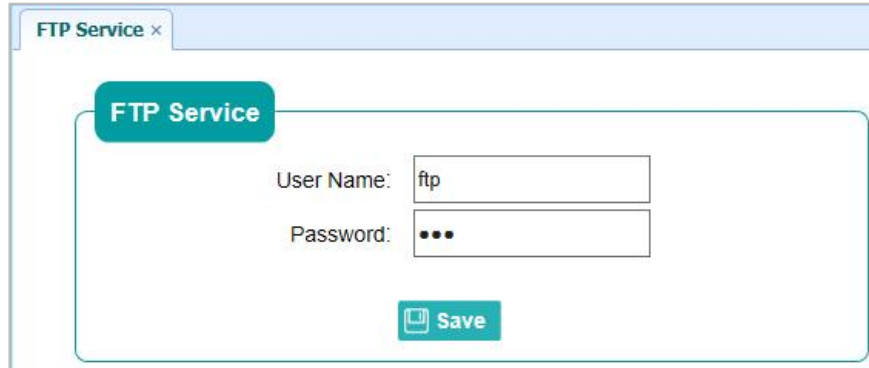

The screenshot shows the 'FTP Service' submenu. It has a title bar 'FTP Service x'. Inside, there's a teal header 'FTP Service'. Below it, there are two input fields: 'User Name:' with the value 'ftp' and 'Password:' with three dots. At the bottom right is a teal 'Save' button with a floppy disk icon.

4.7 Module Setting Menu

Use this menu to check module information, configure WiFi, bluetooth, radio related settings.

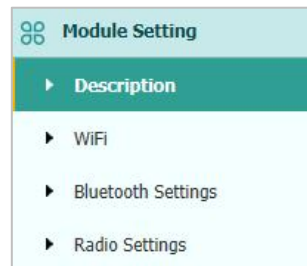

4.7.1 Description Submenu


Use this submenu to check the information of WiFi module, bluetooth module and radio module.



The screenshot shows the 'Description' submenu. It has a title bar 'Description x'. Inside, there are two sections: 'Wi-Fi Information' and 'Radio Information'.
Wi-Fi Information:
 Power Status: ON
 Wifi Mode: Access Point
 MAC: b4:bc:7c:2e:89:46
 Access Point Details
 SSID: GNSS-3269707
Radio Information:
 Radio Type: Integ
 Radio Power: 1W
 OTA Baud Rate: 9600
 Radio Frequency: 463.8125MHz
 Radio Protocol: Transparent
 Radio Frequency Channel: Full Range
 Frequency Range: 410MHz---470MHz

4.7.2 WiFi Submenu

Use this submenu to turn on/off WiFi function and modify password.

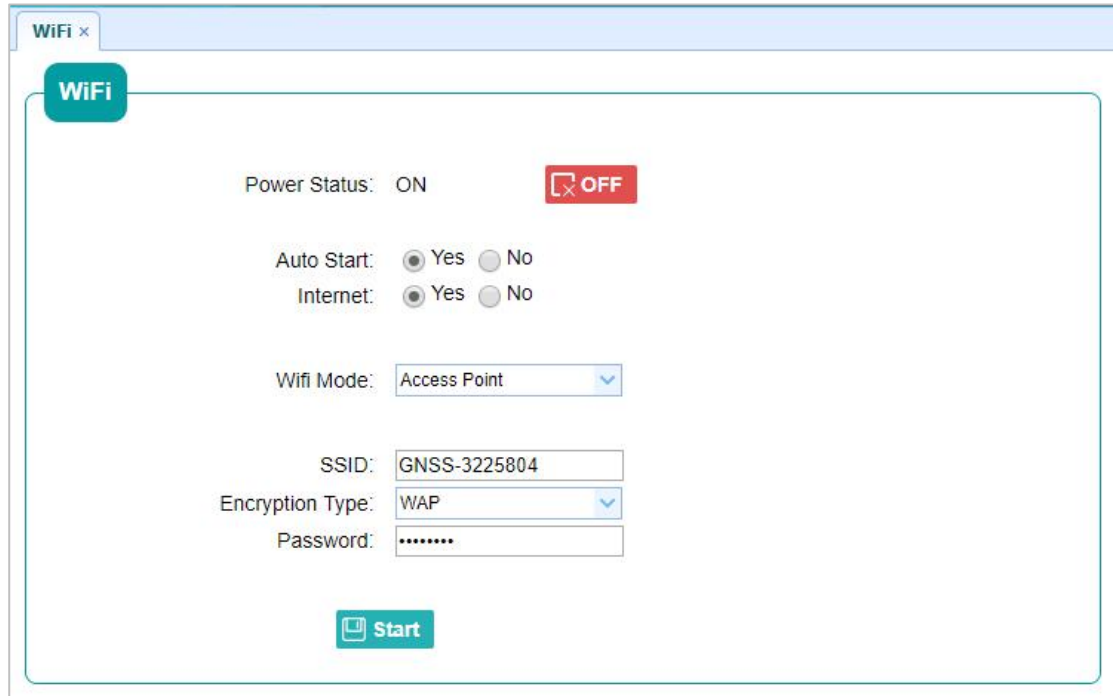


The screenshot shows the WiFi settings submenu. At the top, there is a tab labeled 'WiFi' with a close button. Below the tab, there is a 'WiFi' header. The settings include:

- Power Status:** ON, with a red 'OFF' button next to it.
- Auto Start:** Radio buttons for Yes (selected) and No.
- Internet:** Radio buttons for Yes (selected) and No.
- Wifi Mode:** A dropdown menu set to 'Access Point'.
- SSID:** A text field containing 'GNSS-3225804'.
- Encryption Type:** A dropdown menu set to 'WAP'.
- Password:** A text field with masked characters (dots).
- Start:** A green button with a document icon and the text 'Start'.

4.7.3 Bluetooth Settings Submenu

Use this submenu to turn on/off bluetooth function and modify PIN number.

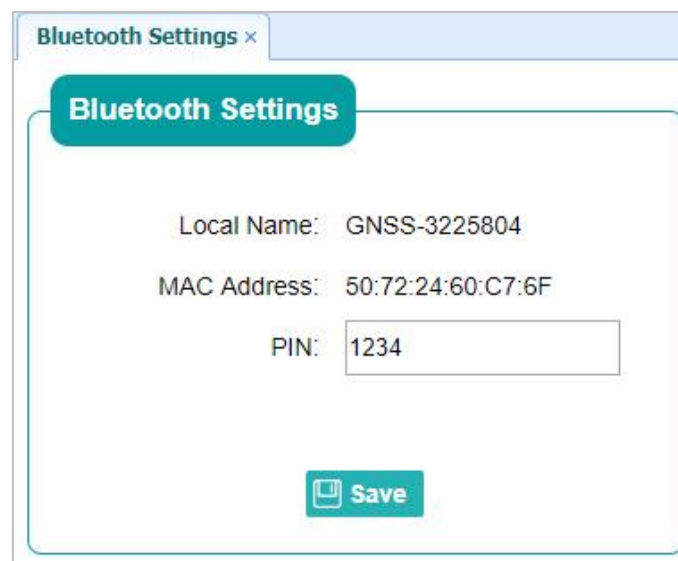


The screenshot shows the Bluetooth Settings submenu. At the top, there is a tab labeled 'Bluetooth Settings' with a close button. Below the tab, there is a 'Bluetooth Settings' header. The settings include:

- Local Name:** A text field containing 'GNSS-3225804'.
- MAC Address:** A text field containing '50:72:24:60:C7:6F'.
- PIN:** A text field containing '1234'.
- Save:** A green button with a document icon and the text 'Save'.

4.7.4 Radio Settings Submenu


Use this submenu to turn on/off radio function and configure radio parameters.

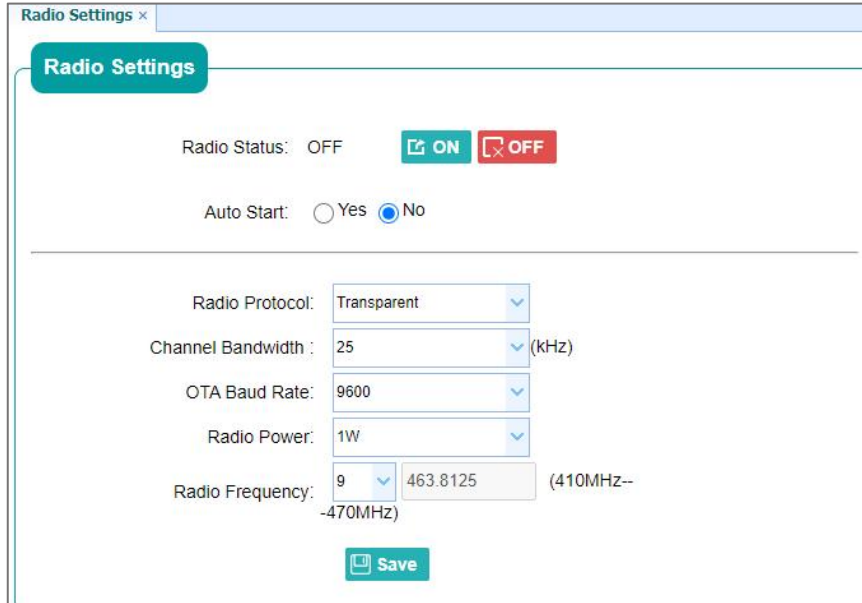

The screenshot shows the 'Radio Settings' submenu. At the top, there's a tab labeled 'Radio Settings'. Below it, the 'Radio Status' is 'OFF', with 'ON' and 'OFF' buttons. The 'Auto Start' is set to 'No'. The 'Radio Protocol' is 'Transparent'. The 'Channel Bandwidth' is '25' (kHz). The 'OTA Baud Rate' is '9600'. The 'Radio Power' is '1W'. The 'Radio Frequency' is '9' (463.8125 MHz). A 'Save' button is at the bottom.

4.8 Firmware Menu

Use this menu to check the current firmware information, download the system log, update the receiver firmware, download or update the configuration file and register the receiver, and more:

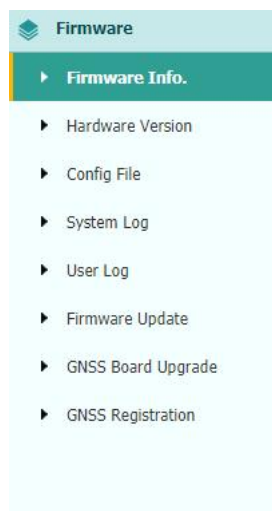

The screenshot shows the 'Firmware' menu. It has a 'Firmware Info.' section with the following options: Hardware Version, Config File, System Log, User Log, Firmware Update, GNSS Board Upgrade, and GNSS Registration.

4.8.1 Firmware Info Submenu

Use this submenu to check the current firmware information. The following figure shows an example of the firmware information.

Firmware Version: 2.1.2
Firmware Release Time: 20201127_15084_5439

4.8.2 Hardware Version Submenu

Use this submenu to check the hardware information, including main board version and core board version:

Hardware Version ×

Main Board: 1.1
Core Board: 1.1
PN: A10654430005050004
Board Firmware Version Number: R3.00Build20868

4.8.3 Config File Submenu

Use this submenu to update Configuration File.

Config File ×

Download Configuration File : [Download](#)
Update Configuration File: [Browse](#)
[Confirm](#)

4.8.4 System Log Download Submenu

Use this submenu to download the system log of the receiver.


System Log ×

System Log Type: Firmware Log

[Download](#)

4.8.5 User Log Submenu


Use this submenu to download the user log. Tap Download to download current user log; Tick items that you want to see on the user log and tap confirm button to confirm selected user log.

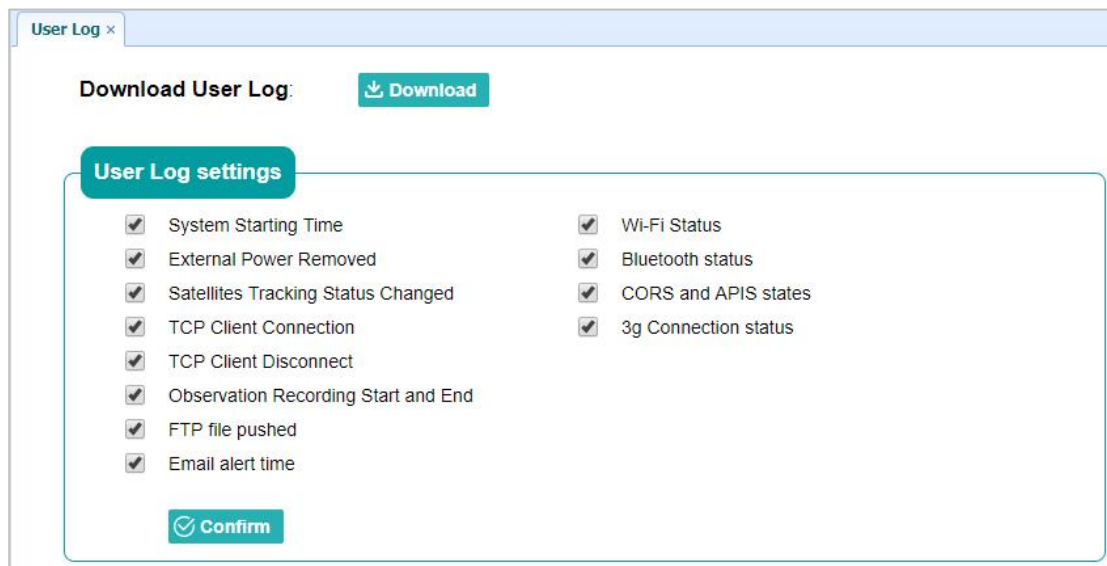

The screenshot shows the 'User Log' submenu. At the top, there is a tab labeled 'User Log x'. Below it, the text 'Download User Log:' is followed by a green 'Download' button with a download icon. Underneath, there is a section titled 'User Log settings' enclosed in a rounded rectangle. This section contains two columns of checkboxes, all of which are checked. The first column includes: 'System Starting Time', 'External Power Removed', 'Satellites Tracking Status Changed', 'TCP Client Connection', 'TCP Client Disconnect', 'Observation Recording Start and End', 'FTP file pushed', and 'Email alert time'. The second column includes: 'Wi-Fi Status', 'Bluetooth status', 'CORS and APIS states', and '3g Connection status'. At the bottom of the 'User Log settings' section is a green 'Confirm' button with a checkmark icon.

4.8.6 Firmware Update Submenu

Use this submenu to load new firmware to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

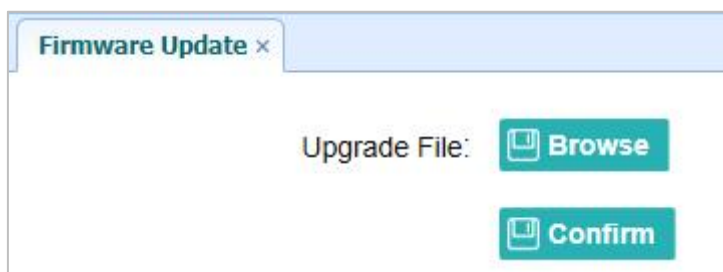


The screenshot shows the 'Firmware Update' submenu. It has a tab labeled 'Firmware Update x'. Below the tab, the text 'Upgrade File:' is followed by two green buttons: 'Browse' and 'Confirm', both with folder icons.

Notes

- It may take about 3 or 4 minutes to complete the firmware upgrading. Do not touch the power button or unplug the power until the upgrading process finishes, or damage will be caused to the receiver.
- The receiver will restart after the firmware upgrading is done, so users need to reconnect the receiver with your computer via Wi-Fi, and then log-in the receiver through a web browser to continue the configuration.

4.8.7 GNSS Board Upgrade Submenu


Use this submenu to upgrade GNSS Board. Use this submenu to load new board to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

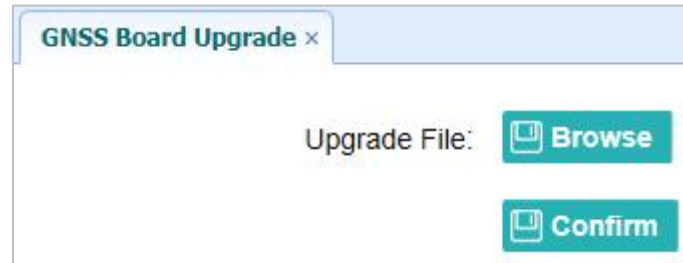

The screenshot shows the 'GNSS Board Upgrade' submenu. It features a title bar with the text 'GNSS Board Upgrade' and a close button. Below the title bar, there is a label 'Upgrade File:' followed by two buttons: 'Browse' and 'Confirm'. Both buttons have a folder icon to their left.

4.8.8 GNSS Registration Submenu

Use this submenu to register the receiver. Paste or enter the registration code to the *Registration Code* field → tap **Registration** button to complete the registration.

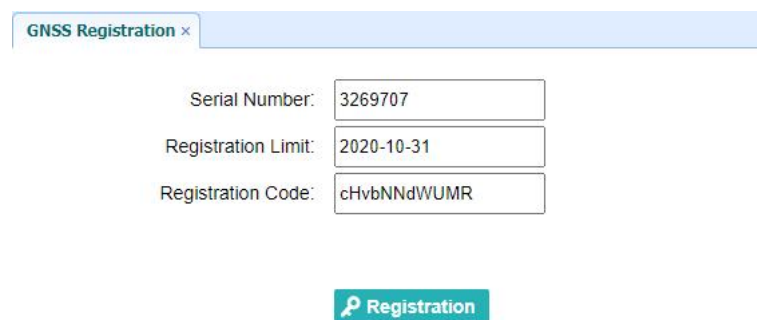

The screenshot shows the 'GNSS Registration' submenu. It features a title bar with the text 'GNSS Registration' and a close button. Below the title bar, there are three input fields with labels: 'Serial Number:' (containing '3269707'), 'Registration Limit:' (containing '2020-10-31'), and 'Registration Code:' (containing 'cHvbNNdWUMR'). At the bottom of the form is a large blue button with a key icon and the text 'Registration'.



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement.

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with minimum distance 50cm between the radiator & your body.

EFIX Geomatics

Room 1137, D, 11th Floor, Building 1, No. 158 Shuanglian Road, Qingpu District, Shanghai, China

Email: sales@efix-geo.com | support@efix-geo.com

Website: www.efix-geo.com