

BLUETOOTH HEADSET

DGHP-5612

User guide  
Guide de l'utilisateur  
Guía de usuario

[www.isound.com](http://www.isound.com)


# ENGLISH

---

## Includes

charge cable, and user guide ,DGHP-5612

**Please read this user guide thoroughly before using**

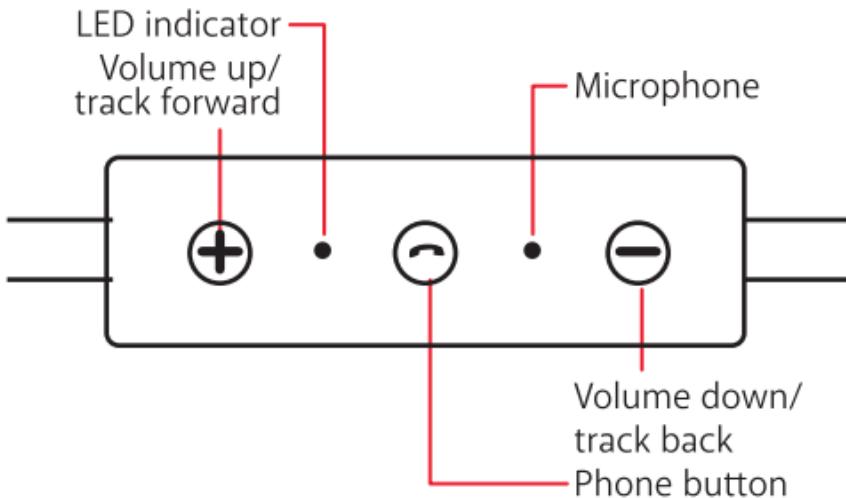

## Specifications

Frequency response: 20 Hz - 20 kHz

Driver size: 10mm

Battery: 80mAh

Bluetooth v2.1 + EDR

Up to 30 foot transmission range

Play time: Up to 6 hours at 70% volume

Charge time: 1 hour

## Button functions

### Phone button

- When playing music, press and release to pause music; press and release again to play music.
- When receiving an incoming call, press and release to answer; press and release again to end the call.
- Press twice quickly to call last number dialed.

**NOTE:** When playing music and a call comes in, the music will pause and you will hear a ringtone. The music will resume when the call is ended. Device's ringtone may vary.

### Volume up/track forward

- Press to play next track.
- Press and hold to raise volume.

### Volume down/track back

- Press to play previous track.
- Press and hold to lower volume.

**NOTE:** The button functions may vary per device.

## Charging

**NOTE:** Make sure your DGHP-5612 is fully charged before using it the first time.

1. Gently plug the Micro-USB end of the included charge cable into the charge port of the control box.

2. Plug the USB A end of the cable into a powered USB port, such as a computer, laptop, or USB AC adapter (not included).
3. The LED indicator located on the control box will glow red. Once the headset is fully charged, the LED power indicator will turn off.

**NOTES:**

- The LED indicator will light up red while charging even if the DGHP-5612 is off.
- You cannot charge your DGHP-5612 while listening to music.

## **Connecting via Bluetooth (first time set-up)**

**NOTE:** Adjust the volume of your device and the DGHP-5612 to a comfortable volume before use.

1. Move the power switch on the side of the DGHP-5612 to the “ON” position. The LED indicator light on the control box will flash blue.
2. Open the settings on your Bluetooth device (Bluetooth must be enabled).
3. Select DGHP-5612 from the list of Bluetooth devices.
4. Once paired, the LED indicator light will flash blue slowly.
5. To turn off the DGHP-5612, move the power switch on the side to the “OFF” position.

## **NOTES:**

- Your device will automatically find and pair with the DGHP-5612 after the initial pairing. If your device does not automatically pair, turn off the headset and repeat steps 1-4.
- The DGHP-5612 will automatically pair to the last device connected.
- You must unpair the first device to allow another user to connect to the DGHP-5612

## **Troubleshooting**

**Issue:** My DGHP-5612 doesn't turn on.

**Solution:** Make sure the DGHP-5612 is charged.

**Issue:** My DGHP-5612 is not charging.

**Solution:** Try the following:

- Make sure the charge cable is fully inserted in the DGHP-5612.
- Make sure that the charge port on the headset is free from dust and debris.
- Make sure that you are using the charge cable that came with your DGHP-5612.
- Make sure there is power coming from the power source.

**Issue:** My DGHP-5612 isn't syncing to Bluetooth.

**Solution:** Try the following:

- Make sure that the Bluetooth setting is turned ON on your device.
- Check to see if another user is connected to

the DGHP-5612

- Refer to the user guide of your device for Bluetooth syncing instructions.

**Issue:** My DGHP-5612 volume is turned all the way up, but the volume is still very low.

**Solution:** Try the following:

- Make sure your DGHP-5612 and audio device are charged.
- Make sure the volume is turned up on your device and the DGHP-5612

**Issue:** The person on the other line cannot hear me very well.

**Solution:** Try the following:

- Make sure your DGHP-5612 and phone are charged.
- Make sure you have service with your phone provider.

## **Safety warning**

- Do not listen at a high volume level. Extended high volume levels can lead to permanent hearing loss.
- Start with setting the volume level at the lowest volume and adjust until you reach a comfortable volume level.
- Tampering or removing the battery can result in damage to your product, void of warranty, and could cause injuries.
- Do not use when a failure to hear your surroundings could be dangerous, such as while driving, or when biking, walking or jogging where traffic is present and accidents may occur.

- Do not use while sleeping, as accidents may occur.
- If you experience any ringing in your ears, try lowering the volume. If the ringing persists, visit your physician.

## **Important safety precautions**

- Incorrect use or incompatibility with your device may result in reduced battery performance or damage to your device.
- Do not attempt to disassemble product.
- Tampering or removing the battery can result in damage to your product, void of warranty, and could cause injuries.
- Store and operate between 32°F – 113°F.
- Do not allow this product to come in contact with liquids.
- Do not place this product near a heat source or flame.
- Do not throw or shake.
- Do not operate if it has been subjected to shock or damage.
- Do not crush or puncture the battery.
- Recharge the battery every 3 months when not in use to keep battery in best condition.
- Use soft cloth to clean the exterior. Do not use harsh chemicals or strong cleaning solvents.
- The internal battery must be recycled or disposed of properly. Contact your local waste management office for information on the proper disposal or recycling.

## FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC RF warning** statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.