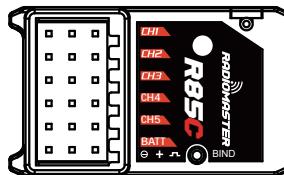


**产品特性**

供电范围: 4.5-8.4V  
 天线类型: 高灵敏度2.4G天线  
 信号格式: D8/D16/SFHSS  
 通道个数: 5通道 PWM  
 尺寸: 31.0\*18.5\*13.0毫米  
 重量: 5.7克

**Receiver Specifications**

Power supply: DC 4.5 - 8.4V  
 Antenna type: high-sensitivity 2.4G antenna  
 support protocol: D8/D16/SFHSS  
 Output channel: 5CH PWM  
 Weight: 5.7 grams  
 Dimensions: 31.0\*18.5\*13.0 mm

**对频方法**

1. 将遥控器开机并选择所需协议；
2. 按压接收机对频开关并对接收机通电；  
 接收机在三个协议之间循环并以灯号表示。  
 单闪-单闪-单闪= D8协议；  
 双闪-双闪-双闪= D16协议；  
 三闪-三闪-三闪= S-FHSS协议；
3. 当接收机闪灯对应遥控器协议时，按下遥控器BIND按键。灯号快闪后常亮 表示对频完成；
4. 对接收机重新供电。

**Bind Method**

1. Turn on your transmitter and select the desired protocol.
2. Enter bind mode on the receiver. Press and hold the bind button while powering on the receiver.

The receiver will cycle between D8, D16 and S-FHSS protocols.

Three single flashes= D8 protocol.

Three double flashes= D16 protocol.

Three triple flashes= S-FHSS protocol.

3. When the flash pattern matches the transmitter protocol, press bind on the transmitter. The light will flash rapidly then return to solid.

4. Cycle the power to the receiver after binding.

**失控保护**

1. 接收机通电10秒内，按一次BIND按钮，接收机将保存遥控器当前所有通道值，作为失控保值
2. 接收机通电10秒之后，BIND按钮功能将被停用，以防止飞行时误触更改失控保护设置

**Fail-safe Protection**

1. Press the BIND button once within 10 seconds of the receiver being powered on, and the receiver will save all the current channel values of the remote control as the fail-safe value.
2. 10 seconds after the receiver is powered on, the BIND button function will be disabled to prevent accidental changes to the fail-safe settings while preparing the model for flight.

## 频率微调

\*\*\*特别注意\*\*\* D8和D16协议接收机在正式使用之前，必须使用频率微调功能，消除发射机与接收机之间的频率误差，才可达到最佳遥控距离与稳定性，具体操作方法如下：

1. 将RF Freq. fine tune数值逐渐调低，直到接收机丢失信号，并记录下这个数值(一般为负数)
2. 再RF Freq. fine tune数值逐渐调高，直到接收机丢失信号，并记录下这个数值(一般为正数)
3. 将这两个数字按此公式计算，得出频率微调中点值，并填写在RF Freq. fine tune参数中  
(低位数值+高位数值) ÷ 2=中点值

例如：得到低位数值为-73，高位数值为35，根据公式计算

$$\begin{aligned} \text{RF Freq. fine tune} &= (-73 + 35) \div 2 \\ \text{RF Freq. fine tune} &= (-38) \div 2 \\ \text{RF Freq. fine tune} &= -19 \end{aligned}$$

D8 and D16 compatible receivers MUST be frequency fine tuned before flight.

Once the radio is bound to the receiver:

Return to the RF Freq. fine tune option


1. Lower the value until the radio loses the connection with the receiver. Record the value (TUNE\_MIN).
2. Raise the value so that the connection is restored, then continue to raise it until the radio loses the connection with the receiver again. Record the value (TUNE\_MAX).
3. Calculate the median between the two values (TUNE\_MIN + TUNE\_MAX) / 2 = TUNE\_MEDIAN
4. Set RF Freq. fine tune to the median value

## Example

Connection is lost at -73 and +35; the median is -19:

Once the Fine Tuning value is known, it can be used for all models which use the same protocol.

For More information visit <https://www.multi-module.org/using-the-module/frequency-tuning>

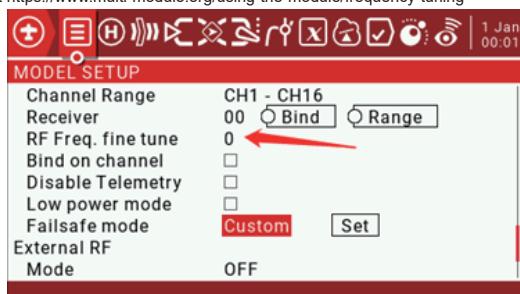

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

This product complies with the radio interference requirements of the European Community  
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

Product name: R85C

Product model: R85C

Applicant: Shenzhen Radiomaster Co.,Ltd

Address: 4F Yangtian Building, Xinxian Street, Bao'an District, Shenzhen, Guangdong, China

Frequency Range: 2402.4 - 2479.4MHz

SIMPLIFIED EU DECLARATION OF CONFORMITY

The simplified EU declaration of conformity referred to in Article 10(9) shall be

provided as follows:

Hereby, Shenzhen Radiomaster Co.,Ltd declares that radio equipment type R85C is in compliance with Directive 2014/53/EU. This product can be used across EU member states.

Agents

evMaster Consulting GmbH

Address (地址) : Bettinastr. 30, 60325 Frankfurt am Main, Germany

Zip Code (邮编) : 60325

E-mail (邮箱) : [contact@evmaster.com](mailto:contact@evmaster.com)

Tel (联系电话) : +496995179070