

# **User Manual**

**Version 1.0**

# Revision History

Rev No.	Change Notification	Date	Remarks
V1.0	Draft	2024.07.26	

# Index

<b>1. FCC and ISED Mandatory</b> .....	6
<b>1.1 FCC Warning States</b> .....	6
1.1.1 FCC Part 15.19 Warning.....	6
1.1.2 FCC Booster Warning Label .....	6
1.1.3 FCC Booster Warning Statements.....	6
1.1.4 FCC Part 15 Class A.....	7
1.1.5 RF Radiation Exposure .....	7
<b>1.2 ISED Warning states</b> .....	7
1.2.1 ISED Warning Label .....	7
1.2.2 RSS-GEN (6.8 Transmit Antenna) .....	<b>오류! 책갈피가 정의되어 있지 않습니다.</b>
1.2.3 RF Radiation Exposure .....	7
<b>2. General Information</b> .....	9
<b>2.1 Repeater Information (FCC &amp; ISED ID)</b> .....	9
<b>2.2 Purpose</b> .....	9
<b>2.3 Advantages</b> .....	9
<b>2.4 Exterior</b> .....	10
<b>2.5 Interior</b> .....	11
<b>3. Specifications</b> .....	12
<b>3.1 Frequency Range</b> .....	12
<b>3.2 RF Specifications</b> .....	12
<b>3.3 Mechanical Specifications</b> .....	13
<b>4. Integrated Enclosure Interfaces</b> .....	14

4.1	<b>DONOR &amp; SERVICE Connector</b> .....	14
4.2	<b>110-220VAC &amp; BATTERY Feedthrough</b> .....	14
4.3	<b>ANNUNCIATOR Feedthrough</b> .....	15
4.4	<b>ALARM RELAY Feedthrough</b> .....	15
4.5	<b>GUI Connector</b> .....	15
5.	<b>LED Indicators</b> .....	17
5.1	<b>SYSTEM LED</b> .....	17
5.2	<b>ANNUNCIATOR LEDs</b> .....	17
6.	<b>Installation Guide</b> .....	19
6.1	<b>Environment</b> .....	19
6.1.1	Antenna .....	19
6.1.2	Isolation Check and Gain Setting .....	19
6.2	<b>Mounting the BDA</b> .....	19
6.2.1	Installation of Concrete Wall .....	19
6.2.2	Installation of Wooden Wall .....	20
7.	<b>Web GUI Configuration</b> .....	21
7.1	<b>Web GUI Overview</b> .....	21
7.2	<b>Laptop Configuration for Connect to the Repeater</b> .....	21
7.2.1	GUI Port Connect .....	21
7.2.2	NMS Port Connect .....	22
7.3	<b>Web GUI Connect and Sign In</b> .....	22
7.4	<b>System Setting Screen</b> .....	23
7.5	<b>RF Configuration / General / Operation Screen</b> .....	24

7.6	<b>Filter Screen</b> .....	25
7.7	<b>Alarm Screen</b> .....	26
7.8	<b>Table Screen</b> .....	27
7.9	<b>Firmware Update Screen</b> .....	27
<b>8.</b>	<b>Troubleshooting</b> .....	29
8.1.1	Simple Troubleshooting Method.....	29
8.1.2	Troubleshooting Guide Related to System Operation.....	29
8.1.3	Troubleshooting Guide Related to Alarm State.....	30
8.1.4	Troubleshooting Guide Related to NMS.....	31
8.1.5	Replaceable Batteries.....	31

## 1. FCC and ISED Mandatory

### 1.1 FCC Warning States

#### 1.1.1 FCC Part 15.19 Warning

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### 1.1.2 FCC Booster Warning Label

##### 1) Part 90 and Part 20 Signal Boosters – THIS IS A 90.219 CLASS A DEVICE

WARNING. This is NOT a CONSUMER device. It is designed for installation by FCC LICENSEES and QUALIFIED INSTALLERS. You MUST have an FCC LICENSE or express consent of an FCC Licensee to operate this device. You MUST register Part 90 Class B signal boosters (as defined in 47 CFR 90.219) online at [www.fcc.gov/signal-boosters/registration](http://www.fcc.gov/signal-boosters/registration). Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

#### 1.1.3 FCC Booster Warning Statements

Use of unauthorized antennas, cables, and/or coupling devices not conforming with ERP/EIRP and/or indoor-only restrictions is prohibited.

Home/ personal use are prohibited.

Only 50 ohm rated antennas, cables and passive equipment shall be used with this remote. Any equipment attached to this device not meeting this standard may cause degradation and unwanted signals in the bi-directional system. All components connected to this device must operate in the frequency range of this device.

### 1.1.4 FCC Part 15 Class A

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

### 1.1.5 RF Radiation Exposure

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of UL: 90cm, DL: 100cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. RF exposure will be addressed at time of installation and the use of higher gain antennas require larger separation distances.

(DL: Pannel antenna Max. peak gain: 8 dBi, UL: LDPA antenna Max. peak gain: 9 dBi)

## 1.2 ISED Warning states

### 1.2.1 ISED Warning Label

WARNING: This is NOT a CONSUMER device. It is designed for installation by an installer approved by an ISED licensee. You MUST have an ISED LICENCE or the express consent of an ISED licensee to operate this device.

AVERTISSEMENT: Ce n'est PAS un appareil de consommation. Il est conçu pour être installé par un installateur approuvé par un titulaire de licence d'ISD. Vous DEVEZ avoir une LICENCE d'ISDE ou le consentement exprès d'un titulaire de licence d'ISDE pour utiliser cet appareil.

### 1.2.2 RF Radiation Exposure

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of UL: 90cm, DL: 100cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. RF exposure will be addressed at time of installation and the use of higher gain antennas require larger separation distances.

(DL: Pannel antenna Max. peak gain: 8 dBi, UL: LDPA antenna Max. peak gain: 9 dBi)

L'antenne (ou les antennes) doit être installée de façon à maintenir à tout instant une distance minimum de au moins UL: 90cm, DL: 100cm entre la source de radiation (l'antenne) et toute personne physique. Cet appareil ne doit pas être installé ou utilisé en conjonction avec une autre antenne ou émetteur.  
(DL: Pannel antenna Max. peak gain: 8 dBi, UL: LDPA antenna Max. peak gain: 9 dBi)

*Information in this document is subject to change without notice.*

*Contact Information*

*DKK North America, Inc.*

*8105 Rasor Blvd,*

*Suite 222,*

*Plano, Texas 75024*

<https://www.dkk-na.com/>



## 2. General Information

This document is primarily written for those who are new to 700/800 0.5W BDA system and wish to tune up the equipment. The document is applicable to below products from DKK.

### 2.1 Repeater Information (FCC & ISED ID)

CERTIFICATION	TYPE	ID	NOTES
FCC	B9A	2BKJD-IT109B016-UA	
	B9B	2BKJD-IT109B016-UB	
ISED	B9A	32982-IT109B016CA	
	B9B	32982-IT109B016CB	

### 2.2 Purpose

700/800 0.5W BDA is a system that generally supports public safety wireless services indoors, and is necessary for first aid workers and firefighters to communicate with each other in emergencies and normal situations.

700/800 0.5W BDA is a digital repeater that supports 700MHz band and 800MHz band. Bandwidth varies based on FPGA, and up to 32 channels can be selectively serviced through software through digital filter.

### 2.3 Advantages

- 700MHz/800MHz Dual Band
- 32 Channels Class A Filter per Band
- LED for Status Check
- Automatic Gain Control
- DL/UL Squelch
- Oscillation Detection
- Isolation Check
- Auto Shutdown
- Donor antenna malfunction and donor antenna disconnect
- Support Web GUI and SNMP v3.0


## 2.4 Exterior



No.	PARAMETER	DESCRIPTION	NOTES
1	DONOR	Donor antenna port	N-type
2	SERVICE	Service antenna port	N-type
3	TX CPL	UL output coupling port	SMA
4	RX CPL	DL output coupling port	SMA
5	110-220VAC & BATTERY	AC power and battery DC power	Liquid Tight Conduit Fittings (3/4 inch)

6	ANNUNCIATOR	Provide power and alarm signaling to a remote annunciator	Liquid Tight Conduit Fittings (1/2 inch)
7	ALARM RELAY	Provide wired connection to alarm	Liquid Tight Conduit Fittings (1/2 inch)
8	GUI	Communications with a network	RJ-45

## 2.5 Interior

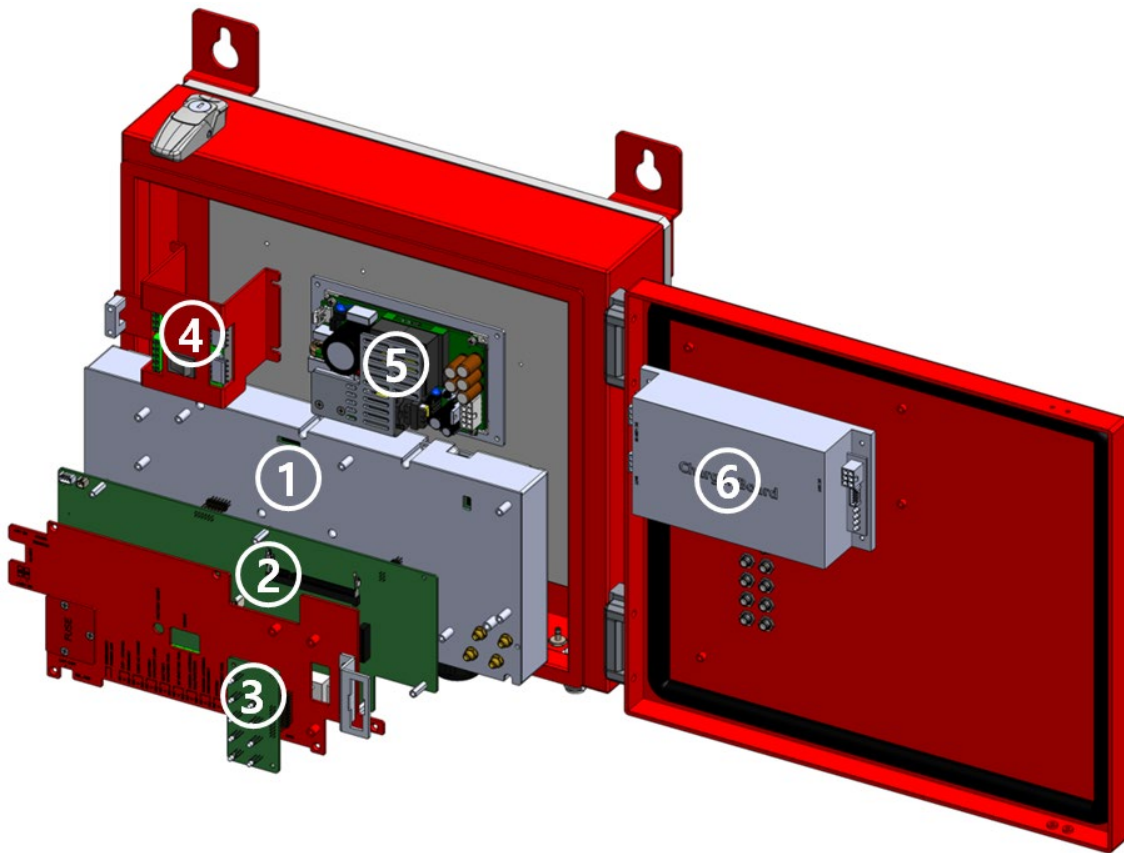

No.	PARAMETER	DESCRIPTION	NOTES
1	RFM & DTU	RF board, digital board and PAMs are built in	Top: RF board Bottom: DTU, PAM
2	WEB GUI/ALARM Board	Web GUI and alarm functionality integrated into one board	
3	LED	Display of system and alarm state	9 LEDs
4	Power Switch Board	AC power ON/OFF	
5	PSU	AC/DC converter	
6	Charger Module	Provides battery charging and DC power	

### 3. Specifications

#### 3.1 Frequency Range

SERVICE BAND	DOWNLINK [MHz]			UPLINK [MHz]		
	LOW	CENTER	High	LOW	CENTER	High
700MHz (US)	769	772	775	799	802	805
700MHz (CANADA)	768	772	776	798	802	806
800MHz (US)	851	856	861	806	811	816
	862	865.5	869	817	820.5	824
800MHz (CANADA)	851	860	869	806	815	824

#### 3.2 RF Specifications

PARAMETER		DOWNLINK	UPLINK
Output Power	700MHz	27dBm	24dBm
	800MHz	27dBm	24dBm
Input Dynamic Range		-63dBm ~ -3dBm	-56dBm ~ +4dBm
Gain Range		30dB ~ 90dB	20dB ~ 80dB
Gain Adjustment Range per CH		30dB/1.0dB steps	
Gain Adjust Accuracy		±1dB	
Input AGC Dynamic Range		60dB	
Max RF Input Power without Overdrive		-10dBm	-10dBm
Max RF Input Power without Damage		0dBm	+10dBm
Noise figure		6dB Max @ Max Gain	
Pass Band Ripple		3dB peak to peak	
Number of Channel Filter	Class A	32 Channel	
Filter Bandwidth	Class A	12.5kHz, 25kHz, 50kHz, 75kHz	
Delay	Class A	≤ 61.5us @ 12.5kHz	
		≤ 37.5us @ 25kHz	
		≤ 26.5us @ 50kHz	
		≤ 16.5us @ 75kHz	
Roll Off	Class A	≥ 60dBc @ Fc±36.25kHz (BW 12.5kHz)	
		≥ 60dBc @ Fc±62.5kHz (BW 25kHz)	
		≥ 60dBc @ Fc±130kHz (BW 50kHz)	

		$\geq 60\text{dBc @ } F_c \pm 247.5\text{kHz (BW 75kHz)}$
EVM		$\leq 4.0\% \text{ @ P25 phase 1 and phase 2 modulation}$
UL Squelch Threshold		$-90 \sim -50\text{dBm @ Per Class A must have a disable}$
VSWR		$\leq 1.5:1$
Spurious		$\leq -13\text{dBm (FCC Title 47 Part 90.219)}$
Characteristic Impedance		$50\Omega$


### 3.3 Mechanical Specifications

PARAMETER	DESCRIPTION	NOTES
Dimensions (H x W x D)	380 x 330 x 143mm	
Weight	$\leq 15.5\text{kg}$	
Operating Voltage	110VAC, 50/60Hz	
Power Consumption	$\leq 75\text{W}$	
Operating Temperature	$-30 \sim +50^\circ\text{C}$	
Operating Humidity	$\leq 95\%$	
Enclosure Cooling	Convection	
Enclosure Class	IP65 / NEMA 4X	

## 4. Integrated Enclosure Interfaces


### 4.1 DONOR & SERVICE Connector


700/800 0.5W BDA adopts an N-type female connector. If the user wants to use a 4.3-10 Mini DIN cable or connector, they need an adapter.

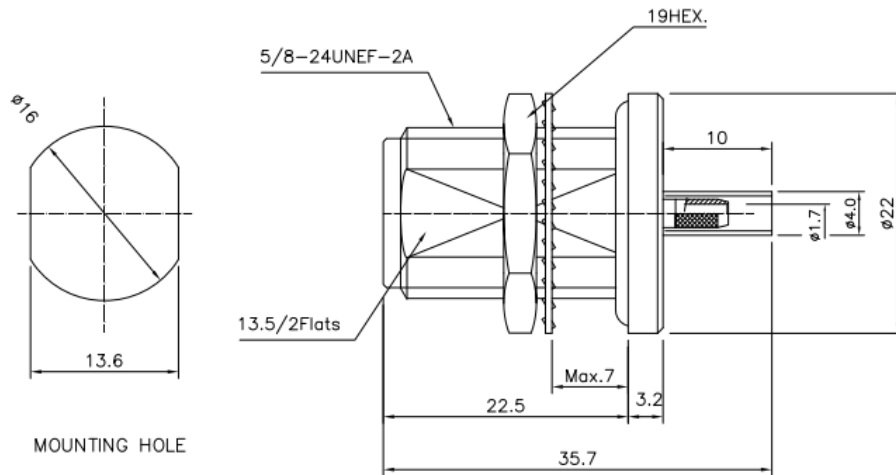

### 4.2 110-220VAC & BATTERY Feedthrough

Feedthrough to provide AC power and battery DC power to BDA. That uses 3/4 inch liquid tight conduit fittings.

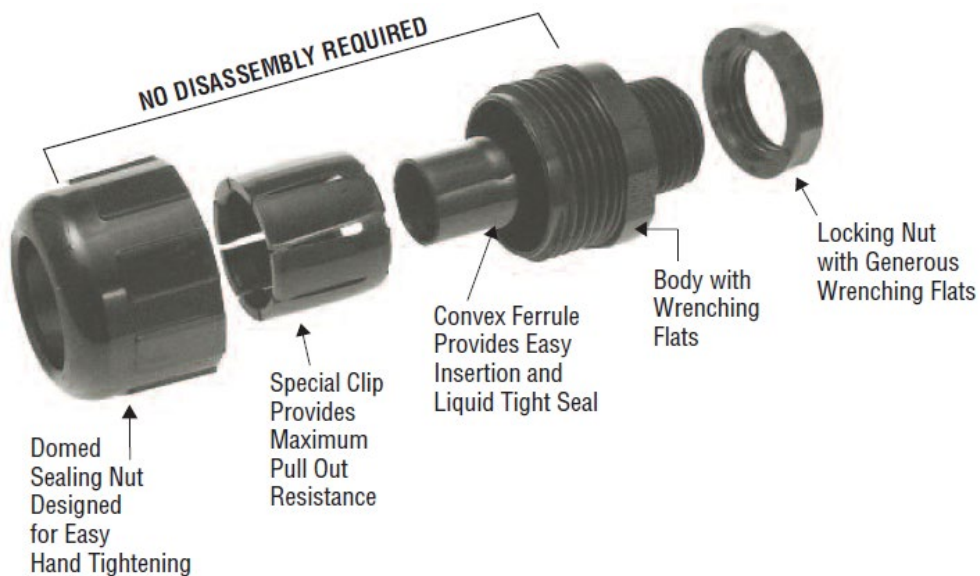

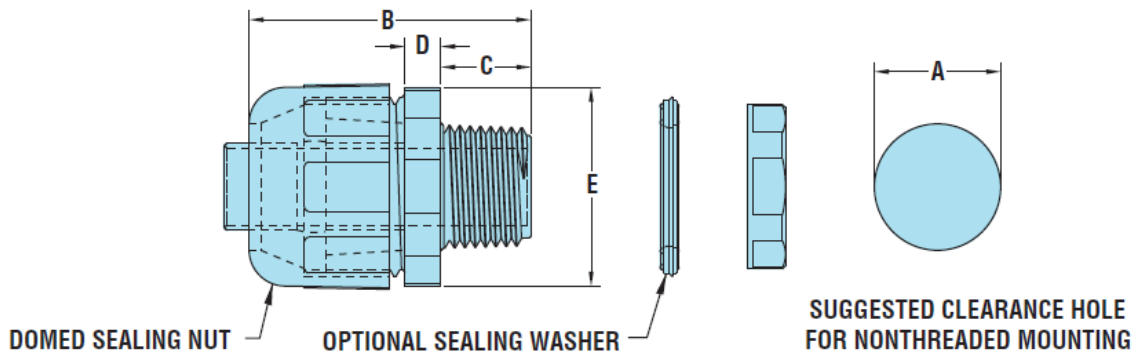

FITS CONDUIT/ TUBING TRADE SIZE	PART NO.		DESCRIPTION	THREAD SIZE	PART DIMENSIONS BODY AND SEALING UNIT									
	Black	Gray			A		B		C		D		E	
					Clearance Hole		Max. O.A. Length		Thread Length		Nut Thk.	Wrenching Flat Size		
in.	mm.	in.	mm.	in.	mm.	in.	mm.	in.	mm.	in.	mm.	in.	mm.	
1/4	8398	-	HFC 1/4-PG7*	PG7	.492	12,5	1.13	28,7	.45	11,4	.21	5,3	1.00	25,4
3/8	8400	8401	HFC 3/8	1/2" NPT	.875	22,2	1.96	49,8	.63	16,0	.25	6,3	1.33	33,7
1/2	8402	8403	HFC 1/2		**									
3/4	8404	8405	HFC 3/4	3/4" NPT	1.109	28,1	2.04	52,8	.63	16,0	.25	6,3	1.56	39,6
1	8406	8407	HFC 1	1" NPT	1.375	34,9	2.25	57,2	.78	19,8	.25	6,3	1.81	46,0
1-1/4	8638	8639	HFC 1-1/4 †	1-1/4" NPT	1.734	44,0	2.07	52,6	.69	17,4	.25	6,3	2.15	54,6
1-1/2	8640	8641	HFC 1-1/2 †	1-1/2" NPT	1.984	50,4	2.28	57,9	.78	19,8	.28	7,0	2.40	61,0
2	8642	8643	HFC 2 †	2" NPT	2.469	62,7	2.26	66,0	.85	21,6	.31	7,9	2.98	75,6

### 4.3 ANNUNCIATOR Feedthrough



Feedthrough to provide power and alarm signaling to a remote annunciator. That uses 1/2 inch liquid tight conduit fittings.

### 4.4 ALARM RELAY Feedthrough

Feedthrough to provide wired connection to one status signal and 7 UL2524 required alarms. That uses 1/2 inch liquid tight conduit fittings.

### 4.5 GUI Connector


Ethernet connector port for communications with a network. User can use the Web GUI to control and monitor the BDA in remote or local locations.

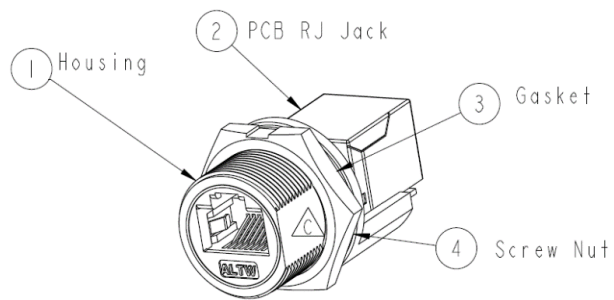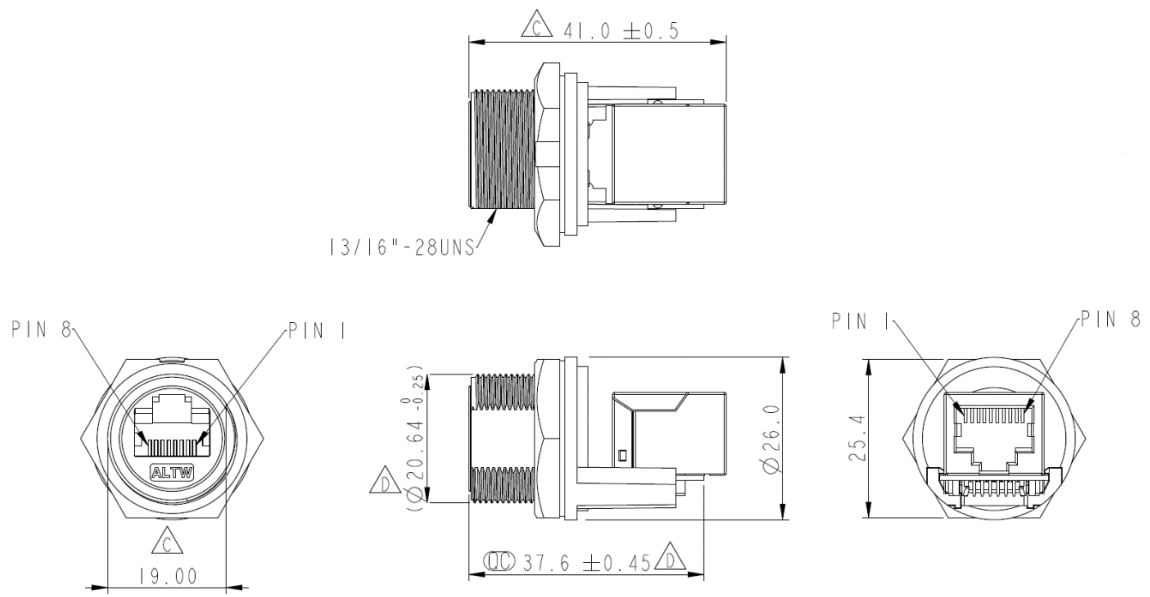



## 5. LED Indicators

The BDA has 1 system LED and 8 alarm LEDs that visibly display system status and UL2524 alarms.

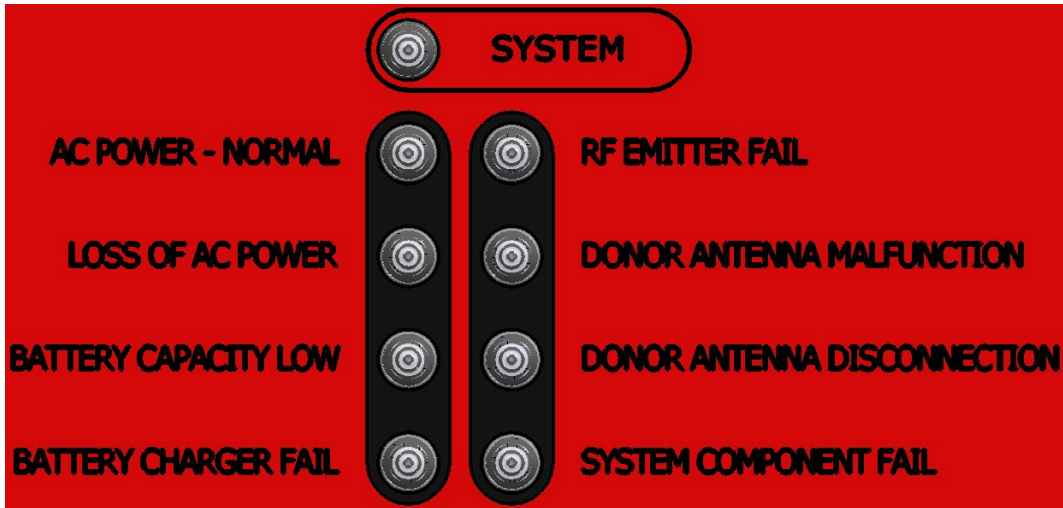

### 5.1 SYSTEM LED

The SYSTEM LED is a tricolor LED - GREEN, YELLOW, RED

LED COLOR	STATE
GREEN	SYSTEM NORMAL - POWER ON
YELLOW	ANY ALARM DETECTED - SYSTEM OPERATIONAL
RED	ANY ALARM DETECTED - SYSTEM NOT OPERATIONAL
GREEN	ALARM RELAY INTERFACE ALARM ACTIVE BUT MASKED
OFF	NO DC POWER PRESENT

### 5.2 ANNUCIATOR LEDs

There are 8 LEDs which colors are defined as follows:

LED COLOR	STATE
GREEN	AC POWER NORMAL
RED	LOSS OF AC POWER
RED	BATTERY CAPACITY LOW
RED	BATTERY CHARGER FAIL
RED	RF EMITTER FAIL - DL 700 Amplifier Fail

	<ul style="list-style-type: none"> <li>- DL 800 Amplifier Fail</li> <li>- UL 700 Amplifier Fail</li> <li>- Over Temperature</li> <li>- Donor Antenna Disconnection</li> <li>- Oscillation Detection - Service Affecting</li> </ul>
RED	DONOR ANTENNA MALFUNCTION
RED	DONOR ANTENNA MALFUNCTION
RED	SYSTEM COMPONENT FAIL <ul style="list-style-type: none"> <li>- Over Temperature</li> <li>- Oscillation Detection - Reduced Gain</li> <li>- Oscillation Detection - Service Affecting</li> </ul>

## **6. Installation Guide**

### **6.1 Environment**

#### 6.1.1 Antenna

The antenna used in the BDA must be certified or an antenna with equivalent specifications. The company shall not bear any liability for any problems arising from the use of an uncertified antenna.

The donor antenna must be mounted outside the building with the strongest cell signals. Mount the donor antenna as high as possible facing towards the desired location of the cell tower and facing the opposite direction of the expected location of the service antenna.

The server antenna must be mounted.

#### 6.1.2 Isolation Check and Gain Setting


If the system wants to operate in the max gain state, the system requires sufficient isolation between the donor and service antennas. The system recommends isolation be higher than 20dB above the gain of the system. If isolation is not sufficiently ensured, the Isolation Check function operates to reduce the gain to a level suitable for the ensured isolation.

### **6.2 Mounting the BDA**

Choose a location for the BDA, preferably away from excessive heat, direct sunlight, moisture and is free from high temperatures.


#### 6.2.1 Installation of Concrete Wall

The following illustration is an example of a concrete wall installation.

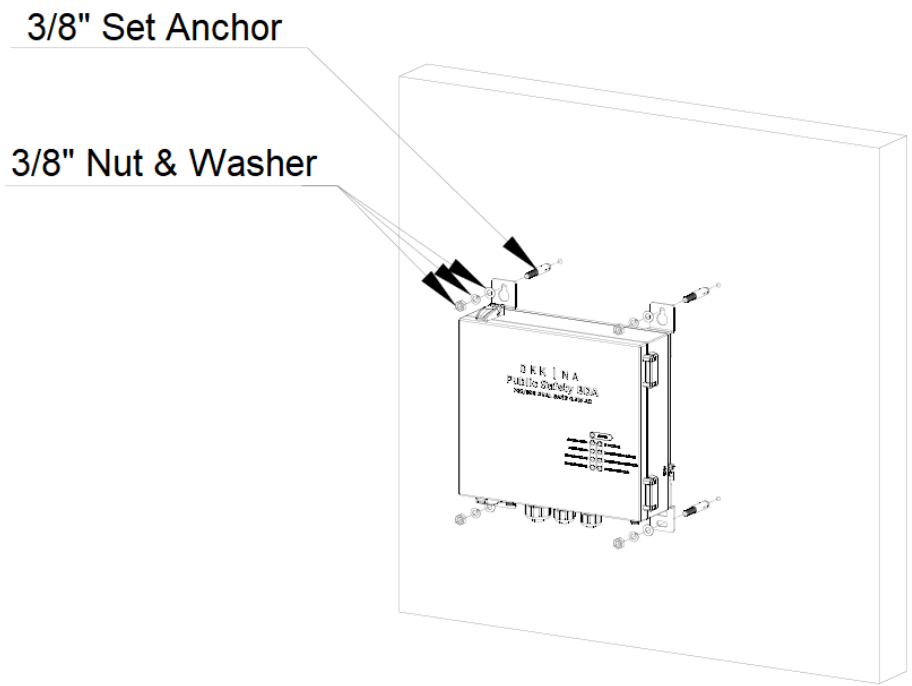

### 6.2.2 Installation of Wooden Wall

The following illustration is an example of a wooden wall installation.

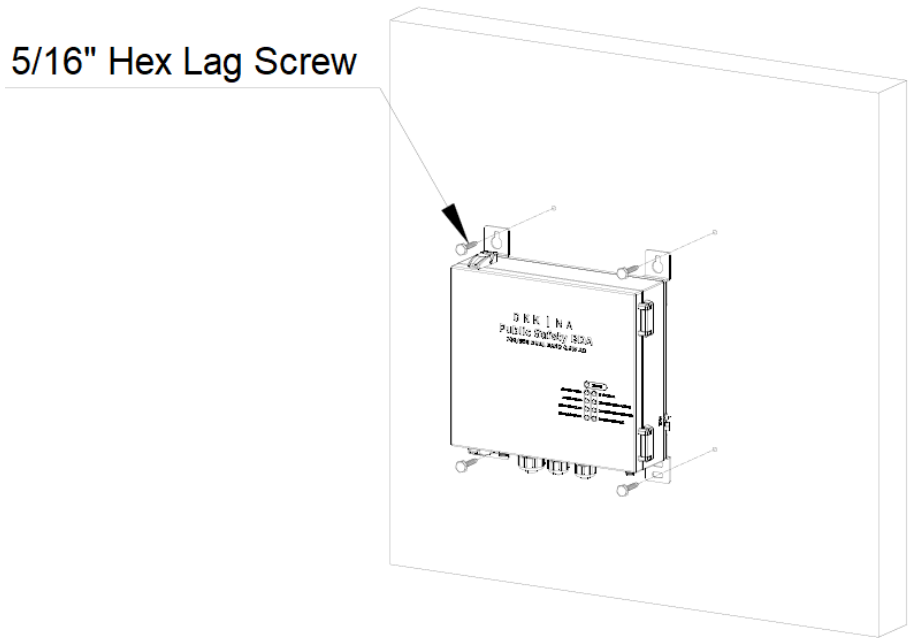

## 7. Web GUI Configuration


### 7.1 Web GUI Overview

Supports Web GUI pages through the ethernet interface.

### 7.2 Laptop Configuration for Connect to the Repeater


Connect the ethernet cable to the GUI port at the bottom of the repeater or the LOCAL\_GUI port inside the repeater.

#### 7.2.1 GUI Port Connect

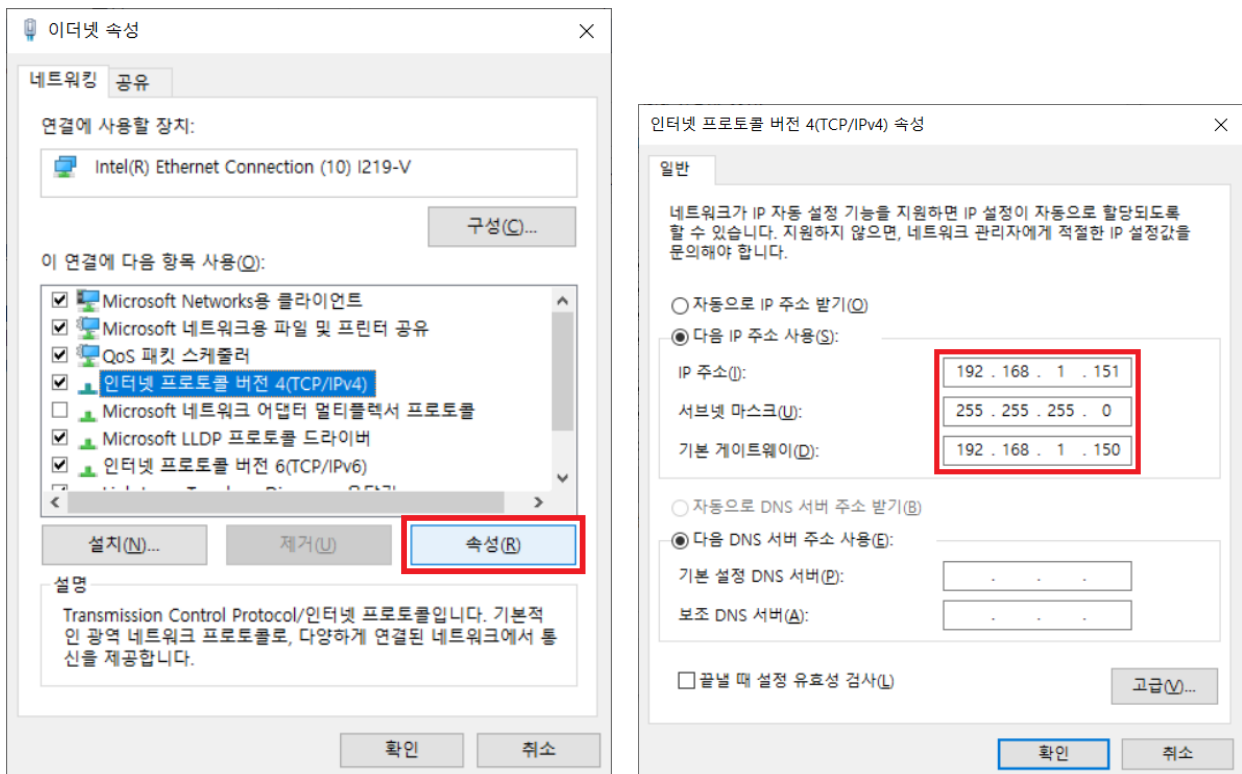

- 1) Select 'Internet Protocol Version 4(TCP/IPv4)' in the Ethernet Properties window and click Properties.
- 2) Enter the IP address (192.168.1.151), the subnet mask (255.255.255.0), and the default gateway (182.168.1.150) as shown in the figure above, and then click OK.

## 7.2.2 NMS Port Connect

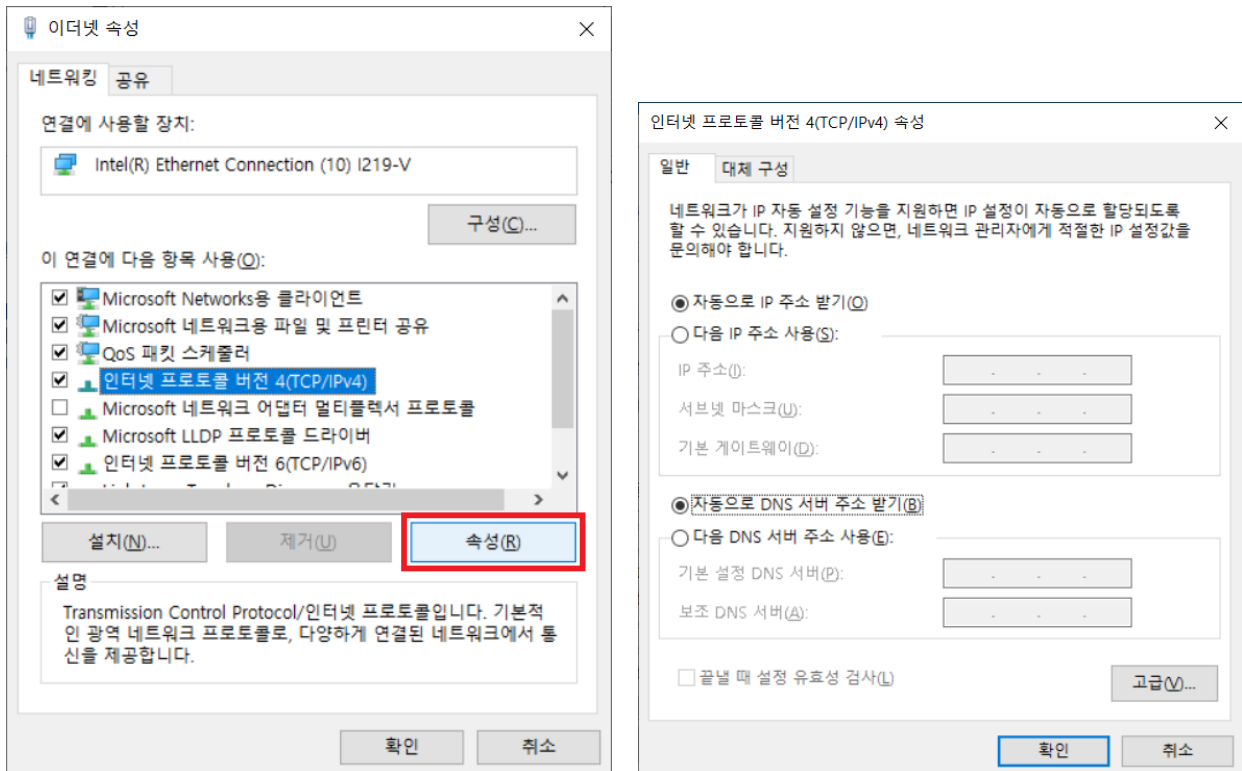


- 1) Select 'Internet Protocol Version 4(TCP/IPv4)' in the Ethernet Properties window and click Properties.
- 2) Select 'Obtain IP address automatically.'
- 3) Select 'Obtain DNS server address automatically and click OK.

## 7.3 Web GUI Connect and Sign In

- 1) Enter '192.168.1.150/psr.html' in the Internet address window to access the Web GUI.




- 2) On the Web GUI screen, type "admin" in ID and P/W and click Sign In button.

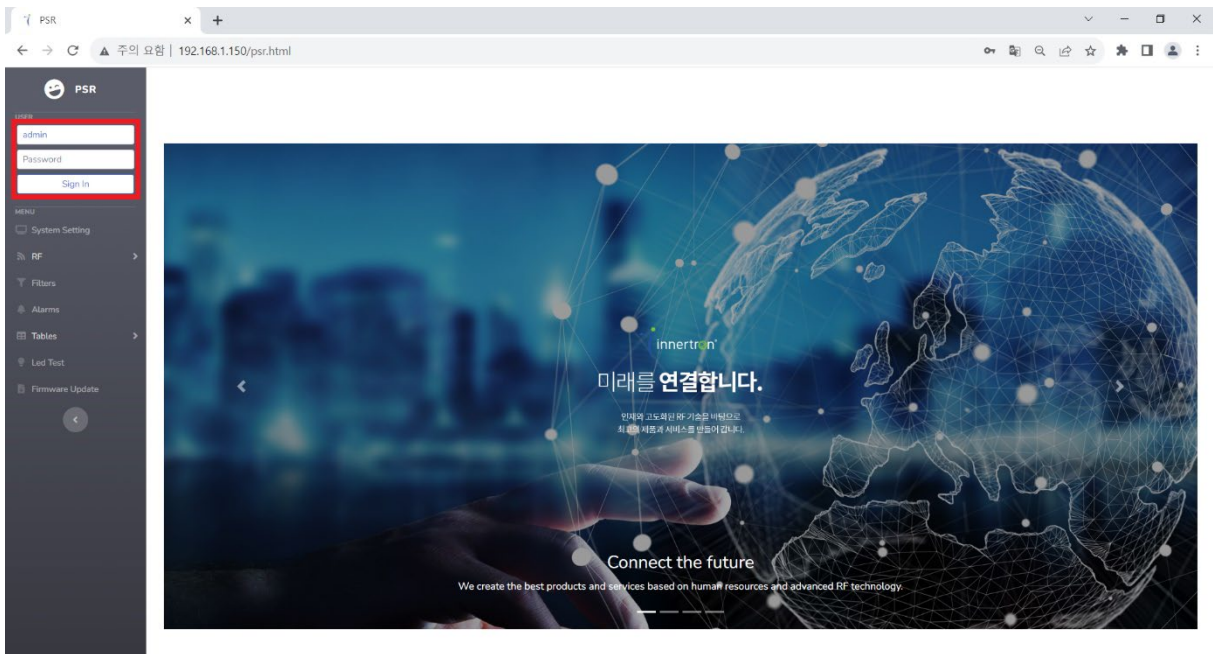

## 7.4 System Setting Screen

- 1) Can check the system information(Product, Site, Network, etc) on the system setting screen.

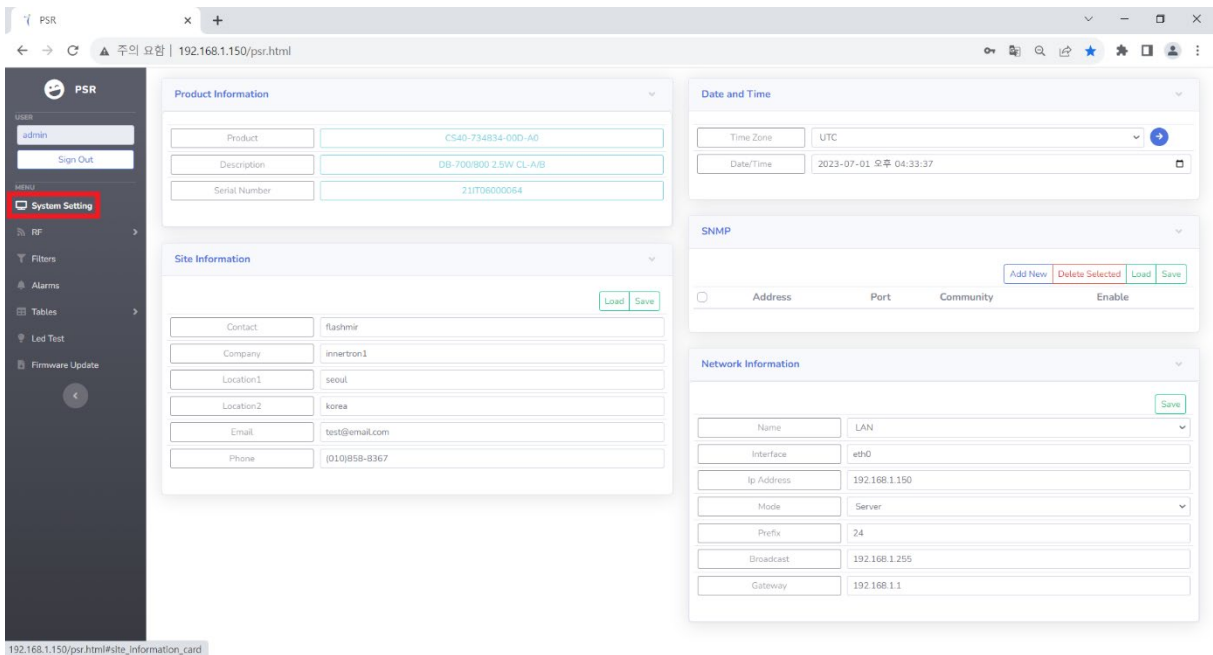

## 7.5 RF Configuration / General / Operation Screen

1) Can change the RF setting of the repeater on this screen.

The screenshot displays the PSR web interface for RF Configuration. The left sidebar shows the 'RF Configuration' menu item highlighted in red. The main content area is divided into four sections:

- 700MHz Configuration:** Includes settings for DSP Bypass (OFF), Gain (DL: 90 dB, UL: 80 dB), Input AGC (DL: -63.0 dBm, UL: -56.0 dBm), Output AGC (DL: 27.0 dBm, UL: 24.0 dBm), Squelch (DL: -90.0 dBm, UL: -90.0 dBm), Output Alt AGC (OFF), Oscillation (OFF), Donor Antenna Level (Malfunction: -95 dBm, Disconnect: -100 dBm), and Isolation (Frequency: 771.500 MHz, Result: 0.0 dB).
- 800MHz Configuration:** Includes settings for DSP Bypass (ON), Gain (DL: 90 dB, UL: 80 dB), Input AGC (DL: -63.0 dBm, UL: -56.0 dBm), Output AGC (DL: 27.0 dBm, UL: 24.0 dBm), Squelch Enable (DL: -90.0 dBm, UL: -90.0 dBm), Output Alt AGC (OFF), Oscillation (OFF), Donor Antenna Level (Malfunction: -95 dBm, Disconnect: -100 dBm), and Isolation (Frequency: 862.000 MHz, Result: 0.0 dB).
- 700MHz Calibration:** Includes settings for Frequency Offset (0 Hz), Malfunction Offset (0.0 dB), Isolation Offset (0 dB), DNC Atten Offset (DL: 0.0 dB, UL: 0.0 dB), Input Offset (DL: 53.4 dB, UL: 45.0 dB), and Output Offset (DL: 36.8 dB, UL: 35.1 dB).
- 800MHz Calibration:** Includes settings for Frequency Offset (0 Hz), Malfunction Offset (0.0 dB), Isolation Offset (0 dB), DNC Atten Offset (DL: 0.0 dB, UL: 0.0 dB), Input Offset (DL: 52.8 dB, UL: 52.0 dB), and Output Offset (DL: 37.3 dB, UL: 32.0 dB).

The screenshot displays the PSR web interface for RF General configuration. The left sidebar shows the 'RF General' menu item highlighted in red. The main content area is divided into three sections:

- RF Module Enable/Disable:** A table showing the status of various RF modules for DL and UL frequencies (700 and 800 MHz).
- RF Temperature Alarm Configuration:** Includes settings for RFM Temperature (33 °C), HPA Temperature (0 °C), and Alarm Threshold (85 °C).
- RF Configuration Export/Import:** Includes buttons for Export and Import, with a file selection field for the import function.



The screenshot displays the PSR web interface with the 'RF Operation' menu item highlighted in red. The interface is divided into four main sections: Attenuator, ADC, FPGA, and DAC.

**Attenuator Section:** A table with columns: Group, Index, Value, and Put. It lists settings for DL700, DL800, UL700, and UL800 groups, each with 4 indices. Values are either 0.0 or 30.0 dB.

Group	Index	Value	Put
DL700	1	0.0	dB +
	2	0.0	dB +
	3	30.0	dB +
	4	30.0	dB +
DL800	1	0.0	dB +
	2	0.0	dB +
	3	30.0	dB +
	4	30.0	dB +
UL700	1	0.0	dB +
	2	0.0	dB +
	3	30.0	dB +
	4	30.0	dB +
UL800	1	0.0	dB +
	2	0.0	dB +
	3	30.0	dB +
	4	30.0	dB +

**ADC Section:** A table with columns: Path, Name, Value, and Power. It lists settings for DL 700, DL 800, and UL 700/800 paths.

Path	Name	Value	Power
DL 700	HPA Reverse	0.000 Volt	0.0 dBm
	HPA Forward	0.001 Volt	0.0 dBm
	Antenna In	0.707 Volt	-110.0 dBm
DL 800	HPA Reverse	0.001 Volt	0.0 dBm
	HPA Forward	0.001 Volt	0.0 dBm
	Antenna In	1.026 Volt	-110.0 dBm
UL 700/800	HPA Reverse	0.000 Volt	0.0 dBm
	HPA Forward	0.000 Volt	0.0 dBm

**FPGA Section:** A table with columns: Path, Name, Raw Value, and Power Value. It lists settings for PS700 and PS800 paths.

Path	Name	Raw Value	Power Value
PS700	DL Input	-49.7 dBm	-103.1 dBm
	DL Output	-100.0 dBm	-100.0 dBm
	UL Input	-54.1 dBm	-99.1 dBm
	UL Output	-100.0 dBm	-100.0 dBm
PS800	DL Input	-45.5 dBm	-98.3 dBm
	DL Output	-45.6 dBm	-38.3 dBm
	UL Input	-51.2 dBm	-103.2 dBm
	UL Output	-51.4 dBm	-49.4 dBm

**DAC Section:** A table with columns: Path, Name, Pin, Ch, Value, and Put. It lists settings for DL 700 and DL 800 paths.

Path	Name	Pin	Ch	Value	Put
DL 700	Main 1 Bias	4	1	0.00	Volt +
	Main 2 Bias	5	3	0.00	Volt +
DL 800	Main 1 Bias	6	5	0.00	Volt +
	Main 2 Bias	7	7	0.00	Volt +

## 7.6 Filter Screen


- 1) Can set the frequency and bandwidth of the digital filter on the filter screen.

CH	CF		BW	ATT		PWR		EN	ED
	DL	UL		DL	UL	DL	UL		
0	767M	797M	10M	0	0	N/A	N/A	OFF	🔴
1	772M	802M	25K	0	0	N/A	N/A	ON	🟢
2	769.7M	799.7M	25K	0	0	N/A	N/A	OFF	🔴
3	769.9M	799.9M	25K	0	0	N/A	N/A	OFF	🔴
4	770.1M	800.1M	25K	0	0	N/A	N/A	OFF	🔴
5	770.3M	800.3M	25K	0	0	N/A	N/A	OFF	🔴
6	770.5M	800.5M	25K	0	0	N/A	N/A	OFF	🔴
7	770.7M	800.7M	25K	0	0	N/A	N/A	OFF	🔴
8	770.9M	800.9M	25K	0	0	N/A	N/A	OFF	🔴
9	771.1M	801.1M	25K	0	0	N/A	N/A	OFF	🔴
10	771.3M	801.3M	25K	0	0	N/A	N/A	OFF	🔴
11	771.5M	801.5M	25K	0	0	N/A	N/A	OFF	🔴
12	771.7M	801.7M	25K	0	0	N/A	N/A	OFF	🔴
13	771.9M	801.9M	25K	0	0	N/A	N/A	OFF	🔴
14	772.1M	802.1M	25K	0	0	N/A	N/A	OFF	🔴
15	772.3M	802.3M	25K	0	0	N/A	N/A	OFF	🔴
16	772.5M	802.5M	25K	0	0	N/A	N/A	OFF	🔴
17	772.7M	802.7M	25K	0	0	N/A	N/A	OFF	🔴
18	772.9M	802.9M	25K	0	0	N/A	N/A	OFF	🔴
19	773.1M	803.1M	25K	0	0	N/A	N/A	OFF	🔴
20	773.3M	803.3M	25K	0	0	N/A	N/A	OFF	🔴
21	773.5M	803.5M	25K	0	0	N/A	N/A	OFF	🔴
22	773.7M	803.7M	25K	0	0	N/A	N/A	OFF	🔴
23	773.9M	803.9M	25K	0	0	N/A	N/A	OFF	🔴
24	774.1M	804.1M	25K	0	0	N/A	N/A	OFF	🔴
25	774.3M	804.3M	25K	0	0	N/A	N/A	OFF	🔴
26	774.5M	804.5M	25K	0	0	N/A	N/A	OFF	🔴
27	774.7M	804.7M	25K	0	0	N/A	N/A	OFF	🔴
28	774.9M	804.9M	25K	0	0	N/A	N/A	OFF	🔴
29	775.1M	805.1M	25K	0	0	N/A	N/A	OFF	🔴
30	775.3M	805.3M	25K	0	0	N/A	N/A	OFF	🔴
31	775.5M	805.5M	25K	0	0	N/A	N/A	OFF	🔴
32	775.7M	805.7M	25K	0	0	N/A	N/A	OFF	🔴
33	767M	797M	10M	0	0	N/A	N/A	OFF	🔴
34	767M	797M	1M	0	0	N/A	N/A	OFF	🔴
35	767M	797M	1M	0	0	N/A	N/A	OFF	🔴
36	767M	797M	1M	0	0	N/A	N/A	OFF	🔴

CH	CF		BW	ATT		PWR		EN	ED
	DL	UL		DL	UL	DL	UL		
1	851.21M	806.21M	75K	0	0	N/A	N/A	OFF	🔴
2	851.78M	806.78M	75K	0	0	N/A	N/A	OFF	🔴
3	852.35M	807.35M	75K	0	0	N/A	N/A	OFF	🔴
4	852.92M	807.92M	75K	0	0	N/A	N/A	OFF	🔴
5	853.49M	808.49M	75K	0	0	N/A	N/A	OFF	🔴
6	854.06M	809.06M	75K	0	0	N/A	N/A	OFF	🔴
7	854.63M	809.63M	75K	0	0	N/A	N/A	OFF	🔴
8	855.2M	810.2M	75K	0	0	N/A	N/A	OFF	🔴
9	855.77M	810.77M	75K	0	0	N/A	N/A	OFF	🔴
10	856.34M	811.34M	75K	0	0	N/A	N/A	OFF	🔴
11	856.91M	811.91M	75K	0	0	N/A	N/A	OFF	🔴
12	857.48M	812.48M	75K	0	0	N/A	N/A	OFF	🔴
13	858.05M	813.05M	75K	0	0	N/A	N/A	OFF	🔴
14	858.62M	813.62M	75K	0	0	N/A	N/A	OFF	🔴
15	859.19M	814.19M	75K	0	0	N/A	N/A	OFF	🔴
16	859.76M	814.76M	75K	0	0	N/A	N/A	OFF	🔴
17	860M	815M	25K	0	0	N/A	N/A	OFF	🔴
18	860.9M	815.9M	75K	0	0	N/A	N/A	OFF	🔴
19	861.47M	816.47M	75K	0	0	N/A	N/A	OFF	🔴
20	862.04M	817.04M	75K	0	0	N/A	N/A	OFF	🔴
21	862.61M	817.61M	75K	0	0	N/A	N/A	OFF	🔴
22	863.18M	818.18M	75K	0	0	N/A	N/A	OFF	🔴
23	863.75M	818.75M	75K	0	0	N/A	N/A	OFF	🔴
24	864.32M	819.32M	75K	0	0	N/A	N/A	OFF	🔴
25	864.89M	819.89M	75K	0	0	N/A	N/A	OFF	🔴
26	865.46M	820.46M	75K	0	0	N/A	N/A	OFF	🔴
27	866.03M	821.03M	75K	0	0	N/A	N/A	OFF	🔴
28	866.6M	821.6M	75K	0	0	N/A	N/A	OFF	🔴
29	867.17M	822.17M	75K	0	0	N/A	N/A	OFF	🔴
30	867.74M	822.74M	75K	0	0	N/A	N/A	OFF	🔴
31	868.31M	823.31M	75K	0	0	N/A	N/A	OFF	🔴
32	868.88M	823.88M	75K	0	0	N/A	N/A	OFF	🔴
33	860M	815M	18M	0	0	N/A	N/A	OFF	🔴
34	860M	815M	2M	0	0	N/A	N/A	OFF	🔴
35	860M	815M	1M	0	0	N/A	N/A	OFF	🔴
36	860M	815M	3M	0	0	N/A	N/A	OFF	🔴


## 7.7 Alarm Screen

- 1) As a screen for checking the alarm state of the repeater, alarm mask may be set and alarm test may be performed.
- 2) The alarm state of the repeater may be checked in an alarm color.
  - Yellow: Any alarm detected but system operation
  - Red: Any alarm detected and system not operation

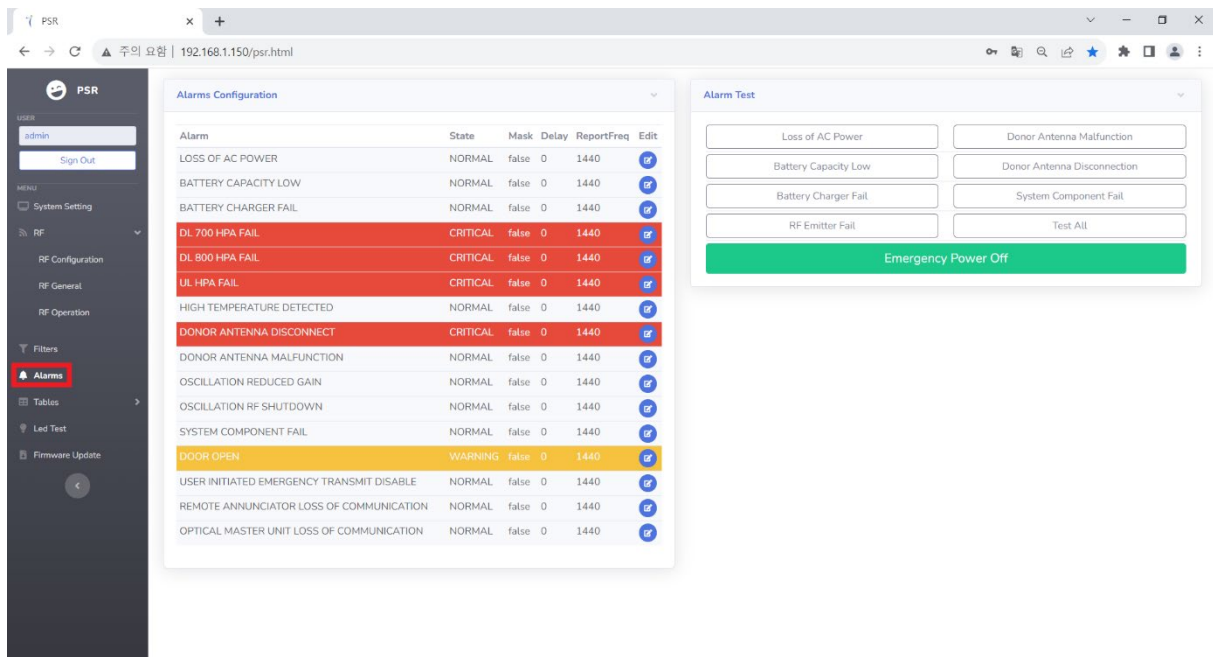

## 7.8 Table Screen

- 1) Can set various tables(Atten, Power, Temperature, Temperature PLL, DAC) on the table screen.

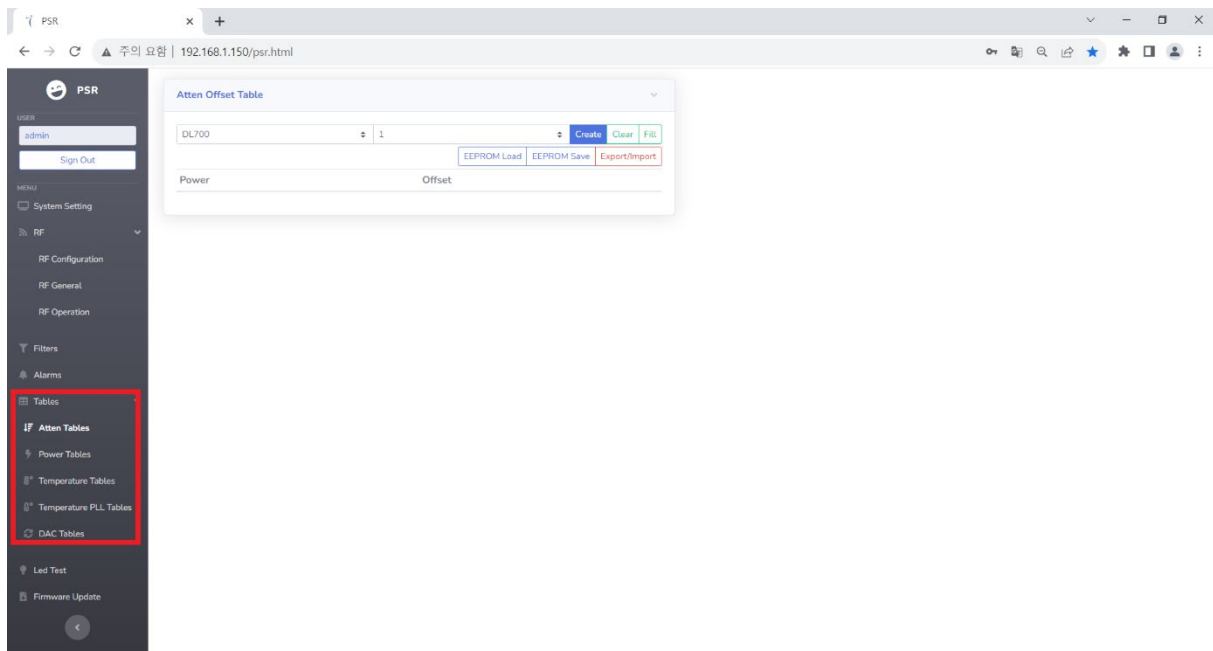

## 7.9 Firmware Update Screen

- 1) Can download the GUI, FPGA and MCU file on the firmware update screen.

PSR

주소: 주의 요원 | 192.168.1.150/psr.html

PSR

USER

admin

Sign Out

MENU

- System Setting
- RF
- RF Configuration
- RF General
- RF Operation
- Filters
- Alarms
- Tables
- Atten Tables
- Power Tables
- Temperature Tables
- Temperature PLL Tables
- DAC Tables
- Lead Test
- Firmware Update

**Date and Time**

Date/Time: 연도-월-일 -- -- --

**GUI Firmware**

Version:

Update Date:  Update

Update File:  선택된 파일 없음

**FPGA Firmware**

700 Version:  Update

700 Update Date:  Update Dual

800 Version:  Update

800 Update Date:  Update

Update File:  선택된 파일 없음

**MCU Firmware**

Version:  Update

Update Date:

Update File:  선택된 파일 없음

## 8. Troubleshooting

In case of abnormal operation, technician should diagnose abnormality via remote access or directly connecting to repeater using Ethernet cable. If technician is required to conduct repairs due to major alarm, repeater should first be powered off, and then technician should prepare the proper measurement equipment before trying to fix the problem. In most cases of major repairs, DKK will simply replace the unit and conduct repairs at the appropriate facility.

### 8.1.1 Simple Troubleshooting Method

- 1) Verify SYSTEM LED State.
  - System normal : Green LED on
  - Any alarm detected - system operational : Yellow LED on
  - Any alarm detected - system not operational : Red LED on
- 2) Technician should check external and internal connectors to ensure that all connections are tightly secure. These connectors should be cleaned regularly.
- 3) If technician thinks there is a serious problem, call after sales team for over-the-phone technical support. 82-32-816-1456.

### 8.1.2 Troubleshooting Guide Related to System Operation

PARAMETER	CHECK POINT	TROUBLESHOOTING
Check Before System Operation	System Input Power	- Downlink : -63dBm ~ -3dBm - Uplink : -56dBm ~ +4dBm
	System Gain	- Downlink : 90dB ± 1.5dB - Uplink : 80dB ± 1.5dB
	System Output Power	- Downlink : 27dBm ± 1.5dB - Uplink : 24dBm ± 1.5dB
Check After System Operation	Check Points After Open For Service	- Verify that the antennas are securely mounted and pointed in the correct directions. - Connection status between antennas and RF cable. - Verify that the BDA is securely mounted. - DC voltage. - Grounding status of electrical circuit. - Coaxial cable(RF) construction status.

### 8.1.3 Troubleshooting Guide Related to Alarm State

GUI ALARM	FRONT PANEL LED	BDA ACTION	TROUBLESHOOTING
NA	AC POWER - NORMAL	SHUTDOWN	- Check power cable connection.
LOSS OF AC POWER	LOSS OF AC POWER	NONE	- NA
BATTERY CAPACITY LOW	BATTERY CAPACITY LOW	NONE	- NA
BATTERY CHARGER FAIL	BATTERY CHARGER FAIL	NONE	- NA
DL 700 HPA FAIL	RF EMITTER FAIL	700 DL RF SHUTDOWN	- Check HPA is off. - Check BDA is shutdown condition.
DL 800 HPA FAIL	RF EMITTER FAIL	800 DL RF SHUTDOWN	- Check HPA is off. - Check BDA is shutdown condition.
UL HPA FAIL	RF EMITTER FAIL	700 & 800 UL+DL RF SHUTDOWN	- Check HPA is off. - Check BDA is shutdown condition.
HIGH TEMPERATURE DETECTED	SYSTEM COMPONENT FAIL	700 & 800 RF SHUTDOWN	- Check maximum temperature setting. - Check ambient temperature.
	RF EMITTER FAIL		
DONOR ANTENNA DISCONNECT	DONOR ANTENNA DISCONNECTION	NONE	- Check antenna installation direction. - Check donor antenna and RF cable connection status.
	RF EMITTER FAIL		
DONOR ANTENNA MALFUNCTION	DONOR ANTENNA MALFUNCTION	NONE	- Check donor antenna installation direction. - Check donor antenna and RF cable connection status.
OSCILLATION REDUCED GAIN	SYSTEM COMPONENT FAIL	NONE	- Check the direction of the donor antenna and the service antenna.
OSCILLATION RF SHUTDOWN	SYSTEM COMPONENT FAIL	700 & 800 RF SHUTDOWN	- Check the direction of the donor antenna and the service antenna.
	RF EMITTER FAIL		
DOOR OPEN	NA	NONE	- Check the door

#### 8.1.4 Troubleshooting Guide Related to NMS

SYMPTOM	CHECK POINT	TROUBLESHOOTING
Link Fail	Communication Problem	- Re-connection in ethernet cable. - Verify IP address and DHCP function.

#### 8.1.5 Replaceable Batteries

- ✓ Risk of explosion if battery is replaced by an incorrect type.
- ✓ Dispose of used batteries according to the instructions.
- ✓ Replace only with the same or equivalent type.