


## 4.4 Choose Your Cleaning Mode

You can choose a cleaning mode for your cleaner either on the device or through the app after connecting.

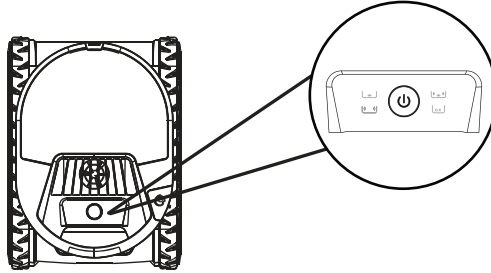

Switch modes using the on/off power button:

Icon	Indication	Mode
	Solid	Standard Full Pool
	Solid	Floor Only
	Solid	Wall Only
	Solid	Eco Floor

In addition to the four modes above, you can select the three more cleaning modes through the Talosbo app.

Icon	Indication	Mode
	Flashing	Waterline
	Flashing	Wall Then Floor
	Flashing	Turbo Floor

**Note:**

1. The cleaning areas for the 7 modes are shown in the table below.


Mode	Cleaning Coverage
Standard Full Pool	Wall+Floor+Waterline
Floor Only	Pool Floors
Wall Only	Pool Walls
Eco Floor	Eco mode,floor cleaning only
Waterline	Pool Waterline
Wall Then Floor	Wall*1+Floor*1
Turbo Floor	Strong cleaning,floor cleaning only

2. Standard Mode operates automatically unless another cleaning program is selected.

3. Place in water within 5 minutes of turning on, or the device will shut down.


4. Ensure the cleaner is out of the water and within Wi-Fi range before modifying the cleaning modes via the app.

Standard Full Pool Mode is the default start-up mode. In this mode, the cleaner follows a repeated cycle – sequentially cleaning the pool floor, walls, and waterline– to ensure full pool coverage and thorough cleaning.

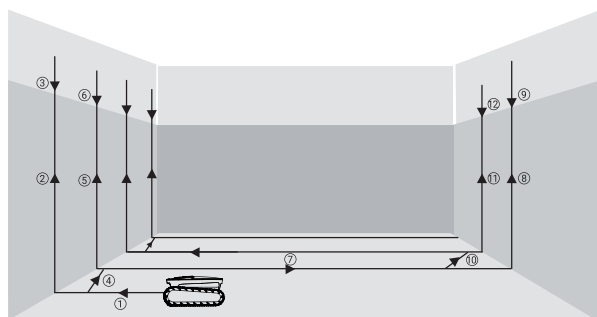



**Standard Full Pool**

Floor Mode, Wall Mode, and Waterline Mode clean the pool floor, walls, and waterline separately, each focusing on a specific area for targeted cleaning.

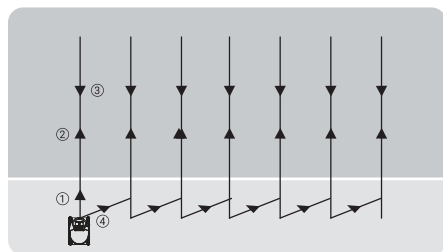


→ Wall Mode

Floor Mode ←

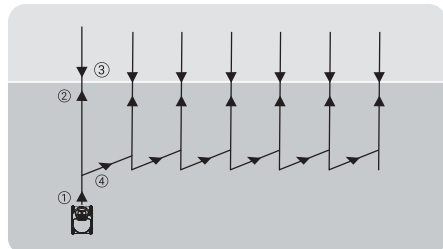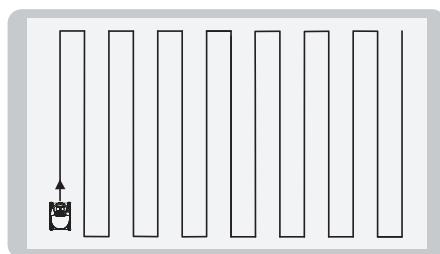


→ Waterline Mode

## 4.5 Run Your Yew Pleco Pro

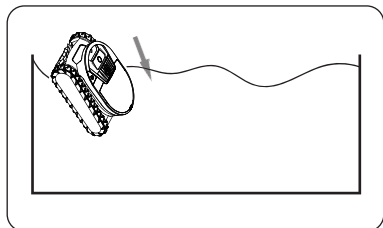


1. Hold the handle of the cleaner, and place it into the pool vertically.

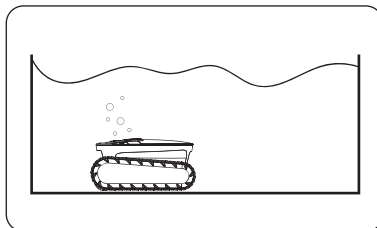


2. Let it sink to the bottom to release trapped air inside.

**Note:**


To achieve optimal cleaning performance, ensure the pool water depth is at least 19.5 in (50 cm) from the top of the device.

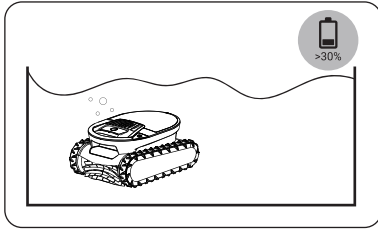


3. After about 30 seconds of self-calibration on the pool floor, the cleaner will begin operating.

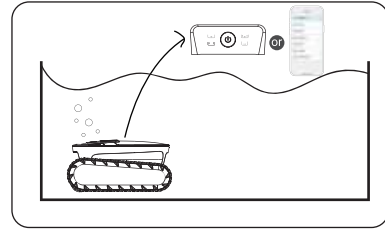

4. The cleaner begins cleaning according to the mode you select, either manually or through the app.

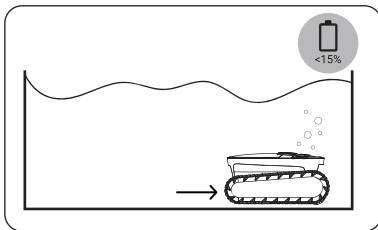

5. The device will automatically stop at the edge of the wall when cleaning is finished or the battery is low.

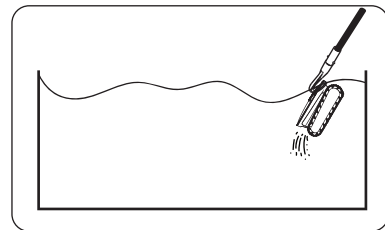


6. You can insert the included hook into a pool pole and lift the cleaner out of the pool.

**Note:**


After lifting the cleaner from the pool, place it vertically at the poolside to drain quickly.

## 5. Do A Filter Cleaning

- 1** Press the "OPEN" button on the top cover to lift it.




- 2** Take out the filter basket.

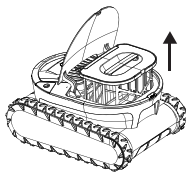


- 3** Take out the cotton foam filter.



- 4** Empty the debris basket, rinse it thoroughly, and clean the foam filter.

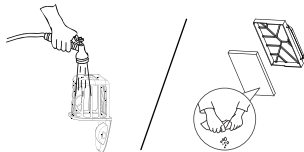

- 5** After rinsing, place the filter basket and cotton foam back into the cleaner and close the cover.

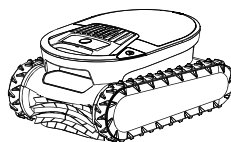


### Note:

1. Ensure the device is powered off before opening the top cover.
2. Clean the filter basket and cotton foam after each use.
3. Cotton foam is an auxiliary filter designed to capture fine particles, ideal for floor cleaning. Avoid using it in pools with heavy dust, as it may affect performance.



## 6. Maintenance and Storage

### 6.1 Replace the Tracks

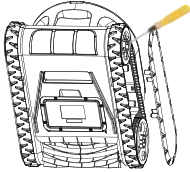



1. Remove the side cover plate from the device.

2. Unscrew the screws on the front wheel side cover and remove it.

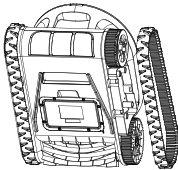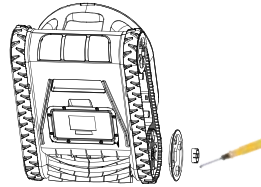

3. Remove the track.


4. Align the gears on the new track with those on both wheels and attach it, then re-install the front wheel side cover.

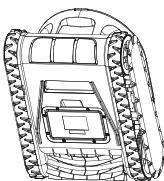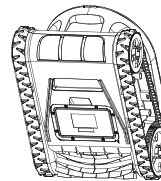

5. Tighten the screws and re-install the side cover plate.

## 6.2 How to Store

To maintain good performance, follow these steps to store your cleaner:

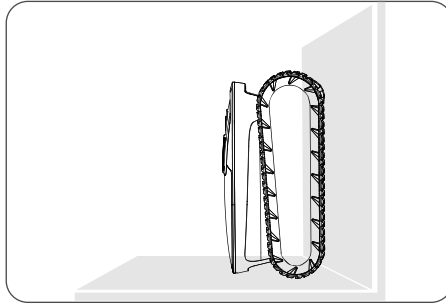

1. Ensure the device is powered off.
2. Clean the device, including the top and bottom shell, wheels, roller brushes, and charging port.
3. Wipe the device and accessories dry with a paper towel or soft cloth.
4. Store the cleaner in a cool and ventilated place, away from direct sunlight, heat sources, frost and pressure. The ambient temperature should be between  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) and  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ).
5. Charge the cleaner to 40%-60% battery capacity at least every three months to ensure an optimal battery life during the off-season.

### **Note:**

1. The device can be stored upright against a wall to save space.
2. If your device does not work after a long-term low battery or being off, please contact the after-sales team for assistance. For your safety, do not attempt to disassemble it without authorization.

## 7. Troubleshooting Solutions

When the device malfunctions, the red LED indicator will flash, and the app will display the error code. You can use the error code table in the app to identify the issue and troubleshoot, or contact after-sales service for assistance.

Error code	Error type
1	Chip IO initialization error
2	Chip IO communication error
3	Communication module initialization error
4	Gyroscope failure
5	Motor communication error
6	COVER error
7	Power supply communication error
8	Communication module error
9	Motor timing error
10	Lift motor error
11	Acquisition data error
12	Signal error
13	Trapped
14	Initialization error
15	Thermometer error
20	Walk error
25	Brush Roller Error
30	Left motor error
35	Right motor error



## 8. FAQ and Troubleshooting

EN

**Q: Why is the machine I received wet? Has it been used by someone else?**

A: The machine you received is brand new. Our machines undergo a pool test before leaving the factory to ensure that they function properly. During this test, a small amount of water may enter the machine which can cause the machine to feel wet. However, you can rest assured that the machine has not been used by anyone else.

**Q: Why does the device not achieve the expected cleaning effect?**

A: The device may not clean effectively if the debris bin or foam filter is clogged. Clean them after each use to maintain optimal performance.

**Q: Can the device clean steps?**

A: The unit can effectively climb and clean wide steps.

**Q: Why does the device leak out garbage after being removed from the pool?**

A: Please check if the water inlet cover at the bottom of the debris bin is blocked by an object, as this may result in debris to escape from the device. Please clean the device after each use to prevent blockage of these systems.

**Q: Why doesn't the device climb the wall?**

A: 1) The contact surface between the caterpillar tread and the wall is insufficient, resulting in the device being unable to climb.  
2) The debris bin is full or the filter is clogged, preventing the device from climbing the wall.

**Q: What are the recommendations for optimal performance of the pleco pro?**

A: For optimal performance, clean the dual-layer filter after each use, fully charge the battery, and remove any obstacles that may block the cleaner's movement.

## 9. Talosbo Customer Care

Due to continuous product improvements, the products described in this manual may differ from the actual products. Talosbo reserves the right to make updates without prior notice.

If you encounter any issues during use, please contact our after-sales team. For more details, visit the Talosbo website at [www.talosbo.com](http://www.talosbo.com).

## 10. Conventional Warranty

This product has been inspected and certified in accordance with applicable local laws and regulations before sale.

1. This product includes a **24-month** limited warranty covering the battery, motor, and PCB from the date of purchase. Consumable parts such as the filter basket, brush, and wheels are not covered.
2. The warranty applies only to manufacturing defects and does not cover damage caused by misuse, improper handling, negligence, unauthorized repairs, modifications, or external factors beyond the manufacturer's control. Such actions will void the warranty.
3. The warranty is non-transferable and applies only to the original purchaser. It does not cover products that have been resold, leased, or transferred to another party.
4. A valid order number or proof of purchase is required for warranty service. The manufacturer reserves the right to determine warranty eligibility and provide repair, replacement, or other solutions at its discretion.



This symbol indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.







**Talosbo Customer Service:**

Email: [supportus@talosbo.com](mailto:supportus@talosbo.com)  
Facebook/Instagram: @TalosboOfficial  
Tel: 1- (833) 6856101



Scan the QR Code to  
Access Customer Support