


Front Panel

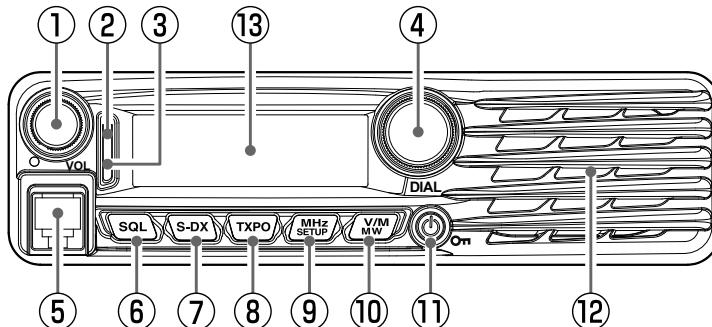

① VOL knob

Rotate the knob to adjust the audio volume level.

② S-DX (Super DX) indicator

Lights white when the Super DX function is in operation.

(When the optional Signal Processing Unit SPU-1 is installed, the indicator Lights blue when the "Super DX function" and "Noise Canceling" are in operation.)

③ BUSY/TX indicator

Indicates the transmit/receive status with a three-color combination indicator:

Green: Receiving audio

Red: Transmitting audio

Blinking Blue: Receiving signals with unmatched audio conditions*

- Receiving signals with unmatched tone frequency or DCS code.
- Receiving a signal level less than the RF Squelch S-meter level setting.

④ DIAL Knob

- Allows setting the operating frequency.
- Allows selecting the desired items for setup, memory registration, etc.

⑤ MIC Jack

Connect the provided microphone cable.

⑥ **SQL** key

Press the key briefly and rotate the **DIAL** knob to set the squelch level.

⑦ **S-DX** key

Press this key briefly to enable the Super DX function and increase sensitivity.

Installation of the optional "SPU-1", provides even greater noise reduction and clearer audio.

⑧ **TXPO** key

Press the key briefly then rotate the **DIAL** knob to select the transmit power (HIGH: 65W / MID: 30W / LOW: 5W).

Front Panel Controls & Switches

⑨ key

This key instigates tuning in 1MHz steps (the MHz digits will blink on the display). Press and hold this key in for over one second to activate the Setup (Menu) Mode.

⑩ key

Press this key briefly to switch between VFO mode and memory mode. Press and hold the key for over one second to display the memory registration screen.

⑪ key


Press and hold in this key for over one second to switch the power between ON and OFF. Briefly pressing the key while the transceiver is turned ON engages or releases the key lock.

⑫ Speaker

The internal loud speaker provides 5 watts of audio.

⑬ LCD Display

The main digits on the display may show the operating frequency, memory name, or any of many parameters during Menu setup.

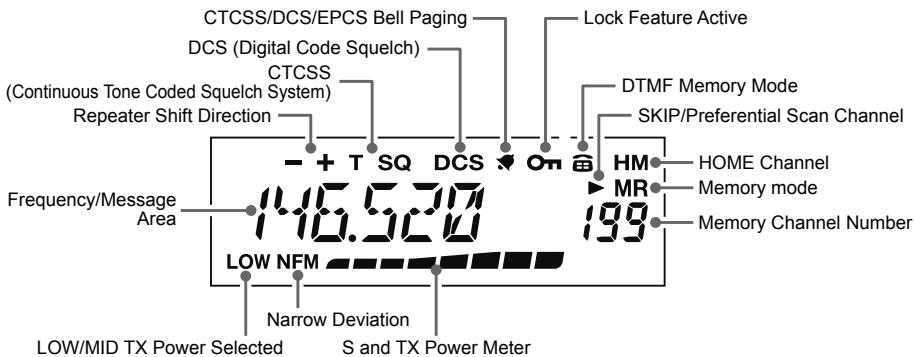

Microphone (SSM-85D)

① MIC

Speak into the microphone during transmission.

② TX LED

Lights red while pressing PTT switch.

③ PTT

Press and hold the PTT switch to transmit, and release it to receive.

Press this key during the set mode to exit the set mode.

④ DWN

Press this key to move the frequency or memory channel lower by one step, press and hold it to start scanning.

⑤ UP

Press this key to move the frequency or memory channel up by one step, press and hold it to start scanning.

⑥ MUTE

Press this key to mute the receive audio. Press it again to unmute the audio.

⑦ DTMF keypad

Press these keys during transmit to enter and send a DTMF sequence. The following operations can be performed during receive.

0 - 9 : Enter the frequency or memory channel number.

A, B, C, D : No function assigned.

* : No function assigned.


: Confirms the entered frequency or memory channel number.

⑧ Program keys (P1/P2/P3/P4)


The default function settings of the [P1] / [P2] / [P3] / [P4] keys are shown in the table below.

Key	Function	
P1	SQL OFF	Opens the squelch (SQL off)
P2	HOME CH	Recalls the HOME channel
P3	REV	Reverses the transmit and receive frequencies in repeater mode or split memory.
P4	WX (USA version)	Switches operation to the Weather Channel Bank
	T CALL (European/Asian version)	Transmits the T-CALL (1750Hz)

Reprogram the [P1], [P2], [P3], and [P4] keys for other functions, if desired (see page 19).

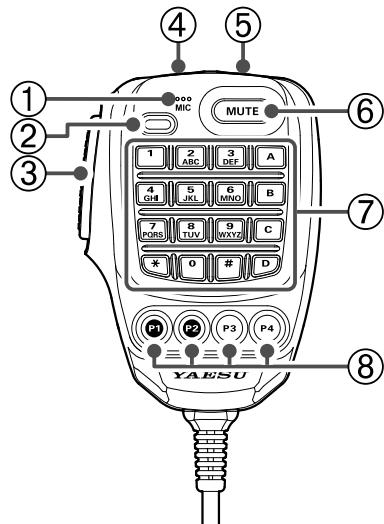

Rear Panel

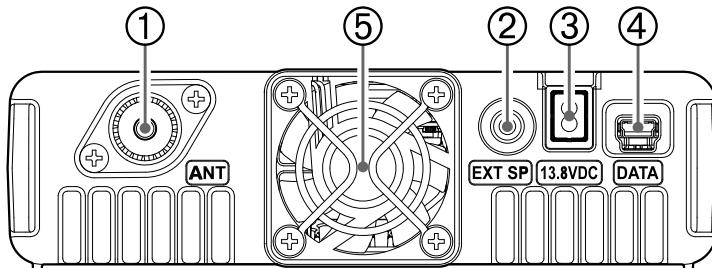

① ANT Coaxial Socket

Connect a 144MHz antenna to this type-M (SO-239) socket using 50-Ohm coaxial cable and a type-M (PL-259) plug. Make sure the antenna is designed specifically for use on the operating frequency.

② EXT SP Jack

This 2-contact 3.5-mm mini phone jack provides receiver audio output for an optional external speaker. The audio impedance is 4 Ohms, and the level varies according to the setting of the front panel **VOL** control. Inserting a plug into this jack disables audio from the transceiver's internal speaker.

③ 13.8 V DC Cable

Connect the provided DC power supply cable (with fuse attached).

④ DATA Jack


Use this jack when updating the firmware. When a new firmware update for the FT-3165R/E is available, go to the YAESU website to download the programming data and update the FT-3165R/E to its newest state.

⑤ Cooling Fan

Turning the Transceiver ON and OFF

Press and hold this key to switch the power ON or OFF.


When the power is ON, press this key briefly to engage, or release the key lock.

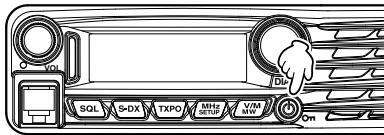

May compose a desired Opening Message (up to 8 characters) via Setup Menu Item “15 OPEN MSG” see page 30 for details.


Adjusting the Audio Volume Level

Rotate the **VOL** knob to adjust the receiver volume. Clock-wise rotation increases the audio output level.

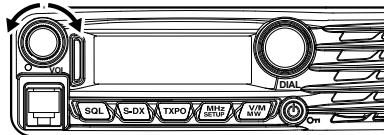

Adjusting the Squelch Setting


1. Press the **[SQL]** key, and then rotate the **DIAL** knob to select the Squelch level.
2. Press the **[SQL]** key again.

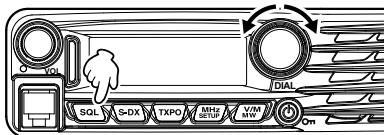

Note: A special “RF Squelch” feature is provided on this transceiver. This feature allows setting the squelch so that only signals exceeding a certain S-meter level will open the squelch. For details, refer to the Advanced Manual (download from the Yaesu website).

Lock Feature

To activate the key-lock feature, press the **① On** key. The “①” icon will appear on the LCD. To cancel key-lock, press the **① On** key again.

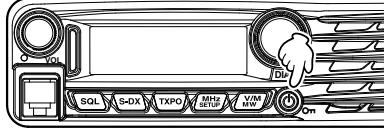


To select which keys are locked, use the Setup Menu Item “36 LOCK” see page 31 for details.

Basic Operation

Frequency Navigation

Using the Dial

Rotating the **DIAL** knob allows tuning in the pre-programmed steps. Clockwise rotation tunes the frequency upwards, whereas counterclockwise rotation tunes the frequency downwards.

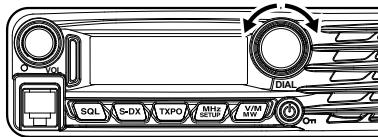

Press the **[MHz SETUP]** key momentarily, and then rotate the **DIAL** knob, to change the frequency steps to 1MHz per step.

Using the SSM-85D Microphone


Using the [UP] and [DWN] key:

Pressing **[UP]** momentarily, tunes the frequency upwards. Whereas pressing **[DWN]** momentarily tunes the frequency in the downward direction.



Using the number keys:

Use the **[0]** to **[9]** number keys to directly input the frequency. There is no “decimal point” key on the SSM-85D keypad. However, there is a short-cut for frequencies ending in zero: press the **[#]** key after the last non-zero digit.

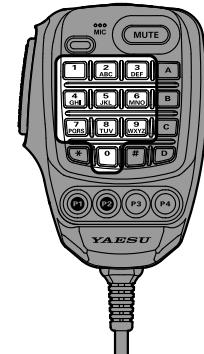

Examples:

To enter 146.520MHz, press **[1] → [4] → [6] → [5] → [2]**

To enter 146.000MHz, press **[1] → [4] → [6] → [#]**

Channel Step Selection

The frequency tuning step of the **DIAL** and the microphone **[UP]/[DWN]** keys can be changed.


1. Press and hold the **[MHz SETUP]** key for over one second.
The Setup menu appears.
2. Rotate the **DIAL** knob to select “**37 STEP**”, then press the **[MHz SETUP]** key.
3. Rotate the **DIAL** knob to select the frequency step.
4. Press and hold the **[MHz SETUP]** key for over one second to save the new settings and return to normal operation.



Transmission

1. Press and hold **PTT** on the microphone.

The BUSY/TX indicator lights red.

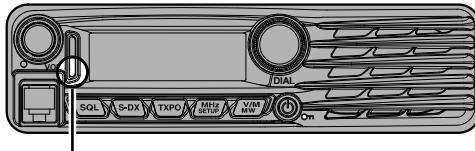


The lower portion lights red

2. Speak into **MIC** on the microphone.

Note: Keep the microphone about 2 inches (5cm) away from your mouth.

The sensitivity (gain) of the microphone can be adjusted. For details, refer to the Advanced Manual (download from the Yaesu website).

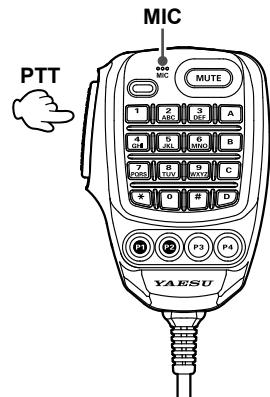

3. Release **PTT**.

The BUSY/TX indicator turns OFF and the transceiver returns to the receive mode.

Caution: Do not continue transmitting for a prolonged period. The transceiver may overheat, resulting in malfunction or injury.


Note: "ERROR" appears if you attempt to transmit on an unavailable frequency.

Adjusting the transmit power

When communicating with a nearby station, the transmit power level may be lowered to reduce the battery power consumption.

1. Press the **TXPO** key.
2. Rotate the **DIAL** knob to select the transmit power.

Note: The default setting: HIGH

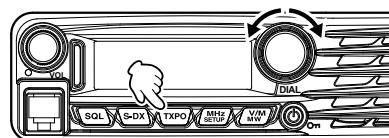

3. Press the **TXPO** key to save the new setting and exit to normal operation.

Basic Operation

Repeater Operation

The FT-3165R/E includes the ARS (Automatic Repeater Shift) function, which permits communication through repeaters automatically, by simply setting the receiver to the repeater frequency.

1. Tune to the repeater frequency.
2. Press the **PTT** to transmit.

During transmission, the signal including a 100.0Hz tone is emitted on the frequency offset from the receive frequency by 0.6MHz.

Note: The repeater tone and offset settings may be changed from the Setup Menu.

22 RPT SFT ➔ Allows setting the repeater shift direction.

23 RPT ARS ➔ Deactivates the ARS function.

24 RPT FREQ ➔ Allows changing the repeater shift frequency offset.

28 SQL TYPE ➔ Selects Tone Encode and Decode Mode.

29 TONE FRQ ➔ Sets CTCSS Tone Frequency.

Checking the Repeater Uplink (Input) Frequency

It is often helpful to be able to check the uplink (input) frequency of a repeater, to see if the calling station is within direct ("Simplex") range.

Press the program key [**P3**] of the microphone (in factory default setting). The display will shift to the repeater uplink frequency. While listening on the repeater input frequency, the repeater offset icon will blink. Press the [**P3**] key again to revert to normal monitoring of the repeater downlink (output) frequency.



Tone Calling (1750Hz)

If the transceiver is FT-3165E (European version), press and hold in the program key [**P4**] of the microphone (in factory default setting) to generate a 1750Hz burst tone to access the European repeater. The transmitter will automatically be activated, and a 1750Hz audio tone will be superimposed on the carrier. Once access to the repeater has been gained, release the [**P4**] key, and use the **PTT** for activating the transmitter thereafter. To access the repeaters which require a 1750Hz burst tone with the FT-3165R (USA/Asian versions), the program key on the microphone may be used to serve as the "**T CALL**" key instead. To change the configuration of this key, use setup menu [**16 PGM P1**], [**17 PGM P2**], [**18 PGM P3**] or [**19 PGM P4**].

How to assign "T CALL" function

1. Press and hold the **MHZ SETUP** key.
2. Rotate the **DIAL** knob to select [**16 PGM P1**], [**17 PGM P2**], [**18 PGM P3**] or [**19 PGM P4**] key to assign a function, then press the **MHZ SETUP** key.
3. Rotate the **DIAL** knob to select "**T CALL**".
4. Press and hold the **MHZ SETUP** key to save the setting and return to normal operation.

Super DX and Noise cancelling function


The Super DX function increases the sensitivity of the RF amplifier when the received signal is weak, expanding the calling range. In addition, by installing the optional "Signal Processing Unit SPU-1"*, the received audio signal can be digitally processed to separate and remove noise. The voice can be brought out to produce clearer, easier-to-listen sound quality. Even weak signals that were previously inaudible due to noise can now be received clearly.

*Refer to the Advanced Manual (download from the Yaesu website) for installation of the SPU-1.

Press the **S-DX** key to activate the Super DX function, the indicator on the left of the display will light white.

(When the SPU-1 is installed, the **S-DX** key also turns the "Noise Canceling" function ON, and the indicator will light blue.)

Press the **S-DX** key again to return the receiver to normal sensitivity. The indicator light will turn OFF.

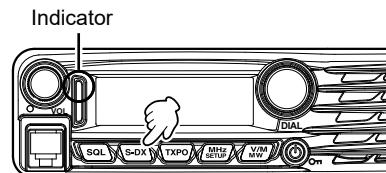

Priority Channel Scanning (Dual Watch)

The FT-3165R/E's scanning features include a two-channel scanning capability which allows operating on a VFO, Memory channel, or Home channel, while periodically checking a user-defined Memory Channel for activity. If a station received on the Memory Channel is strong enough to open the Squelch, the scanner will pause on that station in accordance with the Scan-Resume mode setting of Menu item “**25 SCAN RSM**”.



Assigning the “**DW**” function to a programmable key ([P1]/[P2]/[P3]/[P4]) on the microphone (SSM-85D).

How to assign “DW” function

1. Press and hold the **MHZ SETUP** key.
2. Rotate the **DIAL** knob to select **[16 PGM P1]**, **[17 PGM P2]**, **[18 PGM P3]** or **[19 PGM P4]** key to assign a function, then press the **MHZ SETUP** key.
3. Rotate the **DIAL** knob to select “**DW**”.
4. Press and hold the **MHZ SETUP** key to save the setting and return to normal operation.

Here is the procedure for activating Priority Channel Dual Watch operation:

1. Press the **V/M MW** key to switch to memory mode.
2. Press and hold the **V/M MW** key, then select the memory channel you wish to be the “Priority” channel.
3. Press the **TXPO** key.
The “**PRI CH?**” will appear on the display.
4. Press the **TXPO** key again. The “**P**” notation will appear on the “100MHz” frequency digit on the display; indicating it is the Priority channel.

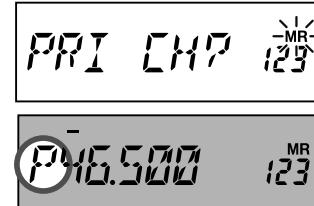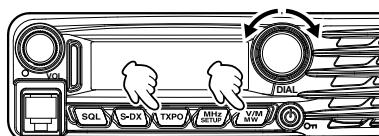

5. Now set the FT-3165R/E for operation on another memory channel, Home channel, or on a VFO frequency.
6. Press the program key of the microphone to which “**DW**” function is assigned. The display will remain on the VFO, the selected memory channel, or the Home channel, but every 5 seconds the FT-3165R/E will check the Priority Channel for activity.

Note: During Dual Watch operation, the decimal points of the frequency display blink.

7. To cancel Dual Watch operation, press the program key of the microphone to which “**DW**” function is assigned.

Programming the Key Assignments

Default FT-3165R/E key functions have been assigned to the Microphone [P1]/[P2]/[P3]/[P4] keys at the factory. The user may change these key function assignments, if quick access to another function is desired.

Note: The default setting: [P1] - SQL OFF

[P2] - HOME

[P3] - REV


[P4] - WX CH (T CALL: Asian/European version)

To change the assignments for the programmable keys:

1. Press and hold the **MHZ SETUP** key for over one second.

The Setup menu appears.

2. Rotate the **DIAL** knob to select the Menu Item to configure the desired microphone button: ("16 PGM P1", "17 PGM P2", "18 PGM P3" or "19 PGM P4").

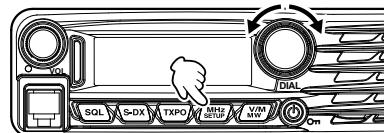

3. Press the **MHZ SETUP** key.

4. Rotate the **DIAL** knob to select a function (see below) then press the **MHZ SETUP** key.

SQL OFF : Open the Squelch to allow un-muted reception

HOME : Recall the home channel

WX CH : Switches operation to the Weather channels bank

CD SRCH : Engages the Tone or DCS Search Scanning feature

SCAN : Engages the Scan operation

T CALL : Activates 1750 Hz Tone Burst

TX POWER : Set the transmission power level

REV : Reverses the transmit and receive frequencies in repeater mode or split memory

DW : Operation setting of dual receive function

5. Press and hold in the **MHZ SETUP** key for one second to save the new setting and exit to normal operation.

You may assign Set Mode items to the Microphone [P1]/[P2]/[P3]/[P4] buttons, as well, to do this:

1. Press and hold in the **MHZ SETUP** key for one second to enter the Set mode.

2. Rotate the **DIAL** knob to select the Set Mode Item that you wish to assign to the key as a Menu short cut.

3. Press and hold in the Microphone's [P1], [P2], [P3] or [P4] key for one second to assign the Set Mode Item to that button.


4. Now you can recall this preferred Set Mode Item by simply pressing the Microphone button momentarily.

Advanced Operation


CTCSS Operation

FT-3165R/E is equipped with the CTCSS (Continuous Tone-coded Squelch System) that allows audio to be heard only when receiving signals containing a tone corresponding to the tone squelch menu setting. By matching the CTCSS tone with the partner station in advance, quiet standby monitoring is possible.

1. Press and hold the **[MHz SETUP]** key for over one second.
The Setup menu appears.
2. Rotate the **DIAL** knob to select “**28 SQL TYPE**”, then press the **[MHz SETUP]** key.

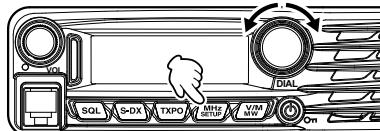

3. Rotate the **DIAL** knob to select “**TSQL**”, then press and hold the **[MHz SETUP]** key for over one second.

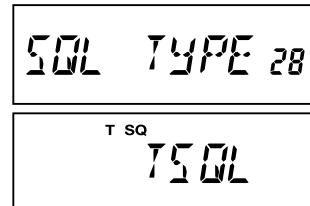

“**T SQ**” is displayed on the screen. The squelch opens only when receiving tone signals of the set frequency.

Note: The CTCSS setting can be changed from the Setup Menu.

29 TONE FRQ ■■■ The tone frequency can be selected from 50 frequencies.

5 BELL ■■■ A bell tone (beep) may be set to sound when signals containing a corresponding CTCSS tone are received.

Tone Search


When the CTCSS tone being transmitted by another station is not known, you can tune the transceiver to the incoming signal and activate tone scan to search for and identify the tone being used.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

DCS Operation

FT-3165R/E is equipped with a DCS (Digital Coded Squelch) function that allows audio to be heard only when signals containing the corresponding DCS code are received. By matching the DCS code with the partner stations beforehand, a quiet receive standby is possible.

1. Press and hold the **[MHz SETUP]** key for over one second.
The Setup menu appears.
2. Rotate the **DIAL** knob to select “**28 SQL TYPE**”, then press the **[MHz SETUP]** key.

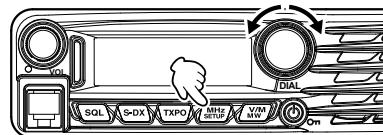

SQL TYPE 28

DCS
IIS

3. Rotate the **DIAL** knob to select “**DCS**”, then press and hold the **[MHz SETUP]** key for over one second.

“**DCS**” is displayed on the screen. The squelch opens only when receiving a signal containing the corresponding DCS code.

Note: The DCS setting can be changed from the Setup Menu.

30 DCS CODE The DCS code can be selected from 104 codes.

5 BELL A bell tone (beep) may be set to sound when signals containing a corresponding DCS code are received.

DCS Search

When the DCS code being transmitted by another station is not known, you can tune the transceiver to the incoming signal and activate DCS code scan to search for and identify the DCS code being used.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Advanced Operation

Weather Broadcast Reception

The FT-3165R/E includes a unique feature which allows reception of weather broadcasts in the 160MHz frequency range. Ten standard Weather Broadcast channels are preloaded into a special memory bank.


To listen to a Weather Broadcast Channel (Example: When "WX" is assigned to [P4]):

1. Press the Microphone [P4] key to recall the Weather Broadcast channels.

Note: In the USA model, the [P4] key one of the programmable keys, is assigned (default setting) as the "WX Broadcast" one-touch access key. Please note that if you change/assign another function to the [P4] key, one-touch access to the WX channel will be unavailable.

2. Turn the **DIAL** knob to select the desired Weather Broadcast channel.

CH	Frequency	CH	Frequency
1	162.550MHz	6	162.500MHz
2	162.400MHz	7	162.525MHz
3	162.475MHz	8	161.650MHz
4	162.425MHz	9	161.775MHz
5	162.450MHz	10	163.275MHz

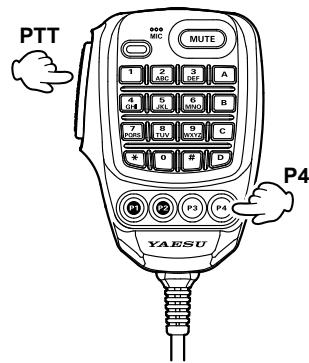

3. To scan the other channels for activity, press the Microphone **PTT** switch.
4. To exit to normal operation, press the **[P4]** key again. Operation will return to the VFO or Memory channel in operation before you began Weather Broadcast operation.

Severe Weather Alert Feature

In the event of extreme weather disturbances, such as storms and hurricanes, NOAA (the National Oceanic and Atmospheric Administration) sends a weather alert accompanied by a 1050Hz tone and subsequent weather report on one of the NOAA weather channels. You may enable this feature via Setup Menu Item "43 WX ALERT" see page 32 for details.

The following features are also available:

EPCS (Enhanced Paging & Code Squelch) Operation

Use the pager code consisting of two CTCSS tones to exchange communications with specified stations.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Split Tone Operation

The FT-3165R/E can be operated in a "Split Tone" configuration that enables operation on repeaters using a mix of both CTCSS and DCS control via the Setup menu.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

DTMF Operation

DTMF tones (Dual Tone Multi Frequencies) are the tones you hear when dialing from a telephone keypad. The FT-3165R/E transceiver can transmit the DTMF codes by using the keys on the microphone or recalling registered number strings from memories.

The maximum of 16-digit DTMF codes can be registered in up to 10 memory channels. It is convenient to register telephone patch numbers, and network linking sequences to the DTMF memory channels.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Memory Operation

The FT-3165R/E provides a wide variety of memory system resources. These include:

- 199 "basic" memory channels, numbered "1" through "199".
- A "Home" channel, providing storage and quick recall of one prime frequency.
- 10 sets of band-edge memories, also known as "Programmable Memory Scan" channels, labeled "L0/U0" through "L9/U9".

Each memory may be appended with an alphanumeric label of up to 8 characters, for quick channel recognition.


Memory Storage

1. In the VFO mode, select the desired frequency, repeater shift, CTCSS/DCS tone, and TX power level.

2. Press and hold the  key for one second.

A memory number will appear in the bottom right corner of the display.

Note: If the channel number is blinking, there currently is no data stored on that channel; if the channel number is not blinking, that channel is currently "occupied" by other frequency data.

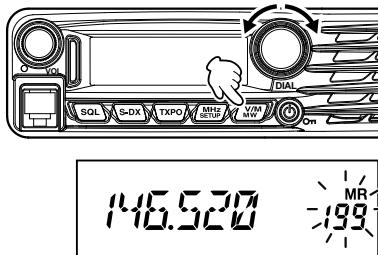

3. Within five seconds of pressing the  key, use the **DIAL** knob to select the desired memory into which you wish to store the frequency.

Note: While operating in the Memory Storage mode, the keypad of the SSM-85D Microphone may be used to enter the memory channel number directly.

To do this, enter the desired Channel Number on the keypad and then press the **[#]** key. Refer to the "For example" of the "Memory Recall from the Microphone Keypad" on next page.

4. Press the  key again, this time momentarily, to store the displayed data into the selected memory channel slot.

5. To store additional frequencies, repeat steps 1 through 4, remembering to set the repeater shift, CTCSS/DCS tone, and TX power level, as appropriate.

Split Memory

A separate transmit frequency may be registered to a memory channel to which a receive frequency has already been registered.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Naming a Memory Channel


You may also append an alphanumeric "Tag" (label) to each memory, to aid in recollection of the channel's use (such as club name, etc.).

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Memory Recall

Once the desired frequencies are stored into memory channels, switch from the "VFO" mode to the "Memory Recall" mode, to operate on the just-stored memory channels.

1. Press the **[VM MW]** key, repeatedly if necessary, until the "MR" icon and a memory channel number appear on the display; this indicates that the "Memory Recall" mode is now engaged.
2. When more than one memory has been stored, use the **DIAL** knob to select any of the programmed memories for operation.

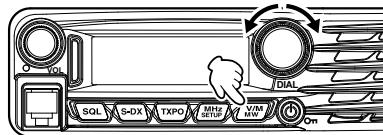

Note: Alternatively, the microphone **[UP]** or **[DWN]** key may be used to step or scan through the available memories. When using the microphone keys, press the key momentarily to move one step up or down; press and hold the **[UP]** or **[DWN]** key for one second to begin memory scanning.

Memory Recall from the Microphone Keypad

While operating in the Memory Recall mode, the keypad of the SSM-85D Microphone may be used for direct recall of memory channels.

To do this, enter the desired Channel Number on the keypad and then press the **[#]** key.

For example: To recall Memory Channel "5", press **[5]** \rightarrow **[#]**

To recall Memory Channel "123", press **[1]** \rightarrow **[2]** \rightarrow **[3]** \rightarrow **[#]**

You may also recall Programmable Memory Scan (PMS) channels ("L0/U0" through "L9/U9") by entering the channel numbers listed in the below table:

L1	201	L2	203	L3	205	L4	207	L5	209	L6	211	L7	213	L8	215	L9	217	L0	219
U1	202	U2	204	U3	206	U4	208	U5	210	U6	212	U7	214	U8	216	U9	218	U0	220

Moving Memory Data to the VFO

Data stored on memory channels can easily be moved to the VFO.

1. Select the memory channel containing the frequency data to be moved to the VFO.
2. Press and hold the **[VM MW]** key for one second, and then press the **[MHz SETUP]** key.
The "VFO WRT?" will appear on the display.
3. Press the **[MHz SETUP]** key, the data will now have been copied to the VFO.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Memory Only Mode

Once memory channel programming has been completed, you may place the transceiver in a "Memory Only" mode, whereby VFO operation is impossible.

To place the radio into the Memory Only mode, turn the transceiver OFF. Now press and hold in the **[VM MW]** key while turning the transceiver ON. The VFO and Home Channel will now be disabled.

To return to normal operation, repeat the above power-on procedure.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Memory Operation

Masking Memories

There may be situations where you want to “Mask” memories so they are not visible during memory selection or scanning. (except for Memory Channel “1”, the Priority Channel, and the Home Channel).

1. In the Memory Recall mode, press and hold the **Y/MW** key for one second, then rotate the **DIAL** knob to select the memory channel you wish to mask.


2. Press the **SQL** key.

The erase confirmation screen appears.

3. Press the **SQL** key.

The previously selected memory will be “masked”.

Note: Press any key, other than **SQL**, to cancel the memory mask.

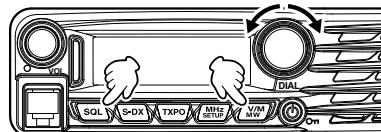

Unmasking Memories


1. To Unmask a hidden memory, in the Memory Recall mode, press and hold the **Y/MW** key for one second.
2. Rotate the **DIAL** knob to select the masked memory number.
3. Press the **SQL** key to restore the memory channel data.

HOME Channel Memory

A convenient one-touch “Home” channel memory is available to simplify returning to an often used frequency.

To recall the Home channel, just press the **Y/MW** key, repeatedly if necessary, until the “HM” icon appears on the display; this indicates that the Home Channel has been recalled.

Note: When shipped from the factory, the Home Channel is set to 146.520MHz (USA version) or 145.000MHz (Asian/European version).

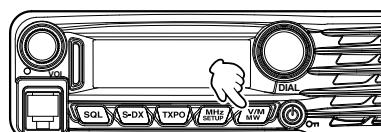

Changing the frequency of the home channel

The default frequency setting of the home channel can be changed.

1. In the VFO mode, tune to the desired Home channel frequency.
2. Press and hold the **Y/MW** key for one second, and then press the **S-DX** key.
The overwrite confirmation screen appears.
3. Press the **S-DX** key.
The home channel frequency is overwritten.

Basic Scanner Operation


Before activating the scanner, make sure that the Squelch is set to silence the background noise when no signal is present. Scanning is not possible while the Squelch is open (if noise or signals are being heard).

Scanning may be started or stopped using the microphone **[UP]** or **[DWN]** key.

The following techniques are used for scanning:

- in the **VFO mode**, press and hold either the **[UP]** or **[DWN]** key for one second, to start upward or downward scanning of the band.
- In the **Memory mode**, press and hold either the **[UP]** or **[DWN]** key for one second to start channel scanning toward a higher or lower-numbered memory channel, respectively.
- Scanning pauses when a signal opens the squelch, and the decimal point on the display will blink.

To halt the scan manually, the easiest way is to push the **PTT** switch on the microphone momentarily (no transmission will occur while you are scanning). The scan may also be halted manually by pressing the microphone **[UP]** or **[DWN]** key, or the **[MW]** key.

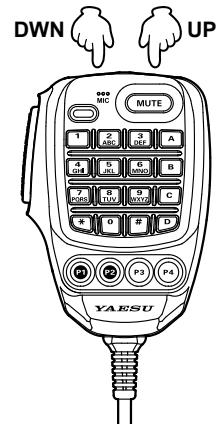

Scan Resume Options

Select which of the three resume scan modes is to be performed after the scanning stops.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Memory Skip Scanning

Memory channels which you do not want to receive can be skipped during scanning.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Preferential Memory Scan

Set up a "Preferential Scan List" of channels which you can "flag" within the memory system.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Programmable Memory Scan (PMS)

Using the dedicated PMS memory channels, only the frequencies within the specified frequency range will be scanned.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Priority Channel Scanning (Dual Watch)

Scanning features include a two-channel scanning capability which allows you to operate on a VFO, Memory channel, or Home channel, while periodically checking a user defined Memory Channel for activity.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Miscellaneous Settings

Keyboard Beeper

A key/button beeper provides useful audible feedback whenever a key/button is pressed. If you want to turn the beeper OFF (or back ON again).

Note: If you want to turn the beeper OFF (or back ON again), see Setup Menu Item “**3 BEEP KEY**” on page 30.

Display Brightness

Set the brightness level of the display.

Note: See Setup Menu Item “**7 DIMMER**” on page 30.

Time-Out-Timer (TOT)

The “Time-Out Timer” (TOT) feature is designed to force the transceiver into the “receive” mode after a preset time period of continuous transmission (the default is 3 minutes).

Note: See Setup Menu Item “**38 TOT**” on page 31.

Automatic Power Off (APO)

The transceiver can be set to automatically power OFF when there is no operation for a period.

Note: See Setup Menu Item “**1 APO**” on page 30.

Busy Channel Lock-Out (BCLO)

The BCLO feature prevents the transmitter from being activated whenever a signal strong enough to break through the “noise” squelch is present on the frequency.

Note: See Setup Menu Item “**2 BCLO**” on page 30.

TX Deviation Level

The receiver bandwidth and transmit deviation may be reduced when operating on closely spaced frequencies (channel spacing of 12.5 or 15kHz). The reduced transmitter deviation will minimize adjacent channel interference to other users.

Note: See Setup Menu Item “**42 WIDTH**” on page 32.

MIC Gain Setting

The sensitivity (gain) of the microphone can be adjusted.

Note: See Setup Menu Item “**12 MIC GAIN**” on page 30.

Displaying the Supply Voltage

Display the Power Supply voltage.

Note: See Setup Menu Item “**40 VOLT**” on page 32.

Displaying the Temperature

Indicates the current temperature inside the transceiver.

Note: See Setup Menu Item “**39 TEMP**” on page 31.

Band Edge Beeper

The FT-3165R/E will automatically “beep” when the receiver’s band edge is encountered during scanning (either in standard VFO scanning or during PMS operation). You may additionally enable this feature (band edge beeper) when the frequency reaches the band edge while selecting the VFO frequency manually, using the **DIAL** knob.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Reset Procedure

In some instances of erratic or unpredictable operation, the cause may be corruption of data in the microprocessor (due to static electricity, etc.). If this happens, resetting the microprocessor may restore normal operation. Note that all memories will be erased if you do a complete microprocessor reset, as described below.

All Reset

To clear all memories and other settings to factory defaults:

1. Turn the transceiver OFF.
2. Press and hold the **TXPO**, **MHZ SETUP**, and **V/M** keys while turning the transceiver on. The “**ALL RESET PUSH V/M KEY**” notation will scroll on the display.

ALL RESET PUSH V/M KEY

3. Press the **[V/M(MW)]** key momentarily to reset all settings to their factory defaults (press any other key to cancel the Reset procedure).

Set Mode Resetting

To reset the Set (Menu) mode settings to their factory defaults, while leaving other settings unchanged.

Restore the following setting items to the defaults: (See above if “All Reset” is required)

9 DT EDIT	13 MEM NAME	15 OPEN MSG	20 PAG CD-R	21 PAG CD-T
22 RPT SFT	24 RPT FREQ	26 SCAN SKP	28 SQL TYPE	29 TONE FRQ
30 DCS CODE	31 DCS INV	32 SQL EXP	33 SQL RF	37 STEP
42 WIDTH				

1. Turn the transceiver OFF.
2. Press and hold the **TXPO** and **MHZ SETUP** keys while turning the transceiver on. The “**SET MODE RESET PUSH V/M KEY**” notation will scroll on the display.

SET MODE RESET PUSH V/M KEY

3. Press the **V/M** key momentarily to reset the Set (Menu) mode settings to their factory defaults (press any other key to cancel the Reset procedure).

Clone

The FT-3165R/E includes a convenient “Clone” feature, which allows the memory and configuration data from one transceiver to be transferred to another FT-3165R/E.

This can be particularly useful when configuring a number of transceivers for a public service operation.


Note: For details, refer to the Advanced Manual (download from the Yaesu website).

Setup (Menu) Mode

The FT-3165R/E Setup (Menu) mode, already described in parts of many previous chapters, is easy to activate and setup. The Menus may be used to configure many of transceiver parameters, some of which have not been detailed previously. Use the following procedure to activate the Setup (Menu) mode:

1. Press and hold the **MHZ SETUP** key for one second to enter the Setup menu.
2. Rotate the **DIAL** knob to select the Menu Item to be adjusted.
3. Press the **MHZ SETUP** key momentarily to enable adjustment of the selected Menu item, and then rotate the **DIAL** knob to perform the actual adjustment.
4. After completing your selection and adjustment, press and hold the **MHZ SETUP** key for one second to exit the Setup menu and resume normal operation.

Note: For details, refer to the Advanced Manual (download from the Yaesu website).

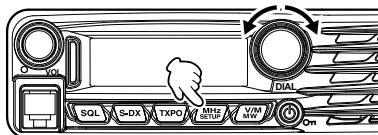

Menu Item	Function	Available Values	Default
1: APO	Enables/Disables the Automatic Power Off feature.	0.5H to 12H (0.5H step)/OFF	OFF
2: BCLO	Enables/Disables the Busy Channel Lock-Out feature.	ON/OFF	OFF
3: BEEP KEY	Enables/Disables the key beeper.	KEY+SCAN/KEY/OFF	KEY+SCAN
4: BEEP EDG	Enables/Disable the Band-edge beeper while scanning.	ON/OFF	OFF
5: BELL	Selects the CTCSS/DCS/EPCS Bell Ringer repetitions.	1 to 20/CONTINUE/OFF	OFF
6: CLK TYPE	Shifting of the CPU clock frequency.	A/B	A
7: DIMMER	Setting of the front panel display illumination level.	MAX/MID 1/MID 2/OFF	OFF
8: DT AUTO	Enables/Disables the DTMF Autodialer feature.	MANUAL/AUTO	MANUAL
9: DT EDIT	Loading of the DTMF Autodialer Memories.	---	---
10: DT DELAY	Setting of the DTMF Autodialer TX Delay Time.	50/250/450/750/1000	450 MS
11: DT SPEED	Setting of the DTMF Autodialer Sending Speed.	50/100	50 MS
12: MIC GAIN	Adjust the microphone gain level.	LEVEL 1 to 9	LEVEL 5
13: MEM NAME	Programming an Alpha/Numeric label for a Memory Channel.	---	---
14: MW MODE	Selects the method of selecting of channels for Memory Storage.	NEXT CH/LOWER CH	NEXT CH
15: OPEN MSG	Selects the Opening Message that appears when the transceiver is powered ON.	OFF/DC/MESSAGE	MESSAGE

Setup (Menu) Mode

Menu Item	Function	Available Values	Default
16: PGM P1	Programming the function assigned to Microphone [P1] key.	SQL OFF HOME WX CH CD SRCH SCAN T CALL TX POWER REV DW	SQL OFF
17: PGM P2	Programming the function assigned to Microphone [P2] key.		HOME
18: PGM P3	Programming the function assigned to Microphone [P3] key.		REV
19: PGM P4	Programming the function assigned to Microphone [P4] key.	Setup Menu Item #1 to 44	※
20: PAG CD-R	Setting the Receiver Pager Code for the Enhanced CTCSS Paging & Code Squelch function.	---	05 47
21: PAG CD-T	Setting the Transmitting Pager Code for the Enhanced CTCSS Paging & Code Squelch function.	---	05 47
22: RPT SFT	Sets the Repeater Shift direction.	-RPT/+RPT/SIMPLEX	SIMPLEX
23: RPT ARS	Activates/Deactivates the Automatic Repeater Shift feature.	ON/OFF	ON
24: RPT FREQ	Sets the magnitude of the Repeater Shift.	0.00 - 150.00 (MHz)	0.60MHz
25: SCAN RSM	Selects the Scan Resume mode.	BUSY/HOLD/2-10 (SEC)	5.0 SEC
26: SCAN SKP	Selects the Memory Scan mode.	OFF/SKIP/SELECT	OFF
27: DW REVRT	Enables/Disables the "Priority Channel Revert" feature.	ON/OFF	OFF
28: SQL TYPE	Selects the Tone Encoder and/or Decoder mode.	TONE/TSQL/DCS/ RV TONE/PAGER/OFF	OFF
29: TONE FRQ	Setting of the CTCSS Tone Frequency.	67.0 to 254.1 (Hz)	100.0Hz
30: DCS CODE	Setting of the DCS code.	104 standard DCS codes	023
31: DCS INV	Select a combination of DCS inversion codes in terms of communication direction.	NORMAL/INVERT/ BOTH	NORMAL
32: SQL EXP	Sets the squelch type separately for transmission and reception.	ON/OFF	OFF
33: SQL RF	Adjusts the RF Squelch threshold level.	OFF/S1 to S8	OFF
34: TS MUTE	Enables/Disables the receiver audio output while the Tone Search or DCS Search Scanner is activated.	ON/OFF	ON
35: TS SPEED	Selects the Tone Search or DCS Search Scanner speed.	FAST/SLOW	FAST
36: LOCK	Selects the Control Locking Lockout combination.	KEY+DIAL/PTT/ KEY+PTT/DIAL+PTT/ ALL/KEY/DIAL	KEY+DIAL
37: STEP	Sets the frequency synthesizer steps.	AUTO/5/6.25/10/12.5/ 15/20/25/50/100 (kHz)	AUTO
38: TOT	Sets the Time-Out Timer.	0.5 to 10.0 (MIN)/OFF	※
39: TEMP	Indicates the current temperature inside the transceiver.	---	---

Setup (Menu) Mode

Menu Item	Function	Available Values	Default
40: VOLT	Indicates the DC Supply Voltage.	---	---
41: VER DISP	Displays the transceiver software version	CPU x.xx	---
42: WIDTH	Reduction of the Microphone Gain/Deviation and receiver bandwidth.	WIDE/NARROW	WIDE
43: WX ALERT	Enables/Disables the Weather Alert feature.	ON/OFF	OFF
44: WX VOL	Selects the audio output level of the Weather Alert.	NOR VOL/MAX VOL	NOR VOL

※: Depends on the transceiver version.

Maintenance

Care and maintenance

Turn the power OFF before wiping away any dust and stains on the transceiver with a dry soft cloth. For stubborn stains, slightly moisten a soft cloth and wring it out before using it to wipe away the stains.

Caution: Never use washing detergents and organic solvents (thinner, benzene, etc.). Doing so may result in paint flaking or damage to the transceiver finish.

Replacing the fuse

When the fuse of the DC power supply cable blows and the transceiver becomes inoperable, correct the cause of the problem, and then replace the fuse with a new one of the correct rating (USA version: 25 Amp, Asian/European version: 20 Amp).

Caution: When replacing the fuse, be sure to disconnect the power supply cable from the transceiver and from the external DC power supply.

Replacing the fuse of the DC power supply cable

1. Prepare a new fuse.


Use a fuse with a rating of 25A or 20A.

Caution: Never attempt to use a fuse that is not of the specified rating.

USA version: 25 Amp

Asian/European version: 20 Amp

2. Open the fuse holder as shown in the diagram on the right.
3. Remove the blown fuse.
4. Attach the new fuse.
5. Close the fuse holder.

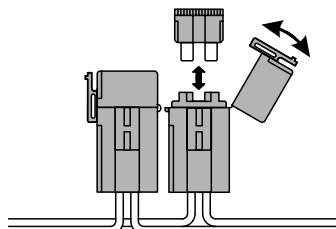

General

Frequency Range:	Tx 144 - 146MHz or 144 - 148MHz Rx 136 - 174MHz
Channel Step:	5/6.25/10/12.5/15/20/25/50/100kHz
Standard Repeater Shift:	±600kHz
Frequency Stability:	±10 ppm [-4°F to +140°F (-20°C to +60°C)]
Modes of Emission:	F3E
Antenna Impedance:	50 Ohms, unbalanced
Supply voltage:	13.8V DC ±15%, negative ground
Current Consumption (typical):	Rx: less than 0.7A, less than 0.5A (squelched) Tx: 11A (65W) /8A (30W) /5A (5W)
Operating Temperature Range:	-4°F to +140°F (-20°C to +60°C)
Case Size (WxHxD):	6.1" x 1.7" x 6.1" (154 x 43 x 155 mm) (w/o knobs)
Weight (Approx.):	2.86 lb (1.3kg)

Transmitter

Output Power:	65W/30W/5W
Modulation Type:	Variable Reactance
Maximum Deviation:	±5kHz (Wide) ±2.5kHz (Narrow)
Spurious Radiation:	Better than -60dB
Microphone Impedance:	Better than -61.1dB (European version, 65W) 2k Ohms

Receiver

Circuit Type:	Double Conversion Superheterodyne
Iffs:	1st 47.25MHz, 2nd 450kHz
Sensitivity (for 12dB SINAD):	0.20µV (Ham band, wide) 0.22µV (Ham band, narrow)
Selectivity (-6/-60dB):	12kHz/28kHz
Maximum AF Output:	5W @ 13.8V, 10% THD

Rated values are at normal temperature and pressure.

Ratings and specifications are subject to change without notice.

Symbols placed on the equipment

 Direct current

YAESU LIMITED WARRANTY

Limited Warranty is valid only in the country/region where this product was originally purchased.

On-line Warranty Registration:

Thank you for buying YAESU products! We are confident your new radio will serve your needs for many years! Please register your product at www.yaesu.com - Owner's Corner

Warranty Terms:

Subject to the Limitations of the Warranty and the Warranty Procedures described below, YAESU MUSEN hereby warrants this product to be free of defects in materials and workmanship in normal use during the "Warranty Period." (the "Limited Warranty").

Limitations of Warranty:

- A. YAESU MUSEN is not liable for any express warranties except the Limited Warranty described above.
- B. The Limited Warranty is extended only to the original end-use purchaser or the person receiving this product as a gift, and shall not be extended to any other person or transferee.
- C. Unless a different warranty period is stated with this YAESU product, the Warranty Period is three years from the date of retail purchase by the original end-use purchaser.
- D. The Limited Warranty is valid only in the country/region where this product was originally purchased.
- E. During the Warranty Period, YAESU MUSEN will, at its sole option, repair or replace (using new or refurbished replacement parts) any defective parts within a reasonable period of time and free of charge.
- F. The Limited Warranty does not cover shipping cost (including transportation and insurance) from you to us, or any import fees, duties or taxes.
- G. The Limited Warranty does not cover any impairment caused by tampering, misuse, failure to follow instructions supplied with the product, unauthorized modifications, or damage to this product for any reasons, such as: accident; excess moisture; lightning; power surges; connection to improper voltage supply; damage caused by inadequate packing or shipping procedures; loss of, damage to or corruption of stored data; product modification to enable operation in another country/purpose other than the country/purpose for which it was designed, manufactured, approved and/or authorized; or the repair of products damaged by these modifications.
- H. The Limited Warranty applies only to the product as it existed at the time of the original purchase, by the original retail purchaser, and shall not preclude YAESU MUSEN from later making any changes in design, adding to, or otherwise improving subsequent versions of this product, or impose upon YAESU MUSEN any obligation to modify or alter this product to conform to such changes, or improvements.
- I. YAESU MUSEN assumes no responsibility for any consequential damages caused by, or arising out of, any such defect in materials or workmanship.
- J. TO THE FULLEST EXTENT PERMITTED BY LAW, YAESU MUSEN SHALL NOT BE RESPONSIBLE FOR ANY IMPLIED WARRANTY WITH RESPECT TO THIS PRODUCT.
- K. If the original retail purchaser timely complies with the Warranty Procedures described below, and YAESU MUSEN elects to send the purchaser a replacement product rather than repair the "original product", then the Limited Warranty shall apply to the replacement product only for the remainder of the original product Warranty Period.
- L. Warranty statutes vary from state to state, or country to country, so some of the above limitations may not apply to your location.

YAESU LIMITED WARRANTY

Warranty Procedures:

1. To find the Authorized YAESU Service Center in your country/region, visit www.yaesu.com. Contact the YAESU Service Center for specific return and shipping instructions, or contact an authorized YAESU dealer/distributor from whom the product was originally purchased.
2. Include proof of original purchase from an authorized YAESU dealer/distributor, and ship the product, freight prepaid, to the address provided by the YAESU Service Center in your country/region.
3. Upon receipt of this product, returned in accordance with the procedures described above, by the YAESU Authorized Service Center, all reasonable efforts will be expended by YAESU MUSEN to cause this product to conform to its original specifications. YAESU MUSEN will return the repaired product (or a replacement product) free of charge to the original purchaser. The decision to repair or replace this product is the sole discretion of YAESU MUSEN.

Other conditions:

YAESU MUSEN'S MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. IN NO EVENT SHALL YAESU MUSEN BE LIABLE FOR LOSS OF, DAMAGE TO OR CORRUPTION OF STORED DATA, OR FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT DAMAGES, HOW EVER CAUSED; INCLUDING WITHOUT LIMITATION TO THE REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, PROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH THE YAESU PRODUCT.

Some Countries in Europe and some States of the USA do not allow the exclusion or limitation of incidental or consequential damages, or a limitation on how long an implied warranty lasts, so the above limitation or exclusions may not apply. This warranty provides specific rights, there may be other rights available which may vary between countries in Europe or from state to state within the USA.

This Limited Warranty is void if the label bearing the serial number has been removed or defaced.

1. Changes or modifications to this device that are not expressly approved by YAESU MUSEN could void the user's authorization to operate this device.
2. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference including received, interference that may cause undesired operation.
3. The scanning receiver in this equipment is incapable of tuning, or readily being altered, by the User to operate within the frequency bands allocated to the Domestic public Cellular Telecommunications Service in Part 22.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

DECLARATION BY MANUFACTURER

The Scanner receiver is not a digital scanner and is incapable of being converted or modified to a digital scanner receiver by any user.

WARNING: MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.

CAN ICES-3 (B) / NMB-3 (B)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

EU Declaration of Conformity

We, Yaesu Musen Co. Ltd of Tokyo, Japan, hereby declare that this radio equipment FT-3165E is in full compliance with EU Radio Equipment Directive 2014/53/EU. The full text of the Declaration of Conformity for this product is available to view at <http://www.yaesu.com/jp/red>

ATTENTION – Conditions of usage

This transceiver operates on frequencies that are regulated. Use of the Transmitter in the EU countries shown in the accompanying table is not permitted without authorization. Users should consult their local spectrum management authority for licensing conditions applicable to this equipment.

						
AT	BE	BG	CY	CZ	DE	
DK	ES	EE	FI	FR	GR	
HR	HU	IE	IT	LT	LU	
LV	MT	NL	PL	PT	RO	
SK	SI	SE	CH	IS	LI	
NO	–	–	–	–	–	–

Disposal of Electronic and Electrical Equipment

Products with the symbol (crossed-out wheeled bin) cannot be disposed as household waste.

Electronic and Electrical Equipment should be recycled at a facility capable of handling these items and their waste by-products.

Please contact a local equipment supplier representative or service center for information about the waste collection system in your country.



YAESU
Radio for Professionals

Copyright 2024
YAESU MUSEN CO., LTD.
All rights reserved.

No portion of this manual may be
reproduced without the permission of
YAESU MUSEN CO., LTD.

YAESU MUSEN CO., LTD.
Omori Bellport Building D-3F
6-26-3 Minami-Oi, Shinagawa-ku, Tokyo, 140-0013, Japan

YAESU USA
6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK
Unit 4, Concorde Park, Concorde Way, Segensworth North,
Fareham, Hampshire PO15 5FG, United Kingdom

2406K-AS
Printed in Japan

