


OPERATION

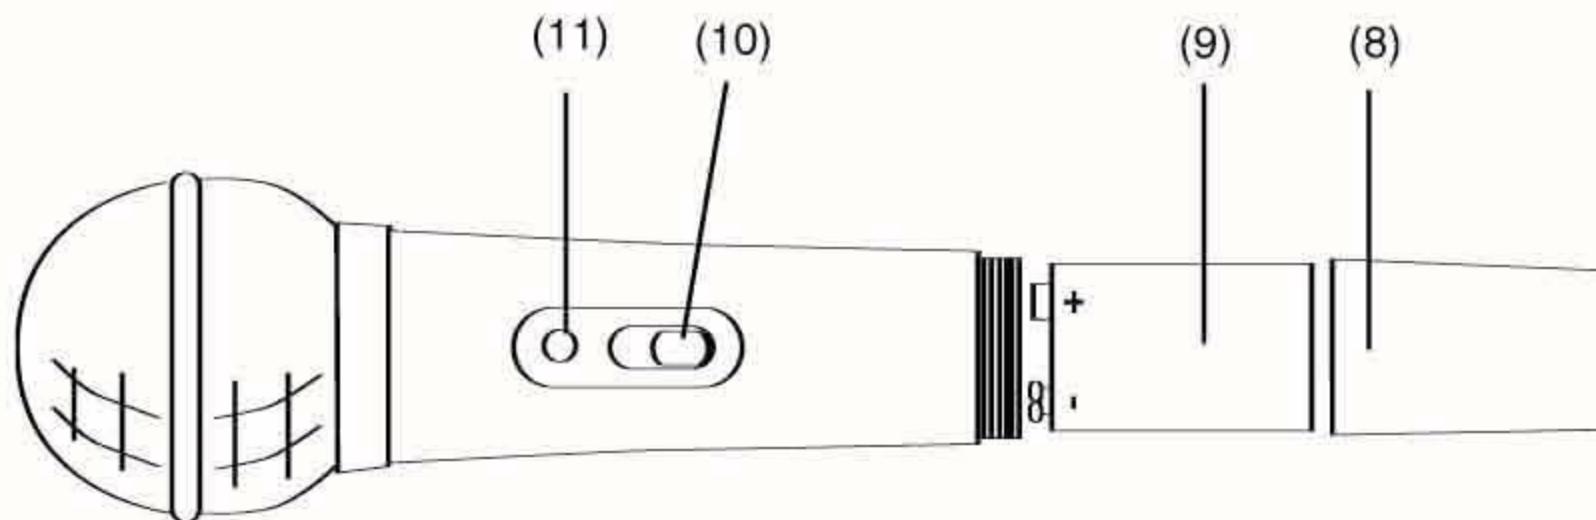

HANDHELD MIC TRANSMITTER

1. Unscrew the **BATTERY COMPARTMENT COVER (6)** and remove. Insert a fresh alkaline **9V BATTERY (9)**, observing correct polarity as marked, and screw the cover back on to the microphone. To ensure proper battery contact, the cover must be screwed on completely.
2. Turn on the handheld mic by sliding the **OFF/STANDBY/ON (10)** switch to the ON position. The **BATTERY INDICATOR LED (11)** will light up continuously, indicating usable battery strength. In the case of a dead or low battery, the LED will either light dim or not light at all, indicating that the battery should be replaced with a fresh one.
3. The microphone is now ready to use. The corresponding **LED INDICATORS (7)** on the American Starpower™ X2 receiver should now be lit, indicating a received signal from the transmitter on that channel.
4. The two channels are labeled red and blue, both on the front panel of the receiver and on the band label on the microphone just under the mic ball grill. This color coding enables visual display of which transmitter is turned on and transmitting to the receiver. Both channels can be used simultaneously and this is the preferred method of operation. Single channel operation is also possible. Occasionally, depending on the radio signal environment in which you are using the system, you might encounter static-type noises during single channel operation caused by received radio interference on the open, unused channel which is also mixed into the audio output you are amplifying. If this happens turn on the second microphone transmitter, and if not using, leave nearby (~5–10 feet away) with the **OFF/STANDBY/ON (10)** switch in the STANDBY position, which means the transmitter is operating but the audio input is muted. The second channel's **LED (7)** should now also be lit. This should eliminate the interference static.

[Note: Observe care in selecting amplified volume, transmitter location and speaker placement so that acoustic feedback (howling or screeching) will be avoided.]

SPECIFICATION

OVERALL SYSTEM PERFORMANCE

Frequency Response: 80-12,000 Hz, +/-3dB

Dynamic Range: 80dB

Total Harmonic Distortion: <3%

RF Carrier Frequency Range: 76-88 MHz

Frequency Stability: +/- 0.005%

Modulation: FM (F3E), +/-75KHz max.

Operating Range: 100 ft. typical-up to 200+ ft. line-of-sight

TRANSMITTER

Audio Input: unidirectional dynamic cartridge

Controls: OFF/STANDBY/ON switch

LED Indicator Unit: "ON"

RF Power Out: Up to 50mW (Max. allowed by FCC)

Harmonic & Spurious Emissions: <-40dB

Battery: 9V Alkaline

Battery Life: Up to 15 hours

Dimensions (L x Dia): 9.5" x 1.3" x 2", (24.2cm x 3.2cm x 5.1cm)

Weight (w/o battery): 6.0 oz., (170g.)

RECEIVER

Control: Power ON/OFF

Connector: 1/4" unbalanced audio out jack (both channels mixed together)

LED Indicator: Power ON, Transmitter RF (one each, both channels)

Antennas: 15.3", (38.8cm), dual collapsible antennas

Power Requirement: AC/DC 9VDC/0.2A

Dimensions (W x H x D): 11.8" x 1.8" x 4.5",
(29.9cm x 4.5cm x 11.5cm.)

Weight: 11.3 oz., (320g.)

Specifications subject to change for product improvement purposes

SERVICE

(U.S.) Should your Nady American Starpower™ X2 Wireless Microphone System require service, please contact the Nady Customer Service Department via telephone: (510) 652-2411 or e-mail: service@nady.com.

(INTERNATIONAL) For service, please contact the Nady distributor in your country through the dealer from whom you purchased this product.

The warranty card supplied with this system provides valuable warranty and service information. Store it in a safe place for future reference. Do not attempt to service this unit yourself as it will void your warranty.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.