

Occupants			Combined weight of occupants and cargo from Tire Placard	MINUS	Combined Occupant's weight	=	AVAILABLE Cargo/Luggage and Trailer Tongue Weight
TOTAL	FRONT	REAR					
<b>EXAMPLE 1</b>			↓ 865 lbs	minus	865 lbs	=	↓ 195 lbs
5	2	3					
<b>EXAMPLE 2</b>			↓ 865 lbs	minus	540 lbs	=	325 lbs
3	2	1					
<b>EXAMPLE 3</b>			↓ 865 lbs	minus	400 lbs	=	465 lbs
2	2	0					

Occupant 1: 200 lbs  
 Occupant 2: 130 lbs  
 Occupant 3: 160 lbs  
 Occupant 4: 100 lbs  
 Occupant 5: 90 lbs  
 TOTAL WEIGHT: 670 lbs

Occupant 1: 210 lbs  
 Occupant 2: 180 lbs  
 Occupant 3: 150 lbs  
 TOTAL WEIGHT: 540 lbs

Occupant 1: 200 lbs  
 Occupant 2: 200 lbs  
 TOTAL WEIGHT: 400 lbs

811a4d11

**WARNING!**

Overloading of your tires is dangerous. Overloading can cause tire failure, affect vehicle handling, and increase your stopping distance. Use tires of the recommended load capacity for your vehicle. Never overload them.

## TIRES — GENERAL INFORMATION

### Tire Pressure

Proper tire inflation pressure is essential to the safe and satisfactory operation of your vehicle. Four primary areas are affected by improper tire pressure:

- Safety
- Fuel Economy
- Tread Wear
- Ride Comfort and Vehicle Stability

### Safety

#### WARNING!

- Improperly inflated tires are dangerous and can cause collisions.
- Underinflation increases tire flexing and can result in overheating and tire failure.
- Overinflation reduces a tire's ability to cushion shock. Objects on the road and chuckholes can cause damage that result in tire failure.

(Continued)

#### WARNING!

- Overinflated or underinflated tires can affect vehicle handling and can fail suddenly, resulting in loss of vehicle control.
- Unequal tire pressures can cause steering problems. You could lose control of your vehicle.
- Unequal tire pressures from one side of the vehicle to the other can cause the vehicle to drift to the right or left.
- Always drive with each tire inflated to the recommended cold tire inflation pressure.

Both underinflation and overinflation affect the stability of the vehicle and can produce a feeling of sluggish response or over responsiveness in the steering.

#### NOTE:

- Unequal tire pressures from side to side may cause erratic and unpredictable steering response.
- Unequal tire pressure from side to side may cause the vehicle to drift left or right.

### Fuel Economy

Underinflated tires will increase tire rolling resistance resulting in higher fuel consumption.

### Tread Wear

Improper cold tire inflation pressures can cause abnormal wear patterns and reduced tread life, resulting in the need for earlier tire replacement.

### Ride Comfort And Vehicle Stability

Proper tire inflation contributes to a comfortable ride. Overinflation produces a jarring and uncomfortable ride.

### Tire Inflation Pressures

The proper cold tire inflation pressure is listed on the driver's side B-pillar or rear edge of the driver's side door.

At least once a month:

- Check and adjust tire pressure with a good quality pocket-type pressure gauge. Do not make a visual judgment when determining proper inflation. Tires may look properly inflated even when they are underinflated.
- Inspect tires for signs of tire wear or visible damage.

**CAUTION!**

After inspecting or adjusting the tire pressure, always reinstall the valve stem cap. This will prevent moisture and dirt from entering the valve stem, which could damage the valve stem.

Inflation pressures specified on the placard are always “cold tire inflation pressure”. Cold tire inflation pressure is defined as the tire pressure after the vehicle has not been driven for at least three hours, or driven less than 1 mile (1.6 km) after sitting for a minimum of three hours. The cold tire inflation pressure must not exceed the maximum inflation pressure molded into the tire sidewall.

Check tire pressures more often if subject to a wide range of outdoor temperatures, as tire pressures vary with temperature changes.

Tire pressures change by approximately 1 psi (7 kPa) per 12°F (7°C) of air temperature change. Keep this in mind when checking tire pressure inside a garage, especially in the Winter.

Example: If garage temperature = 68°F (20°C) and the outside temperature = 32°F (0°C) then the cold tire inflation pressure should be increased by 3 psi (21 kPa), which equals 1 psi (7 kPa) for every 12°F (7°C) for this outside temperature condition.

Tire pressure may increase from 2 to 6 psi (13 to 40 kPa) during operation. DO NOT reduce this normal pressure build-up or your tire pressure will be too low.

**Tire Pressures For High Speed Operation**

The manufacturer advocates driving at safe speeds and within posted speed limits. Where speed limits or conditions are such that the vehicle can be driven at high speeds, maintaining correct tire inflation pressure is very important. Increased tire pressure and reduced vehicle loading may be required for high-speed vehicle operation. Refer to an authorized tire dealer or original equipment vehicle dealer for recommended safe operating speeds, loading and cold tire inflation pressures.

**WARNING!**

High speed driving with your vehicle under maximum load is dangerous. The added strain on your tires could cause them to fail. You could have a serious collision. Do not drive a vehicle loaded to the maximum capacity at continuous speeds above 75 mph (120 km/h).

**Radial Ply Tires****WARNING!**

Combining radial ply tires with other types of tires on your vehicle will cause your vehicle to handle poorly. The instability could cause a collision. Always use radial ply tires in sets of four. Never combine them with other types of tires.

## Tire Repair

If your tire becomes damaged, it may be repaired if it meets the following criteria:

- The tire has not been driven on when flat.
- The damage is only on the tread section of your tire (sidewall damage is not repairable).
- The puncture is no greater than a ¼ of an inch (6 mm).

Consult an authorized tire dealer for tire repairs and additional information.

Damaged Run Flat tires, or Run Flat tires that have experienced a loss of pressure should be replaced immediately with another Run Flat tire of identical size and service description (Load Index and Speed Symbol). Replace the tire pressure sensor as well as it is not designed to be reused.

## Run Flat Tires — If Equipped

Run Flat tires allow you the capability to drive 50 miles (80 km) at 50 mph (80 km/h) after a rapid loss of inflation pressure. This rapid loss of inflation is referred to as the Run Flat mode. A Run Flat mode occurs when the tire inflation pressure is of/or below 14 psi (96 kPa). Once a Run Flat tire reaches the Run Flat mode it has limited driving capabilities and needs to be replaced immediately. A Run Flat tire is not repairable. When a Run Flat tire is changed after driving with underinflated tire condition, please replace the TPM sensor as it is not designed to be reused when driven under Run Flat mode 14 psi (96 kPa) condition.

### NOTE:

TPM Sensor must be replaced after driving the vehicle on a flat tire condition.

It is not recommended driving a vehicle loaded at full capacity or to tow a trailer while a tire is in the Run Flat mode.

For more information ⇨ page 242.

## Tire Spinning


When stuck in mud, sand, snow, or ice conditions, do not spin your vehicle's wheels above 30 mph (48 km/h) or for longer than 30 seconds continuously without stopping ⇨ page 310.

### WARNING!

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause tire damage or failure. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) for more than 30 seconds continuously when you are stuck, and do not let anyone near a spinning wheel, no matter what the speed.

## Tread Wear Indicators

Tread wear indicators are in the original equipment tires to help you in determining when your tires should be replaced.

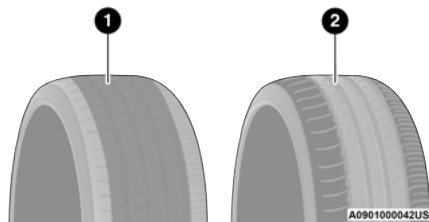

**Tire Tread**

1 – Worn Tire

2 – New Tire

These indicators are molded into the bottom of the tread grooves. They will appear as bands when the tread depth becomes a 1/16 of an inch (1.6 mm). When the tread is worn to the tread wear indicators, the tire should be replaced ↪ page 362.

## Life Of Tire

The service life of a tire is dependent upon varying factors including, but not limited to:

- Driving style.
- Tire pressure - Improper cold tire inflation pressures can cause uneven wear patterns to develop across the tire tread. These abnormal wear patterns will reduce tread life, resulting in the need for earlier tire replacement.
- Distance driven.
- Performance tires, tires with a speed rating of V or higher, and Summer tires typically have a reduced tread life. Rotation of these tires per the vehicle scheduled maintenance is highly recommended.

### WARNING!

Tires and the spare tire should be replaced after six years, regardless of the remaining tread. Failure to follow this warning can result in sudden tire failure. You could lose control and have a collision resulting in serious injury or death.

## NOTE:

Wheel Valve Stem must be replaced as well when installing new tires due to wear and tear in existing tires.

Keep dismantled tires in a cool, dry place with as little exposure to light as possible. Protect tires from contact with oil, grease, and gasoline.

## Replacement Tires

The tires on your new vehicle provide a balance of many characteristics. They should be inspected regularly for wear and correct cold tire inflation pressures. The manufacturer strongly recommends that you use tires equivalent to the originals in size, quality and performance when replacement is needed ↪ page 362. Refer to the Tire and Loading Information placard or the Vehicle Certification Label for the size designation of your tire. The Load Index and Speed Symbol for your tire will be found on the original equipment tire sidewall.

For more information relating to the Load Index and Speed Symbol of a tire ↪ page 351.

It is recommended to replace the two front tires or two rear tires as a pair. Replacing just one tire can seriously affect your vehicle's handling. If you ever replace a wheel, make sure that the wheel's specifications match those of the original wheels.

It is recommended you contact an authorized tire dealer or original equipment dealer with any questions you may have on tire specifications or capability. Failure to use equivalent replacement tires may adversely affect the safety, handling, and ride of your vehicle.

### WARNING!

- Do not use a tire, wheel size, load rating, or speed rating other than that specified for your vehicle. Some combinations of unapproved tires and wheels may change suspension dimensions and performance characteristics, resulting in changes to steering, handling, and braking of your vehicle. This can cause unpredictable handling and stress to steering and suspension components. You could lose control and have a collision resulting in serious injury or death. Use only the tire and wheel sizes with load ratings approved for your vehicle.

*(Continued)*

### WARNING!

- Never use a tire with a smaller load index or capacity, other than what was originally equipped on your vehicle. Using a tire with a smaller load index could result in tire overloading and failure. You could lose control and have a collision.
- Failure to equip your vehicle with tires having adequate speed capability can result in sudden tire failure and loss of vehicle control.

### CAUTION!

Replacing original tires with tires of a different size may result in false speedometer and odometer readings.

## TIRE TYPES

### All Season Tires — If Equipped

All Season tires provide traction for all seasons (Spring, Summer, Autumn, and Winter). Traction levels may vary between different all season tires. All season tires can be identified by the M+S, M&S, M/S or MS designation on the tire

sidewall. Use all season tires only in sets of four; failure to do so may adversely affect the safety and handling of your vehicle.

### Summer Or Three Season Tires — If Equipped

Summer tires provide traction in both wet and dry conditions, and are not intended to be driven in snow or on ice. If your vehicle is equipped with Summer tires, be aware these tires are not designed for Winter or cold driving conditions. Install Winter tires on your vehicle when ambient temperatures are less than 40° F (5° C) or if roads are covered with ice or snow. For more information, contact an authorized dealer.

Summer tires do not contain the all season designation or mountain/snowflake symbol on the tire sidewall. Use Summer tires only in sets of four; failure to do so may adversely affect the safety and handling of your vehicle.

### WARNING!

Do not use Summer tires in snow/ice conditions. You could lose vehicle control, resulting in severe injury or death. Driving too fast for conditions also creates the possibility of loss of vehicle control.

## Snow Tires

Some areas of the country require the use of snow tires during the Winter. Snow tires can be identified by a “mountain/snowflake” symbol on the tire sidewall.



If you need snow tires, select tires equivalent in size and type to the original equipment tires. Use snow tires only in sets of four; failure to do so may adversely affect the safety and handling of your vehicle.

Snow tires generally have lower speed ratings than what was originally equipped with your vehicle and should not be operated at sustained speeds over 75 mph (120 km/h). For speeds above 75 mph (120 km/h) refer to original equipment or an authorized tire dealer for recommended safe operating speeds, loading and cold tire inflation pressures.

While studded tires improve performance on ice, skid and traction capability on wet or dry surfaces may be poorer than that of non-studded tires. Some states prohibit studded tires; therefore, local laws should be checked before using these tire types.

## SPARE TIRES — IF EQUIPPED

### NOTE:

For vehicles equipped with Tire Service Kit instead of a spare tire ⇨ page 298.

### CAUTION!

Because of the reduced ground clearance, do not take your vehicle through an automatic car wash with a compact or limited use temporary spare installed. Damage to the vehicle may result.

For restrictions when towing with a spare tire designated for temporary emergency use ⇨ page 140.

### Spare Tire Matching Original Equipped Tire And Wheel — If Equipped

Your vehicle may be equipped with a spare tire and wheel equivalent in look and function to the original equipment tire and wheel found on the front or rear axle of your vehicle. This spare tire may be used in the tire rotation for your vehicle. If your vehicle has this option, refer to an authorized tire dealer for the recommended tire rotation pattern.

## Compact Spare Tire — If Equipped

The compact spare is for temporary emergency use only. You can identify if your vehicle is equipped with a compact spare by looking at the spare tire description on the Tire and Loading Information Placard located on the driver’s side door opening or on the sidewall of the tire. Compact spare tire descriptions begin with the letter “T” or “S” preceding the size designation. Example: T145/80D18 103M.

T, S = Temporary Spare Tire

Since this tire has limited tread life, the original equipment tire should be repaired (or replaced) and reinstalled on your vehicle at the first opportunity.

Do not install a wheel cover or attempt to mount a conventional tire on the compact spare wheel, since the wheel is designed specifically for the compact spare tire. Do not install more than one compact spare tire and wheel on the vehicle at any given time.

**WARNING!**

Compact and collapsible spares are for temporary emergency use only. With these spares, do not drive more than 50 mph (80 km/h). Temporary use spares have limited tread life. When the tread is worn to the tread wear indicators, the temporary use spare tire needs to be replaced. Be sure to follow the warnings, which apply to your spare. Failure to do so could result in spare tire failure and loss of vehicle control.

**Full Size Spare — If Equipped**

The full size spare is for temporary emergency use only. This tire may look like the originally equipped tire on the front or rear axle of your vehicle, but it is not. This spare tire may have limited tread life. When the tread is worn to the tread wear indicators, the temporary use full size spare tire needs to be replaced. Since it is not the same as your original equipment tire, replace (or repair) the original equipment tire and reinstall on the vehicle at the first opportunity.

**Limited Use Spare — If Equipped**

The limited use spare tire is for temporary emergency use only. This tire is identified by a label located on the limited use spare wheel. This label contains the driving limitations for this spare. This tire may look like the original equipped tire on the front or rear axle of your vehicle, but it is not. Installation of this limited use spare tire affects vehicle handling. Since it is not the same as your original equipment tire, replace (or repair) the original equipment tire and reinstall on the vehicle at the first opportunity.

**WARNING!**

Limited use spares are for emergency use only. Installation of this limited use spare tire affects vehicle handling. With this tire, do not drive more than the speed listed on the limited use spare wheel. Keep inflated to the cold tire inflation pressures listed on your Tire and Loading Information Placard located on the driver's side B-pillar or the rear edge of the driver's side door. Replace (or repair) the original equipment tire at the first opportunity and reinstall it on your vehicle. Failure to do so could result in loss of vehicle control.

**SNOW TRACTION DEVICES**

Use of traction devices require sufficient tire-to-body clearance. Due to limited clearance, the following snow traction devices are recommended. Follow these recommendations to guard against damage:

- Snow traction device must be of proper size for the tire, as recommended by the snow traction device manufacturer.
- No other tire sizes are recommended for use with the snow traction device.
- Please follow the table below for the recommended tire size, axle and snow traction device:



<b>FWD Trim Level</b>	<b>Axle</b>	<b>Tire/Wheel Size</b>	<b>Snow Traction Device (maximum projection beyond tire profile or equivalent)</b>
Sport Latitude Limited	Front	215/65R16 16 x 6.5 x 40 mm	7 mm Cable Chain

<b>AWD Trim Level</b>	<b>Axle</b>	<b>Tire/Wheel Size</b>	<b>Snow Traction Device (maximum projection beyond tire profile or equivalent)</b>
Sport Latitude Limited Trailhawk	Front	215/65R16 16 x 6.5 x 40mm	7mm Cable Chain

**WARNING!**

Using tires of different size and type (M+S, Snow) between front and rear axles can cause unpredictable handling. You could lose control and have a collision.

**CAUTION!**

To avoid damage to your vehicle or tires, observe the following precautions:

- Because of restricted traction device clearance between tires and other suspension components, it is important that only traction devices in good condition are used. Broken devices can cause serious damage. Stop the vehicle immediately if noise occurs that could indicate device breakage. Remove the damaged parts of the device before further use.
- Install device as tightly as possible and then retighten after driving about  $\frac{1}{2}$  mile (0.8 km). Autosock traction devices do not require retightening.
- Do not exceed 30 mph (48 km/h).
- Drive cautiously and avoid severe turns and large bumps, especially with a loaded vehicle.
- Do not drive for a prolonged period on dry pavement.

(Continued)

**CAUTION!**

- Observe the traction device manufacturer's instructions on the method of installation, operating speed, and conditions for use. Always use the suggested operating speed of the device manufacturer's if it is less than 30 mph (48 km/h).
- Do not use traction devices on a compact spare tire.


**TIRE ROTATION RECOMMENDATIONS**

The tires on the front and rear of your vehicle operate at different loads and perform different steering, handling, and braking functions. For these reasons, they wear at unequal rates.

These effects can be reduced by timely rotation of tires. The benefits of rotation are especially worthwhile with aggressive tread designs such as those on On/Off Road type tires. Rotation will increase tread life, help to maintain mud, snow, and wet traction levels, and contribute to a smooth, quiet ride.

For the proper maintenance intervals  $\rightarrow$  page 315. The reasons for any rapid or unusual wear should be corrected prior to rotation being performed.

The suggested rotation method is the "forward cross" shown in the following diagram. This rotation pattern does not apply to some directional tires that must not be reversed.

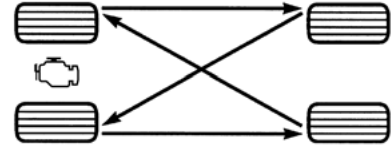

055707139

**Tire Rotation (Forward Cross)**

8

**CAUTION!**

Proper operation of four-wheel drive vehicles depends on tires of equal size, type and circumference on each wheel. Any difference in tire size can cause damage to the power transfer unit. Tire rotation schedule should be followed to balance tire wear.

## DEPARTMENT OF TRANSPORTATION UNIFORM TIRE QUALITY GRADES

The following tire grading categories were established by the National Highway Traffic Safety Administration. The specific grade rating assigned by the tire's manufacturer in each category is shown on the sidewall of the tires on your vehicle.

All passenger vehicle tires must conform to Federal safety requirements in addition to these grades.

### TREADWEAR

The Treadwear grade is a comparative rating, based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices, and differences in road characteristics and climate.

### TRACTION GRADES

The Traction grades, from highest to lowest, are AA, A, B, and C. These grades represent the tire's ability to stop on wet pavement, as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

<b>WARNING!</b>
The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

## TEMPERATURE GRADES

The Temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat, when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance, which all passenger vehicle tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel, than the minimum required by law.

### WARNING!

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat build-up and possible tire failure.

## STORING THE VEHICLE

If you are storing your vehicle for more than three weeks, we recommend that you take the following steps to minimize the drain on your vehicle's battery:

- Disconnect the negative cable from battery.
- Any time you store your vehicle or keep it out of service (i.e., vacation) for two weeks or more, run the air conditioning system at idle for about five minutes in the fresh air and high blower setting. This will ensure adequate system lubrication to minimize the possibility of compressor damage when the system is started again.

### NOTE:

When the vehicle has not been started or driven for at least 30 days, an Extended Park Starting is required to start the vehicle → page 91.

### CAUTION!

Before removal of the positive and negative terminals to the battery, wait at least a minute with ignition switch in the OFF position and close the driver's door. When reconnecting the positive and negative terminals to the battery be sure the ignition switch is in the OFF position and the driver's door is closed.

## BODYWORK

### PROTECTION FROM ATMOSPHERIC AGENTS

Vehicle body care requirements vary according to geographic locations and usage. Chemicals that make roads passable in snow and ice and those that are sprayed on trees and road surfaces during other seasons are highly corrosive to the metal in your vehicle. Outside parking, which exposes your vehicle to airborne contaminants, road surfaces on which the

vehicle is operated, extreme hot or cold weather and other extreme conditions will have an adverse effect on paint, metal trim, and underbody protection.

The following maintenance recommendations will enable you to obtain maximum benefit from the corrosion resistance built into your vehicle.

### What Causes Corrosion?

Corrosion is the result of deterioration or removal of paint and protective coatings from your vehicle.

The most common causes are:

- Road salt, dirt and moisture accumulation.
- Stone and gravel impact.
- Insects, tree sap and tar.
- Salt in the air near seacoast localities.
- Atmospheric fallout/industrial pollutants.

## BODY AND UNDERBODY MAINTENANCE

### Wheel And Wheel Trim Care

All wheels and wheel trim, especially aluminum and chrome plated wheels, should be cleaned regularly using mild (neutral Ph) soap and water to maintain their luster and to prevent

corrosion. Wash wheels with the same soap solution recommended for the body of the vehicle and remember to always wash when the surfaces are not hot to the touch.

Your wheels are susceptible to deterioration caused by salt, sodium chloride, magnesium chloride, calcium chloride, etc., and other road chemicals used to melt ice or control dust on dirt roads. Use a soft cloth or sponge and mild soap to wipe away promptly. Do not use harsh chemicals or a stiff brush. They can damage the wheel's protective coating that helps keep them from corroding and tarnishing.

#### CAUTION!

Avoid products or automatic car washes that use acidic solutions or strong alkaline additives or harsh brushes. Many aftermarket wheel cleaners and automatic car washes may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, Mopar® Wheel Cleaner or equivalent is recommended.

When cleaning extremely dirty wheels including excessive brake dust, care must be taken in the selection of tire and wheel cleaning chemicals and equipment to prevent damage to the wheels. Mopar® Wheel Treatment or Mopar® Chrome Cleaner or their equivalent is recommended or select a non-abrasive, non-acidic cleaner for aluminum or chrome wheels.

#### CAUTION!

Do not use scouring pads, steel wool, a bristle brush, metal polishes or oven cleaner. These products may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, Mopar® Wheel Cleaner or equivalent is recommended.

#### NOTE:

If you intend parking or storing your vehicle for an extended period after cleaning the wheels with wheel cleaner, drive your vehicle and apply the brakes to remove the water droplets from the brake components. This activity will remove the red rust on the brake rotors and prevent vehicle vibration when braking.

### Dark Vapor Chrome, Black Satin Chrome, or Low Gloss Clear Coat Wheels

#### CAUTION!

If your vehicle is equipped with these specialty wheels, DO NOT USE wheel cleaners, abrasives, or polishing compounds. They will permanently damage this finish and such damage is not covered by the New Vehicle Limited Warranty. HAND WASH ONLY USING MILD SOAP AND WATER WITH A SOFT CLOTH. Used on a regular basis; this is all that is required to maintain this finish.

### Cleaning Headlights

Your vehicle is equipped with plastic headlights and fog lights that are lighter and less susceptible to stone breakage than glass headlights.

Plastic is not as scratch resistant as glass and therefore different lens cleaning procedures must be followed.

To minimize the possibility of scratching the lenses and reducing light output, avoid wiping with a dry cloth. To remove road dirt, wash with a mild soap solution followed by rinsing.

Do not use abrasive cleaning components, solvents, steel wool or other aggressive material to clean the lenses.

### PRESERVING THE BODYWORK

#### Washing

- Wash your vehicle regularly. Always wash your vehicle in the shade using Mopar® Car Wash, or a mild car wash soap, and rinse the panels completely with water.
- If insects, tar, or other similar deposits have accumulated on your vehicle, use Mopar® Super Kleen Bug and Tar Remover to remove.
- Use a high quality cleaner wax, such as Mopar® Cleaner Wax to remove road film, stains and to protect your paint finish. Use precautions to not scratch the paint.
- Avoid using abrasive compounds and power buffing that may diminish the gloss or thin out the paint finish.

#### CAUTION!

- Do not use abrasive or strong cleaning materials such as steel wool or scouring powder that will scratch metal and painted surfaces.
- Use of power washers exceeding 1,200 psi (8,274 kPa) can result in damage or removal of paint and decals.

#### Special Care

- If you drive on salted or dusty roads or if you drive near the ocean, hose off the undercarriage at least once a month.
- It is important that the drain holes in the lower edges of the doors, rocker panels, and trunk be kept clear and open.
- If you detect any stone chips or scratches in the paint, touch them up immediately.
- If your vehicle is damaged due to a collision or similar cause that destroys the paint and protective coating, have your vehicle repaired as soon as possible.

- If you carry special cargo such as chemicals, fertilizers, de-icer salt, etc., be sure that such materials are well packaged and sealed.
- If a lot of driving is done on gravel roads, consider mud or stone shields behind each wheel.
- Use Mopar® Touch Up Paint on scratches as soon as possible. An authorized dealer has touch up paint to match the color of your vehicle.

## INTERIORS

### SEATS AND FABRIC PARTS

Use Mopar® Total Clean to clean fabric upholstery and carpeting.

#### WARNING!

Do not use volatile solvents for cleaning purposes. Many are potentially flammable, and if used in closed areas they may cause respiratory harm.

### Stain Repel Fabric Cleaning Procedure — If Equipped

Stain Repel seats may be cleaned in the following manner:

- Remove as much of the stain as possible by blotting with a clean, dry towel.
- Blot any remaining stain with a clean, damp towel.
- For tough stains, apply Mopar® Total Clean, or a mild soap solution to a clean, damp cloth and remove stain. Use a fresh, damp towel to remove soap residue.
- For grease stains, apply Mopar® Multi-Purpose Cleaner to a clean, damp cloth and remove stain. Use a fresh, damp towel to remove soap residue.
- Do not use any harsh solvents or any other form of protectants on Stain Repel products.

### Seat Belt Maintenance

Do not bleach, dye or clean the belts with chemical solvents or abrasive cleaners. This will weaken the fabric.

If the belts need cleaning, use a mild soap solution or lukewarm water. Do not remove the belts from the vehicle to wash them. Dry with a soft cloth.

Sun damage can also weaken the fabric. Replace the belts if they appear frayed or worn or if the buckles do not work properly.

#### WARNING!

A frayed or torn seat belt could rip apart in a collision and leave you with no protection. Inspect the seat belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the seat belt system. If your vehicle is involved in a collision, or if you have questions regarding seat belt or retractor conditions, take your vehicle to an authorized FCA dealer or authorized FCA Certified Collision Care Program facility for inspection.

## PLASTIC AND COATED PARTS

Use Mopar® Total Clean to clean vinyl upholstery.

### CAUTION!

- Direct contact of air fresheners, insect repellents, suntan lotions, or hand sanitizers to the plastic, painted, or decorated surfaces of the interior may cause permanent damage. Wipe away immediately.
- Damage caused by these type of products may not be covered by your New Vehicle Limited Warranty.

### Cleaning Plastic Instrument Cluster Lenses

The lenses in front of the instruments in this vehicle are molded in clear plastic. When cleaning the lenses, care must be taken to avoid scratching the plastic.

Clean with a wet soft cloth. A mild soap solution may be used, but do not use high alcohol content or abrasive cleaners. If soap is used, wipe clean with a clean damp cloth. Dry with a soft cloth.

## LEATHER SURFACES

Mopar® Total Clean is specifically recommended for leather upholstery.

Your leather upholstery can be best preserved by regular cleaning with a damp soft cloth. Small particles of dirt can act as an abrasive and damage the leather upholstery and should be removed promptly with a damp cloth. Stubborn soils can be removed easily with a soft cloth and Mopar® Total Clean. Care should be taken to avoid soaking your leather upholstery with any liquid. Please do not use polishes, oils, cleaning fluids, solvents, detergents, or ammonia-based cleaners to clean your leather upholstery.

### NOTE:

If equipped with light colored leather, it tends to show any foreign material, dirt, and fabric dye transfer more so than darker colors. The leather is designed for easy cleaning, and the manufacturer recommends Mopar® total care leather cleaner applied on a cloth to clean the leather seats as needed.

### CAUTION!

Do not use Alcohol and Alcohol-based and/or Ketone based cleaning products to clean leather upholstery, as damage to the upholstery may result.

## GLASS SURFACES

All glass surfaces should be cleaned on a regular basis with Mopar® Glass Cleaner, or any commercial household-type glass cleaner. Never use an abrasive type cleaner. Use caution when cleaning the inside rear window equipped with electric defrosters or windows equipped with radio antennas. Do not use scrapers or other sharp instruments that may scratch the elements.


When cleaning the rear view mirror, spray cleaner on the towel or cloth that you are using. Do not spray cleaner directly on the mirror.



# TECHNICAL SPECIFICATIONS

## VEHICLE IDENTIFICATION NUMBER (VIN)

The VIN is found on the left front corner of the windshield and is visible from the outside of the vehicle.

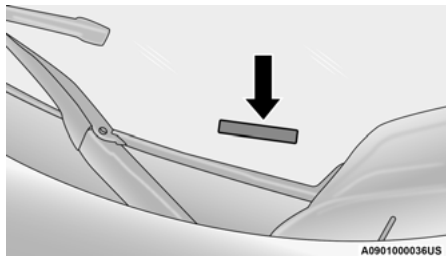

**Vehicle Identification Number**

### NOTE:

It is illegal to remove or alter the VIN.

## WHEEL AND TIRE TORQUE SPECIFICATIONS


Proper lug nut/bolt torque is very important to ensure that the wheel is properly mounted to the vehicle. Any time a wheel has been removed and reinstalled on the vehicle, the lug nuts/bolts should be torqued using a properly calibrated torque wrench using a six sided (hex) deep wall socket.

### TORQUE SPECIFICATIONS

Lug Nut/Bolt Torque	**Lug Nut/Bolt Size	Lug Nut/Bolt Socket Size
100 Ft-Lb (135 N·m)	M12 x 1.25	19 mm


\*\*Use only authorized dealer recommended lug nuts/bolts and clean or remove any dirt or oil before tightening.

Inspect the wheel mounting surface prior to mounting the tire and remove any corrosion or loose particles.

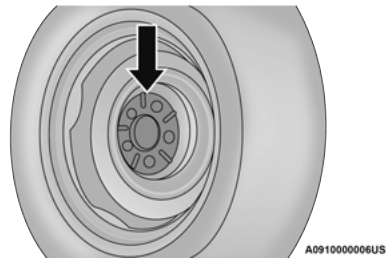

**Wheel Mounting Surface**

Tighten the lug nuts/bolts in a star pattern until each nut/bolt has been tightened twice. Ensure that the socket is fully engaged on the lug nut/bolt (do not insert it halfway).

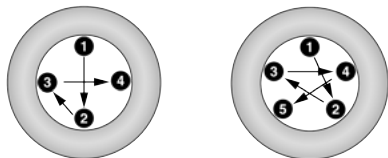

A0910000005US

### Torque Patterns

After 25 miles (40 km), check the lug nut/bolt torque to be sure that all the lug nuts/bolts are properly tightened.

### WARNING!

To avoid the risk of forcing the vehicle off the jack, do not tighten the lug nuts/bolts fully until the vehicle has been lowered. Failure to follow this warning may result in personal injury.

## BRAKE SYSTEM

Your vehicle is equipped with power assisted brakes as standard equipment. In the event power assist is lost for any reason (for example, repeated brake applications with the engine off), the brakes will still function. However, the effort required to brake the vehicle will be much greater than that required with the power system operating.

If either of the two hydraulic systems lose normal capability, the remaining system will still function with some loss of overall braking effectiveness. This will be evident by increased pedal travel during application and greater pedal force required to slow or stop. In addition, if the malfunction is caused by an internal leak, as the brake fluid in the master cylinder drops, the Brake Warning Light will light.

### WARNING!

Driving a vehicle with the “Brake Warning Light” on is dangerous. A significant decrease in braking performance or vehicle stability during braking may occur. It will take you longer to stop the vehicle or will make your vehicle harder to control. You could have a collision. Have the vehicle checked immediately.

## FUEL REQUIREMENTS

While operating on gasoline with the required octane number, hearing a light knocking sound from the engine is not a cause for concern. However, if the engine is heard making a heavy knocking sound, see a dealer immediately. Use of gasoline with a lower than recommended octane number can cause engine failure and may void or not be covered by the New Vehicle Limited Warranty.

Poor quality gasoline can cause problems such as hard starting, stalling, and hesitations. If you experience these symptoms, try another brand of gasoline before considering service for the vehicle.

## 2.4L ENGINE



This engine is designed to meet all emissions regulations and provide excellent fuel economy and performance when using high quality unleaded “regular” gasoline having a octane rating of 87 using the (R+M)/2 method. The use of premium gasoline is not recommended, as it will not provide any benefit over regular gasoline in these engines.

### REFORMULATED GASOLINE

Many areas of the country require the use of cleaner burning gasoline referred to as “reformulated gasoline”. Reformulated gasoline contains oxygenates and are specifically blended to reduce vehicle emissions and improve air quality.

The use of reformulated gasoline is recommended. Properly blended reformulated gasoline will provide improved performance and durability of engine and fuel system components.

### GASOLINE/OXYGENATE BLENDS

Some fuel suppliers blend unleaded gasoline with oxygenates such as ethanol.

#### CAUTION!

DO NOT use E-85, gasoline containing methanol, or gasoline containing more than 15% ethanol (E-15). Use of these blends may result in starting and drivability problems, damage critical fuel system components, cause emissions to exceed the applicable standard, and/or cause the Malfunction Indicator Light to illuminate. Please observe pump labels as they should clearly communicate if a fuel contains greater than 15% ethanol (E-15).

Problems that result from using gasoline containing more than 15% ethanol (E-15) or gasoline containing methanol are not the responsibility of the manufacturer and may void the New Vehicle Limited Warranty.

### E-85 USAGE IN NON-FLEX FUEL VEHICLES

Non-Flex Fuel Vehicles (FFV) are compatible with gasoline containing up to 15% ethanol (E-15). Gasoline with higher ethanol content may void the New Vehicle Limited Warranty.

If a Non-FFV vehicle is inadvertently fueled with E-85 fuel, the engine will have some or all of these symptoms:

- Operate in a lean mode.
- OBD II “Malfunction Indicator Light” on.
- Poor engine performance.
- Poor cold start and cold drivability.
- Increased risk for fuel system component corrosion.

### CNG AND LP FUEL SYSTEM MODIFICATIONS

Modifications that allow the engine to run on Compressed Natural Gas (CNG) or Liquid Propane (LP) may result in damage to the engine, emissions, and fuel system components. Problems that result from running CNG or LP are not the responsibility of the manufacturer and may void the New Vehicle Limited Warranty.

## METHYLCYCLOPENTADIENYL MANGANESE TRICARBONYL (MMT) IN GASOLINE

MMT is a manganese-containing metallic additive that is blended into some gasoline to increase octane. Gasoline blended with MMT provides no performance advantage beyond gasoline of the same octane number without MMT. Gasoline blended with MMT reduces spark plug life and reduces emissions system performance in some vehicles. The manufacturer recommends that gasoline without MMT be used in your vehicle. The MMT content of gasoline may not be indicated on the gasoline pump, therefore, you should ask your gasoline retailer whether the gasoline contains MMT. MMT is prohibited in Federal and California reformulated gasoline.

### MATERIALS ADDED TO FUEL

Besides using unleaded gasoline with the proper octane rating, gasolines that contain detergents, corrosion and stability additives are recommended. Using gasolines that have these additives will help improve fuel economy, reduce emissions, and maintain vehicle performance.



Designated TOP TIER Detergent Gasoline contains a higher level of detergents to further aid in minimizing engine and fuel system deposits. When available, the usage of TOP TIER Detergent gasoline is recommended. Visit [www.toptiergas.com](http://www.toptiergas.com) for a list of TOP TIER Detergent Gasoline Retailers.

Indiscriminate use of fuel system cleaning agents should be avoided. Many of these materials intended for gum and varnish removal may contain active solvents or similar ingredients. These can harm fuel system gasket and diaphragm materials.

### FUEL SYSTEM CAUTIONS

<b>CAUTION!</b>
<p>Follow these guidelines to maintain your vehicle's performance:</p> <ul style="list-style-type: none"> <li>• The use of leaded gasoline is prohibited by Federal law. Using leaded gasoline can impair engine performance and damage the emissions control system.</li> </ul>

(Continued)

<b>CAUTION!</b>
<ul style="list-style-type: none"> <li>• An out-of-tune engine or certain fuel or ignition malfunctions can cause the catalytic converter to overheat. If you notice a pungent burning odor or some light smoke, your engine may be out of tune or malfunctioning and may require immediate service. Contact an authorized dealer for service assistance.</li> <li>• The use of fuel additives, which are now being sold as octane enhancers, is not recommended. Most of these products contain high concentrations of methanol. Fuel system damage or vehicle performance problems resulting from the use of such fuels or additives is not the responsibility of the manufacturer and may void or not be covered under the New Vehicle Limited Warranty.</li> </ul>

**NOTE:** Intentional tampering with the emissions control system can result in civil penalties being assessed against you.

## FLUID CAPACITIES

	US	Metric
<b>Fuel (Approximate)</b>		
All Engines	13.5 Gallons	51 Liters
<b>Engine Oil With Filter</b>		
2.4L Engine	5.5 Quarts	5.2 Liters
<b>Cooling System*</b>		
2.4L Engine	6.8 Quarts	6.5 Liters
* Includes heater and coolant recovery bottle filled to MAX level.		

## ENGINE FLUIDS AND LUBRICANTS

Component	Fluid, Lubricant, or Genuine Part
Engine Coolant	We recommend you use Mopar® Antifreeze/Coolant 10 Year/ 150,000 Miles (240,000 Kilometers) Formula OAT (Organic Additive Technology) meeting the requirements of the manufacturer Material Standard MS.90032.
Engine Oil - 2.4L Engine	We recommend you use SAE 0W-20 API Certified Engine Oil, meeting the requirements of the manufacturer Material Standard MS-6395 such as Mopar®, Pennzoil, and Shell Helix. Refer to your engine oil filler cap for correct SAE grade.

Component	Fluid, Lubricant, or Genuine Part
Engine Oil Filter	We recommend you use a Mopar® Engine Oil Filter. If a Mopar® Engine Oil Filter is unavailable, only use filters that meet or exceed SAE/USCAR-36 Filter Performance Requirements.
Fuel Selection – 2.4L Engine	87 Octane (R+M)/2 Method, 0-15% ethanol.

## CHASSIS FLUIDS AND LUBRICANTS

Component	Fluid, Lubricant, or Genuine Part
6-Speed Automatic Transmission (FWD Models) – If Equipped	Use only Mopar® AW-1 Automatic Transmission Fluid, or equivalent. Failure to use the correct fluid may affect the function or performance of your transmission.
9-Speed Automatic Transmission (4WD Models) – If Equipped	Use only Mopar® ZF 8&9 Speed ATF Automatic Transmission Fluid, or equivalent. Failure to use the correct fluid may affect the function or performance of your transmission.
Power Transfer Unit (PTU) – If Equipped	We recommend you use Mopar® Front Axle/PTU Synthetic Axle Lubricant SAE 75W-90 (API GL-5).
Rear Differential (RDM) – If Equipped	We recommend you use Mopar® Rear Axle/RDM Synthetic Axle Lubricant SAE 75W-90 (API GL-5).
Brake Master Cylinder	We recommend you use Mopar® DOT 3.

## CUSTOMER ASSISTANCE

### SUGGESTIONS FOR OBTAINING SERVICE FOR YOUR VEHICLE

#### PREPARE FOR THE APPOINTMENT

All work to be performed may not be covered by the warranty. Discuss additional charges with the service manager. Keep a maintenance log of your vehicle's service history. This can often provide a clue to the current problem.

#### PREPARE A LIST

Make a written list of your vehicle's problems or the specific work you want done. If you've had an accident or work done that is not on your maintenance log, let the service advisor know.

#### BE REASONABLE WITH REQUESTS

If you list a number of items and you must have your vehicle by the end of the day, discuss the situation with the service advisor and list the items in order of priority. At many authorized dealers, you may obtain a rental vehicle (additional charges may apply). If you need a rental, it is advisable to make these arrangements when you call for an appointment.

#### IF YOU NEED ASSISTANCE

FCA US LLC and its authorized dealers are vitally interested in your satisfaction. We want you to be happy with our products and services.

Warranty service must be done by an authorized dealer. We strongly recommend that you take the vehicle to an authorized dealer. They know your vehicle the best, and are most concerned that you get prompt and high quality service. FCA US LLC's authorized dealers have

the facilities, factory-trained technicians, special tools, and the latest information to ensure the vehicle is fixed correctly and in a timely manner.

This is why you should always talk to an authorized dealer's service manager first. If for some reason you are still not satisfied, talk to the general manager or owner of the authorized dealer. They want to know if you need assistance. If an authorized dealer is unable to resolve the concern, you may contact FCA US LLC's Customer Assistance center.

Any communication to FCA US LLC's customer center should include the following information:

- Owner's name and address
- Owner's telephone number (home, mobile, and office)
- Authorized dealer name
- Vehicle Identification Number (VIN)
- Vehicle delivery date and mileage

## FCA US LLC CUSTOMER CENTER

P.O. Box 21-8004

Auburn Hills, MI 48321-8004

Phone: (877) 426-5337

## FCA CANADA INC. CUSTOMER CENTER

P.O. Box 1621

Windsor, Ontario N9A 4H6

Phone: (800) 465-2001 English /  
(800) 387-9983 French

## MEXICO

Av. Prolongacion Paseo de la Reforma, 1240

Sante Fe C.P. 05109

Mexico, D. F.

In Mexico City: (800) 505-1300

Outside Mexico City: +(52) 55 50817568

## PUERTO RICO AND US VIRGIN ISLANDS

FCA Caribbean LLC

P.O. Box 191857

San Juan 00919-1857

Phone: (877) 426-5337

Fax: (787) 782-3345

## CUSTOMER ASSISTANCE FOR THE HEARING OR SPEECH IMPAIRED (TDD/TTY)

To assist customers who have hearing difficulties, FCA US LLC has installed special Telecommunication Devices for the Deaf (TDD) equipment at its customer center. Any hearing or speech impaired customer, who has access to a TDD or a conventional teletypewriter (TTY) in the United States, can communicate with FCA US LLC by dialing 1-800-380-2479.

Canadian residents with hearing difficulties that require assistance can use the special needs relay service offered by Bell Canada. For TTY teletypewriter users, dial 711 and for Voice callers, dial 1-800-855-0511 to connect with a Bell Relay Service operator.

## SERVICE CONTRACT

You may have purchased a service contract for a vehicle to help protect you from the high cost of unexpected repairs after FCA US LLC's New Vehicle Limited Warranty expires. The Mopar® Vehicle Protection plans are the ONLY vehicle extended protection plans authorized,

endorsed and backed by FCA US LLC to provide additional protection beyond your vehicle's warranty. If you purchased a Mopar® Vehicle Protection Plan, you will receive Plan Provisions and an Owner Identification Card in the mail within three weeks of the vehicle delivery date. If you have any questions about the service contract, call the FCA US LLC's Service Contract National Customer Hotline at 1-800-521-9922 (Canadian residents, call (800) 465-2001 English / (800) 387-9983 French).

FCA US LLC is not responsible for any service contract you may have purchased from another manufacturer. If you require service after the FCA US LLC New Vehicle Limited Warranty expires, please refer to the contract documents, and contact the person listed in those documents.

We appreciate that you have made a major investment when you purchased the vehicle. An authorized dealer has also made a major investment in facilities, tools, and training to assure that you are absolutely delighted with the ownership experience.



**WARNING!**

Engine exhaust (internal combustion engines only), some of its constituents, and certain vehicle components contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm.

**WARRANTY INFORMATION**

See the Warranty Information for the terms and provisions of FCA US LLC warranties applicable to this vehicle and market. Refer to [www.mopar.com/om](http://www.mopar.com/om) for further information.

See the Warranty Information for the terms and provisions of FCA Canada Inc. warranties applicable to this vehicle and market. Refer to [www.owners.mopar.ca/en/](http://www.owners.mopar.ca/en/) for further information.

For French, refer to [www.owners.mopar.ca/fr/](http://www.owners.mopar.ca/fr/) for further information.

Use this QR code to access your digital experience.

**MOPAR® PARTS**

Mopar® original equipment parts & accessories and factory filled fluids are available from an authorized dealer. They are recommended for your vehicle to keep it operating at its best and maintain its original condition.

**REPORTING SAFETY DEFECTS****IN THE 50 UNITED STATES AND WASHINGTON, D.C.**

If you believe that your vehicle has a defect that could cause a crash or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying FCA US LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, an authorized dealer, or FCA US LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll free at 1-888-327-4236 (TTY: 1-800-424-9153); or go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., West Building, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

## IN CANADA

If you believe that your vehicle has a safety defect, you should contact the Customer Service Department immediately. Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to [wwwapps.tc.gc.ca/Saf-Sec-Sur/7/PCDB-BDPP](http://wwwapps.tc.gc.ca/Saf-Sec-Sur/7/PCDB-BDPP).

## PUBLICATION ORDER FORMS

To order the following manuals, you may use either the website or the phone numbers listed below.

### Service Manuals

These comprehensive Service Manuals provide a complete working knowledge of the vehicle, system, and/or components and is written in straightforward language with illustrations, diagrams, and charts.

### Diagnostic Procedure Manuals

Diagnostic Procedure Manuals are filled with diagrams, charts and detailed illustrations. These manuals make it easy to find and fix problems on computer-controlled vehicle systems and features. They show exactly how to find and correct problems, using step-by-step troubleshooting and drivability procedures, proven diagnostic tests and a complete list of all tools and equipment.

To order a hard copy of your Service or Diagnostic Procedure manuals, visit:

[www.techauthority.com](http://www.techauthority.com) (US and Canada).

### Owner's Manuals

These Owner's Manuals have been prepared with the assistance of service and engineering specialists to acquaint you with specific FCA vehicles.

To access your Owner's Information online, visit [www.mopar.com/om](http://www.mopar.com/om) (US) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canada).

Or

Call Tech Authority toll free at:

- 1-800-890-4038 (US)

Owner's Manuals, Radio Manuals and Warranty Information Books can be ordered through Archway at:

- 1-800-387-1143 (Canada)

## GENERAL INFORMATION

The following regulatory statement applies to all Radio Frequency (RF) devices equipped in this vehicle:

This device complies with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Science and Economic Development applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



La operación de este equipo está sujeta a las siguientes dos condiciones:

1. es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

### NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# INDEX

- A**
- Adaptive Cruise Control (ACC)..... 110
  - Adding Engine Coolant (Antifreeze) ..... 329
  - Additives, Fuel ..... 377
  - Advance Phone Connectivity ..... 189
  - Air Bag ..... 257
    - Air Bag Operation ..... 259
    - Air Bag Warning Light ..... 256, 259
    - Driver Knee Air Bag ..... 264
    - Enhanced Accident Response..... 268, 313
    - Event Data Recorder (EDR) ..... 313
    - Front Air Bag ..... 259
    - If Deployment Occurs ..... 267
    - Knee Impact Bolsters ..... 264
    - Maintaining Your Air Bag System ..... 271
    - Maintenance ..... 271
    - Redundant Air Bag Warning Light ..... 257
    - Side Air Bags ..... 264
    - Transporting Pets ..... 285
  - Air Bag Light ..... 256, 285
  - Air Cleaner, Engine  
(Engine Air Cleaner Filter) ..... 322
  - Air Conditioner Maintenance ..... 322
  - Air Conditioner Refrigerant ..... 322
  - Air Conditioner System ..... 322
  - Air Conditioning Filter ..... 53, 323
  - Air Conditioning, Operating Tips ..... 53
  - Air Filter ..... 322
  - Air Pressure
    - Tires ..... 359
  - Alarm
    - Arm The System ..... 21
    - Disarm The System ..... 22
    - Security Alarm ..... 21, 82
  - Alarm System
    - Security Alarm ..... 21
  - Alterations/Modifications
    - Vehicle ..... 9
  - Android Auto ..... 192, 194
  - Android Auto™  ..... 192
  - Antifreeze (Engine Coolant) ..... 329, 378
    - Disposal ..... 330
  - Anti-Lock Brake System (ABS) ..... 226
  - Anti-Lock Warning Light ..... 82
  - Apple CarPlay ..... 192, 196
  - Apple CarPlay®  ..... 195
  - Arming System
    - Security Alarm ..... 21
  - Assist, Hill Start ..... 233
  - Audio Settings ..... 175
  - Audio Systems (Radio) ..... 147
  - Auto Down Power Windows ..... 58
  - Automatic Dimming Mirror ..... 38, 39
  - Automatic Door Locks ..... 26
  - Automatic Headlights ..... 43
  - Automatic High Beams ..... 42
  - Automatic Temperature Control (ATC) ..... 52
  - Automatic Transaxle ..... 98
  - Automatic Transmission ..... 100
    - Adding Fluid ..... 333, 379
    - Fluid And Filter Change ..... 333
    - Fluid Change ..... 333
    - Fluid Level Check ..... 332
    - Fluid Type ..... 333, 379
    - Special Additives ..... 332
  - Automatic Transmission Limp Home Mode ..... 26
  - Auxiliary Electrical Outlet (Power Outlet) ..... 55
  - Axle Fluid ..... 379
  - Axle Lubrication ..... 379
- B**
- Battery ..... 80, 320
    - Charging System Light ..... 80
    - Keyless Key Fob Replacement ..... 14
  - Belts, Seat ..... 285
  - Blind Spot Monitoring ..... 235

Bluetooth			
Connecting To A Particular Mobile Phone Or Audio Device After Pairing.....	185		
Body Mechanism Lubrication .....	323		
B-Pillar Location.....	356		
Brake Assist System .....	227		
Brake Control System, Electronic .....	227		
Brake Fluid .....	379		
Brake System .....	331, 375		
Anti-Lock (ABS).....	375		
Fluid Check .....	331, 379		
Master Cylinder .....	331		
Parking.....	95		
Warning Light.....	79		
Brake/Transmission Interlock .....	99		
Brightness, Interior Lights.....	44, 45		
Bulb Replacement .....	342		
Bulbs, Light.....	287		
<b>C</b>			
Camera, Rear .....	132		
Capacities, Fuel .....	378		
Caps, Filler			
Fuel .....	134		
Oil (Engine).....	318		
Radiator (Coolant Pressure).....	330		
Car Washes .....	371		
Carbon Monoxide Warning .....	288		
Cargo Area Cover .....	65		
Cargo Load Floor.....	65		
Cargo Tie-Downs .....	65, 66		
CD .....	177		
Cellular Data .....	225		
Certification Label.....	135		
Chains, Tire .....	365		
Change Oil Indicator .....	73		
Changing A Flat Tire .....	293		
Chart, Tire Sizing.....	352		
Check Engine Light (Malfunction Indicator Light).....	90		
Checking Your Vehicle For Safety .....	285		
Checks, Safety .....	285		
Child Restraint .....	272		
Child Restraints			
Booster Seats.....	275		
Child Seat Installation .....	283		
How To Stow An unused ALR Seat Belt ....	280		
Infant And Child Restraints.....	274		
Lower Anchors And Tethers For Children.....	277		
Older Children And Child Restraints .....	274		
Seating Positions.....	276		
Child Safety Locks .....	26		
Clean Air Gasoline.....	376		
Cleaning			
Wheels .....	370		
Windshield Wiper Blades.....	323		
Climate Control .....	48		
Automatic .....	48		
Coin Holder .....	55		
Cold Weather Operation.....	92		
Compact Spare Tire .....	364		
Computer, Trip/Travel .....	78		
Connected Services .....	197		
Connected Services FAQ .....	219		
Connected Services Features .....	202		
Connected Services, Getting Started .....	200		
Connected Services, Introduction .....	197		
Connector			
Universal Consumer Interface (UCI).....	55		
Console .....	55		
Floor .....	55		
Contract, Service.....	381		
Controls .....	168		
Cooling Pressure Cap (Radiator Cap) .....	330		
Cooling System .....	328		
Adding Coolant (Antifreeze) .....	329		
Coolant Level .....	328, 330		
Cooling Capacity .....	378		
Disposal Of Used Coolant .....	330		
Drain, Flush, And Refill .....	328		
Inspection .....	330		
Points To Remember .....	331		
Pressure Cap .....	330		
Radiator Cap.....	330		
Selection Of Coolant (Antifreeze).....	329, 378		

- Corrosion Protection ..... 369
- Cruise Control (Speed Control) ..... 110
- Cruise Light ..... 86, 87, 88
- Customer Assistance ..... 380
- Cybersecurity ..... 147
- D**
- Daytime Running Lights ..... 41, 42
- Dealer Service ..... 320
- Defroster, Windshield ..... 285
- Deleting A Phone ..... 185
- Diagnostic System, Onboard ..... 89
- Dimmer Switch
- Headlight ..... 41, 42
- Dipsticks
- Oil (Engine) ..... 319
- Disabled Vehicle Towing ..... 311
- Disc Drive ..... 177
- Disconnecting ..... 185
- Disposal
- Antifreeze (Engine Coolant) ..... 330
- Disturb ..... 188
- Door Ajar ..... 80, 81
- Door Ajar Light ..... 80, 81
- Drag & Drop ..... 166
- Driver Memory Presets ..... 175
- Driver's Seat Back Tilt ..... 30
- Driving ..... 143
- E**
- Easy Entry Seats ..... 34
- Electric Brake Control System ..... 227
- Anti-Lock Brake System ..... 226
- Traction Control System ..... 232, 235
- Electric Parking Brake ..... 95
- Electrical Power Outlets ..... 55
- Electronic Stability Control (ESC) ..... 228
- Electronic Throttle Control Warning Light ..... 81
- Emergency Gas Can Refueling ..... 307
- Emergency, In Case Of
- Hazard Warning Flasher ..... 289
- Jacking ..... 293
- Jump Starting ..... 304
- Tow Hooks ..... 312
- Towing ..... 311
- Emission Control System Maintenance ..... 90
- Engine ..... 318
- Air Cleaner ..... 322
- Block Heater ..... 94
- Break-In Recommendations ..... 94
- Checking Oil Level ..... 319
- Coolant (Antifreeze) ..... 378
- Cooling ..... 328
- Exhaust Gas Caution ..... 288
- Fails To Start ..... 93
- Flooded, Starting ..... 93
- Jump Starting ..... 304
- Oil ..... 321, 378
- Oil Filler Cap ..... 318
- Oil Filter ..... 321
- Oil Selection ..... 321, 378
- Oil Synthetic ..... 321
- Overheating ..... 308
- Starting ..... 91
- Enhanced Accident Response
- Feature ..... 268, 313
- Ethanol ..... 376
- Exhaust Gas Cautions ..... 288
- Exhaust System ..... 288, 327
- Exterior Lighting ..... 41, 42
- Exterior Lights ..... 41, 287
- F**
- Family Alerts ..... 218
- Filters
- Air Cleaner ..... 322
- Air Conditioning ..... 53, 323
- Engine Oil ..... 321, 378
- Engine Oil Disposal ..... 321
- Flashers
- Hazard Warning ..... 289
- Turn Signals ..... 41, 44, 87, 287
- Flash-To-Pass ..... 41, 43
- Flat Tire Changing ..... 351, 364
- Flat Tire Stowage ..... 351, 364

Flooded Engine Starting .....	93	<b>G</b>		Heated Seats .....	34
Floor Console.....	55	Gas Cap (Fuel Filler Cap) .....	134	Heater, Engine Block.....	94
Fluid Capacities .....	378	Gasoline, (Fuel).....	375	High Beam/Low Beam Select (Dimmer)	
Fluid Leaks .....	287	Gasoline, Clean Air.....	376	Switch .....	42
Fluid Level Checks		Gasoline, Reformulated .....	376	Hill Descent Control .....	232
Brake .....	331	Gear Ranges .....	101	Hill Descent Control Indicator .....	232
Engine Oil .....	319	Gear Selector Override .....	309	Hill Start Assist.....	233
Fluid, Brake .....	379	Glass Cleaning.....	373	Holder, Coin .....	55
Fog Lights .....	41, 43	Gross Axle Weight Rating.....	136	Hood Prop .....	62
Fold-Flat Seats.....	30	Gross Vehicle Weight Rating.....	136	Hood Release.....	62
Folding Rear Seats .....	32	GVWR.....	135		
Forward Collision Warning.....	240	<b>H</b>		<b>I</b>	
Freeing A Stuck Vehicle .....	310	Hazard Warning Flashers.....	289	Ignition .....	16
Fuel .....	375	Head Restraints.....	35	Switch.....	16
Additives .....	377	Head Rests .....	35	Inside Rearview Mirror .....	38, 289
Clean Air.....	376	Headlights .....	41	Instrument Cluster .....	69, 71, 73
Ethanol.....	376	Automatic .....	43	Descriptions.....	87
Filler Cap (Gas Cap).....	134	Cleaning .....	371	Display.....	72, 74
Gasoline .....	375	Delay .....	43	Instrument Panel Lens Cleaning.....	373
Light .....	83	High Beam/Low Beam Select		Interior Appearance Care .....	372
Materials Added .....	377	Switch .....	41, 42	Interior Fuses .....	339
Methanol .....	376	Lights On Reminder.....	41, 43	Interior Lights.....	44
Octane Rating .....	375, 378	Passing.....	41, 43	Inverter	
Specifications.....	378	Switch.....	41, 42	Power.....	57
Tank Capacity.....	378	Time Delay.....	41, 43	iPod/USB/MP3 Control .....	55
Fuses.....	333	Heated Mirrors.....	38, 41		

**J**

Jack Location.....	294
Jack Operation.....	293, 295
Jacking Instructions.....	295
Jump Starting.....	304

**K**

Key Fob	
Arm The Alarm.....	21
Disarm The Alarm.....	22
Programming Additional Key Fobs.....	15
Remote Keyless Entry.....	13
Key Fob Battery Service (Remote Keyless Entry).....	14
Key Fob Programming (Remote Keyless Entry).....	15
Keyless Enter 'n Go™.....	13, 24
Keys.....	13

**L**

Lane Change And Turn Signals.....	41, 44
Lane Change Assist.....	41, 44
LaneSense.....	127
Lap/Shoulder Belts.....	248
Latches.....	287
Hood.....	62
Leaks, Fluid.....	287
Life Of Tires.....	362
Liftgate.....	63


Liftgate Window Wiper/Washer.....	47
Light Bulbs.....	287
Lights.....	287
Air Bag.....	256, 285
Automatic Headlights.....	43
Battery Saver.....	44
Brake Assist Warning.....	231
Brake Warning.....	79
Bulb Replacement.....	342
Cruise.....	86, 87, 88
Daytime Running.....	41, 42
Dimmer Switch, Headlight.....	41, 42
Electronic Stability Program (ESP) Indicator.....	81
Exterior.....	287
Fog.....	43
Headlight Switch.....	42
Headlights.....	41, 42
High Beam.....	42
High Beam/Low Beam Select.....	41, 42
Hill Descent Control Indicator.....	232
Instrument Cluster.....	41, 42
Intensity Control.....	44, 45
Interior.....	44
Lights On Reminder.....	41, 43
Low Fuel.....	83
Malfunction Indicator (Check Engine).....	83
Park.....	87
Passing.....	41, 43

Seat Belt Reminder.....	80
Security Alarm.....	82
Service.....	342
Tire Pressure Monitoring (TPMS).....	242
Traction Control.....	231
Turn Signals.....	41, 44, 87, 287
Vanity Mirror.....	39
Warning Instrument Cluster Descriptions.....	81, 87
Load Floor, Cargo.....	65
Load Shed Battery Saver Mode.....	77
Load Shed Battery Saver On.....	77
Load Shed Electrical Load Reduction.....	77
Load Shed Intelligent Battery Sensor.....	77
Loading Vehicle.....	135
Tires.....	356
Locks	
Auto Unlock.....	26
Child Protection.....	26
Power Door.....	23
Low Tire Pressure System.....	242
Lubrication, Body.....	323
Lug Nuts/Bolts.....	374
Luggage Carrier.....	67

**M**

Maintenance.....	62
Maintenance Free Battery.....	320
Maintenance Schedule.....	314



Malfunction Indicator Light (Check Engine).....	83	Oil, Engine.....	321, 378	Pets.....	285
Manual		Capacity.....	378	Phone Mode.....	180
Service .....	383	Checking.....	319	Placard, Tire And Loading Information .....	356
Media Mode .....	177	Dipstick .....	319	Power	
Memory Feature (Memory Seats) .....	28	Disposal .....	321	Door Locks.....	23
Memory Seat .....	28	Filter .....	321, 378	Inverter .....	57
Memory Settings .....	28	Filter Disposal.....	321	Liftgate .....	64
Methanol .....	376	Identification Logo.....	321	Outlet (Auxiliary Electrical Outlet).....	55
Mini-Trip Computer .....	78	Materials Added To .....	321	Sunroof.....	59
Mirrors.....	38	Pressure Warning Light .....	81	Windows .....	57
Automatic Dimming.....	38, 39	Recommendation.....	321, 378	Pregnant Women And Seat Belts .....	254
Heated .....	38, 41	Synthetic .....	321	Preparation For Jacking .....	293
Outside.....	38, 40	Viscosity .....	378	Presets.....	175
Rearview .....	38, 289	Onboard Diagnostic System.....	89	Pretensioners	
Vanity .....	39	Operating Precautions .....	89	Seat Belts .....	254
Modifications/Alterations		Operator Manual			
Vehicle .....	9	Owner's Manual.....	383	<b>R</b>	
Monitor, Tire Pressure System.....	242	Outlet		Radial Ply Tires.....	360
Mopar Parts.....	382	Power .....	55	Radiator Cap (Coolant Pressure Cap).....	330
Multi-Function Control Lever.....	41	Outside Rearview Mirrors .....	38, 40	Radio	
<b>N</b>		Overheating, Engine.....	308	Presets .....	175
New Vehicle Break-In Period.....	94	<b>P</b>		Radio Controls .....	168
<b>O</b>		Paddle Shifters .....	103	Radio Mode.....	168
Occupant Restraints .....	246	Paint Care.....	369	Radio Operation .....	168, 225
Octane Rating, Gasoline (Fuel) .....	375, 378	Pair (Link) Uconnect Phone To		Radio Remote Controls .....	167
Oil Filter, Change .....	321	A Mobile Phone  .....	183	Rain Sensitive Wiper System .....	46
Oil Filter, Selection.....	321	Parking Brake .....	95	Rear Camera .....	132
Oil Pressure Light .....	81	ParkSense System, Rear .....	122	Rear Cross Path .....	238
		Personalized Main Menu Bar.....	166	Rear ParkSense System.....	122
				Rear Seats, Folding.....	32

Rear Wiper/Washer .....	47	Roof Type Carrier .....	67	Pregnant Women .....	254
Recreational Towing .....	142	Rotation, Tires .....	367	Pretensioners .....	254
Reformulated Gasoline.....	376	<b>S</b>		Rear Seat.....	248
Refrigerant .....	322, 323	Safety .....	166	Reminder.....	247
Registering SiriusXM Guardian .....	199	Safety Checks Inside Vehicle .....	285	Seat Belt Extender.....	253
Release, Hood .....	62	Safety Checks Outside Vehicle .....	287	Seat Belt Pretensioner.....	254
Reminder, Lights On .....	41, 43	Safety Defects, Reporting .....	382	Untwisting Procedure.....	251
Reminder, Seat Belt .....	247	Safety Features.....	166	Seat Belts Maintenance.....	372
Remote Control		Safety Information, Tire .....	351	Seats.....	30
Starting System.....	18	Safety Tips .....	285	Adjustment .....	30
Remote Features, Door Lock/Unlock ..	208, 220	Safety, Exhaust Gas .....	288	Easy Entry.....	34
Remote Features, Horn And Lights.....	209	Satellite Radio .....	169	Head Restraints.....	35
Remote Features, Starting .....	209, 222	Saved Radio Stations .....	175	Heated.....	34
Remote Keyless Entry.....	13	Schedule, Maintenance .....	314	Memory .....	28
Arm The Alarm.....	21	Seat Belt Reminder.....	80	Rear Folding .....	30, 32
Disarm The Alarm.....	22	Seat Belts .....	247, 285	Seatback Release.....	31, 32
Programming Additional Key Fobs .....	15	Adjustable Shoulder Belt.....	251	Tilting.....	30
Remote Sound System (Radio) Control .....	167	Adjustable Upper Shoulder Anchorage....	251	Ventilated .....	35
Remote Starting		Adjustable Upper Shoulder Belt		Security Alarm .....	21, 82
Exit Remote Start Mode .....	19	Anchorage .....	251	Arm The System.....	21
Uconnect Customer Programmable		Child Restraints.....	272	Disarm The System.....	22
Features.....	20	Energy Management Feature .....	254	Selection Of Coolant (Antifreeze) .....	378
Uconnect Settings.....	20	Extender .....	253	Send & Go.....	211, 220
Remote Starting System.....	18	Front Seat.....	247, 248, 250	Sentry Key (Immobilizer) .....	16
Replacement Tires.....	362	Inspection.....	285	Service Assistance .....	380
Reporting Safety Defects.....	382	Lap/Shoulder Belt Operation.....	250	Service Contract.....	381
Restraints, Child .....	272	Lap/Shoulder Belt Untwisting.....	251	Service Manuals .....	383
Restraints, Head.....	35	Lap/Shoulder Belts .....	248	Settings, Audio .....	175
Roadside Assistance .....	210, 220	Operating Instructions .....	250	Shift Lever Override .....	309
Roll Over Warning.....	8				

Shifting		Steering		Tire Safety Information.....	351
Automatic Transmission.....	100	Column Controls.....	41	Tire Service Kit.....	298
Shoulder Belts.....	248	Tilt Column.....	27	Tires.....	287, 359, 364, 368
Side View Mirror Adjustment.....	38, 40	Wheel, Heated.....	27	Aging (Life Of Tires).....	362
Signals, Turn.....	41, 44, 87, 287	Wheel, Tilt.....	27	Air Pressure.....	359
Sirius Satellite Radio.....	169	Steering Wheel Audio Controls.....	167	Chains.....	365
Favorites.....	173	Steering Wheel Mounted Sound System.....	167	Changing.....	293
Replay.....	172	Stolen Vehicle Assistance.....	215, 221	Compact Spare.....	364
SiriusXM Satellite Radio		Storage.....	54	General Information.....	359, 364
Browse in SXM.....	173	Storage, Vehicle.....	53	High Speed.....	360
Favorites.....	173	Store Radio Presets.....	175	Inflation Pressure.....	359
Replay.....	172	Stuck, Freeing.....	310	Jacking.....	293
Smart Watch.....	218	Sun Roof.....	59, 62	Life Of Tires.....	362
Snow Chains (Tire Chains).....	365	Sun Visor.....	39	Load Capacity.....	356
Snow Tires.....	364	Supplemental Restraint System - Air Bag....	257	Pressure Monitoring	
SOS Call.....	202, 219	Sway Control, Trailer.....	235	System (TPMS).....	84, 242
Spare Tires.....	364, 365	Symbol Glossary.....	9	Quality Grading.....	368
Specifications		Synthetic Engine Oil.....	321	Radial.....	360
Fuel (Gasoline).....	378	System, Remote Starting.....	18	Replacement.....	362
Oil.....	378	<b>T</b>		Rotation.....	367
Starting.....	18, 91	Telescoping Steering Column.....	27	Safety.....	351, 359
Automatic Transmission.....	92	Temperature Control, Automatic (ATC).....	52	Sizes.....	352
Button.....	16	Tie Down Hooks, Cargo.....	65, 66	Snow Tires.....	364
Cold Weather.....	92	Tilt Steering Column.....	27	Spare Tires.....	364, 365
Engine Fails To Start.....	93	Time Delay		Spinning.....	361
Remote.....	18	Headlight.....	41, 43	Trailer Towing.....	140
Starting And Operating.....	91	Tire And Loading Information Placard.....	356	Tread Wear Indicators.....	362
Starting Procedures.....	91	Tire Markings.....	351	Wheel Nut Torque.....	374
				To Open Hood.....	62

Tongue Weight/Trailer Weight .....	138	Transporting Pets.....	285	Making A Second Call While Current Call Is In Progress.....	189
Tow Hooks		Tread Wear Indicators .....	362	Managing Your Favorites .....	186
Emergency .....	312	Turn Signals.....	41, 44, 87	Natural Speech.....	182
Towing .....	136	<b>U</b>		Operation.....	181
Disabled Vehicle.....	311	Uconnect		Overview .....	180
Guide.....	138	Phone Call Features .....	187	Pair (Link) Uconnect Phone To A Mobile Phone .....	183
Recreational.....	142	Things You Should Know About Your Uconnect Phone .....	190	Pair A Bluetooth Streaming Audio Device .....	184
Weight.....	138	Uconnect Settings .....	20	Phonebook Download.....	186
Towing Behind A Motorhome.....	142	Uconnect App .....	200	Place/Retrieve A Call From Hold.....	189
Traction Control .....	232, 235	Uconnect Phone .....	182, 183, 184	Power-Up .....	192
Trailer Sway Control (TSC) .....	235	Answer Or Ignore An Incoming Call – Call Currently In Progress.....	188	Recent Calls.....	187
Trailer Towing .....	136	Answer Or Ignore An Incoming Call – No Call Currently In Progress.....	188	Redial .....	189
Minimum Requirements.....	139	Bluetooth Communication Link .....	192	To Remove A Favorite .....	186
Tips .....	141	Call Continuation .....	189	Toggling Between Calls.....	189
Trailer And Tongue Weight .....	138	Call Controls .....	187	Touch-Tone Number Entry .....	187
Wiring.....	140	Call Termination .....	189	Transfer Call To And From Mobile Phone .....	189
Trailer Towing Guide .....	138	Cancel Command .....	182	Voice Command .....	190
Trailer Weight .....	138	Connecting To A Particular Mobile Phone Or Audio Device After Pairing ....	185	Uconnect Settings	
Transaxle		Join Calls .....	189	Customer Programmable Features.....	20
Automatic.....	98	Making A Phone Or Audio Device A Favorite .....	185	Uconnect System .....	164
Operation .....	98			Uniform Tire Quality Grades .....	368
Transfer Case				Universal Consumer Interface (UCI) Connector .....	55
Fluid .....	379			Untwisting Procedure, Seat Belt.....	251
Transmission .....	100				
Automatic.....	100, 332				
Fluid .....	379				
Maintenance .....	332				

**V**


Vanity Mirrors .....	39
Vehicle Finder .....	213, 221
Vehicle Health Alert .....	216
Vehicle Health Report .....	215
Vehicle Loading .....	135, 356
Vehicle Modifications/Alterations .....	9
Vehicle Notifications .....	216
Vehicle Security Alarm .....	21
Vehicle Storage .....	53
Ventilated Seats .....	35
Voice Command .....	37, 194, 196
Voice Recognition System (VR) .....	37

**W**

Warning Lights (Instrument Cluster Descriptions) .....	83
Warnings, Roll Over .....	8
Warranty Information .....	382
Washers, Windshield .....	45, 319
Washing Vehicle .....	371
Wheel And Wheel Tire Care .....	370
Wheel And Wheel Tire Trim .....	370
Wi-Fi .....	214
Wind Buffeting .....	59
Window Fogging .....	53

Windows .....	57
Close .....	57
Down .....	57
Open .....	57
Power .....	57
Up .....	57
Windshield Defroster .....	285
Windshield Washers .....	45, 319
Fluid .....	319
Windshield Wiper Blades .....	323
Windshield Wipers .....	45
Wipers Blade Replacement .....	323
Wipers, Rain Sensitive .....	46



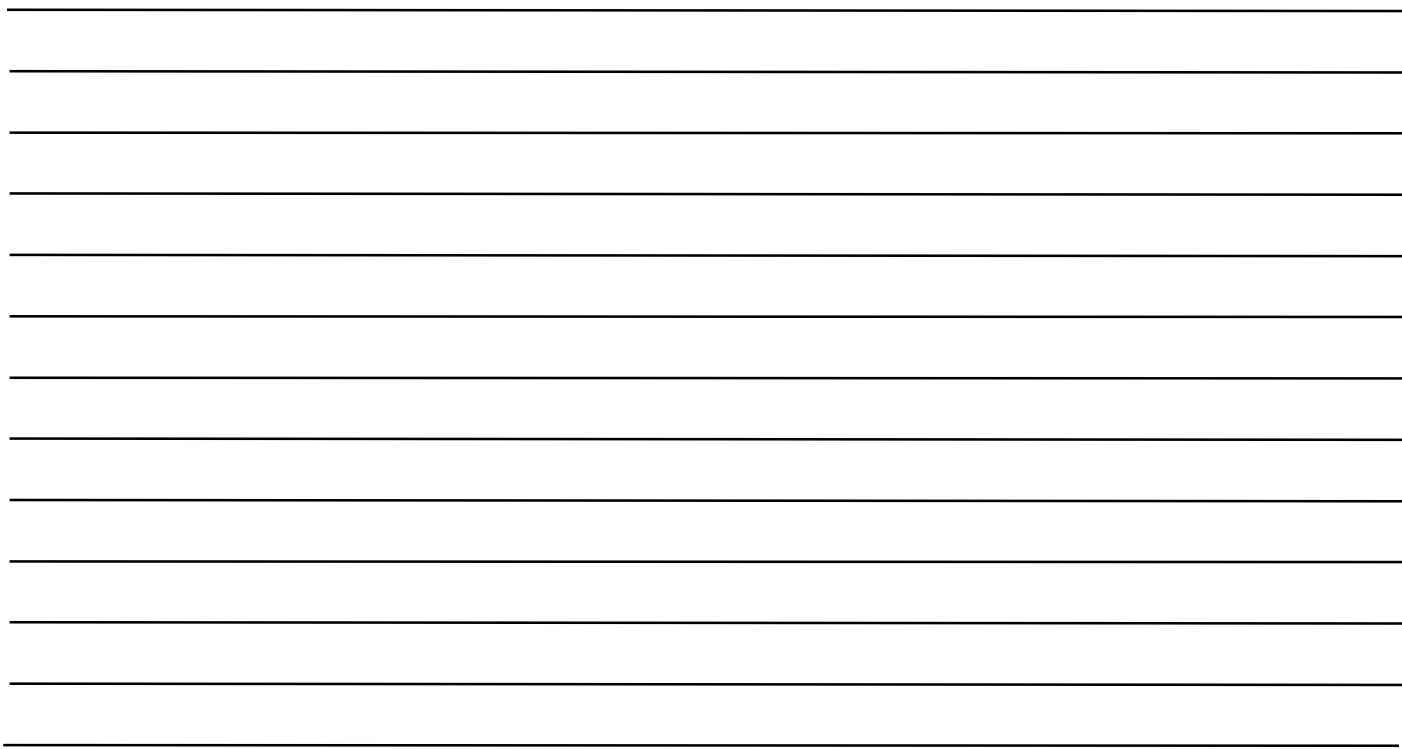

The driver's primary responsibility is the safe operation of the vehicle. Driving while distracted can result in loss of vehicle control, resulting in an accident and personal injury. FCA US LLC strongly recommends that the driver use extreme caution when using any device or feature that may take their attention off the road. Use of any electrical devices, such as cellular telephones, computers, portable radios, vehicle navigation or other devices, by the driver while the vehicle is moving is dangerous and could lead to a serious accident. Texting while driving is also dangerous and should never be done while the vehicle is moving. If you find yourself unable to devote your full attention to vehicle operation, pull off the road to a safe location and stop your vehicle. Some states or provinces prohibit the use of cellular telephones or texting while driving. It is always the driver's responsibility to comply with all local laws.

This Owner's Manual has been prepared to help you get acquainted with your new Jeep® brand vehicle and to provide a convenient reference source for common questions.

Not all features shown in this manual may apply to your vehicle. For additional information, visit [mopar.com/om](http://mopar.com/om) (U.S.), [owners.mopar.ca](http://owners.mopar.ca) (Canada) or your local Jeep® brand dealer.

## **DRIVING AND ALCOHOL**

---

Drunk driving is one of the most frequent causes of accidents. Your driving ability can be seriously impaired with blood alcohol levels far below the legal minimum. If you are drinking, don't drive. Ride with a designated non-drinking driver, call a cab, a friend or use public transportation.

## **WARNING!**

---

Driving after drinking can lead to an accident. Your perceptions are less sharp, your reflexes are slower and your judgment is impaired when you have been drinking. Never drink and then drive.

