


# Weather Station(receiver) Manual

Model: HP2560BU

Thank you for purchasing this Professional WIFI Weather Station Display! This device provides accurate weather readings and is Wi-Fi capable to stream data from the weather station to Internet based weather services.

This manual will guide you, step-by-step, through setting up your weather station and console, and understanding the operation of your weather station. Use this manual to become familiar with your professional weather station and save it for future reference.

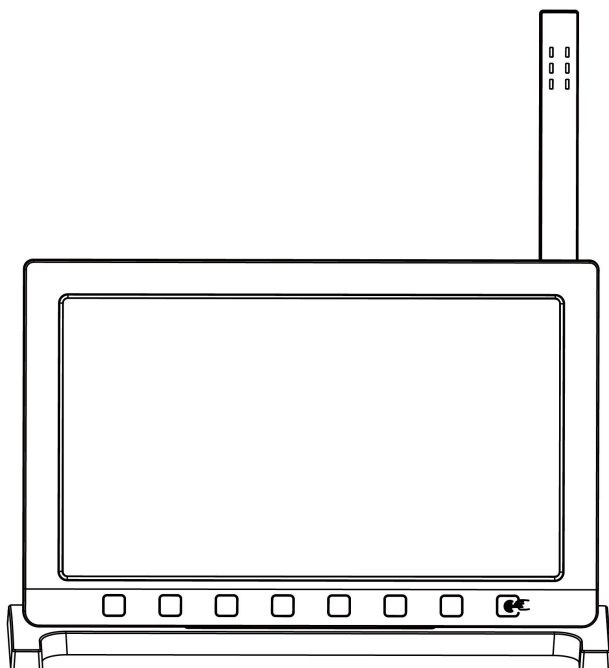



\* Please scan the QR code to read English manual and keep it for future reference

## Instruction manuals

<https://s.ecowitt.com/XW5525>

## Help

Our product is continuously changing and improving, particularly online services and associated applications. To download the latest manual and additional help, please contact our technical support team:

**[support@ecowitt.com](mailto:support@ecowitt.com)**

**[support.eu@ecowitt.net](mailto:support.eu@ecowitt.net) (EU/UK)**



MADE IN CHINA

# Table of Contents

1 Warnings and Cautions.....	5
2 Overview .....	6
2.1 Display console .....	6
3 Console Display.....	10
3.1 History Mode.....	12
3.1.1 Initial Display Console Set Up.....	12
3.1.2 Key functions.....	13
3.1.3 Main interface icons explain.....	15
3.2 Multiple Channel Selection and Scroll Mode.....	17
3.2.1 View and Reset MAX/MIN.....	18
3.2.2 History Record Mode.....	19
3.2.3 Graph Mode.....	22
3.2.4 Optional Sensor Display Mode.....	23
3.3 Setting Mode.....	23
3.3.1 Date and Time setting.....	25
3.3.2 Time Format setting.....	26
3.3.3 Date Format setting.....	26
3.3.4 Temperature unit setting.....	27
3.3.5 Barometric unit.....	27
3.3.6 Wind speed unit.....	27
3.3.7 Rainfall unit.....	27
3.3.8 Solar Rad. Unit.....	27
3.3.9 Multi Channel Sensor.....	27
3.3.10 Backlight setting.....	30
3.3.11 Longitude: Latitude setting.....	31
3.3.12 Barometric display.....	32
3.3.13 Rainfall season (default: January).....	32
3.3.14 Storing Interval (1-240minutes Selectable).....	33
3.3.15 Connect Console to Your Router: Wi-Fi scan.....	50
3.3.16 Background.....	52
3.4 Alarm Setting Mode.....	52
3.5 Calibration Mode.....	54
3.6 More.....	59
3.7 Factory reset.....	62
3.7.1 Re-register indoor transmitter.....	62
3.7.2 Re-register outdoor transmitter.....	63
3.7.3 Automatic Clear Max/Min.....	63
3.7.4 Reset to Factory.....	63

3.7.5	Clear History .....	63
3.7.6	Clear Max/Min .....	64
3.7.7	Backup data .....	64
3.7.8	About information .....	64
4	Other Console Functions .....	65
4.1	Beaufort Wind Force Scale .....	65
4.2	Weather Forecasting .....	66
4.3	Lightning Alert .....	67
4.4	Weather Forecasting Description and Limitations .....	67
4.5	Moon Phase .....	67
5	Troubleshooting Guide .....	69
6	Specifications .....	72
7	Warranty Information .....	73

# 1 Warnings and Cautions

## Warning:

- Any metal object may attract a lightning strike, including your weather station mounting pole. Never install the weather station in a storm.
- If you are mounting the weather station to a house or structure, consult a licensed electrician for proper grounding. A direct lightning strike to a metal pole can damage or destroy your home.
- Installing your weather station in a high location may result in injury or death. Perform as much of the initial check out and operation on the ground and inside a building or home. Only install the weather station on a clear, dry, day.

**Note:** The console operates using an AC adapter. The included adapter is a switching-type adapter and can generate a small amount of electrical interference with the RF reception in the console, when placed too close to the console. Please keep the console display at least 2 ft. or 0.5 m away from the power adapter to ensure best RF reception from the outdoor sensor package.


**Note:** The console can store historical data on a memory card. This memory card is **not included**. If you want to use one you will need a microSD memory card. The supported max capacity of the card is 32G (Format: FAT32). A 1GB card will store more than 10 years' worth of data, so you do not need a very large capacity card. There is also no requirement on the speed class of this card as data writing happens infrequently and is not speed critical.

# 2 Overview


## 2.1 Display console



**Figure 1: Display console screen**

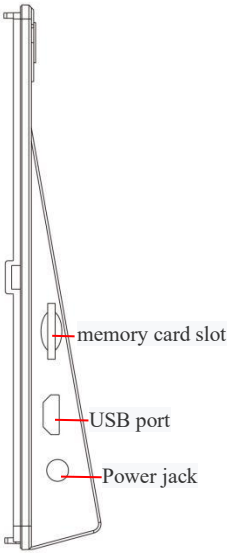


**Figure 2: Display console side views**

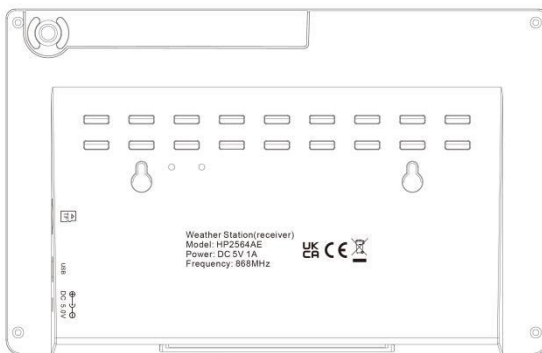

**Figure 3: Display console back views**

**Note:** The USB port in the console of weather station is for firmware update and power supply, not for data communication (USB cable not included).

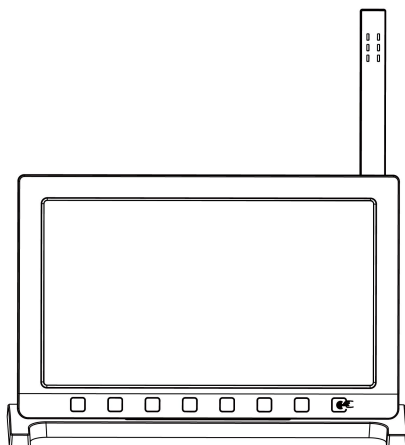

**Figure 4: Display console top view**

The folding indoor sensor will display indoor temperature on screen, humidity and barometric pressure.

You can use a micro SD card (max 32G, Fat 32) for the firmware update. (SD card not included).

Update firmware process:

1. Visit [www.ecowitt.com](http://www.ecowitt.com) for available update
2. On the navigation bar, select Manual & Firmware under Support
3. Search "HP2561" - find the firmware option and download it on your computer
4. Take out your micro SD card from the console
5. Drag the unzipped file(user.bin) under the root directory of your micro SD card
6. Insert the card into the console, then it will update the firmware automatically

## **2.2 Features**

- Upgrade physical buttons to touch buttons
- Upgrade antenna integrate indoor sensor
- 7" large TFT (high resolution) colored display console
- Two background (dark/light) themes as option
- Indoor temperature, humidity with integrated design
- Absolute and Relative barometric pressure
- Wind speed, wind direction, rainfall, outdoor temperature and humidity, solar radiation and UV
- Calculates dew point, wind chill, heat index, moon phase and sunset/sunrise time
- Weather forecast & alarm
- View historical records of sensors and graph directly on the console
- Collects sensor data from various supported wireless sensors
- Additional/optional sensors:
  - Up to 8 WN31(WH31) multi-channel temperature and humidity sensors Or 8 WN30 multi-channel temp sensors
  - Up to 8 WN34 Temperature Sensors
  - Up to 4 WH41/WH43 PM2.5 air quality sensors
  - One WH45 PM2.5/PM10/CO2/temperature and humidity all-in-1 sensor
  - Up to 8 WH51 soil moisture sensors
  - Up to 4 WH55 water leak sensors



- One WH57 lightning sensor
- Future sensors to be developed
- Pushes sensor data to cloud weather services:
- <https://www.ecowitt.net>
- <https://www.wunderground.com>
- <https://www.weathercloud.com>
- <https://www.wow.com>
- Custom own server data hosting possible when server data exchange is compatible with either Wunderground or Ecowitt protocol
- Manage sensor calibration setup
- Manage sensor via sensor ID
- Data storage service on Ecowitt server: <https://ecowitt.net>
- Data storing interval:
  - by day: 5 minutes
  - by week: 30 minutes
  - by month: 4 hours
  - by year: 1 day
- Stores data for past three months at 5-minute intervals
- Stores data for past one year at 30-minute intervals
- Stores data for past two year at 4-hour intervals

**Note:** The optional sensors can be purchased separately. If more info needed, please visit our website: <http://www.ecowitt.com>. Make sure to select the model of the units with the same RF frequency as your gateway (the frequency is different for various countries because of regulations).

**Note:** To pair the optional sensors with the HP2561 console, please follow the below operations:


1. Place the optional sensor next to the console(keep 5-10ft away from each other).
2. Install batteries on the sensor and wait for 1-2 minutes.
3. Check whether the console will pick up the sensor data automatically and display it on the screen.
4. If not, press the gear icon and go to Setup page - find More and enter its

Setup page - find Sensors ID and enter its Setup page.

5. In the Sensors ID Setup page, find the sensor you want to pair - select the ID number box and register it.
6. Once successfully, you may return to the main interface to check the data.
7. If you know exactly the sensor ID, and want console to pair that sensor only, you may enter the sensor ID, and save the change to make it effect.

### 3 Console Display

See Figure 5 to help you identify elements of the console's display screen.

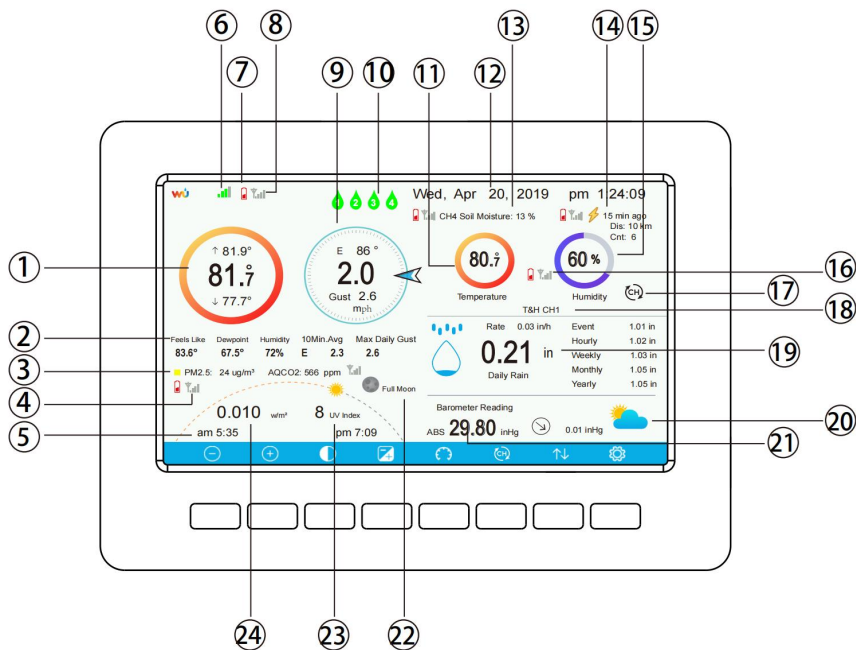

**Figure 5: Display Console Screen Layout**

<b>No</b>	<b>Description</b>	<b>No</b>	<b>Description</b>
1	Outdoor temperature	13	Soil moisture(optional sensor)
2	Outdoor Feels Like/Dew point/Humidity/10Min. Average Wind Direction/Max Daily Gust	14	Last lightning strikes detected time / distance; daily counts (optional sensor)
3	WH41/WH43/WH45 particle detection sensor cycle display(optional sensor)	15	Indoor humidity
4	RF signal bar for PM2.5 sensor(optional sensor)	16	RF signal bar for multi-channel temperature and humidity sensor(optional sensor)
5	Sunrise / Sunset Time	17	Multi-channel temperature and humidity sensor cycle display mode icon(optional sensor)
6	Wi-Fi signal bar	18	Multi-channel temperature and humidity sensor channel number (optional sensor)
7	Low battery power indicator for each sensor	19	Rain fall Daily/Event/Hourly/Weekly/ Monthly/Yearly
8	RF signal bar for outdoor sensor array	20	Weather forecast
9	Wind direction/Wind speed/Gust	21	ABS/REL Barometer
10	Multi-Channel water leak sensor (optional Sensor)	22	Moon Phase
11	Indoor temperature	23	UV
12	Date and time	24	Solar Radiation

**Table 1: Display console detailed items**

**Note:** If you have purchased the optional WH55 water leak sensor, please check the following instructions for the display color:


- Green - normal
- Red & Flash - leaking
- Yellow - low battery alert
- Orange - offline over 10 minutes

If you have purchased the optional WN34 Temperature Sensor, please check and view it on Optional Sensor Display Mode. Because WN34 Temperature Sensor won't display on the main screen of the console.

## 3.1 History Mode

### 3.1.1 Initial Display Console Set Up

Immediately after power up (inserting power adapter), the unit will turn on the display, and the unit will start to look for reception of the indoor and outdoor sensor data. This may take up to 3 minutes.

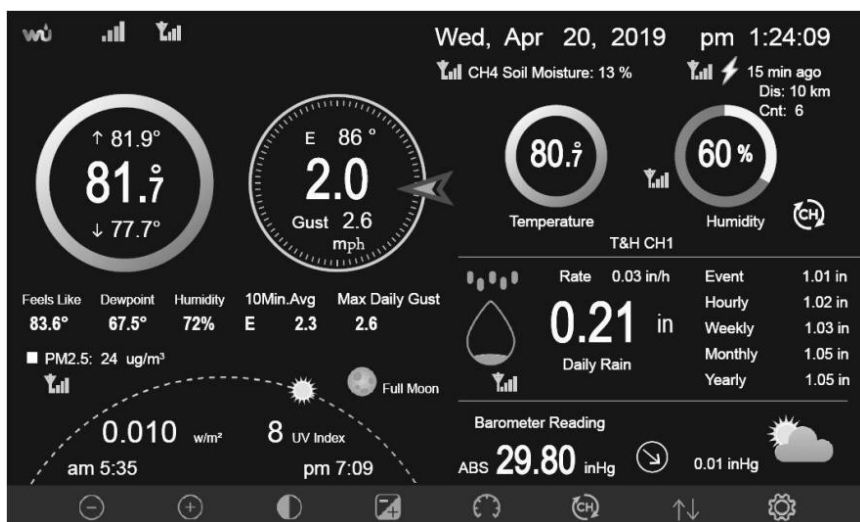


**Dark Background Display**



## Light Background Display





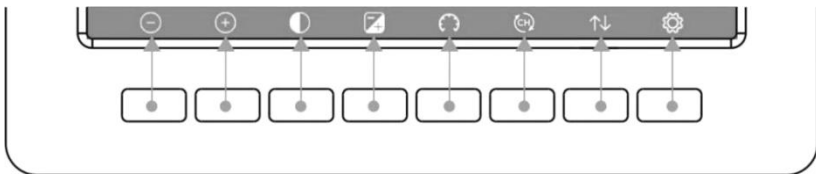




**Note:** Sunrise/sunset time display will only work properly when GEO location has been set up correctly. GEO setup can be carried out under setup menu.

### 3.1.2 Key functions



**Figure 6: Buttons around the display**















There is a set of eight keys on the bottom of the display console. The following tables briefly explains the function of these keys.

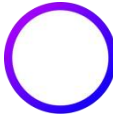Icon	Description
	<b>Brightness control key</b> Press this key to decrease the brightness
	<b>Brightness control key</b> Press this key to enhance the brightness
	<b>Backlight on/off key</b> Press this key to on/off the backlight
	<b>Background key</b> Press this key to choose between dark background display and light background display
	<b>Pressure display key</b> Press this key to choose the display between Absolute pressure and Relative pressure
	<b>Channel key</b> Press this key to Shift the display between indoor temp & humidity, Multiple Channel temp& humidity and scroll automatically mode
	<b>History key</b> Press this key once to view Max/Min record; Press twice to enter History mode; Press three times to enter Graph Mode
	<b>Setting key</b> Press this key to enter Setting Mode
	<b>Tip logo</b> It meas supporting touch button

**Table 2: Console buttons**









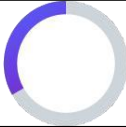
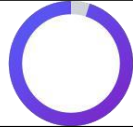


3.1.3 Main interface icons explain

3.1.3.1 Temperature Icon

Temperature Range (degF)	Color Ring	Temperature Range (degF)	Color Ring
< -10		50-60	
-10 to 0		60-70	
0 to 10		70-80	
10-20		80-90	
20-30		90-100	
30-40		100-110	
40-50		> 110	

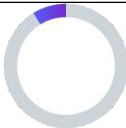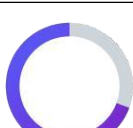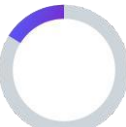**Note:** please refer to the online manual for colorful display.









3.1.3.2 Humidity Icon

Humidity Range(%)	Color Ring	Humidity Range(%)	Color Ring
0%, No signal or dashes		50 to 60	
1 to 10		60 to 70	
10 to 20		70 to 80	
20 to 30		80 to 90	
30 to 40		90 to 99	
40 to 50		100%	

Current wind direction indication  , 10-minute average wind direction indication  .





### 3.1.3.3 Hourly Rainfall Icon

Hourly Rain (in)	Icon	Hourly Rain (in)	Color Ring
0.0		0.6 to 0.8	
0 to 0.2		0.8 to 1	
0.2 to 0.4		1 to 1.2	
0.4 to 0.6		1.2 to 1.4	

## 3.2 Multiple Channel Selection and Scroll Mode


Multi-channel sensor is an optional sensor, not included in the package. If

you have multiple wireless sensors, while in normal mode, press the  key to toggle display in sequence of indoor, ch1, ch2....ch8, scroll display. Please note if only CH2 is received, it will skip CH1, and toggle only between indoor and already learned sensors.

While in Scroll display mode, the scroll icon  will be displayed next to the indoor humidity, and will scroll every 5 seconds.

**Note:** For multi channel sensor, the history data will be saved to a SD card (not included).

### 3.2.1 View and Reset MAX/MIN

While in normal display, press the  key once to view and reset minimum and maximums.

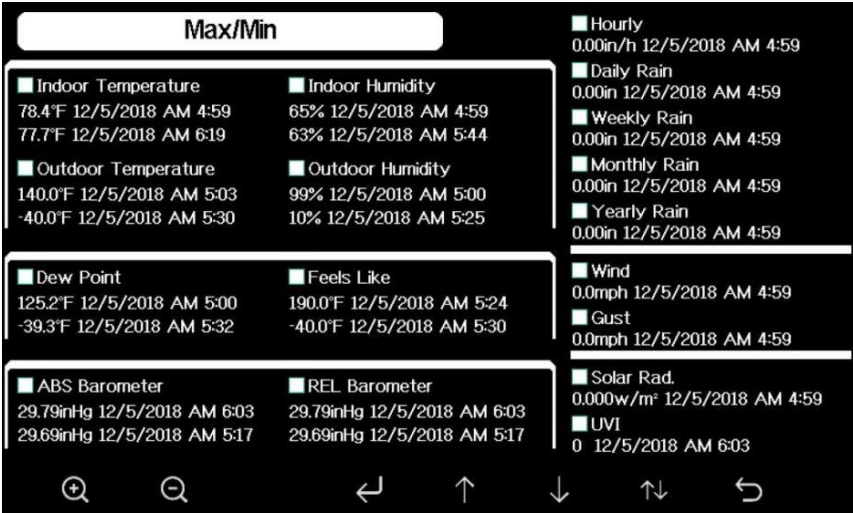














Figure 7: Max/Min Screen

Icon	Description
	<b>Selection key</b> Press this key to select the weather MAX/MIN record which need to clear
	<b>Selection key</b> Press this key to select the weather MAX/MIN record which need to clear
	<b>Enter key</b> While the desired weather MAX/MIN record selected , press this key to popup Message Box “Clear the Max/Min record?”. Press  key or  key to select YES or NO. Press the  key or  key to confirm the selection.









	<b>Up arrow key</b> Press this key to change the activated option field
	<b>Down arrow key</b> Press this key to change the activated option field
	<b>History key</b> Press this key to select History data display
	<b>Return key</b> Press this key to return to normal display mode




### 3.2.2 History Record Mode

While in normal display, press the  key twice to enter History Record Mode.

No	Time	Indoor Temperature (°F)	Indoor Humidity (%)	Outdoor Temperature (°F)	Outdoor Humidity (%)	Dew Point (°F)	Feels Like (°F)	Wind (mph)
2689	12/5/2018 AM 6:40	77.7	65	68.9	47	47.8	68.9	25
2690	12/5/2018 AM 6:45	77.7	65	68.9	47	47.8	68.9	25
2691	12/5/2018 AM 6:50	77.7	65	68.9	47	47.8	68.9	22
2692	12/5/2018 AM 2:40	77.9	65	68.9	47	47.8	68.9	25
2693	12/5/2018 AM 2:45	77.9	65	68.9	47	47.8	68.9	22
2694	12/5/2018 AM 2:50	77.9	65	68.9	47	47.8	68.9	22
2695	12/5/2018 AM 2:55	77.9	65	68.9	46	47.3	68.9	22
2696	12/5/2018 AM 3:00	77.9	65	68.9	46	47.3	68.9	22
2697	12/5/2018 AM 3:05	77.9	65	68.9	46	47.3	68.9	22
2698	12/5/2018 AM 3:10	77.9	65	68.9	46	47.3	68.9	22
2699	12/5/2018 AM 3:15	77.9	65	68.9	46	47.3	68.9	2.7
2700	12/5/2018 AM 3:20	77.9	64	68.9	46	47.3	68.9	25
2701	12/5/2018 AM 3:25	77.9	65	68.9	46	47.3	68.9	22
2702	12/5/2018 AM 3:30	78.1	65	68.9	46	47.3	68.9	22
2703	12/5/2018 AM 3:35	78.6	65	68.9	46	47.3	68.9	22
2704	12/5/2018 AM 3:40	78.6	65	68.9	46	47.3	68.9	22

Figure 8: History record Screen

Icon	Description
	<b>File Select key</b> Press this key to clear all history record.
	<b>Page Select key</b> Press this key to enter particular page of the history data. Each page contains 16sets data.
	<b>Scroll left key</b> Press this key to view the left of the scrollable area.
	<b>Scroll right key</b> Press this key to view the right of the scrollable area.
	<b>Page up key</b> Press this key to scroll up the page you are viewing.
	<b>Page down key</b> Press this key to scroll down the page you are viewing.
	<b>History key</b> Press this key to select the Max/Min record or History.
	<b>Return key</b> Press this key to return to previous mode.

While in History Record Mode, press  key to popup the Message Box: “Clear the history record? ” Press “Yes” to clear all history records saved on console. Press  or  key to return to History record Mode.










No	Time	Indoor Temperature (°F)	Indoor Humidity (%)	Outdoor Temperature (°F)	Outdoor Humidity (%)	Dew Point (°F)	Feels Like (°F)	Wind (mph)	
2721	12/5/2018 AM 5:13	78.4	65	24.8	54	10.4	24.8	0.0	
2722	12/5/2018 AM 5:18	78.4	65	59.0	73	50.4	59.0	0.0	
2723	12/5/2018 AM 5:23	78.4	65	87.8	89	84.2	111.7	0.0	
2724	12/5/2018 AM 5:28	<div><div></div><div>Clear the history record?</div><div><div>Yes</div><div>No</div></div></div>				19	69.8	123.8	0.0
2725	12/5/2018 AM 5:33					39	-39.3	-22.0	0.0
2726	12/5/2018 AM 5:38					58	0.1	12.2	0.0
2727	12/5/2018 AM 5:43					74	33.4	41.0	0.0
2728	12/5/2018 AM 5:48					95	77.2	78.8	0.0
2729	12/5/2018 AM 5:52					24	67.6	113.0	0.0
2730	12/5/2018 AM 5:57	42	--	-36.4	0.0				
			</						

Figure 9: Clear History Record Screen


While in History Record Mode, press the  key to enter the page selection mode:

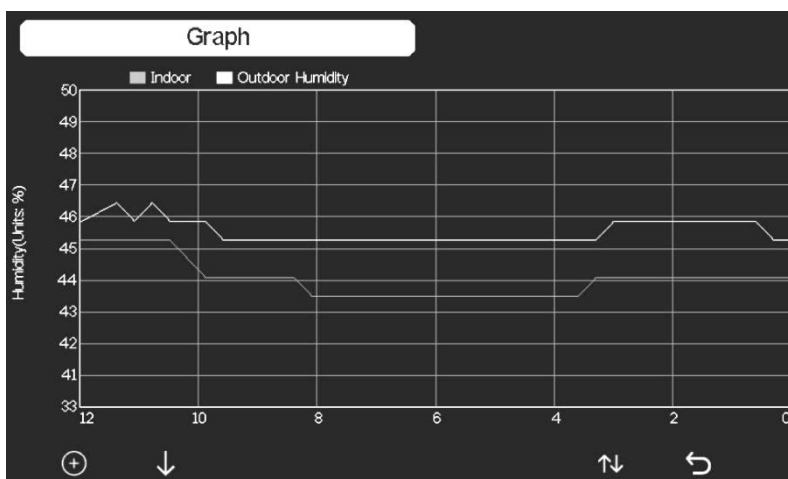
No	Time	Indoor Temperature (°F)	Indoor Humidity (%)	Outdoor Temperature (°F)	Outdoor Humidity (%)	Dew Point (°F)	Feels Like (°F)	Wind (mph)	
2721	12/5/2018 AM 5:13	78.4	65	24.8	54	10.4	24.8	0.0	
2722	12/5/2018 AM 5:18	78.4	65	59.0	73	50.4	59.0	0.0	
2723	12/5/2018 AM 5:23	78.4	65	87.8	89	84.2	111.7	0.0	
2724	12/5/2018 AM 5:28	78.4	65	123.8	19	69.8	123.8	0.0	
2725	12/5/2018 AM 5:33	<div>View data on page 1 to 171</div> <div>00171</div> <div>OkCancel</div>				89	-39.3	-22.0	0.0
2726	12/5/2018 AM 5:38					58	0.1	12.2	0.0
2727	12/5/2018 AM 5:43					74	33.4	41.0	0.0
2728	12/5/2018 AM 5:48					95	77.2	78.8	0.0
2729	12/5/2018 AM 5:52				24	67.6	113.0	0.0	
2730	12/5/2018 AM 5:57				42	--	-36.4	0.0	
2731	12/5/2018 AM 6:24	77.4	64	-4.0	71	-11.2	-4.0	0.0	



Figure 10: view a specific page of history Screen

Press  or  to select a digit in a number, press  or  key to change the number. Press  or  to change the activated option field, toggle OK or Cancel then press  or  key to confirm.

### 3.2.3 Graph Mode

While in History Record Mode, press the  key once to enter Graph Mode.



Press  to shift the data display of 12/24/48/72H. Press  to view the graph of the following data:

Indoor Outdoor humidity

Dew Point and Feels like Indoor Outdoor temperature Wind speed and Gust


Wind Direction UVI







Solar Radiation

Rainfall hourly and daily Barometer (REL & ABS)

### 3.2.4 Optional Sensor Display Mode

To view the full display of multi-channel sensors you can do this:


While in Graph Mode, press the  key once to enter Optional Sensor Display Mode.

CH1 27.1°C 67%	CH2 27.2°C 67%	CH3 27.3°C 66%	CH4 27.3°C 66%	CH5 27.1°C 67%	CH6 27.4°C 67%	CH7 27.3°C 66%	CH8 27.3°C 66%
Soil CH1 0%	Soil CH2 0%	Soil CH3 0%	Soil CH4 0%	Soil CH5 0%	Soil CH6 0%	Soil CH7 0%	Soil CH8 32%
PM2.5 CH2 29ug/m³ Moderate AQI 24H 87 68	PM2.5 CH3 31ug/m³ Moderate AQI 24H 91 93	Water CH2 Normal	Water CH4 Normal	Lightning 20 min ago Dis Cnt 20km 5			
							

**Note:** Channel names can be edited on this page.









### 3.3 Setting Mode

While in normal display, press the  key to enter Setting Mode.

You can select the below sub-mode by pressing the  key.






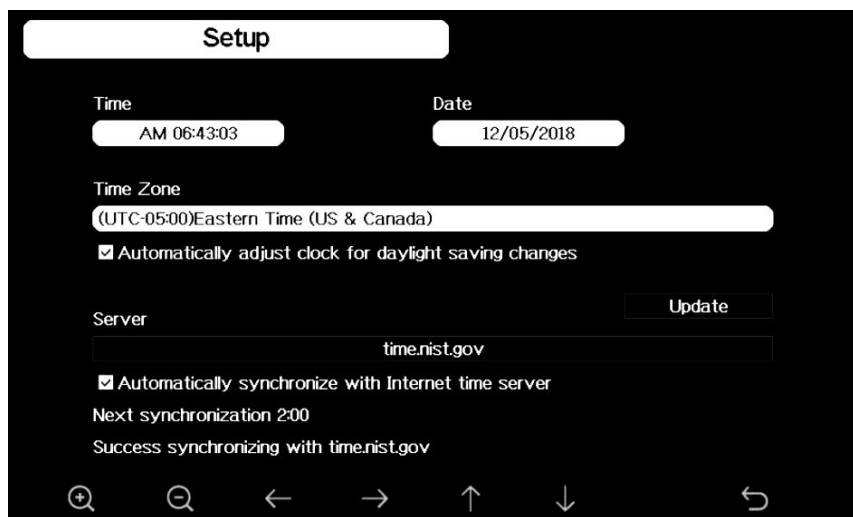
**Figure 11: Setup Menu Screen**

Icon	Description
	<b>Select key</b> Press this key to select the unit or scrolls the value
	<b>Select key</b> Press this key to select the unit or scrolls the value
	<b>Left key</b> Press this key to select the set value
	<b>Right key</b> Press this key to select the set value
	<b>Up arrow key</b> Press this key to change the activated option field
	<b>Down arrow key</b> Press this key to change the activated option field
	<b>Set key</b> Press this key to select the Setting sub-Mode
	<b>Return key</b> Press this key to return to previous mode












### 3.3.1 Date and Time setting

While in Menu Setting Mode, press  key to select Date and Time Setup field, press  or  key to enter Date and Time Setup mode:












**Figure 12: Time and date Setup Screen**







#### 1) Time setting (hour/minute/second)

Press  key to select time setting field, and the hour digit will turn red, press the  or  key to change the hour setting. Press  to set the minute, the minute digit will turn red, press the  or  key to change the minute setting. Press  to set the second, and the second digit will turn red, press the  or  key to change the second setting.



#### 2) Date setting

Press  key to select Date setting field, the day digit on focus turns red, press the  or  key to change the day setting. Press  to set the month, then month digit focused will turn red, press the  or  key to change the month setting. Press  to set the year, the year digit on focus will turn red, press the  or  key to change the year setting.


### 3) Time zone setting

Press  key to select Time zone setting field, press the  or  key to change the time zone setting. Press  key to select Update field, press the  or  key to update the time immediately.


### 4) Automatically synchronize with internet time server

The time server is time.nist.gov. Press the  or  key to tick "Automatically synchronize with internet time server" and press "update" to synchronize with time server immediately. Console time will be updated at 2:01am automatically when internet access is possible.

## 3.3.2 Time Format setting


Press  to change the time format between hour: minute: second (h:mm:ss), hour: minute: second AM (h:mm:ss AM) and AM hour: minute: second (AM h:mm:ss).

## 3.3.3 Date Format setting


Press  to change the time format between DD-MM YYYY, YYYY-

MM- DD and MM-DD-YYYY.


### 3.3.4 Temperature unit setting

Press  to change the temperature units of measure between °F and °C.


### 3.3.5 Barometric unit

Press  to change the temperature units of measure between inHg, mmHg and hpa.


### 3.3.6 Wind speed unit

Press  to change the wind speed units of measure between mph, bft (Beaufort scale), ft/s, m/s, km/h and knot.

### 3.3.7 Rainfall unit


Press  to change the rainfall units of measure between in and mm.

### 3.3.8 Solar Rad. Unit







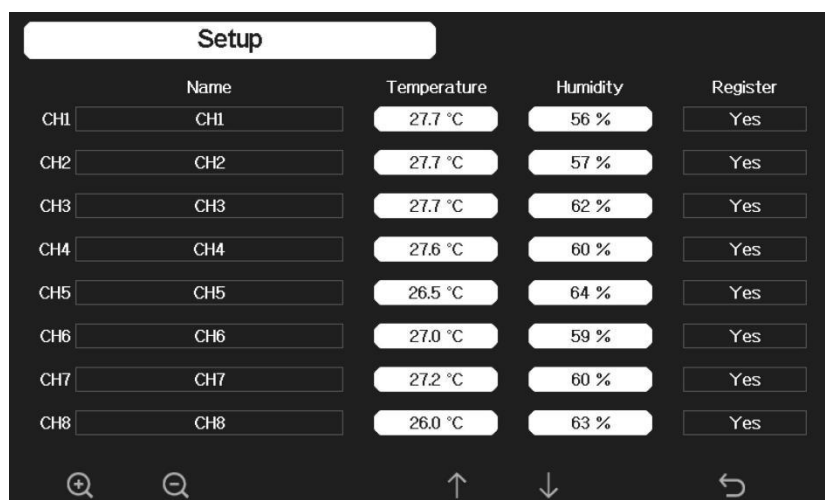



Press  to change the solar radiation units of measure between W/m<sup>2</sup>, lux and fc.

### 3.3.9 Multi Channel Sensor

In Multi channel sensor Setup Screen, you can rename the sensor or register the sensor again while the sensor lost connection to console display.







**Figure 13: Multi channel sensor Setup Screen**

Press  or  key to select Name setting field, the name on focus turns green, press the  or  key to pop up the keyboard to enter the sensor name. Press     to scroll to the character and press  to select the character. Press  to return to the setup page.



**Figure 14: Rename the sensor Screen**

Press  or  key to select Register setting field, press the  or  key to register the selected sensor.

Setup

	Name	Temperature	Humidity	Register
CH1	CH1	27.7 °C	56 %	Yes
CH2	CH2	27.7 °C	57 %	Yes
CH3	CH3	27.7 °C	58 %	Yes
CH4	CH4	27.7 °C	59 %	Yes
CH5	CH5	27.7 °C	60 %	Yes
CH6	CH6	27.0 °C	59 %	Yes
CH7	CH7	27.2 °C	60 %	Yes
CH8	CH8	26.0 °C	63 %	Yes

 Register a new CH5 transmitter?
 

Yes

No






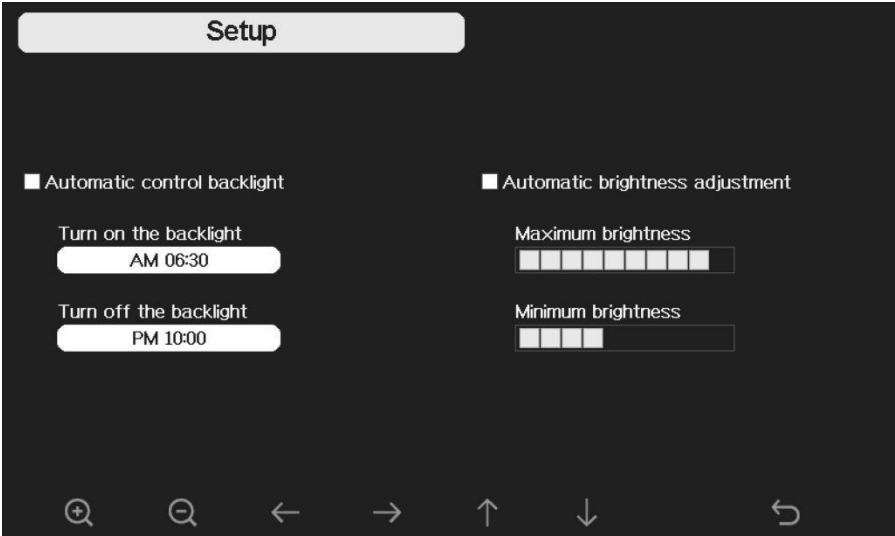






### 3.3.10 Backlight setting

While in Menu Setting Mode, press  key to select Backlight Setup field, press  or  key to enter backlight Setup mode:










**Figure 15: Backlight Setting Screen**


Automatic control backlight: select this option, the backlight will auto turn on and off according the set time

Turn on the backlight: set the time of turning on backlight Turn off the backlight: set the time of turning off backlight




Automatic brightness adjustment: select this option, the brightness will change according to the light intensity measured from outdoor sensor Maximum brightness: set the maximum brightness while it is the highest light intensity

Minimum brightness: set the minimum brightness while it is the weakest light intensity

Icon	Description
	<b>Select key</b> Press this key to select the unit or scrolls the value
	<b>Select key</b> Press this key to select the unit or scrolls the value
	<b>Left key</b> Press this key to select the set value
	<b>Right key</b> Press this key to select the set value
	<b>Up arrow key</b> Press this key to change the activated option field
	<b>Down arrow key</b> Press this key to change the activated option field
	<b>Return key</b> Press this key to return to previous mode

If the auto backlight turn-on time has been set, you can press  key to turn off the backlight within the turn on time. Backlight will turn on again automatically at next turn on time. You can press any key to turn on the backlight for 60s within the turn off time.

### 3.3.11 Longitude: Latitude setting


While in Menu Setting Mode, press  key to select Longitude: Latitude Setup field, press  or  key to enter Longitude Latitude Setup mode:




**Figure 16: Longitude and Latitude Setting Screen**

The sunrise/sunset times will be calculating automatically base on the Longitude and Latitude. Your location GEO info can be found on mobile compass page. Two digits after decimal should be enough for this feature to be working correctly.

### **3.3.12 Barometric display**

Press  to change the barometer display between REL (relative pressure) and ABS (absolute pressure).

### **3.3.13 Rainfall season (default: January)**

Press  to change the beginning of the rainfall yearly season month. The default is January. Rainfall season influence the annual rainfall maximum, minimum and total value. When one month was selected, the annual rainfall and annual max/min rainfall were zero clearing at 0:00 of the first day of the selected month.



### 3.3.14 Storing Interval (1-240minutes Selectable)

#### 3.3.14.1 Weather Server

You may jump to section 5.10.16 now to have your console connected with your Wi-Fi network first. Then back to section 5.10.15 to have cloud data hosting setup completed.

Your console is capable of sending your sensor data to select internet-based weather services. The supported services are shown in the table 3 below:

Service	Description
Weather Underground	Site: <a href="https://wunderground.com">https://wunderground.com</a> provides local & long-range weather forecasts, weather reports, maps & tropical weather conditions for locations worldwide.
WOW	Site: <a href="https://wow.metoffice.gov.uk">https://wow.metoffice.gov.uk</a> A UK based weather observation website.
Weather Cloud	Site: <a href="https://weathercloud.net">https://weathercloud.net</a> A large network of weather stations reporting data in real time from all over the world.
Ecowitt Weather	Site: <a href="https://www.ecowitt.net">https://www.ecowitt.net</a> Ecowitt's new weather server that can host a bunch of sensors that other services don't support at this time.

**Table 3: Supported weather services**

**Note:** If you are testing the setup with the outdoor sensor package nearby and indoor, you may want to consider connecting to Wi-Fi, but not yet configuring any of the weather services. The reason is that while indoor the temperatures and humidity recorded by the outdoor sensor, and as reported to the weather service(s) will reflect indoor conditions, and not outdoor conditions. Therefore, they will be incorrect. Furthermore, the rainfall bucket may be tripped during handling, causing rain to register while it may not actually have been raining. One way to prevent this is to follow all instructions, except to use an incorrect password, on purpose! Then, after final outdoor installation, come back and change the password after clearing console history. That will start uploading to the services

with a clean slate.








Press  or  key to enter Weather Server set up mode. The device can be configured to send real-time data to wunderground.com®. Enter the Station ID and Password obtained from Wunderground.com.



Figure 17: Weather Server setup screen

				
scroll value up	scroll value down	Scroll field up	Scroll field down	return to Setup




- 1) **Set Station ID.** Press to highlight the Station ID. Enter your station ID. Press to display the keyboard. Press to scroll to the character and press to select the character. Press the “OK” button to confirm. Press to return to the setup page.
- 2) **Set Station Key.** Press to highlight the station key. Enter your password obtained from according weather server. Press to display the keyboard. Press to scroll to the character and press to select the character. Press the “OK” button to confirm. Press to return to the setup page.

### 3.3.14.2 Registering with and using wunderground.com

Perform the following steps to get the Station ID and Password on wunderground.com:

1. Visit Wunderground.com and select the Join link at the top of the page and sign up.



### Join Weather Underground

- Choose real-time alerts for your city.
- Choose adding your webcam or personal weather station.
- You can delete your account at any time from your member settings.

The Weather Company needs your email to create your Weather Underground account.

Email

Password (5-30 characters)

Show

Confirm New Password:

☐ I agree to the Terms of Use


Sign up for free

Already have an account? Sign in

2. Click My Profile and select My Devices to register your station.



3. Select Add New Device.

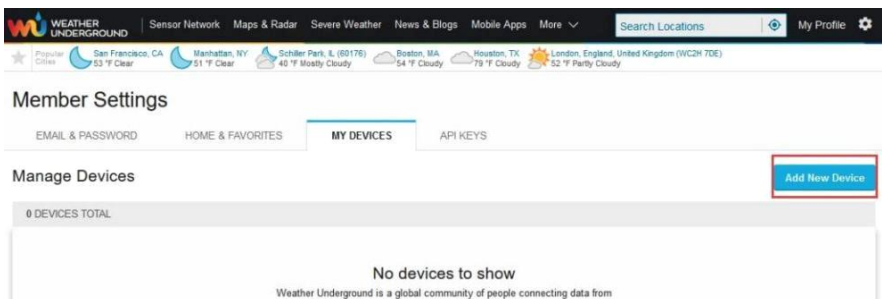

4. Find Personal Weather Station. Select ‘other’ and click ‘Next’.

Add a New Device

TYPE LOCATION DETAILS DONE

Select a Device Type

25%

**Personal Weather Station**

other

Next

Cancel

RainWise MK-III-LR

RainWise AgroMET

Raspberry Pi

Texas Instruments WR-25-C

Texas Instruments WLS-8000

Texas Instruments WPS

Texas Instruments WRS-Standard

Texas Instruments WRS-Solar

TML208

Tycon Power Systems ProWeatherStation

WeatherFlow

WeatherHawk 611

WeatherHawk 610

WeatherHawk 620

WeatherHawk 621

WeatherHawk 232

WeatherHawk 916

WeatherHawk 922

WeatherHawk 240

other

**Outdoor Webcam**

Select camera type

Next

Terms of Use

Privacy Policy

Ad Choices

Data Vendors

Technology for good. Take control of your data.

Data Rights

the IBM Cloud

M

WU

Technology LLC 2014, 2021

5. Select ‘Address’ or ‘Manual’ option, and find your local position. Press ‘Next’.

Add a New PWS

TYPE LOCATION DETAILS DONE

Set Device Name & Location

50%

Device Location:

☐ Address ☒ Manual

48.101.11.363

Your Location has been verified and added!

Elevation: 1841 ft.

Lat, Lon: 48.101, 11.363

Neighborhood: Krailling

Time Zone: Europe/Berlin

Back Next

Mammendorf Olching Fürstenfeldbruck Germering Munich Unterhaching Taufkirchen Starnberg Pöcking Berg Jen am See Herrsching am Ammersee Seefeld Andechs Herrsching am Ammersee

© Mapbox © OpenStreetMap | Improve this map

6. This time you will be asked details about your weather station. Go ahead and fill out the form.

Add a New PWS

TYPELOCATIONDETAILSDONE

Tell Us More About Your Device

75%

Name:(Required)

Give Your Device a Name

Surface Type:

Elevation:(Required)

89

Associate Webcam:

Select WebCams

Device Hardware:(Required)

other

Height Above Ground:

Ft. Above Ground

You Make Our Forecasts More Accurate, We Respect Your Privacy

Contribute to the Weather Underground community by sharing some information about yourself and your sensor. We use this information to manage your account and to improve the experience from the Weather Underground community. We may also share certain data for commercial purposes, such as your sensor location.

[Learn more about how we take your privacy seriously](#)

(Required)

☒ I Accept

☐ I Deny

Email Preferences:

☐ I would like to receive PWS notifications.

Back

Next

7. After completing the weather station, you will see station ID and key/password.

Add a New PWS

TYPELOCATIONDETAILSDONE

Registration Complete!

100%

Congratulations! Your personal weather station is now registered with Weather Underground.

Enter the information below to your weather station software.

Your PWS

Station ID:

Station Key:

Copy credentials






Configure Your Software

38

8. Take note of the station ID and key/password and enter it in the Weather Server:



**Figure 18: Weather Server setup screen**

				
scroll value up	scroll value down	Scroll field up	Scroll field down	return to Setup



- 1) **Set Station ID.** Press to highlight the Station ID. Enter your station ID. Press to display the keyboard. Press to scroll to the character and press to select the character. Press the “OK” button to confirm. Press to return to the setup page.
- 2) **Set Station Key.** Press to highlight the station key. Enter your password obtained from according weather server. Press to display the keyboard. Press to scroll to the character and press to select the character. Press the “OK” button to confirm. Press to return to the setup page.
9. Refresh the page, you may have to wait about a few minutes until the status becomes ‘Online’. Then you can click device name to view data.



## Member Settings

[EMAIL & PASSWORD](#)[HOME & FAVORITES](#)[MY DEVICES](#)[API KEYS](#)

### Manage Devices

[Add New Device](#)

1 DEVICES TOTAL

Name	Location	Status	ID	Key	Type	Manage
HP2251.1	Shenzhen (Nanshan District), CN	Online			PWS	<a href="#">Edit</a>   <a href="#">Delete</a>   <a href="#">Copy credentials</a>


Items per page: 10 1 - 1 of 1

### 3.3.14.3 Viewing data on wunderground.com

The most basic way to observe your weather station's data is by using the wunderground.com web site. You will use a URL like this one, where your station ID replaces the text "STATIONID":

<http://www.wunderground.com/personal-weather-station/dashboard?ID=STATIONID>


It will show a page such as this, where you can look at today's data and historical data as well:

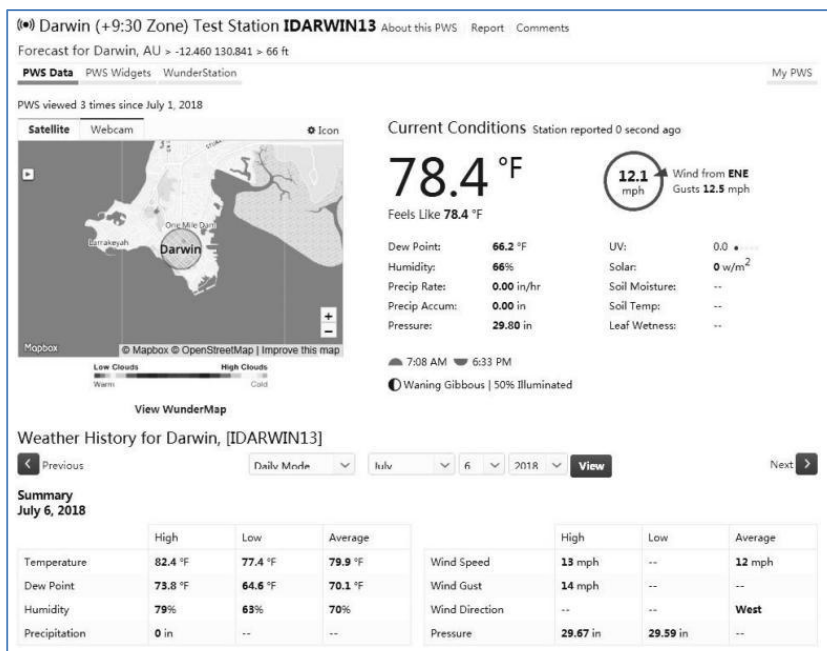

There are also some very useful mobile apps. The URLs provided here go to the Web version of the application pages. You can also find them directly from the iOS or Google Play stores:

- **WunderStation:** iPad application for viewing your station's data and graphs

<https://itunes.apple.com/us/app/wunderstation-weather-from-your-neighborhood/id906099986>

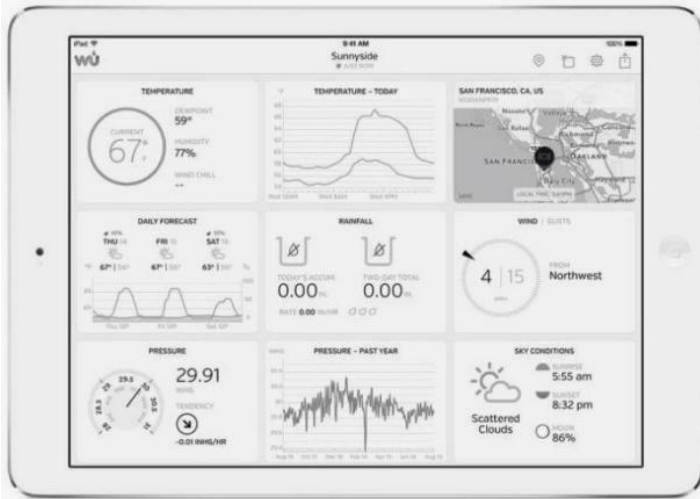

- **WU Storm:** iPad and iPhone application for viewing radar images, animated wind, cloud coverage and detailed forecast, and PWS station data

<https://itunes.apple.com/us/app/wu-storm/id955957721>



- **Weather Underground: Forecast:** iOS and Android application for forecasts


<https://itunes.apple.com/us/app/weather-underground-forecast/id486154808>

<https://play.google.com/store/apps/details?id=com.wunderground.android.id.weather&hl=en>



**PWS Weather Station Monitor:** View weather conditions in your neighborhood, or even right in your own backyard. Connects to wunderground.com

<https://itunes.apple.com/us/app/pws-weather-station-monitor/id713705929>

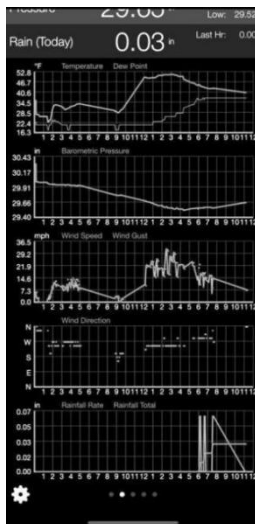

### 3.3.14.4 Registering with and using Ecowitt Weather

You can also use the Ecowitt Weather server to monitor and record all your sensors' data. Configure as follows:

- On the Weather Server page, set the reporting interval time (default: 1 minute).
- Visit the website: <https://www.ecowitt.net> on your computer and finish the registration on the page.
- Press the upper left menu button and select Devices.
- Press Add Device and input all the information needed (The MAC address can be found on the Weather Server page).
- Press Save.
- Press Dashboard on the menu. Your sensor data would be available on the dashboard within several minutes.

**Note:** When select device address on map, please wait until the map displays before selecting your address.

You may add a shortcut to the ecowitt.net website on the home page of your phone so that you can visit it just like opening an app.

### 3.3.14.5 Viewing data on ecowitt.net

You can observe your sensor’s data by using the ecowitt.net web site. You will use a URL like this one, where your station ID replaces the text “STATIONID”.

<https://www.ecowitt.net/home/index?id=STATIONID>


**Note:** If you want to share your station data with other users, you may use the Share option under the Menu to create a share link.

It will show a page such as this, where you can look at today’s data and historical data as well.

### Dashboard



Graph display

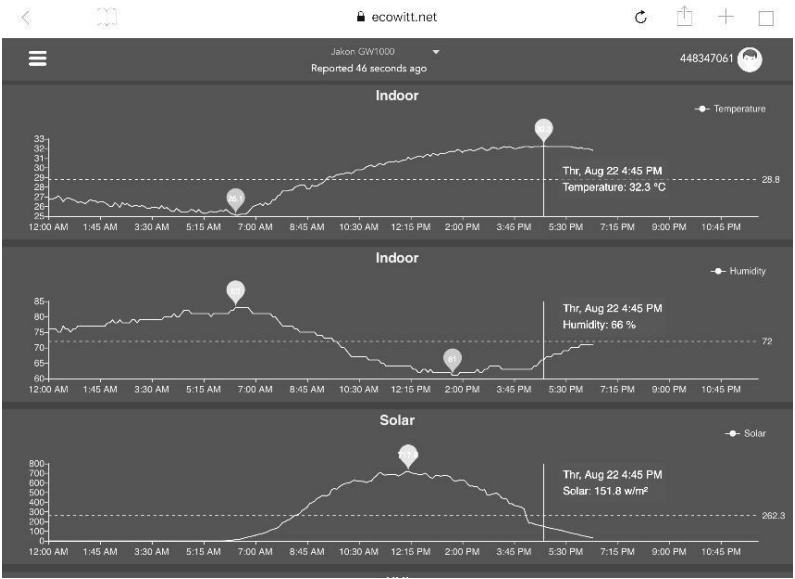

List display

6:37 PM Thu Aug 22

ecowitt.net

Jakon GW1000  
Reported 13 seconds ago


448347061

Daily


Aug/22/2019

Time	Temperature (°C)	Humidity(%)	Dew Point(°C)	Feels Like(°C)	Temperature (°C)	Humidity(%)	Absolute(hPa)	Relative(hPa)	Wind Speed(m/s)	Wind Gust(m/s)	Wi Dr
2019-08-22 18:30	31.3	77	26.6	40.9	31.8	72	997.8	997.8	1.0	2.0	4
2019-08-22 18:25	31.5	77	26.9	41.3	31.8	71	997.7	997.7	1.1	1.5	2
2019-08-22 18:20	31.5	76	26.6	41.2	31.9	71	997.8	997.8	0.8	1.5	3
2019-08-22 18:15	31.6	76	26.9	41.4	32.0	71	997.7	997.7	0.9	2.0	2
2019-08-22 18:10	31.7	75	26.6	41.5	32.0	71	997.6	997.6	0.7	2.0	3
2019-08-22 18:05	31.8	75	26.8	41.6	32.0	71	997.6	997.6	0.8	2.6	2
2019-08-22 18:00	31.9	74	26.7	41.6	32.1	71	997.5	997.5	1.1	3.1	8
2019-08-22 17:55	31.9	75	26.9	41.9	32.0	70	997.5	997.5	1.1	3.6	7
2019-08-22 17:50	32.1	74	26.9	42.4	32.1	70	997.4	997.4	1.0	2.0	5
2019-08-22 17:45	32.2	74	27.0	42.6	32.1	70	997.4	997.4	1.7	2.6	1
2019-08-22 17:40	32.3	74	27.1	42.9	32.2	70	997.1	997.1	0.6	2.0	2
2019-08-22 17:35	32.5	73	27.0	43.1	32.2	69	997.3	997.3	0.9	2.6	6
2019-08-22 17:30	32.7	72	27.1	43.6	32.2	69	997.4	997.4	0.6	1.5	5

# Weather Map

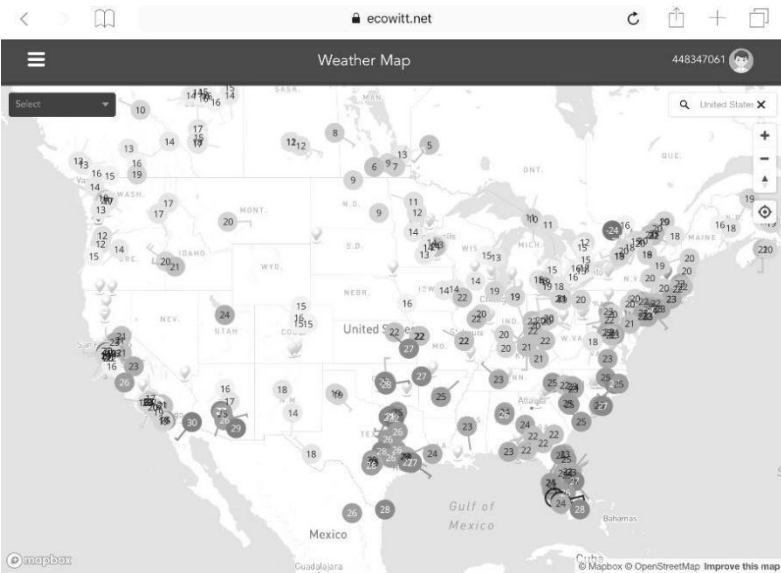

# Email Alerts

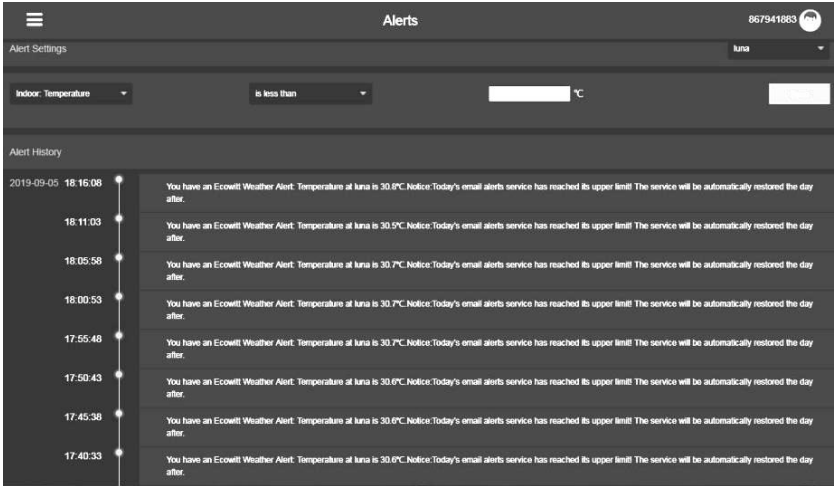

### 3.3.14.6 Customized server setup

For highly experienced users, it offers the option to send data to the user’s own server. Press the “setup” button to enter Customized setup screen

**Setup**

Wunderground   
Station ID   
Station Key

Weathercloud   
Station ID   
Station Key

WOW   
Station ID   
Station Key

Ecowitt   
Interval  MAC: B4:E6:2D:07:25:73

Figure 19 : Server setup screen

Select Enable button and select the protocol type. The website should has the same protocol with Wunderground or Ecowitt. Input all the information needed.



Customized

State

Enable

Protocol Type

Same As Ecowitt

IP/Hostname

Port

80

Interval

60 Second

+

-

←

→

↑

↓

↶

Customized

State

Enable

Protocol Type

Same As Wunderground

IP/Hostname

Port

80

Interval

60 Second

Station ID

Station Key

+

-

←

→

↑


↓





↶


49

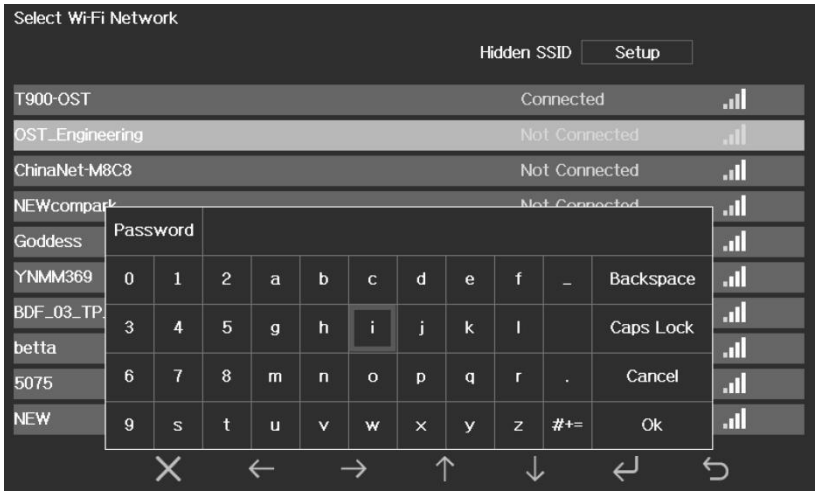
### 3.3.15 Connect Console to Your Router: Wi-Fi scan


Entering this mode, system will display all the available Wi-Fi networks. Select the SSID that you want console to be connected with (only supports 2.4GHz band Wi-Fi network) , and enter passer word as required.























Press  or  key to select the Wi-Fi network. Press  key to confirm and enter the password. Press  key to return to normal display mode. It is possible that your network is not listed when Wi-Fi Scan is


performed. Press  button and restart Wi-Fi Scan, this will usually solve the problem

Only after connect to WLAN you can upload the data to weather website. If the Wi-Fi network connects successfully, the icon  will show on the left top of the console display. If the data upload to Wunderground.com

successfully, the icon  will show on the left top of the console display. If the Wi-Fi network you would like to connect is with a hidden SSID, please follow below steps to connect:




- 1) Press   to select Hidden SSID setup, and press  key directly to enter.
- 2) Press  to highlight the SSID. Press  to display the keyboard and enter your SSID. Press     to scroll to the character and press  to enter the character. Press  to return to the setup page.
- 3) Press  to highlight the Password. Press  to display the keyboard and start to enter your password.. Press     to scroll to the character and press  to enter the character. Press  to return to the setup page.
- 4) Press  to highlight the “OK” button beside “Connect ” to start connecting.

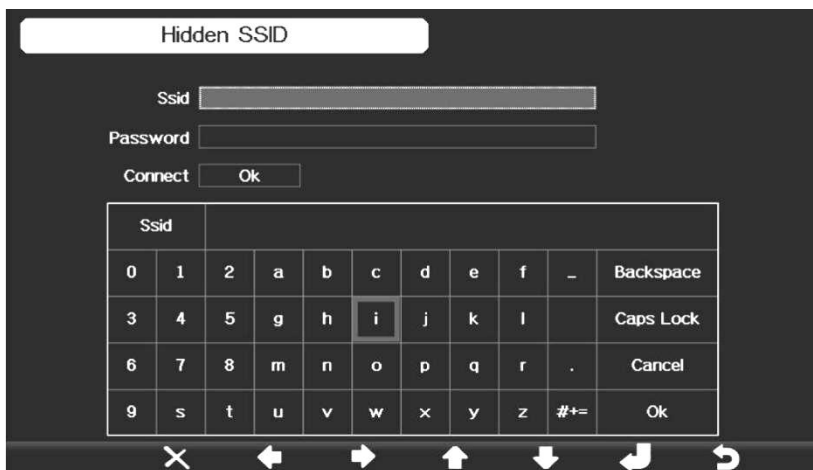After connected successfully, the status will display” Connected”.












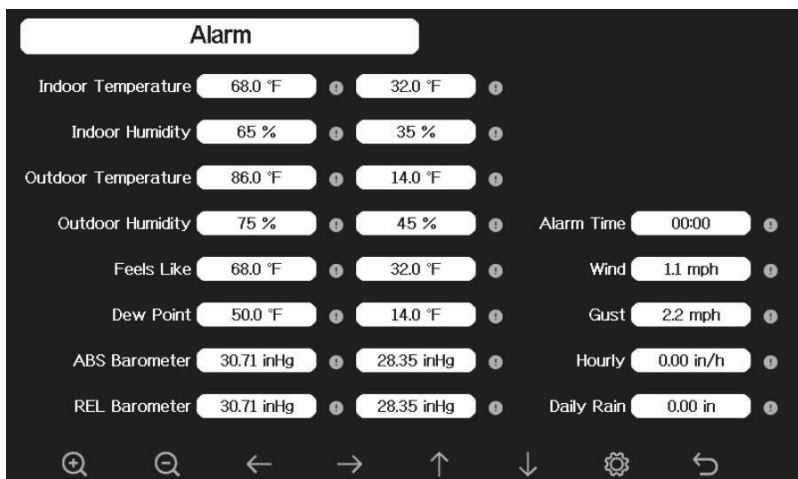

### 3.3.16 Background

While in Menu Setting Mode, press  key to select Background Setup field, press  or  key to choose between dark background display and light background display.


## 3.4 Alarm Setting Mode









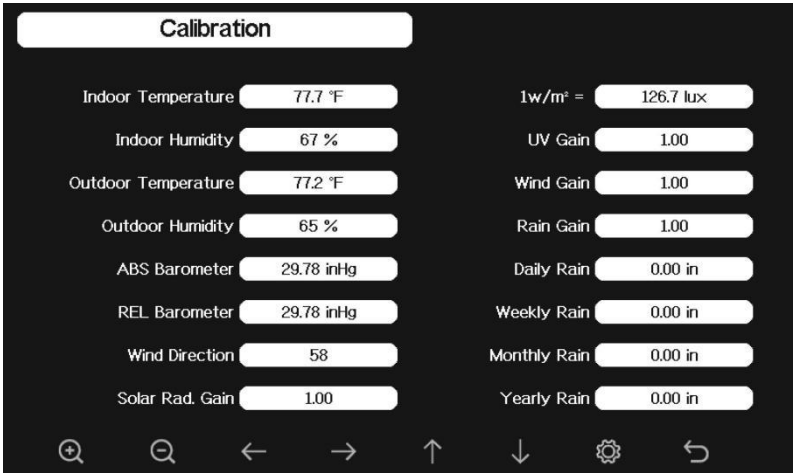





Icon	Description
	<b>Select key</b> Press this key to select the unit or scrolls the value
	<b>Select key</b> Press this key to select the unit or scrolls the value
	<b>Left key</b> Press this key to select the set value
	<b>Right key</b> Press this key to select the set value
	<b>Up arrow key</b> Press this key to change the activated option field
	<b>Down arrow key</b> Press this key to change the activated option field
	<b>Set key</b> Press this key to select the Setting sub-Mode
	<b>Return key</b> Press this key to return to previous mode

The first row is high alarm value and the second row is low alarm value. When weather alarm condition has been triggered, that particular alarm will sound for 120 second and the corresponding icon will flash until the weather condition doesn't meet the user set level. Press any key to mute the alarm.

### 3.5 Calibration Mode



Icon	Description
	<b>Select key</b> Press this key to select the unit or scrolls the value
	<b>Select key</b> Press this key to select the unit or scrolls the value
	<b>Left key</b> Press this key to select the set value
	<b>Right key</b> Press this key to select the set value
	<b>Up arrow key</b> Press this key to change the activated option field
	<b>Down arrow key</b> Press this key to change the activated option field
	<b>Set key</b> Press this key to select the Setting sub-Mode
	<b>Return key</b> Press this key to return to previous mode

To adjust the parameter, press  to scroll to the parameter you wish to change. Press  to highlight the sign (positive vs. negative, if applicable) and significant digit. Press  or  to change the calibrated value.

Parameter	Type of Calibration	Default	Typical Calibration Source
Temperature	Offset	Current Value	Red Spirit or Mercury Thermometer (1)
Humidity	Offset	Current Value	Sling Psychrometer (2)
ABS Barometer	Offset	Current Value	Calibrated laboratory grade barometer
REL Barometer	Offset	Current Value	Local airport (3)
Wind Direction	Offset	Current Value	GPS, Compass (4)
Solar Radiation	Gain	1.00	Calibrated laboratory grade solar radiation sensor
1 w/m <sup>2</sup>	Gain	126.7 lux	Solar radiation conversion from lux to w/m <sup>2</sup> for wavelength correction (5)
Wind	Gain	1.00	Calibrated laboratory grade wind meter (6)
Rain	Gain	1.00	Sight glass rain gauge with an aperture of at least 4" (7)
Daily Rain	Offset	Current Value	Apply an offset if the weather station was not operating for the entire day.
Weekly Rain	Offset	Current Value	Apply an offset if the weather station was not operating for the entire week.
Monthly Rain	Offset	Current Value	Apply an offset if the weather station was not operating for the entire month.
Yearly Rain	Offset	Current Value	Apply an offset if the weather station was not operating for the entire year.

- (1) Temperature errors can occur when a sensor is placed too close to a heat source (such as a building structure, the ground or trees).

To calibrate temperature, we recommend a mercury or red spirit (fluid) thermometer. Bi-metal (dial) and digital thermometers (from other weather stations) are not a good source and have their own margin of error. Using a local weather station in your area is also a poor source due to changes in location, timing (airport weather stations are only updated once per hour) and possible calibration errors (many official weather stations are not properly installed and calibrated).

Place the sensor in a shaded, controlled environment next to the fluid thermometer, and allow the sensor to stabilize for 3 hours. Compare this temperature to the fluid thermometer and adjust the console to match the fluid thermometer.

- (2) Humidity is a difficult parameter to measure electronically and drifts over time due to contamination. In addition, location has an adverse affect on humidity readings (installation over dirt vs. lawn for example).

Official stations recalibrate or replace humidity sensors on a yearly basis. Due to manufacturing tolerances, the humidity is accurate to  $\pm 5\%$ . To improve this accuracy, the indoor and outdoor humidity can be calibrated using an accurate source, such as a sling psychrometer.

- (3) The display console displays two different pressures: absolute (measured) and relative (corrected to sea-level).

To compare pressure conditions from one location to another, meteorologists correct pressure to sea-level conditions. Because the air pressure decreases as you rise in altitude, the sea-level corrected pressure (the pressure your location would be at if located at sea-level) is generally higher than your measured pressure.

Thus, your absolute pressure may read 28.62 inHg (969 mb) at an altitude of 1000 feet (305 m), but the relative pressure is 30.00 inHg (1016 mb)

The standard sea-level pressure is 29.92 in Hg (1013 mb). This is the average sea-level pressure around the world. Relative pressure measurements greater than 29.92 inHg (1013 mb) are considered high pressure and relative pressure measurements less than 29.92



inHg are considered low pressure.

To determine the relative pressure for your location, locate an official reporting station near you (the internet is the best source for real time barometer conditions, such as Weather.com or Wunderground.com), and set your weather station to match the official reporting station.

- (4) Only use this if you improperly installed the weather station sensor array, and did not point the direction reference to true north.
- (5) The default conversion factor based on the wavelength for bright sunlight is  $126.7 \text{ lux} / \text{w/m}^2$ . This variable can be adjusted by photovoltaic experts based on the light wavelength of interest, but for most weather station owners, is accurate for typical applications, such as calculating evapotranspiration and solar panel efficiency.
- (6) Wind speed is the most sensitive to installation constraints. The rule of thumb for properly installing a wind speed sensor is 4 x the distance of the tallest obstruction. For example, if your house is 20' tall and you mount the sensor on a 5' pole:

$$\text{Distance} = 4 \times (20 - 5)' = 60' \text{ or } = 4 \times (6.10 - 1.52) = 18.32\text{m}.$$

Many installations are not perfect and installing the weather station on a roof can be difficult. Thus, you can calibrate for this error with a wind speed multiplier.

In addition to the installation challenges, wind cup bearings (moving parts) wear over time.

Without a calibrated source, wind speed can be difficult to measure. We recommend using a calibrated wind meter (not included) and a constant speed, high speed fan.

**Note:** If located in southern hemisphere, please follow the steps to calibrate the wind direction:

1. Install the outdoor sensor package with the West arrow on the sensor pointing due East.
2. Check the wind direction offset (Default: equals to the current wind

direction )

If: Current wind direction offset  $< 180$ , then it should be calibrated to be:  
current wind direction + 180

If: Current wind direction offset  $> 180$ , then it should be calibrated to be:  
current wind direction - 180

For example, if the current wind direction is 288, then you'll need to set the wind direction offset to be:  $288-180=108$ .

If the current wind direction is 12, then you'll need to set the wind direction offset to be:  $12+180=192$ .

- (7) The rain collector is calibrated at the factory based on the funnel diameter. The bucket tips every 0.01" or 0.1m of rain (referred to as resolution). The accumulated rainfall can be compared to a sight glass rain gauge with an aperture of at least 4" or 0.1m.

Make sure you periodically clean the rain gauge funnel.


**Note:** The purpose of calibration is to fine tune or correct for any sensor error associated with the devices margin of error. Errors can occur due to electronic variation (example, the temperature sensor is a resistive thermal device or RTD, the humidity sensor is a capacitance device), mechanical variation, or degradation (wearing of moving parts, contamination of sensors).

Calibration is only useful if you have a known calibrated source you can compare it against, and is optional. This section discusses practices, procedures and sources for sensor calibration to reduce manufacturing and degradation errors. Do not compare your readings obtained from sources such as the internet, radio, television or newspapers. The purpose of your weather station is to measure conditions of your surroundings, which vary significantly from location to location.

**Note:** UV Calibration MUST be performed every 2 to 3 months to improve results. Over time, UV Index may alter results based on bright and strong sunlight conditions. This is why diligent UV Calibration is recommended.

### 3.6 More

On the More page, you can set the Calibration for the optional multi-channel soil moisture/PM2.5/temp and humidity sensor. You can also view or manage all the sensors ID on the Sensors ID Setup page.

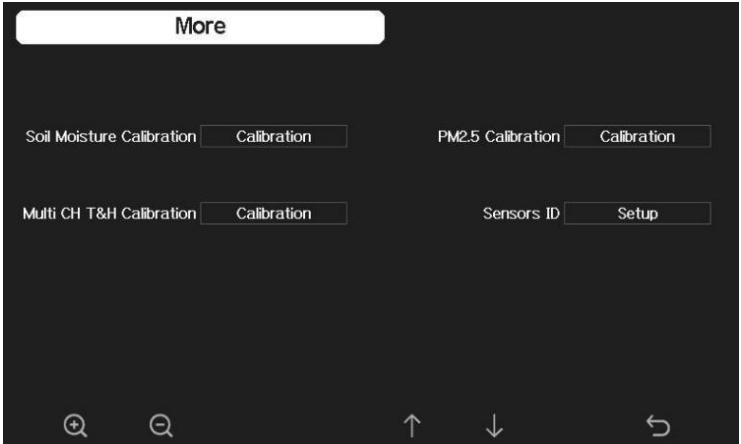

Calibration						
Channel	Soil Moisture	Now AD	0%AD	100%AD	Customize	Reset
1	3%	83	70	500	OFF	Reset
2	62%	320	70	500	OFF	Reset
3	0%	26	70	500	OFF	Reset
4	51%	268	70	500	OFF	Reset
5	29%	188	70	500	OFF	Reset
6	0%	26	70	500	OFF	Reset
7	66%	335	70	500	OFF	Reset
8	63%	323	70	500	OFF	Reset

Calibration

Channel	PM2.5	PM2.5 Offset	Reset
1	34ug/m <sup>3</sup>	0	Reset
2	35ug/m <sup>3</sup>	0	Reset
3	42ug/m <sup>3</sup>	0	Reset
4	--	0	Reset

+
-
←
→
↑
↓
↶

Calibration

Channel	Temperature	Humidity	Temp. Offset	Humi. Offset	Reset
1	--	--	0.0	0	Reset
2	82.2°F	45%	0.0	0	Reset
3	80.8°F	46%	0.0	0	Reset
4	81.0°F	47%	0.0	0	Reset
5	81.0°F	46%	0.0	0	Reset
6	81.3°F	47%	0.0	0	Reset
7	14.7°F	49%	0.0	0	Reset
8	81.3°F	45%	0.0	0	Reset

+
-
←
→
↑
↓
↶

### Note:

To calibrate the optional soil moisture sensor, please refer to the manual of the WH51 soil moisture sensor.

To calibrate the PM2.5 sensor, you'll need to find a reliable source, such as professional devices from your local air quality service.

To calibrate the temp and humidity sensor, please refer to section 4.9.19

# Sensor ID Setup

On this page you can set the following:

- View sensor ID, signal strength and battery power condition. 1-4 bars means 1-4 successful successive signal receptions without missed ones.
- Register the sensor when a new sensor is to be paired with.
- Stop unwanted sensor( like from your neighbor) to be received by disable that sensor type.
- Make console receiving data from a pre-defined sensor ID.

Sensor	Signal	ID	CH	Sensor	Signal	ID	CH	Sensor	Signal	ID
WH65		2f	1	PM2.5		3b	7	T&H		19
T&HP		49	2	PM2.5		c4ad	8	T&H		17
T&H		8a	3	PM2.5		5f	1	Soil		c4a7
WS80		60029	4	PM2.5		3f	2	Soil		c4c9
WH40		c49e	1	T&H		31	3	Soil		c4b3
WS68		334	2	T&H		81	4	Soil		c4ac
			3	T&H		65	5	Soil		c68f
			4	T&H		e5	6	Soil		----
			5	T&H		66	7	Soil		10
			6	T&H		8e	8	Soil		c4bc


Sensor	Signal	ID	CH	Sensor	Signal	ID	CH	Sensor	Signal	ID
WH65		2f	1	PM2.5		3b	7	T&H		19
T&HP		49	2	PM2.5		c4ad	8	T&H		17
T&H		8a						Soil		c4a7
WS80		60029						Soil		c4c9
WH40		c49e						Soil		c4b3
WS68		334						Soil		c4ac
								Soil		c68f
								Soil		----
								Soil		10
								Soil		c4bc

Please enter the correct hexadecimal ID.  
ID length needs to be less than 6.

Register      Disable

2f



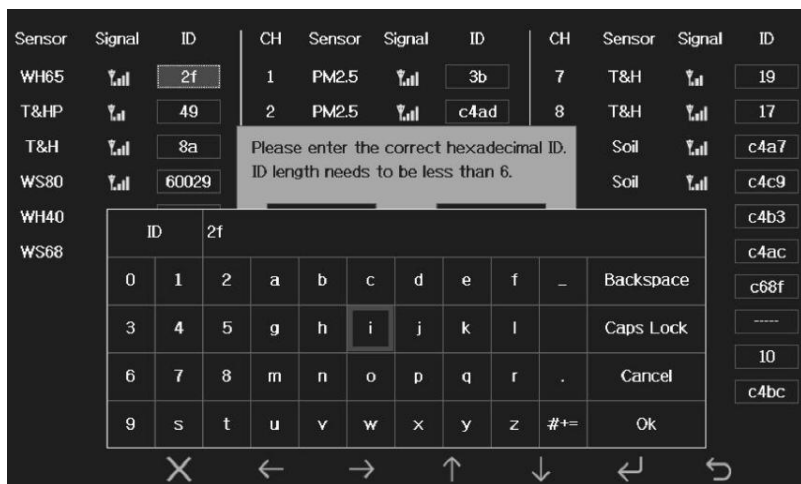




Save      Cancel



## 3.7 Factory reset



### 3.7.1 Re-register indoor transmitter

Press  or  key to select re-register indoor transmitter. Press  or  key to popup the Message Box “Register a new indoor transmitter?” Press  or  to select Yes or No. Press the  or





 key to confirm the selection.

### 3.7.2 Re-register outdoor transmitter

Please reference section 5.13.1. Procedures and settings are similar to re-register indoor transmitter.









### 3.7.3 Automatic Clear Max/Min

To turn on/off automatically clear Max/Min record at 0:00hr every day.









Press  or  key to select Automatic clear Max/Min. Press   
or  key to switch on/off.

When it is selected with ON option, min/max will be presented as daily min/max, and with OFF option selected, it is for history min/max record.









### 3.7.4 Reset to Factory

Press  or  key to select Reset to Factory. Press  or   
key to popup the Message Box "Reset to factory default?" Press   
or  to select Yes or No. Press the  or  key to confirm the selection.









### 3.7.5 Clear History

Press  or  key to select Clear History. Press  or  key  
to popup the Message Box "Clear the history record?" Press  or   
to select Yes or No. Press the  or  key to confirm the selection.

### 3.7.6 Clear Max/Min


Press  or  key to select Clear Max/Min. Press  or  key to popup the Message Box "Clear the max/min record?" Press  or  to select Yes or No. Press the  or  key to confirm the selection.

### 3.7.7 Backup data

Press  or  key to select Backup data. Press  or  key to popup the Message Box "Copy history data to SD card?" Press  or  to select OK or Cancel. Press the  or  key to confirm the selection.

**Note:** You need to insert a SD card(not included) into the console before using this function.

### 3.7.8 About information

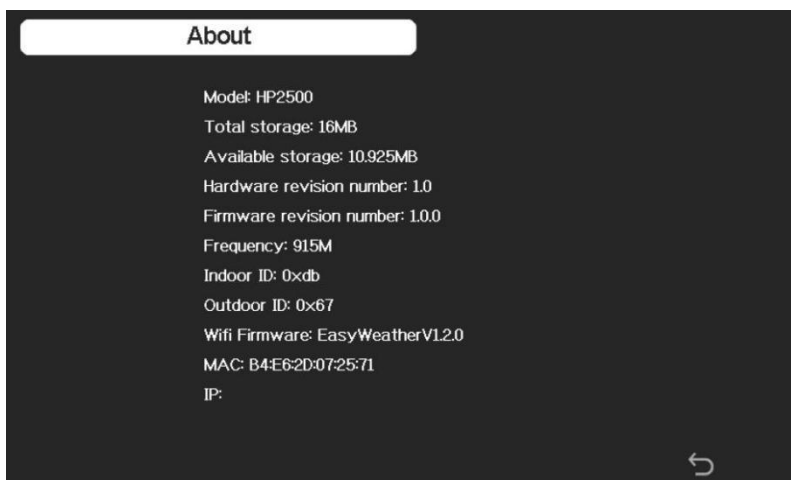



**Note:** This figure is just for reference(model and frequency will change according to different market). The actual display console may be with higher firmware version than this manual described because we will update the firmware occasionally.

## 4 Other Console Functions

### 4.1 Beaufort Wind Force Scale

If you have selected the use of Beaufort wind speed units, you can use the table 4 below for reference. The Beaufort scale is based on qualitative wind conditions and how they would affect a ship's (frigate) sails (so yes, it is an "old" standard). It is therefore less precise than the other scales but is still in use in various locales.








Wind speed	Beaufort number	Description
0 - 1 mph, or 0 - 1.6 km/h	0	Calm
1 - 3 mph, or 1.6 - 4.8 km/h	1	Light air
3 - 7 mph, or 4.8 - 11.3 km/h	2	Light breeze
7 - 12 mph, or 11.3 - 19.3 km/h	3	Gentle breeze
12 - 18 mph, or 19.3 - 29.0 km/h	4	Moderate breeze
18 - 24 mph, or 29.0 - 38.6 km/h	5	Fresh breeze
24 - 31 mph, or 38.6 - 49.9 km/h	6	Strong breeze
31 - 38 mph, or 49.9 - 61.2 km/h	7	Near gale
38 - 46 mph, or 61.2 - 74.1 km/h	8	Gale
46 - 54 mph, or 74.1 - 86.9 km/h	9	Strong gale
55 - 63 mph, or 88.5 - 101.4 km/h	10	Storm
64 - 73 mph, or 103 - 117.5 km/h	11	Violent storm
74 mph and above, or 119.1 km/h and above	12	Hurricane

**Table 4: Beaufort wind force scale**


### 4.2 Weather Forecasting

The seven weather icons are Sunny, Partly Cloudy, Cloudy, Rainy, Stormy, Snowy and Storm Snowy.

The forecast icon is based on the rate of change of barometric pressure. Please allow at least one month for the weather station to learn the barometric pressure over time.

Sunny	Partly Cloudy	Cloudy
		
Pressure increases for a sustained period of time	Pressure increases slightly or initial power up	Pressure decreases slightly
Rainy	Stormy	Snowy
		
Pressure decreases for a sustained period of time	Pressure rapidly decreases	Pressure decreases for a sustained period of time, and temperature $\leq 0^{\circ}\text{C}$
Storm Snowy		
		
Pressure rapidly decreases, and temperature $\leq 0^{\circ}\text{C}$		

### 4.3 Lightning Alert

The lightning icon  will appear if the Dew Point exceeds 70 F. This means there is a chance of lightning storms forming.


### 4.4 Weather Forecasting Description and Limitations









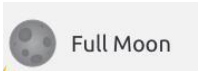













In general, if the rate of change of pressure increases, the weather is generally improving (sunny to partly cloudy). If the rate of change of pressure decreases, the weather is generally degrading (cloudy, rainy or stormy). If the rate of change is relatively steady, it will read partly cloudy.





The reason the current conditions do not match the forecast icon is because the forecast is a prediction 24-48 hours in advance. In most locations, this prediction is only 70% accurate and it is a good idea to consult the National Weather Service for more accurate weather forecasts. In some locations, this prediction may be less or more accurate. However, it is still an interesting educational tool for learning why the weather changes.

The National Weather Service (and other weather services such as Accuweather and The Weather Channel) have many tools at their disposal to predict weather conditions, including weather radar, weather models, and detailed mapping of ground conditions.

### 4.5 Moon Phase

In the event the moon phase is 100%, the icon  will appear in its place. In the event of 0%, the word “New Moon” will appear in its place.

<b>Moon Phase</b>	<b>Image</b>	<b>Moon Phase</b>	<b>Image</b>
Day 1		Day 14	
Day 2		Day 15	
Day 3		Day 16	
Day 4		Day 17	
Day 5		Day 18	
Day 6		Day 19	
Day 7		Day 20	
Day 8		Day 21	
Day 9		Day 22	
Day 10		Day 23	
Day 11		Day 24	



Day 12		Day 25	
Day 13 Full Moon		Day 26 New Moon	

## 5 Troubleshooting Guide

Look through the following table and locate an issue or problem you are experiencing in the left column and read possible solutions in the right column.

Problem	Solution
<p>Wireless remote (thermo-hygrometer) not reporting in to console.</p> <p>There are dashes on the display console.</p>	<p>The maximum line of sight communication range is about 300'. Move the sensor assembly closer to the display console.</p> <p>Resynchronize the remote sensor(s). Reference Section 5.13.2</p> <p>Install a fresh set of batteries in the remote sensor(s).</p> <p>Make sure the remote sensors are not transmitting through solid metal (acts as an RF shield), or earth barrier (down a hill).</p> <p>Radio Frequency (RF) Sensors cannot transmit through metal barriers (example, aluminum siding) or multiple, thick walls.</p> <p>Move the display console around electrical noise generating devices, such as computers, TVs and other wireless transmitters or receivers.</p>
Outdoor sensor array does not communicate to the display console.	<p>The sensor array may have initiated properly and the data is registered by the console as invalid, and the console must be reset. Press the reset button as described in Section Installation.</p>

	<p>With an open ended paperclip, press the reset button for 3 seconds to completely discharge the voltage.</p> <p>Take out the batteries and wait one minute, while covering the solar panel to drain the voltage.</p> <p>Put batteries back in and re-sync with console by powering down and up the console with the sensor array about 10 feet away.</p> <p>Bring the sensor array inside the house (you can disconnect it from the rest of the sensors). The LED next to the battery compartment will flash every 16 seconds. If the LED is not flashing every 16 seconds...</p> <p>Replace the batteries in the outside sensor array.</p> <p>If the batteries were recently replaced, check the polarity. If the sensor is flashing every 16 seconds, proceed to the next step.</p> <p>There may be a temporary loss of communication due to reception loss related to interference or other location factors, or the batteries may have been changed in the sensor array and the console has not been reset. The solution may be as simple as <b>powering down and up the console</b>.</p> <p>Replace the batteries in the outside sensor array.</p> <p>With the sensor array and console 10 feet away from each other, remove AC power from the display console and wait 10 seconds. Re-connect power.</p>
Temperature sensor reads too high in the day time.	<p>Make certain that the sensor array is not too close to heat generating sources or strictures, such as buildings, pavement, walls or air conditioning units.</p> <p>Use the calibration feature to offset installation issues related to radiant heat sources. Reference 5.12.</p>

<p>Absolute pressure does not agree with official reporting station</p>	<p>You may be viewing the relative pressure, not the absolute pressure.</p> <p>Select the absolute pressure. Make sure you properly calibrate the sensor to an official local weather station. Reference Section 5.12 for details.</p>
<p>Rain gauge reports rain when it is not raining</p>	<p>An unstable mounting solution (sway in the mounting pole) may result in the tipping bucket incorrectly incrementing rainfall. Make sure you have a stable, level mounting solution.</p>
<p>Data not reporting to Wunderground.com</p>	<ol style="list-style-type: none"> <li>1. Confirm your password is correct. It is the password you registered on Wunderground.com. Your Wunderground.com password cannot begin with a non-alphanumeric character (a limitation of Wunderground.com, not the station). Example, \$oewkrf is not a valid password, but oewkrf\$ is valid.</li> <li>2. Confirm your station ID is correct. The station ID is all caps, and the most common issue is substituting an O for a 0 (or visa versa). Example, KAZPHOEN11, not KAZPH0EN11</li> <li>3. If there's a number "1" on the station key, try to input the lower case of letter "L" to replace it.</li> <li>4. Make sure the date and time is correct on the console. If incorrect, you may be reporting old data, not real time data.</li> <li>5. Make sure your time zone is set properly. If incorrect, you may be reporting old data, not real time data.</li> <li>6. Check your router firewall settings. The console sends data via Port 80.</li> </ol>
<p>No WiFi connection</p>	<ol style="list-style-type: none"> <li>1. Check for WiFi signal strength symbol on the display . If wireless connectivity is successful and reporting to Wunderground.com, the WiFi icon  will be displayed the home</li> </ol>

	page. 2. Make sure your modem WiFi settings are correct (network name, password and security settings).
--	------------------------------------------------------------------------------------------------------------

## 6 Specifications

**Note:** Out of range values will be displayed using “---”:

Indoor sensor	Specification
Temperature range	-10°C – 60°C (14°F - 140°F)
Temperature resolution	0.1°C, or 0.1°F
Humidity range	1% ~ 99%
Humidity resolution	1%
Barometric pressure range	300 – 1,100 hPa (8.85 – 32.5 inHg)
Barometric pressure accuracy	± 3 hPa in 700 – 1,100 hPa range
Barometric pressure resolution	0.1 hPa (0.01 inHg)
Sensor reporting interval	60 seconds
Alarm Duration	120 seconds

**Table 5: Indoor sensor specification**

Power	Specification
Base station/console	5V DC Adapter (included)

**Table 6: Power specification**

The primary power source for the outdoor sensor is the solar panel. When available solar power (light over recent period) is insufficient, the batteries will be used. In outdoor climates that frequently have sustained temperatures below 0°C (or 32°F) the use of Lithium batteries is strongly suggested as these are performing better than Alkaline batteries under such circumstances.



## **7 Warranty Information**

**We disclaim any responsibility for any technical error or printing error, or the consequences thereof.**

**All trademarks and patents are recognized.**

We provide a 1-year limited warranty on this product against manufacturing defects, or defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased, and only to the original purchaser of this product. To receive warranty service, the purchaser must contact us for problem determination and service procedures.

This limited warranty covers only actual defects within the product itself and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, or claims based on misrepresentation by the seller, or performance variations resulting from installation-related circumstances.

## FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.